

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(KWP communication)	E13CTJ Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTK Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTM Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTL Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTN Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTP Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTR Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTS Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CTT Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETB Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETE Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETA Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05DTA Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05DTA Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUH Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUJ Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUN Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUR Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUK Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUL Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUP Engine	DPR state check, DPR state reset, DPR differential pressure detection

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(KWP communication)	J07ETB Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05DTC Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CVT Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUT Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETN Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETT Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETL Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETU Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUU Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUM Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUS Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUB Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUA Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUC Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUD Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUE Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05DTG Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETC Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETD Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETW Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUJ Engine	DPR state check, DPR state reset, DPR differential pressure detection

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(KWP communication)	J08ETV Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05DTF Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUI Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUR Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUR Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CVA Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CVB Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUV Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUP Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUS Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUL Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUT Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUU Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETF Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CVC Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	Training Board	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	A09C	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	A09CTJ	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	A09CTK	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETB Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETA Engine	DPR state check, DPR state reset, DPR differential pressure detection

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(KWP communication)	P11CUN Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETM Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETG Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUP Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	E13CUV Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETH Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08ETG Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUK Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUT Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	N04CUA Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUM Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05ETH Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EUN Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CUU Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11CCNG	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05CCNG	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J05EUP	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11C-VP	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	P11C-VU	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(CAN communication)	A09C-TH engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(KWP communication)	J08EWM Engine	DPR state check, DPR state reset, DPR differential pressure detection

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(KWP communication)	J08EWL Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EWK Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EWJ Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(KWP communication)	J08EWH Engine	DPR state check, DPR state reset, DPR differential pressure detection
Hino	Engine system(CAN communication)	E13CYL	-
Hino	Engine system(CAN communication)	P11C-VP	-
Hino	Engine system(CAN communication)	P11C-VR	-
Hino	Engine system(CAN communication)	A09C-UK	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UA(200MPa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UB(200MPa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UL(200MPa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UH(200MPa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UA(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UB(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UB(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UC(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UD(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UD(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UA(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UB(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UB(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(CAN communication)	A09C-UC(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UD(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-UD(200Mpa)	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	J08E-VV	-
Hino	Engine system(CAN communication)	J05E-UN	-
Hino	Engine system(CAN communication)	J05E-UM	-
Hino	Engine system(CAN communication)	P11C-VN	-
Hino	Engine system(CAN communication)	P11C-VN	-
Hino	Engine system(CAN communication)	J05E-TJ	-
Hino	Engine system(KWP communication)	S05C	-
Hino	Engine system(KWP communication)	S05D	-
Hino	Engine system(KWP communication)	S05DC LEV	-
Hino	Engine system(KWP communication)	N04CTE (DPR)	-
Hino	Engine system(KWP communication)	N04CTB (DPR)	-
Hino	Engine system(KWP communication)	N04CTB (DPR)	-
Hino	Engine system(KWP communication)	S05DD (DPR)	-
Hino	Engine system(KWP communication)	N04CTG (DPR)	-
Hino	Engine system(KWP communication)	N04CTA (DPNR) /Common rail	-
Hino	Engine system(KWP communication)	N05CTA (DPNR) /Common rail	-
Hino	Engine system(KWP communication)	N04CTD (DPR) /E (HEV) /Common rail	-
Hino	Engine system(KWP communication)	N04CTB (DPR) /Common rail	-

## Diagnostic List HINO\_v9.10

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(KWP communication)	N04CTF /Common rail	-
Hino	Engine system(KWP communication)	N04CTD (DPR) /Common rail	-
Hino	Engine system(KWP communication)	N04CTB (DPR) /Common rail	-
Hino	Engine system(KWP communication)	N04C (DPR) /Common rail	-
Hino	Engine system(KWP communication)	N04C (DPR) /Common rail	-
Hino	Engine system(KWP communication)	J05DTB (DPR) /Common rail	-
Hino	Engine system(KWP communication)	S05DD (DPR) /Common rail	-
Hino	Engine system(KWP communication)	N04CTC (DPR) /Common rail	-
Hino	Engine system(KWP communication)	N04CTB (DPR) /Common rail	-
Hino	Engine system(KWP communication)	S05CTB (16bit Common rail)	-
Hino	Engine system(KWP communication)	Hino engine	-
Hino	Engine system(CAN communication)	N04CTK engine	-
Hino	Engine system(CAN communication)	N04CT engine	-
Hino	Engine system(CAN communication)	N04CTQ engine	-
Hino	Engine system(CAN communication)	N04CTR engine	-
Hino	Engine system(CAN communication)	N04CTS engine	-
Hino	Engine system(CAN communication)	N04CTU engine	-
Hino	Engine system(CAN communication)	N04CTP engine	-
Hino	Engine system(CAN communication)	N04CTW engine	-
Hino	Engine system(CAN communication)	N04CTT engine	-
Hino	Engine system(CAN communication)	N04CTV engine	-

## Diagnostic List HINO\_v9.10

**Remark:**

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(CAN communication)	N04CTM engine	-
Hino	Engine system(CAN communication)	N04CTH engine	-
Hino	Engine system(CAN communication)	N04CTJ engine	-
Hino	Engine system(CAN communication)	N04CTN engine	-
Hino	Engine system(CAN communication)	N04CTL engine	-
Hino	Engine system(CAN communication)	N04CUD engine	-
Hino	Engine system(CAN communication)	N04CUE engine	-
Hino	Engine system(CAN communication)	N04CUJ engine	-
Hino	Engine system(CAN communication)	N04CUH engine	-
Hino	Engine system(CAN communication)	N04CUK engine	-
Hino	Engine system(CAN communication)	N04CUG engine	-
Hino	Engine system(CAN communication)	Engine DENSO engine	-
Hino	Engine system(CAN communication)	E13C-VH engine	-
Hino	Engine system(CAN communication)	E13C-VJ engine	-
Hino	Engine system(CAN communication)	E13C-VK engine	-
Hino	Engine system(CAN communication)	E13C-VL engine	-
Hino	Engine system(CAN communication)	J08E-VC engine	-
Hino	Engine system(CAN communication)	J08E-VB engine	-
Hino	Engine system(CAN communication)	A09C-TL engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-TM engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-TP engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.



## Diagnostic List HINO\_v9.10

Remark:

1. ✓ : means that the system has this function
2. - : means that the system does not have this function
3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Special Function
Hino	Engine system(CAN communication)	A09C-TR engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	E13C-VM engine	-
Hino	Engine system(CAN communication)	E13C-VN engine	-
Hino	Engine system(CAN communication)	E13C-VP engine	-
Hino	Engine system(CAN communication)	E13C-VR engine	-
Hino	Engine system(CAN communication)	E13C-VS engine	-
Hino	Engine system(CAN communication)	J07E-TM engine	-
Hino	Engine system(CAN communication)	J07E-TL engine	-
Hino	Engine system(CAN communication)	J07E-TK engine	-
Hino	Engine system(CAN communication)	J08E-VH engine	-
Hino	Engine system(CAN communication)	J08E-VF engine	-
Hino	Engine system(CAN communication)	J08E-VG engine	-
Hino	Engine system(CAN communication)	J07E-TS engine	-
Hino	Engine system(CAN communication)	A09C-TU engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	A09C-TT engine	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.
Hino	Engine system(CAN communication)	J07E-TR engine	-
Hino	Engine system(CAN communication)	J07E-TP engine	-
Hino	Engine system(CAN communication)	J07E-TN engine	-
Hino	Engine system(CAN communication)	J08E-VE engine	-
Hino	Engine system(CAN communication)	J08E-VD engine	-
Hino	Engine system(CAN communication)	J08E-VB engine	-
Hino	Engine system(CAN communication)	Engine DENSO engine	-
Hino	Engine system(CAN communication)	Engine BOSCH engine	-