

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
AVANTIME	INJECTION	DIESEL INJECTION	Read Fault Code	
AVANTIME	INJECTION	DIESEL INJECTION	Erase Fault Code	
AVANTIME	INJECTION	DIESEL INJECTION	Read ECU Information	
AVANTIME	INJECTION	DIESEL INJECTION	Live Data	
AVANTIME	INJECTION	DIESEL INJECTION	Actuation Test	
AVANTIME	INJECTION	DIESEL INJECTION	Read Configuration	
AVANTIME	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
AVANTIME	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
AVANTIME	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
AVANTIME	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
AVANTIME	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
AVANTIME	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
AVANTIME	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
AVANTIME	A.B.S.		Read Fault Code	
AVANTIME	A.B.S.		Erase Fault Code	
AVANTIME	A.B.S.		Read ECU Information	
AVANTIME	A.B.S.		Live Data	
AVANTIME	A.B.S.		Actuation Test	
AVANTIME	A.B.S.		Parameters Configuration	VP004 VEHICLE PARAMETERS
AVANTIME	A.B.S.		Parameters Configuration	VP007 SPEED INDEX
AVANTIME	A.B.S.		Parameters Configuration	VP003 STEERING WHEEL ANGLE SENSOR
AVANTIME	INSTRUMENT PANEL		Read Fault Code	
AVANTIME	INSTRUMENT PANEL		Erase Fault Code	
AVANTIME	INSTRUMENT PANEL		Read ECU Information	
AVANTIME	INSTRUMENT PANEL		Live Data	
AVANTIME	INSTRUMENT PANEL		Actuation Test	
AVANTIME	INSTRUMENT PANEL		Read Fault Code	
AVANTIME	INSTRUMENT PANEL		Erase Fault Code	
AVANTIME	INSTRUMENT PANEL		Read ECU Information	
AVANTIME	INSTRUMENT PANEL		Live Data	
AVANTIME	INSTRUMENT PANEL		Actuation Test	
AVANTIME	AIRBAG / PRETENSIONERS		Read Fault Code	
AVANTIME	AIRBAG / PRETENSIONERS		Erase Fault Code	
AVANTIME	AIRBAG / PRETENSIONERS		Read ECU Information	
AVANTIME	AIRBAG / PRETENSIONERS		Live Data	
AVANTIME	AIRBAG / PRETENSIONERS		Read Configuration	
AVANTIME	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
AVANTIME	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
AVANTIME	AIR CONDITIONING		Read Fault Code	
AVANTIME	AIR CONDITIONING		Erase Fault Code	
AVANTIME	AIR CONDITIONING		Read ECU Information	
AVANTIME	AIR CONDITIONING		Live Data	
AVANTIME	AIR CONDITIONING		Read Configuration	
AVANTIME	AIR CONDITIONING		Write Configuration	AVANTIME (F4R) : WITH HEATED WINDSCREEN
AVANTIME	AIR CONDITIONING		Write Configuration	AVANTIME (F4R) : WITHOUT HEATED WINDSCREEN
AVANTIME	AIR CONDITIONING		Write Configuration	AVANTIME (EXCEPT F4R) : WITH HEATED WINDSCR.
AVANTIME	AIR CONDITIONING		Write Configuration	AVANTIME (EXPT F4R) : WITHOUT HEATED WINDSCR.
AVANTIME	AIR CONDITIONING		Write Configuration	ESPACE : WITH EVAPORATOR SENSOR
AVANTIME	AIR CONDITIONING		Write Configuration	ESPACE : WITHOUT EVAPORATOR SENSOR
AVANTIME	AUTOMATIC GEARBOX		Read Fault Code	
AVANTIME	AUTOMATIC GEARBOX		Erase Fault Code	
AVANTIME	AUTOMATIC GEARBOX		Read ECU Information	
AVANTIME	AUTOMATIC GEARBOX		Live Data	
AVANTIME	AUTOMATIC GEARBOX		Actuation Test	
AVANTIME	HEATER		Read ECU Information	
AVANTIME	HEATER		Live Data	
AVANTIME	HEATER		Actuation Test	
AVANTIME	CONNECTION UNIT		Read Fault Code	
AVANTIME	CONNECTION UNIT		Erase Fault Code	
AVANTIME	CONNECTION UNIT		Read ECU Information	
AVANTIME	CONNECTION UNIT		Live Data	
AVANTIME	CONNECTION UNIT		Actuation Test	
AVANTIME	CONNECTION UNIT		Read Fault Code	
AVANTIME	CONNECTION UNIT		Erase Fault Code	
AVANTIME	CONNECTION UNIT		Read ECU Information	
AVANTIME	CONNECTION UNIT		Live Data	
AVANTIME	CONNECTION UNIT		Actuation Test	
AVANTIME	ENGINE IMMOBILISER		Read Fault Code	
AVANTIME	ENGINE IMMOBILISER		Erase Fault Code	
AVANTIME	ENGINE IMMOBILISER		Read ECU Information	
AVANTIME	ENGINE IMMOBILISER		Live Data	
AVANTIME	ENGINE IMMOBILISER		Actuation Test	
AVANTIME	ENGINE IMMOBILISER		Read Fault Code	
AVANTIME	ENGINE IMMOBILISER		Erase Fault Code	
AVANTIME	ENGINE IMMOBILISER		Read ECU Information	
AVANTIME	ENGINE IMMOBILISER		Live Data	
AVANTIME	ENGINE IMMOBILISER		Actuation Test	
AVANTIME	LIGHTING		Read Fault Code	
AVANTIME	LIGHTING		Erase Fault Code	
AVANTIME	LIGHTING		Read ECU Information	
AVANTIME	LIGHTING		Live Data	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V, I, N.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2033 RICHNESS REGULATION PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2031 PROGRAMMING THROTTLE LIMITS
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2003 ENGINE ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2064 ALCOHOL LEVEL PROG.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2046 INJECTOR ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2099 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2079 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2091 WASTE GATE REGULATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Erase	R2097 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP305 PARAMETRAGE PRIVE 250
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	SID 306 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Live Data	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP045 HILL START
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ012 RESET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Live Data	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ012 RESET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/KAPTUR BR/IN/RU	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF229 ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVEE 1
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
CAPTUR/KAPTUR BR/IN/RU	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Configuration	SC011 BLEED CLUTCH HYDRAULIC CIRCUIT
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Configuration	SC015 COUNTRY MODEL
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP002 SPEEDO INDEX
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP004 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP007 MODIFICATION OF PARAMETERS AFTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP003 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Live Data	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Live Data	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Live Data	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Other Configuration	VP002 SYSTEM INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	LIGHTING	HEAD LAMP LEVELING SYSTEM	Erase	RZ001 FAULT MEMORY
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Function Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ122 FLYWHEEL TARGET PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/KAPTUR BR/IN/RU	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Function Test	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF229 ALARM
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF009 DEADLOCKING
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
CAPTUR/KAPTUR BR/IN/RU	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CAPTUR/KAPTUR BR/IN/RU	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
CAPTUR/KAPTUR BR/IN/RU	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
CAPTUR/KAPTUR BR/IN/RU	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP011 STEERING WHEEL ANGLE CALIB.
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP013 HAND OFF DETECTION LEARNING
CAPTUR/KAPTUR BR/IN/RU	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VP012 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Live Data	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Function Test	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VP003 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
CAPTUR/KAPTUR BR/IN/RU	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	SCENE RECORDER	SCENE RECORDER	Erase	RZ002 COMPUTER RESET
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Configuration	SC003 ACTIVATION OF CONNECTIVITY SERVICES
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Live Data	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Function Test	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF028 TESTING CARD PRESENTED
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP001 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ002 AFTER SALES CODE
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
CAPTUR/KAPTUR BR/IN/RU	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VP002 WRITE VIN
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/KAPTUR BR/IN/RU	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V, I, N.
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V, I, N.
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Live Data	
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V, I, N.
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CAPTUR/QM3/KABIN	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Erase	RZ116 CLUTCH END OF TRAVEL WIRING SWITCH
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC048 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/QM3/KABIN	INJECTION	V50 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR/QM3/KABIN	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	A.B.S.	ABS	Read Fault Code	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase Fault Code	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Read ECU Information	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Live Data	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Read Configuration	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Actuation Test	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP045 HILL START
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ012 RESET
CAPTUR/QM3/KABIN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/QM3/KABIN	A.B.S.	ABS	Read Fault Code	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase Fault Code	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Read ECU Information	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Live Data	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Read Configuration	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Actuation Test	
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Other Configuration	VP045 HILL START
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ012 RESET
CAPTUR/QM3/KABIN	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR/QM3/KABIN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADC DISPLAY TYPE
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
CAPTUR/QM3/KABIN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	UCH	UCH	Read Fault Code	
CAPTUR/QM3/KABIN	UCH	UCH	Erase Fault Code	
CAPTUR/QM3/KABIN	UCH	UCH	Read ECU Information	
CAPTUR/QM3/KABIN	UCH	UCH	Live Data	
CAPTUR/QM3/KABIN	UCH	UCH	Read Configuration	
CAPTUR/QM3/KABIN	UCH	UCH	Actuation Test	
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF229 ALARM
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CAPTUR/QM3/KABIN	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CAPTUR/QM3/KABIN	UCH	UCH	Read Fault Code	
CAPTUR/QM3/KABIN	UCH	UCH	Erase Fault Code	
CAPTUR/QM3/KABIN	UCH	UCH	Read ECU Information	
CAPTUR/QM3/KABIN	UCH	UCH	Live Data	
CAPTUR/QM3/KABIN	UCH	UCH	Read Configuration	
CAPTUR/QM3/KABIN	UCH	UCH	Actuation Test	
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF229 ALARM
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CAPTUR/QM3/KABIN	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CAPTUR/QM3/KABIN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR/QM3/KABIN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC004 WRITE SAVED DATA
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
CAPTUR/QM3/KABIN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Read Fault Code	
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Erase Fault Code	
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Read ECU Information	
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Live Data	
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Actuation Test	
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Read Fault Code	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Erase Fault Code	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Read ECU Information	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Live Data	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Actuation Test	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC018 STARTER LEARNING
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC017 HIGH PRESSURE PUMP LEARNING
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Read Fault Code	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Erase Fault Code	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Read ECU Information	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Live Data	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Read Configuration	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Actuation Test	
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Write Configuration	CF046 MULTIPLE 12V BATTERIES
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Configuration	SC015 COUNTRY MODEL
CAPTUR/QM3/KABIN	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Read Fault Code	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Read ECU Information	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Live Data	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Read Configuration	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Actuation Test	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Read Fault Code	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Read ECU Information	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Live Data	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Read Configuration	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Actuation Test	
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read ECU Information	
CAPTUR/QM3/KABIN	RADIO	RADIO	Live Data	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Configuration	
CAPTUR/QM3/KABIN	RADIO	RADIO	Actuation Test	
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/QM3/KABIN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
CAPTUR/QM3/KABIN	RADIO	RADIO	Configuration	SC002 COMP. CONFIGURATION
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CAPTUR/QM3/KABIN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CAPTUR/QM3/KABIN	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
CAPTUR/QM3/KABIN	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read ECU Information	
CAPTUR/QM3/KABIN	RADIO	RADIO	Live Data	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Configuration	
CAPTUR/QM3/KABIN	RADIO	RADIO	Actuation Test	
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read ECU Information	
CAPTUR/QM3/KABIN	RADIO	RADIO	Live Data	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Configuration	
CAPTUR/QM3/KABIN	RADIO	RADIO	Actuation Test	
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/QM3/KABIN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase	RZ004 RESET RADIO
CAPTUR/QM3/KABIN	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase Fault Code	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read ECU Information	
CAPTUR/QM3/KABIN	RADIO	RADIO	Live Data	
CAPTUR/QM3/KABIN	RADIO	RADIO	Read Configuration	
CAPTUR/QM3/KABIN	RADIO	RADIO	Actuation Test	
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR/QM3/KABIN	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
CAPTUR/QM3/KABIN	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
CAPTUR/QM3/KABIN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Read Fault Code	
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Erase Fault Code	
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Read ECU Information	
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Live Data	
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Read Configuration	
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Actuation Test	
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Write Configuration	CF007 SYSTEM CONFIGURATION
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	AMPLIFIER	AMPLIFIER	Erase	RZ005 FAULT MEMORY
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Read Fault Code	
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Erase Fault Code	
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Read ECU Information	
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Live Data	
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Actuation Test	
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Other Configuration	VP002 SYSTEM INITIALISATION
CAPTUR/QM3/KABIN	LIGHTING	HEAD LAMP LEVELING SYSTEM	Erase	RZ001 FAULT MEMORY
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Function Test	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SEPOINT VOLTAGE
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Read Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Read ECU Information	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Live Data	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Function Test	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Read Configuration	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Actuation Test	
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR/QM3/KABIN	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR/QM3/KABIN	ABS	ABS	Read Fault Code	
CAPTUR/QM3/KABIN	ABS	ABS	Erase Fault Code	
CAPTUR/QM3/KABIN	ABS	ABS	Read ECU Information	
CAPTUR/QM3/KABIN	ABS	ABS	Live Data	
CAPTUR/QM3/KABIN	ABS	ABS	Function Test	
CAPTUR/QM3/KABIN	ABS	ABS	Read Configuration	
CAPTUR/QM3/KABIN	ABS	ABS	Actuation Test	
CAPTUR/QM3/KABIN	ABS	ABS	Other Configuration	VP007 SPEED INDEX
CAPTUR/QM3/KABIN	ABS	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CAPTUR/QM3/KABIN	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CAPTUR/QM3/KABIN	ABS	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR/QM3/KABIN	ABS	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CAPTUR/QM3/KABIN	ABS	ABS	Other Configuration	VP045 HILL START
CAPTUR/QM3/KABIN	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR/QM3/KABIN	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CAPTUR/QM3/KABIN	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR/QM3/KABIN	ABS	ABS	Erase	RZ012 RESET
CAPTUR/QM3/KABIN	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR/QM3/KABIN	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF093 VEHICLE LAYOUT
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF094 MODE
CAPTUR/QM3/KABIN	ADAPTATION UNIT	ADAPTATION UNIT	Other Configuration	VP014 WRITE VIN
CLO 2	INJECTION	SIM 32 INJECTOR	Read Fault Code	
CLO 2	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
CLO 2	INJECTION	SIM 32 INJECTOR	Read ECU Information	
CLO 2	INJECTION	SIM 32 INJECTOR	Live Data	
CLO 2	INJECTION	SIM 32 INJECTOR	Read Configuration	
CLO 2	INJECTION	SIM 32 INJECTOR	Actuation Test	
CLO 2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
CLO 2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLO 2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLO 2	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
CLO 2	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
CLO 2	INJECTION		Read Fault Code	
CLO 2	INJECTION		Erase Fault Code	
CLO 2	INJECTION		Read ECU Information	
CLO 2	INJECTION		Live Data	
CLO 2	INJECTION		Actuation Test	
CLO 2	INJECTION		Read Configuration	
CLO 2	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
CLO 2	INJECTION		Parameters Configuration	VP001 WRITE VIN
CLO 2	INJECTION		Read Fault Code	
CLO 2	INJECTION		Erase Fault Code	
CLO 2	INJECTION		Read ECU Information	
CLO 2	INJECTION		Live Data	
CLO 2	INJECTION		Actuation Test	
CLO 2	INJECTION		Read Configuration	
CLO 2	INJECTION		Erase	RZ005 PROGRAMMING REINITIALISATION
CLO 2	INJECTION		Read Fault Code	
CLO 2	INJECTION		Erase Fault Code	
CLO 2	INJECTION		Read ECU Information	
CLO 2	INJECTION		Live Data	







**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO 2	UCH(driver compartment central unit)		Live Data	
CLIO 2	UCH(driver compartment central unit)		Actuation Test	
CLIO 2	UCH(driver compartment central unit)		Read Fault Code	
CLIO 2	UCH(driver compartment central unit)		Erase Fault Code	
CLIO 2	UCH(driver compartment central unit)		Read ECU Information	
CLIO 2	UCH(driver compartment central unit)		Live Data	
CLIO 2	UCH(driver compartment central unit)		Actuation Test	
CLIO 2	UCH(driver compartment central unit)		Read Configuration	
CLIO 2	UCH(driver compartment central unit)		Read Fault Code	
CLIO 2	UCH(driver compartment central unit)		Erase Fault Code	
CLIO 2	UCH(driver compartment central unit)		Read ECU Information	
CLIO 2	UCH(driver compartment central unit)		Live Data	
CLIO 2	UCH(driver compartment central unit)		Actuation Test	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Read Fault Code	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Erase Fault Code	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Read ECU Information	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Live Data	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Actuation Test	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Read Fault Code	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Erase Fault Code	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Read ECU Information	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Live Data	
CLIO 2	UCH(driver compartment central unit)	CONNECTION UNIT	Actuation Test	
CLIO 2	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO 2	AIRBAG / PRETENSIONERS		Live Data	
CLIO 2	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO 2	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO 2	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
CLIO 2	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
CLIO 2	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO 2	AIRBAG / PRETENSIONERS		Live Data	
CLIO 2	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO 2	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO 2	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
CLIO 2	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
CLIO 2	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO 2	AIRBAG / PRETENSIONERS		Live Data	
CLIO 2	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO 2	AIRBAG / PRETENSIONERS		Write Configuration	WITH PASSENGER'S AIRBAG
CLIO 2	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT PASSENGER'S AIRBAG
CLIO 2	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO 2	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO 2	AIRBAG / PRETENSIONERS		Live Data	
CLIO 2	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO 2	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO 2	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
CLIO 2	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
CLIO 2	AIR CONDITIONING		Read Fault Code	
CLIO 2	AIR CONDITIONING		Erase Fault Code	
CLIO 2	AIR CONDITIONING		Read ECU Information	
CLIO 2	AIR CONDITIONING		Live Data	
CLIO 2	AIR CONDITIONING		Actuation Test	
CLIO 2	AIR CONDITIONING		Write Configuration	WITH HEATED REAR SCREEN
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT HEATED REAR SCREEN
CLIO 2	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
CLIO 2	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
CLIO 2	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
CLIO 2	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
CLIO 2	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
CLIO 2	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
CLIO 2	AIR CONDITIONING		Write Configuration	SIEMENS PROBE CONFIGURATION
CLIO 2	AIR CONDITIONING		Write Configuration	EEPROM PROBE CONFIGURATION
CLIO 2	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
CLIO 2	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
CLIO 2	AIR CONDITIONING		Read Fault Code	
CLIO 2	AIR CONDITIONING		Erase Fault Code	
CLIO 2	AIR CONDITIONING		Read ECU Information	
CLIO 2	AIR CONDITIONING		Live Data	
CLIO 2	AIR CONDITIONING		Actuation Test	
CLIO 2	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
CLIO 2	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
CLIO 2	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
CLIO 2	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
CLIO 2	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
CLIO 2	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
CLIO 2	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
CLIO 2	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
CLIO 2	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
CLIO 2	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
CLIO 2	AUTOMATIC GEARBOX		Read Fault Code	
CLIO 2	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO 2	AUTOMATIC GEARBOX		Read ECU Information	
CLIO 2	AUTOMATIC GEARBOX		Live Data	
CLIO 2	AUTOMATIC GEARBOX		Actuation Test	
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	WRITE TRANSMISSION OIL CHANGE DATE
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	OIL CHANGE COUNTER OFFSET
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	WITH AIR CONDITIONING
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	WITHOUT AIR CONDITIONING
CLIO 2	AUTOMATIC GEARBOX		Read Fault Code	
CLIO 2	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO 2	AUTOMATIC GEARBOX		Read ECU Information	
CLIO 2	AUTOMATIC GEARBOX		Live Data	
CLIO 2	AUTOMATIC GEARBOX		Actuation Test	
CLIO 2	AUTOMATIC GEARBOX		Read Configuration	
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	CF317 AIR CONDITIONING WITH WIRE CONNECTION
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	CF074 WRITE TRANSMISSION OIL CHANGE DATE
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	CF320 NOTE OIL WEAR COUNTER
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	CF315 CHECK MOTOR TORQUE BY ABS
CLIO 2	AUTOMATIC GEARBOX		Read Fault Code	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO 2	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO 2	AUTOMATIC GEARBOX		Read ECU Information	
CLIO 2	AUTOMATIC GEARBOX		Live Data	
CLIO 2	AUTOMATIC GEARBOX		Actuation Test	
CLIO 2	AUTOMATIC GEARBOX		Read Configuration	
CLIO 2	AUTOMATIC GEARBOX		Write Configuration	CF324 AIR CONDITIONING CONNECTION FAULT FINDING
CLIO 2	AUTOMATIC GEARBOX		Parameters Configuration	VP015 NOTE OIL WEAR COUNTER
CLIO 2	AUTOMATIC GEARBOX		Parameters Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
CLIO 2	GAS INJ.		Read Fault Code	
CLIO 2	GAS INJ.		Erase Fault Code	
CLIO 2	GAS INJ.		Read ECU Information	
CLIO 2	GAS INJ.		Live Data	
CLIO 2	GAS INJ.		Actuation Test	
CLIO II Ph 6	INJECTION	V42 INJECTION	Read Fault Code	
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase Fault Code	
CLIO II Ph 6	INJECTION	V42 INJECTION	Read ECU Information	
CLIO II Ph 6	INJECTION	V42 INJECTION	Live Data	
CLIO II Ph 6	INJECTION	V42 INJECTION	Actuation Test	
CLIO II Ph 6	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO II Ph 6	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO II Ph 6	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
CLIO II Ph 6	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO II Ph 6	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO II Ph 6	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO II Ph 6	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO II Ph 6	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Read Fault Code	
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Read ECU Information	
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Live Data	
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Read Configuration	
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Actuation Test	
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Other Configuration	VP020 WRITE VIN
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Erase	RZ007 FAULT MEMORY
CLIO II Ph 6	INJECTION	SIM 32 INJECTOR	Erase	RZ019 PROGRAMMING REINITIALISATION
CLIO II Ph 6	A.B.S.	ABS	Read Fault Code	
CLIO II Ph 6	A.B.S.	ABS	Erase Fault Code	
CLIO II Ph 6	A.B.S.	ABS	Read ECU Information	
CLIO II Ph 6	A.B.S.	ABS	Live Data	
CLIO II Ph 6	A.B.S.	ABS	Actuation Test	
CLIO II Ph 6	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
CLIO II Ph 6	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CLIO II Ph 6	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CLIO II Ph 6	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO II Ph 6	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CLIO II Ph 6	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CLIO II Ph 6	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
CLIO II Ph 6	UCH	UCH	Read Fault Code	
CLIO II Ph 6	UCH	UCH	Erase Fault Code	
CLIO II Ph 6	UCH	UCH	Read ECU Information	
CLIO II Ph 6	UCH	UCH	Live Data	
CLIO II Ph 6	UCH	UCH	Read Configuration	
CLIO II Ph 6	UCH	UCH	Actuation Test	
CLIO II Ph 6	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
CLIO II Ph 6	UCH	UCH	Write Configuration	CF272 SDO
CLIO II Ph 6	UCH	UCH	Other Configuration	VP004 WRITE VIN
CLIO II Ph 6	UCH	UCH	Erase	RZ001 FAULT MEMORY
CLIO II Ph 6	UCH	UCH	Configuration	SC008 UCH TYPE
CLIO II Ph 6	UCH	UCH	Read Fault Code	
CLIO II Ph 6	UCH	UCH	Erase Fault Code	
CLIO II Ph 6	UCH	UCH	Read ECU Information	
CLIO II Ph 6	UCH	UCH	Live Data	
CLIO II Ph 6	UCH	UCH	Read Configuration	
CLIO II Ph 6	UCH	UCH	Actuation Test	
CLIO II Ph 6	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
CLIO II Ph 6	UCH	UCH	Write Configuration	CF272 SDO
CLIO II Ph 6	UCH	UCH	Other Configuration	VP004 WRITE VIN
CLIO II Ph 6	UCH	UCH	Erase	RZ001 FAULT MEMORY
CLIO II Ph 6	UCH	UCH	Configuration	SC008 UCH TYPE
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
CLIO II Ph 6	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CLIO II Ph 6	TRACKER	TRACKER	Read Fault Code	
CLIO II Ph 6	TRACKER	TRACKER	Erase Fault Code	
CLIO II Ph 6	TRACKER	TRACKER	Read ECU Information	
CLIO II Ph 6	TRACKER	TRACKER	Live Data	
CLIO II Ph 6	TRACKER	TRACKER	Read Configuration	
CLIO II Ph 6	TRACKER	TRACKER	Write Configuration	CF001 SYT CONFIGURATION
CLIO II Ph 6	TRACKER	TRACKER	Other Configuration	VP001 WRITE V. I. N.
CLIO II Ph 6	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	S3000 INJECTION	Read Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Erase Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Read ECU Information	
CLIO III	INJECTION	S3000 INJECTION	Live Data	
CLIO III	INJECTION	S3000 INJECTION	Read Configuration	
CLIO III	INJECTION	S3000 INJECTION	Actuation Test	
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO III	INJECTION	S3000 INJECTION	Read Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Erase Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO III	INJECTION	S3000 INJECTION	Live Data	
CLIO III	INJECTION	S3000 INJECTION	Read Configuration	
CLIO III	INJECTION	S3000 INJECTION	Actuation Test	
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO III	INJECTION	S3000 INJECTION	Read Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Erase Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Read ECU Information	
CLIO III	INJECTION	S3000 INJECTION	Live Data	
CLIO III	INJECTION	S3000 INJECTION	Read Configuration	
CLIO III	INJECTION	S3000 INJECTION	Actuation Test	
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO III	INJECTION	SID 301 INJECTION	Read Fault Code	
CLIO III	INJECTION	SID 301 INJECTION	Erase Fault Code	
CLIO III	INJECTION	SID 301 INJECTION	Read ECU Information	
CLIO III	INJECTION	SID 301 INJECTION	Live Data	
CLIO III	INJECTION	SID 301 INJECTION	Read Configuration	
CLIO III	INJECTION	SID 301 INJECTION	Actuation Test	
CLIO III	INJECTION	SID 301 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	SID 301 INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO III	INJECTION	SID 301 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
CLIO III	INJECTION	SID 301 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	SID 301 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO III	INJECTION	SID 301 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO III	INJECTION	SID 301 INJECTION	Configuration	SC013 ENTER VIN CODE
CLIO III	INJECTION	SID 301 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO III	INJECTION	SIM 32 INJECTOR	Read Fault Code	
CLIO III	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
CLIO III	INJECTION	SIM 32 INJECTOR	Read ECU Information	
CLIO III	INJECTION	SIM 32 INJECTOR	Live Data	
CLIO III	INJECTION	SIM 32 INJECTOR	Read Configuration	
CLIO III	INJECTION	SIM 32 INJECTOR	Actuation Test	
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	SIM 32 INJECTOR	Read Fault Code	
CLIO III	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
CLIO III	INJECTION	SIM 32 INJECTOR	Read ECU Information	
CLIO III	INJECTION	SIM 32 INJECTOR	Live Data	
CLIO III	INJECTION	SIM 32 INJECTOR	Read Configuration	
CLIO III	INJECTION	SIM 32 INJECTOR	Actuation Test	
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	INJECTION DCM 1.2	Read Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Read ECU Information	
CLIO III	INJECTION	INJECTION DCM 1.2	Live Data	
CLIO III	INJECTION	INJECTION DCM 1.2	Read Configuration	
CLIO III	INJECTION	INJECTION DCM 1.2	Actuation Test	
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
CLIO III	INJECTION	INJECTION WB56	Read Fault Code	
CLIO III	INJECTION	INJECTION WB56	Erase Fault Code	
CLIO III	INJECTION	INJECTION WB56	Read ECU Information	
CLIO III	INJECTION	INJECTION WB56	Live Data	
CLIO III	INJECTION	INJECTION WB56	Read Configuration	
CLIO III	INJECTION	INJECTION WB56	Actuation Test	
CLIO III	INJECTION	INJECTION WB56	Other Configuration	VP020 WRITE VIN
CLIO III	INJECTION	INJECTION WB56	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	INJECTION WB56	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	INJECTION WB56	Erase	RZ007 FAULT MEMORY
CLIO III	INJECTION	INJECTION WB56	Erase	RZ019 PROGRAMMING REINITIALISATION
CLIO III	INJECTION	INJECTION DCM 1.2	Read Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Read ECU Information	
CLIO III	INJECTION	INJECTION DCM 1.2	Live Data	
CLIO III	INJECTION	INJECTION DCM 1.2	Read Configuration	
CLIO III	INJECTION	INJECTION DCM 1.2	Actuation Test	
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
CLIO III	INJECTION	S3000 INJECTION	Read Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Erase Fault Code	
CLIO III	INJECTION	S3000 INJECTION	Read ECU Information	
CLIO III	INJECTION	S3000 INJECTION	Live Data	
CLIO III	INJECTION	S3000 INJECTION	Read Configuration	
CLIO III	INJECTION	S3000 INJECTION	Actuation Test	
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO III	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO III	INJECTION	SIM 32 INJECTOR	Read Fault Code	
CLIO III	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
CLIO III	INJECTION	SIM 32 INJECTOR	Read ECU Information	
CLIO III	INJECTION	SIM 32 INJECTOR	Live Data	
CLIO III	INJECTION	SIM 32 INJECTOR	Read Configuration	
CLIO III	INJECTION	SIM 32 INJECTOR	Actuation Test	
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO III	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
CLIO III	INJECTION	SIM 32 INJECTOR	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO III	INJECTION	SIM 32 INJECTOR	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO III	INJECTION	SIM 32 INJECTOR	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO III	INJECTION	INJECTION DCM 1.2	Read Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Read ECU Information	
CLIO III	INJECTION	INJECTION DCM 1.2	Live Data	
CLIO III	INJECTION	INJECTION DCM 1.2	Read Configuration	
CLIO III	INJECTION	INJECTION DCM 1.2	Actuation Test	
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
CLIO III	INJECTION	SID 304 INJECTION	Read Fault Code	
CLIO III	INJECTION	SID 304 INJECTION	Erase Fault Code	
CLIO III	INJECTION	SID 304 INJECTION	Read ECU Information	
CLIO III	INJECTION	SID 304 INJECTION	Live Data	
CLIO III	INJECTION	SID 304 INJECTION	Read Configuration	
CLIO III	INJECTION	SID 304 INJECTION	Actuation Test	
CLIO III	INJECTION	SID 304 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	SID 304 INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO III	INJECTION	SID 304 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
CLIO III	INJECTION	SID 304 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	SID 304 INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
CLIO III	INJECTION	SID 304 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO III	INJECTION	SID 304 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO III	INJECTION	SID 304 INJECTION	Configuration	SC013 ENTER VIN CODE
CLIO III	INJECTION	SID 304 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO III	INJECTION	INJECTION DCM 1.2	Read Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
CLIO III	INJECTION	INJECTION DCM 1.2	Read ECU Information	
CLIO III	INJECTION	INJECTION DCM 1.2	Live Data	
CLIO III	INJECTION	INJECTION DCM 1.2	Read Configuration	
CLIO III	INJECTION	INJECTION DCM 1.2	Actuation Test	
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO III	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC040 SPEED LIMITER
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
CLIO III	INJECTION	INJECTION DCM 1.2	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO III	INJECTION	SID 305 INJECTION	Read Fault Code	
CLIO III	INJECTION	SID 305 INJECTION	Erase Fault Code	
CLIO III	INJECTION	SID 305 INJECTION	Read ECU Information	
CLIO III	INJECTION	SID 305 INJECTION	Live Data	
CLIO III	INJECTION	SID 305 INJECTION	Read Configuration	
CLIO III	INJECTION	SID 305 INJECTION	Actuation Test	
CLIO III	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO III	INJECTION	SID 305 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO III	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC004 HIGH PRESSURE CIRCUIT LEAK TEST
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO III	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CLIO III	INJECTION	INJECTION DCM 3.4	Read Fault Code	
CLIO III	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
CLIO III	INJECTION	INJECTION DCM 3.4	Read ECU Information	
CLIO III	INJECTION	INJECTION DCM 3.4	Live Data	
CLIO III	INJECTION	INJECTION DCM 3.4	Read Configuration	
CLIO III	INJECTION	INJECTION DCM 3.4	Actuation Test	
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
CLIO III	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO III	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CLIO III	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
CLIO III	INJECTION	EMS 3110 INJECTION	Read Fault Code	
CLIO III	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
CLIO III	INJECTION	EMS 3110 INJECTION	Read ECU Information	
CLIO III	INJECTION	EMS 3110 INJECTION	Live Data	
CLIO III	INJECTION	EMS 3110 INJECTION	Read Configuration	
CLIO III	INJECTION	EMS 3110 INJECTION	Actuation Test	
CLIO III	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO III	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO III	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
CLIO III	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO III	A.B.S.	ABS 8.0	Read Fault Code	
CLIO III	A.B.S.	ABS 8.0	Erase Fault Code	
CLIO III	A.B.S.	ABS 8.0	Read ECU Information	
CLIO III	A.B.S.	ABS 8.0	Live Data	
CLIO III	A.B.S.	ABS 8.0	Actuation Test	
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP007 SPEEDO INDEX
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP001 WRITE VIN
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	A.B.S.	ABS 8.0	Erase	RZ001 FAULT MEMORY
CLIO III	A.B.S.	ABS 8.0	Configuration	SC001 CHECK TARGET TEETH
CLIO III	A.B.S.	ABS 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
CLIO III	A.B.S.	ESP 8.0	Read Fault Code	
CLIO III	A.B.S.	ESP 8.0	Erase Fault Code	
CLIO III	A.B.S.	ESP 8.0	Read ECU Information	
CLIO III	A.B.S.	ESP 8.0	Live Data	
CLIO III	A.B.S.	ESP 8.0	Actuation Test	
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP004 VEHICLE PARAMETERS
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP007 SPEEDO INDEX
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP001 WRITE VIN
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
CLIO III	A.B.S.	ESP 8.0	Erase	RZ001 FAULT MEMORY
CLIO III	A.B.S.	ESP 8.0	Erase	RZ003 ESP SENSOR PROGRAMMING
CLIO III	A.B.S.	ESP 8.0	Configuration	SC001 CHECK TARGET TEETH
CLIO III	A.B.S.	ESP 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
CLIO III	A.B.S.	ESP 8.0	Read Fault Code	
CLIO III	A.B.S.	ESP 8.0	Erase Fault Code	
CLIO III	A.B.S.	ESP 8.0	Read ECU Information	
CLIO III	A.B.S.	ESP 8.0	Live Data	
CLIO III	A.B.S.	ESP 8.0	Actuation Test	
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP004 VEHICLE PARAMETERS
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP007 SPEEDO INDEX
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP001 WRITE VIN
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
CLIO III	A.B.S.	ESP 8.0	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
CLIO III	A.B.S.	ESP 8.0	Erase	RZ001 FAULT MEMORY
CLIO III	A.B.S.	ESP 8.0	Erase	RZ003 ESP SENSOR PROGRAMMING
CLIO III	A.B.S.	ESP 8.0	Configuration	SC001 CHECK TARGET TEETH
CLIO III	A.B.S.	ESP 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
CLIO III	A.B.S.	ABS 8.0	Read Fault Code	
CLIO III	A.B.S.	ABS 8.0	Erase Fault Code	
CLIO III	A.B.S.	ABS 8.0	Read ECU Information	
CLIO III	A.B.S.	ABS 8.0	Live Data	
CLIO III	A.B.S.	ABS 8.0	Actuation Test	
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP007 SPEEDO INDEX
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP001 WRITE VIN
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	A.B.S.	ABS 8.0	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
CLIO III	A.B.S.	ABS 8.0	Erase	RZ001 FAULT MEMORY
CLIO III	A.B.S.	ABS 8.0	Configuration	SC001 CHECK TARGET TEETH
CLIO III	A.B.S.	ABS 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
CLIO III	A.B.S.	VSU	Read Fault Code	
CLIO III	A.B.S.	VSU	Erase Fault Code	
CLIO III	A.B.S.	VSU	Read ECU Information	
CLIO III	A.B.S.	VSU	Live Data	
CLIO III	A.B.S.	VSU	Actuation Test	
CLIO III	A.B.S.	VSU	Other Configuration	VP007 SPEEDO INDEX
CLIO III	A.B.S.	VSU	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	A.B.S.	VSU	Other Configuration	VP001 WRITE VIN
CLIO III	A.B.S.	VSU	Erase	RZ001 FAULT MEMORY
CLIO III	A.B.S.	VSU	Configuration	SC001 CHECK TARGET TEETH
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF034 BODYWORK TYPE
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF006 VEHICLE SPEED SIGNAL TRANSMITTER
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE 1N KM
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE 1N MONTHS
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP047 LCD DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP048 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP060 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP058 LCD DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP061 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP059 LCD DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP056 FUEL GAUGE CALIBRATION LCD (JAPAN)
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP057 FUEL GAUGE CALIBRATION NEEDLE (JAPAN)
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP066 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP065 LCD DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP067 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP064 LCD DISPLAY FUEL GAUGE CALIBRATION
CLIO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
CLIO III	UCH	UCH	Read Fault Code	
CLIO III	UCH	UCH	Erase Fault Code	
CLIO III	UCH	UCH	Read ECU Information	
CLIO III	UCH	UCH	Live Data	
CLIO III	UCH	UCH	Read Configuration	
CLIO III	UCH	UCH	Actuation Test	
CLIO III	UCH	UCH	Write Configuration	CF118 UCH TYPE
CLIO III	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
CLIO III	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
CLIO III	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
CLIO III	UCH	UCH	Write Configuration	CF173 ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF
CLIO III	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
CLIO III	UCH	UCH	Write Configuration	CF027 WINDSCREEN TYPE
CLIO III	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
CLIO III	UCH	UCH	Write Configuration	CF104 CHILDRPROOF LOCK
CLIO III	UCH	UCH	Write Configuration	CF009 DEADLOCKING
CLIO III	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CLIO III	UCH	UCH	Other Configuration	VP004 WRITE VIN
CLIO III	UCH	UCH	Erase	RZ001 FAULT MEMORY
CLIO III	UCH	UCH	Configuration	SC005 CARD TESTING
CLIO III	UCH	UCH CLIO III	Read Fault Code	
CLIO III	UCH	UCH CLIO III	Erase Fault Code	
CLIO III	UCH	UCH CLIO III	Read ECU Information	
CLIO III	UCH	UCH CLIO III	Live Data	
CLIO III	UCH	UCH CLIO III	Read Configuration	
CLIO III	UCH	UCH CLIO III	Actuation Test	
CLIO III	UCH	UCH CLIO III	Write Configuration	CF027 WINDSCREEN TYPE
CLIO III	UCH	UCH CLIO III	Write Configuration	CF112 HEADLIGHT WASHERS
CLIO III	UCH	UCH CLIO III	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CLIO III	UCH	UCH CLIO III	Write Configuration	CF020 DRIVING TYPE
CLIO III	UCH	UCH CLIO III	Write Configuration	CF104 CHILDRPROOF LOCK
CLIO III	UCH	UCH CLIO III	Write Configuration	CF109 3-BUTTON KEY
CLIO III	UCH	UCH CLIO III	Write Configuration	CF009 DEADLOCKING
CLIO III	UCH	UCH CLIO III	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
CLIO III	UCH	UCH CLIO III	Write Configuration	CF171 TEMPERATURE DISPLAY
CLIO III	UCH	UCH CLIO III	Write Configuration	CF118 UCH TYPE
CLIO III	UCH	UCH CLIO III	Other Configuration	VP004 WRITE VIN
CLIO III	UCH	UCH CLIO III	Other Configuration	VP016 NEW VEHICLE STORAGE MODE DEACTIVATION
CLIO III	UCH	UCH CLIO III	Erase	RZ001 FAULT MEMORY
CLIO III	UCH	UCH CLIO III	Configuration	SC018 CHECKING A KEY
CLIO III	UCH	UCH	Read Fault Code	
CLIO III	UCH	UCH	Erase Fault Code	
CLIO III	UCH	UCH	Read ECU Information	
CLIO III	UCH	UCH	Live Data	
CLIO III	UCH	UCH	Read Configuration	
CLIO III	UCH	UCH	Actuation Test	
CLIO III	UCH	UCH	Write Configuration	CF118 UCH TYPE
CLIO III	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
CLIO III	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
CLIO III	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
CLIO III	UCH	UCH	Write Configuration	CF173 ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF
CLIO III	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
CLIO III	UCH	UCH	Write Configuration	CF027 WINDSCREEN TYPE
CLIO III	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
CLIO III	UCH	UCH	Write Configuration	CF104 CHILDRPROOF LOCK
CLIO III	UCH	UCH	Write Configuration	CF009 DEADLOCKING
CLIO III	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CLIO III	UCH	UCH	Write Configuration	CF224 REAR ACCESS AERIALS
CLIO III	UCH	UCH	Other Configuration	VP004 WRITE VIN
CLIO III	UCH	UCH	Erase	RZ001 FAULT MEMORY
CLIO III	UCH	UCH	Configuration	SC005 CARD TESTING
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Read Fault Code	
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Erase Fault Code	
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Read ECU Information	
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Live Data	
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Read Configuration	
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF010 WITH FR CHEST AIRBAGS+HEAD-LEVEL AIRBAGS
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF011 W FR CHEST AIRBAGS W/OUT HEAD-LVL AIRBAGS
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF012 WITHOUT SIDE AIRBAGS
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF283 DRIVER'S LAP STRAP/SEAT AIRBAG
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF282 PASSENGER'S LAP STRAP/SEAT AIRBAG
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF009 FRONT SEAT BELT RETRACTORS
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF278 REAR INERTIA REELS
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF289 DRIVER'S SEAT POSITION SENSOR
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF207 DRIVER'S LATERAL SENSOR
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF208 PASSENGER'S LATERAL SENSOR
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	VP048 PASSENGER AIR BAG LOCKING MODE
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP010 WRITE VIN
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Erase	RZ001 FAULT MEMORY
CLIO III	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
CLIO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO III	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
CLIO III	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP006 COMPUTER CALIBRATION
CLIO III	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
CLIO III	UPC	UPC	Read Fault Code	
CLIO III	UPC	UPC	Erase Fault Code	
CLIO III	UPC	UPC	Read ECU Information	
CLIO III	UPC	UPC	Live Data	
CLIO III	UPC	UPC	Read Configuration	
CLIO III	UPC	UPC	Actuation Test	
CLIO III	UPC	UPC	Other Configuration	VP003 WRITE VIN
CLIO III	UPC	UPC	Other Configuration	VP004 VEHICLE PARAMETERS
CLIO III	UPC	UPC	Erase	RZ001 FAULT MEMORY
CLIO III	TYRES	TPMS MODUS	Read Fault Code	
CLIO III	TYRES	TPMS MODUS	Erase Fault Code	
CLIO III	TYRES	TPMS MODUS	Read ECU Information	
CLIO III	TYRES	TPMS MODUS	Live Data	
CLIO III	TYRES	TPMS MODUS	Read Configuration	
CLIO III	TYRES	TPMS MODUS	Write Configuration	CF005 VEHICLE TYPE
CLIO III	TYRES	TPMS MODUS	Other Configuration	VP004 WRITE VIN
CLIO III	TYRES	TPMS MODUS	Other Configuration	VP021 SELECTION OF VALVE SET
CLIO III	TYRES	TPMS MODUS	Erase	RZ002 FAULT MEMORY
CLIO III	TYRES	TPMS MODUS	Configuration	SC006 READING THE VALVE SET AND VALVE CODES
CLIO III	TYRES	TPMS MODUS	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CLIO III	TYRES	TPMS MODUS	Configuration	SC001 PROGRAMMING A VALVE CODE
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Read Fault Code	
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Erase Fault Code	
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Read ECU Information	
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Live Data	
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Read Configuration	
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Actuation Test	
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF001 VEHICLE TYPE
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF002 DYNAMIC CORRECTION
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF004 DIPPED HEADLIGHTS RAISE
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF005 SIGNATURE
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF006 CORNERING LIGHTS
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP001 WRITE VIN
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
CLIO III	LIGHTING	XEN BULB CORN. LIGHTS	Erase	RZ001 FAULT MEMORY
CLIO III	LIGHTING	CORNERING LIGHTS	Read Fault Code	
CLIO III	LIGHTING	CORNERING LIGHTS	Erase Fault Code	
CLIO III	LIGHTING	CORNERING LIGHTS	Read ECU Information	
CLIO III	LIGHTING	CORNERING LIGHTS	Live Data	
CLIO III	LIGHTING	CORNERING LIGHTS	Read Configuration	
CLIO III	LIGHTING	CORNERING LIGHTS	Actuation Test	
CLIO III	LIGHTING	CORNERING LIGHTS	Write Configuration	CF001 VEHICLE TYPE
CLIO III	LIGHTING	CORNERING LIGHTS	Write Configuration	CF006 CORNERING LIGHTS
CLIO III	LIGHTING	CORNERING LIGHTS	Other Configuration	VP001 WRITE VIN
CLIO III	LIGHTING	CORNERING LIGHTS	Erase	RZ001 FAULT MEMORY
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF034 CONSTRUCTOR/MANUFACTURER
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF034 CONSTRUCTOR/MANUFACTURER
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF041 ANGLE OF ASSEMBLY
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF044 GSM ANTENNA
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
CLIO III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
CLIO III	RADIO	R208 RADIO	Read Fault Code	
CLIO III	RADIO	R208 RADIO	Erase Fault Code	
CLIO III	RADIO	R208 RADIO	Read ECU Information	
CLIO III	RADIO	R208 RADIO	Live Data	
CLIO III	RADIO	R208 RADIO	Read Configuration	
CLIO III	RADIO	R208 RADIO	Actuation Test	
CLIO III	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
CLIO III	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
CLIO III	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
CLIO III	RADIO	R208 RADIO	Configuration	SC002 COMP. CONFIGURATION
CLIO III	RADIO	R108 RADIO	Read Fault Code	
CLIO III	RADIO	R108 RADIO	Erase Fault Code	
CLIO III	RADIO	R108 RADIO	Read ECU Information	
CLIO III	RADIO	R108 RADIO	Live Data	
CLIO III	RADIO	R108 RADIO	Read Configuration	
CLIO III	RADIO	R108 RADIO	Actuation Test	
CLIO III	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
CLIO III	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
CLIO III	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
CLIO III	RADIO	R108 RADIO	Configuration	SC002 COMP. CONFIGURATION
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF008 RADIO
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF009 NAVIGATION
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF012 LIGHTING
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF001 VEHICLE TYPE
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Configuration	SC002 VEHICLE IDENTIFIER
CLIO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Configuration	SC003 COMP. CONFIGURATION
CLIO III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read Fault Code	
CLIO III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase Fault Code	
CLIO III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
CLIO III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
CLIO III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
CLIO III	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
CLIO III	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
CLIO III	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
CLIO III	PARKING ASSISTANCE	PARKING AID	Live Data	
CLIO III	PARKING ASSISTANCE	PARKING AID	Read Configuration	
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CLIO III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
CLIO III	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
CLIO III	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
CLIO III	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
CLIO III	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
CLIO III	PARKING ASSISTANCE	PARKING AID	Live Data	
CLIO III	PARKING ASSISTANCE	PARKING AID	Read Configuration	
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CLIO III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
CLIO III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CLIO III	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
CLIO III	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
CLIO III	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
CLIO III	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
CLIO III	PARKING ASSISTANCE	PARKING AID	Live Data	
CLIO III	PARKING ASSISTANCE	PARKING AID	Read Configuration	
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CLIO III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CLIO III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
CLIO III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CLIO III	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	V42 INJECTION	Read Fault Code	
CLIO IV	INJECTION	V42 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	V42 INJECTION	Read ECU Information	
CLIO IV	INJECTION	V42 INJECTION	Live Data	
CLIO IV	INJECTION	V42 INJECTION	Read Configuration	
CLIO IV	INJECTION	V42 INJECTION	Actuation Test	
CLIO IV	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
CLIO IV	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO IV	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO IV	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EMS 3150 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EMS 3150 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EMS 3150 INJECTION	Live Data	
CLIO IV	INJECTION	EMS 3150 INJECTION	Read Configuration	
CLIO IV	INJECTION	EMS 3150 INJECTION	Actuation Test	
CLIO IV	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
CLIO IV	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
CLIO IV	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
CLIO IV	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO IV	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CLIO IV	INJECTION	INJECTION DCM 3.4	Read Fault Code	
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
CLIO IV	INJECTION	INJECTION DCM 3.4	Read ECU Information	
CLIO IV	INJECTION	INJECTION DCM 3.4	Live Data	
CLIO IV	INJECTION	INJECTION DCM 3.4	Read Configuration	
CLIO IV	INJECTION	INJECTION DCM 3.4	Actuation Test	
CLIO IV	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
CLIO IV	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CLIO IV	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EDC17 C42 INJECTION	Live Data	
CLIO IV	INJECTION	EDC17 C42 INJECTION	Read Configuration	
CLIO IV	INJECTION	EDC17 C42 INJECTION	Actuation Test	
CLIO IV	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CLIO IV	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CLIO IV	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CLIO IV	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CLIO IV	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	V50 INJECTION	Read Fault Code	
CLIO IV	INJECTION	V50 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	V50 INJECTION	Read ECU Information	
CLIO IV	INJECTION	V50 INJECTION	Live Data	
CLIO IV	INJECTION	V50 INJECTION	Read Configuration	
CLIO IV	INJECTION	V50 INJECTION	Actuation Test	
CLIO IV	INJECTION	V50 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	V50 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CLIO IV	INJECTION	V50 INJECTION	Erase	RZ116 CLUTCH END OF TRAVEL WIRING SWITCH
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC048 WRITE SAVED DATA
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO IV	INJECTION	V50 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	SID 310 INJECTION	Read Fault Code	
CLIO IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	SID 310 INJECTION	Read ECU Information	
CLIO IV	INJECTION	SID 310 INJECTION	Live Data	
CLIO IV	INJECTION	SID 310 INJECTION	Read Configuration	
CLIO IV	INJECTION	SID 310 INJECTION	Actuation Test	
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CLIO IV	INJECTION	EMS 3125 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EMS 3125 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EMS 3125 INJECTION	Live Data	
CLIO IV	INJECTION	EMS 3125 INJECTION	Read Configuration	
CLIO IV	INJECTION	EMS 3125 INJECTION	Actuation Test	
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CLIO IV	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CLIO IV	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
CLIO IV	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO IV	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EMS 3155 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EMS 3155 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EMS 3155 INJECTION	Live Data	
CLIO IV	INJECTION	EMS 3155 INJECTION	Read Configuration	
CLIO IV	INJECTION	EMS 3155 INJECTION	Actuation Test	
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
CLIO IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
CLIO IV	INJECTION	EMS 3155 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
CLIO IV	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
CLIO IV	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Live Data	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Read Configuration	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Actuation Test	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CLIO IV	INJECTION	SID 310 INJECTION	Read Fault Code	
CLIO IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	SID 310 INJECTION	Read ECU Information	
CLIO IV	INJECTION	SID 310 INJECTION	Live Data	
CLIO IV	INJECTION	SID 310 INJECTION	Read Configuration	
CLIO IV	INJECTION	SID 310 INJECTION	Actuation Test	
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CLIO IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CLIO IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	A.B.S.	ABS	Read Fault Code	
CLIO IV	A.B.S.	ABS	Erase Fault Code	
CLIO IV	A.B.S.	ABS	Read ECU Information	
CLIO IV	A.B.S.	ABS	Live Data	
CLIO IV	A.B.S.	ABS	Read Configuration	
CLIO IV	A.B.S.	ABS	Actuation Test	
CLIO IV	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CLIO IV	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO IV	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CLIO IV	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CLIO IV	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CLIO IV	A.B.S.	ABS	Other Configuration	VP045 HILL START
CLIO IV	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CLIO IV	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CLIO IV	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CLIO IV	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CLIO IV	A.B.S.	ABS	Erase	RZ012 RESET
CLIO IV	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CLIO IV	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CLIO IV	A.B.S.	ABS	Read Fault Code	
CLIO IV	A.B.S.	ABS	Erase Fault Code	
CLIO IV	A.B.S.	ABS	Read ECU Information	
CLIO IV	A.B.S.	ABS	Live Data	
CLIO IV	A.B.S.	ABS	Read Configuration	
CLIO IV	A.B.S.	ABS	Actuation Test	
CLIO IV	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
CLIO IV	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
CLIO IV	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CLIO IV	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
CLIO IV	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
CLIO IV	A.B.S.	ABS	Other Configuration	VP045 HILL START
CLIO IV	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
CLIO IV	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CLIO IV	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CLIO IV	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CLIO IV	A.B.S.	ABS	Erase	RZ012 RESET
CLIO IV	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CLIO IV	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF255 LANGUAGE VERSION.
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
CLIO IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
CLIO IV	UCH	UCH	Read Fault Code	
CLIO IV	UCH	UCH	Erase Fault Code	
CLIO IV	UCH	UCH	Read ECU Information	
CLIO IV	UCH	UCH	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	UCH	UCH	Read Configuration	
CLIO IV	UCH	UCH	Actuation Test	
CLIO IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CLIO IV	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CLIO IV	UCH	UCH	Write Configuration	CF229 ALARM
CLIO IV	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CLIO IV	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CLIO IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
CLIO IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CLIO IV	UCH	UCH	Read Fault Code	
CLIO IV	UCH	UCH	Erase Fault Code	
CLIO IV	UCH	UCH	Read ECU Information	
CLIO IV	UCH	UCH	Live Data	
CLIO IV	UCH	UCH	Read Configuration	
CLIO IV	UCH	UCH	Actuation Test	
CLIO IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
CLIO IV	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CLIO IV	UCH	UCH	Write Configuration	CF229 ALARM
CLIO IV	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
CLIO IV	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
CLIO IV	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CLIO IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
CLIO IV	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
CLIO IV	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
CLIO IV	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
CLIO IV	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
CLIO IV	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
CLIO IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
CLIO IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CLIO IV	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ013 RESET CLUTCH DATA
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC004 WRITE SAVED DATA
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
CLIO IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Read Fault Code	
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Erase Fault Code	
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Read ECU Information	
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Live Data	
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Actuation Test	
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Other Configuration	VP001 WRITE VIN
CLIO IV	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Erase	RZ001 FAULT MEMORY
CLIO IV	UPC	UPC COMP. TYPE	Read Fault Code	
CLIO IV	UPC	UPC COMP. TYPE	Erase Fault Code	
CLIO IV	UPC	UPC COMP. TYPE	Read ECU Information	
CLIO IV	UPC	UPC COMP. TYPE	Live Data	
CLIO IV	UPC	UPC COMP. TYPE	Actuation Test	
CLIO IV	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
CLIO IV	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
CLIO IV	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
CLIO IV	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC018 STARTER LEARNING
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC017 HIGH PRESSURE PUMP LEARNING
CLIO IV	UPC	UPC COMP. TYPE	Read Fault Code	
CLIO IV	UPC	UPC COMP. TYPE	Erase Fault Code	
CLIO IV	UPC	UPC COMP. TYPE	Read ECU Information	
CLIO IV	UPC	UPC COMP. TYPE	Live Data	
CLIO IV	UPC	UPC COMP. TYPE	Read Configuration	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	UPC	UPC COMP. TYPE	Actuation Test	
CLIO IV	UPC	UPC COMP. TYPE	Write Configuration	CF046 MULTIPLE 12V BATTERIES
CLIO IV	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
CLIO IV	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
CLIO IV	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
CLIO IV	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
CLIO IV	UPC	UPC COMP. TYPE	Configuration	SC015 COUNTRY MODEL
CLIO IV	PARKING PROX CAN	PARKING AID	Read Fault Code	
CLIO IV	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CLIO IV	PARKING PROX CAN	PARKING AID	Read ECU Information	
CLIO IV	PARKING PROX CAN	PARKING AID	Live Data	
CLIO IV	PARKING PROX CAN	PARKING AID	Read Configuration	
CLIO IV	PARKING PROX CAN	PARKING AID	Actuation Test	
CLIO IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CLIO IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CLIO IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
CLIO IV	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
CLIO IV	PARKING PROX CAN	PARKING AID	Read Fault Code	
CLIO IV	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CLIO IV	PARKING PROX CAN	PARKING AID	Read ECU Information	
CLIO IV	PARKING PROX CAN	PARKING AID	Live Data	
CLIO IV	PARKING PROX CAN	PARKING AID	Read Configuration	
CLIO IV	PARKING PROX CAN	PARKING AID	Actuation Test	
CLIO IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CLIO IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
CLIO IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
CLIO IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
CLIO IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CLIO IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CLIO IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
CLIO IV	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
CLIO IV	RADIO	RADIO	Read Fault Code	
CLIO IV	RADIO	RADIO	Erase Fault Code	
CLIO IV	RADIO	RADIO	Read ECU Information	
CLIO IV	RADIO	RADIO	Live Data	
CLIO IV	RADIO	RADIO	Read Configuration	
CLIO IV	RADIO	RADIO	Actuation Test	
CLIO IV	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CLIO IV	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CLIO IV	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CLIO IV	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
CLIO IV	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
CLIO IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CLIO IV	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
CLIO IV	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
CLIO IV	RADIO	RADIO	Read Fault Code	
CLIO IV	RADIO	RADIO	Erase Fault Code	
CLIO IV	RADIO	RADIO	Read ECU Information	
CLIO IV	RADIO	RADIO	Live Data	
CLIO IV	RADIO	RADIO	Read Configuration	
CLIO IV	RADIO	RADIO	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
CLIO IV	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CLIO IV	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CLIO IV	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
CLIO IV	RADIO	RADIO	Read Fault Code	
CLIO IV	RADIO	RADIO	Erase Fault Code	
CLIO IV	RADIO	RADIO	Read ECU Information	
CLIO IV	RADIO	RADIO	Live Data	
CLIO IV	RADIO	RADIO	Read Configuration	
CLIO IV	RADIO	RADIO	Actuation Test	
CLIO IV	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CLIO IV	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CLIO IV	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CLIO IV	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
CLIO IV	RADIO	RADIO	Erase	RZ004 RESET RADIO
CLIO IV	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
CLIO IV	RADIO	RADIO	Read Fault Code	
CLIO IV	RADIO	RADIO	Erase Fault Code	
CLIO IV	RADIO	RADIO	Read ECU Information	
CLIO IV	RADIO	RADIO	Live Data	
CLIO IV	RADIO	RADIO	Read Configuration	
CLIO IV	RADIO	RADIO	Actuation Test	
CLIO IV	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CLIO IV	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CLIO IV	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
CLIO IV	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
CLIO IV	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CLIO IV	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
CLIO IV	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
CLIO IV	AMPLIFIER	AMPLIFIER	Read Fault Code	
CLIO IV	AMPLIFIER	AMPLIFIER	Erase Fault Code	
CLIO IV	AMPLIFIER	AMPLIFIER	Read ECU Information	
CLIO IV	AMPLIFIER	AMPLIFIER	Live Data	
CLIO IV	AMPLIFIER	AMPLIFIER	Read Configuration	
CLIO IV	AMPLIFIER	AMPLIFIER	Actuation Test	
CLIO IV	AMPLIFIER	AMPLIFIER	Write Configuration	CF007 SYSTEM CONFIGURATION
CLIO IV	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
CLIO IV	AMPLIFIER	AMPLIFIER	Erase	RZ005 FAULT MEMORY
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Read Fault Code	
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Erase Fault Code	
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Read ECU Information	
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Live Data	
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Actuation Test	
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Other Configuration	VP002 SYSTEM INITIALISATION
CLIO IV	LIGHTING	HEAD LAMP LEVELING SYSTEM	Erase	RZ001 FAULT MEMORY
CLIO IV	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Live Data	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Function Test	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Read Configuration	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Actuation Test	
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
CLIO IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) - DILUTION
CLIO IV	INJECTION	EMS 3140 INJECTION	Read Fault Code	
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
CLIO IV	INJECTION	EMS 3140 INJECTION	Read ECU Information	
CLIO IV	INJECTION	EMS 3140 INJECTION	Live Data	
CLIO IV	INJECTION	EMS 3140 INJECTION	Function Test	
CLIO IV	INJECTION	EMS 3140 INJECTION	Read Configuration	
CLIO IV	INJECTION	EMS 3140 INJECTION	Actuation Test	
CLIO IV	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CLIO IV	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO IV	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO IV	INJECTION	EMS 3140 INJECTION	Other Configuration	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ061 PLYWHEEL TARGET PROGRAMMING
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
CLIO IV	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO IV	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO IV	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO IV	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO IV	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CLIO IV	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO IV	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO V6	INJECTION		Live Data	
CLIO V6	INJECTION		Actuation Test	
CLIO V6	INJECTION		Erase	PROGRAMMING REINITIALISATION
CLIO V6	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO V6	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO V6	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO V6	AIRBAG / PRETENSIONERS		Live Data	
CLIO V6	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO V6	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO V6	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
CLIO V6	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
CLIO V6	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO V6	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO V6	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO V6	AIRBAG / PRETENSIONERS		Live Data	
CLIO V6	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO V6	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO V6	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
CLIO V6	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
CLIO V6	AIR CONDITIONING		Read Fault Code	
CLIO V6	AIR CONDITIONING		Erase Fault Code	
CLIO V6	AIR CONDITIONING		Read ECU Information	
CLIO V6	AIR CONDITIONING		Live Data	
CLIO V6	AIR CONDITIONING		Actuation Test	
CLIO V6	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
CLIO V6	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
CLIO V6	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
CLIO V6	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
CLIO V6	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
CLIO V6	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
CLIO V6	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
CLIO V6	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
CLIO V6	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
CLIO V6	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
CLIO V6	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
CLIO V6	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
CLIO V6	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
CLIO V6	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
CLIO V6	CONNECTION UNIT		Read Fault Code	
CLIO V6	CONNECTION UNIT		Erase Fault Code	
CLIO V6	CONNECTION UNIT		Read ECU Information	
CLIO V6	CONNECTION UNIT		Live Data	
CLIO V6	CONNECTION UNIT		Actuation Test	
CLIO V6 ph 2	INJECTION		Read Fault Code	
CLIO V6 ph 2	INJECTION		Erase Fault Code	
CLIO V6 ph 2	INJECTION		Read ECU Information	
CLIO V6 ph 2	INJECTION		Live Data	
CLIO V6 ph 2	INJECTION		Actuation Test	
CLIO V6 ph 2	INJECTION		Erase	RZ007 FAULT MEMORY
CLIO V6 ph 2	INJECTION		Erase	RZ005 PROGRAMMING REINITIALISATION
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Read Fault Code	
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Read ECU Information	
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Live Data	
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	PASSENGER AIR BAG LOCKING MODE
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF226 PASSENGER'S FRONT BUCKLE PRETENSIONER
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF263 DRIVER'S SIDE REAR INERTIA REEL
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF264 PASSENGER'S SIDE REAR INERTIA REEL
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF297 DRIVER'S LATERAL SENSOR
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Write Configuration	CF208 PASSENGER'S LATERAL SENSOR
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
CLIO V6 ph 2	AIRBAG / PRETENSIONERS		Parameters Configuration	VP015 PARAMETRAGE PRIVE 1
CLIO V6 ph 2	AIR CONDITIONING		Read Fault Code	
CLIO V6 ph 2	AIR CONDITIONING		Erase Fault Code	
CLIO V6 ph 2	AIR CONDITIONING		Read ECU Information	
CLIO V6 ph 2	AIR CONDITIONING		Live Data	
CLIO V6 ph 2	AIR CONDITIONING		Actuation Test	
CLIO V6 ph 2	CONNECTION UNIT		Read Fault Code	
CLIO V6 ph 2	CONNECTION UNIT		Erase Fault Code	
CLIO V6 ph 2	CONNECTION UNIT		Read ECU Information	
CLIO V6 ph 2	CONNECTION UNIT		Live Data	
CLIO V6 ph 2	CONNECTION UNIT		Actuation Test	
CLIO V6 ph 2	CONNECTION UNIT		Read Fault Code	
CLIO V6 ph 2	CONNECTION UNIT		Erase Fault Code	
CLIO V6 ph 2	CONNECTION UNIT		Read ECU Information	
CLIO V6 ph 2	CONNECTION UNIT		Live Data	
CLIO V6 ph 2	CONNECTION UNIT		Actuation Test	
CLIO V6 ph 2	CONNECTION UNIT		Read Fault Code	
CLIO V6 ph 2	CONNECTION UNIT		Erase Fault Code	
CLIO V6 ph 2	CONNECTION UNIT		Read ECU Information	
CLIO V6 ph 2	CONNECTION UNIT		Live Data	
CLIO V6 ph 2	CONNECTION UNIT		Actuation Test	
CLIO V6 ph 2	CONNECTION UNIT		Read Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Erase Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO V6 ph 2	ENGINE IMMOBILISER		Live Data	
CLIO V6 ph 2	ENGINE IMMOBILISER		Actuation Test	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Erase Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read ECU Information	
CLIO V6 ph 2	ENGINE IMMOBILISER		Live Data	
CLIO V6 ph 2	ENGINE IMMOBILISER		Actuation Test	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Erase Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read ECU Information	
CLIO V6 ph 2	ENGINE IMMOBILISER		Live Data	
CLIO V6 ph 2	ENGINE IMMOBILISER		Actuation Test	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Erase Fault Code	
CLIO V6 ph 2	ENGINE IMMOBILISER		Read ECU Information	
CLIO V6 ph 2	ENGINE IMMOBILISER		Live Data	
CLIO V6 ph 2	ENGINE IMMOBILISER		Actuation Test	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Read Fault Code	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Read ECU Information	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Live Data	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Read Configuration	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Actuation Test	
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
CLIO11p2/3/4	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Read Fault Code	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase Fault Code	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Read ECU Information	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Live Data	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Actuation Test	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Read Configuration	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF578 GEARBOX TYPE
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF582 CRUISE CTRL/SPEED LIMITER
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 PREVENTION OF ELECTRICAL CONSUMERS
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
CLIO11p2/3/4	INJECTION		Read Fault Code	
CLIO11p2/3/4	INJECTION		Erase Fault Code	
CLIO11p2/3/4	INJECTION		Read ECU Information	
CLIO11p2/3/4	INJECTION		Live Data	
CLIO11p2/3/4	INJECTION		Actuation Test	
CLIO11p2/3/4	INJECTION		Read Configuration	
CLIO11p2/3/4	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
CLIO11p2/3/4	INJECTION		Parameters Configuration	VP001 WRITE VIN
CLIO11p2/3/4	INJECTION		Read Fault Code	
CLIO11p2/3/4	INJECTION		Erase Fault Code	
CLIO11p2/3/4	INJECTION		Read ECU Information	
CLIO11p2/3/4	INJECTION		Live Data	
CLIO11p2/3/4	INJECTION		Actuation Test	
CLIO11p2/3/4	INJECTION		Read Configuration	
CLIO11p2/3/4	INJECTION		Erase	RZ005 PROGRAMMING REINITIALISATION
CLIO11p2/3/4	INJECTION		Read Fault Code	
CLIO11p2/3/4	INJECTION		Erase Fault Code	
CLIO11p2/3/4	INJECTION		Read ECU Information	
CLIO11p2/3/4	INJECTION		Live Data	
CLIO11p2/3/4	INJECTION		Actuation Test	
CLIO11p2/3/4	INJECTION		Read Configuration	
CLIO11p2/3/4	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
CLIO11p2/3/4	INJECTION		Parameters Configuration	VP001 WRITE VIN
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Read Fault Code	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase Fault Code	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Read ECU Information	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Live Data	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Actuation Test	
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
CLIO11p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
CLIO11p2/3/4	INJECTION		Read Fault Code	
CLIO11p2/3/4	INJECTION		Erase Fault Code	
CLIO11p2/3/4	INJECTION		Read ECU Information	
CLIO11p2/3/4	INJECTION		Live Data	
CLIO11p2/3/4	INJECTION		Actuation Test	
CLIO11p2/3/4	INJECTION		Read Configuration	
CLIO11p2/3/4	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
CLIO11p2/3/4	INJECTION		Read Fault Code	
CLIO11p2/3/4	INJECTION		Erase Fault Code	
CLIO11p2/3/4	INJECTION		Read ECU Information	
CLIO11p2/3/4	INJECTION		Live Data	
CLIO11p2/3/4	INJECTION		Actuation Test	
CLIO11p2/3/4	INJECTION		Read Configuration	
CLIO11p2/3/4	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 PREVENTION OF ELECTRICAL CONSUMERS
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Read ECU Information	
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Live Data	
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Actuation Test	
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Read Configuration	
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF578 GEARBOX TYPE
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Write Configuration	CF582 CRUISE CTRL/SPEED LIMITER
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 PREVENTION OF ELECTRICAL CONSUMERS
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
CLIO1p2/3/4	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
CLIO1p2/3/4	A.B.S.		Read Fault Code	
CLIO1p2/3/4	A.B.S.		Erase Fault Code	
CLIO1p2/3/4	A.B.S.		Read ECU Information	
CLIO1p2/3/4	A.B.S.		Live Data	
CLIO1p2/3/4	A.B.S.		Actuation Test	
CLIO1p2/3/4	A.B.S.		Read Configuration	
CLIO1p2/3/4	A.B.S.		Specific Command	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
CLIO1p2/3/4	A.B.S.		Parameters Configuration	VP004 VEHICLE PARAMETERS
CLIO1p2/3/4	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
CLIO1p2/3/4	A.B.S.		Read Fault Code	
CLIO1p2/3/4	A.B.S.		Erase Fault Code	
CLIO1p2/3/4	A.B.S.		Read ECU Information	
CLIO1p2/3/4	A.B.S.		Live Data	
CLIO1p2/3/4	A.B.S.		Actuation Test	
CLIO1p2/3/4	A.B.S.		Parameters Configuration	VP004 VEHICLE PARAMETERS
CLIO1p2/3/4	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
CLIO1p2/3/4	A.B.S.		Parameters Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CLIO1p2/3/4	A.B.S.		Read Fault Code	
CLIO1p2/3/4	A.B.S.		Erase Fault Code	
CLIO1p2/3/4	A.B.S.		Read ECU Information	
CLIO1p2/3/4	A.B.S.		Live Data	
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Actuation Test	
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Read Configuration	
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF263 DRIVER'S SIDE REAR INERTIA REEL
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF264 PASSENGER'S SIDE REAR INERTIA REEL
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF232 DRIVER'S SEAT SENSOR
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF207 DRIVER'S LATERAL SENSOR
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Write Configuration	CF208 PASSENGER'S LATERAL SENSOR
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
CLIO1p2/3/4	AIRBAG / PRETENSIONERS		Parameters Configuration	VP015 PARAMETRAGE PRIVE 1
CLIO1p2/3/4	AIR CONDITIONING		Read Fault Code	
CLIO1p2/3/4	AIR CONDITIONING		Erase Fault Code	
CLIO1p2/3/4	AIR CONDITIONING		Read ECU Information	
CLIO1p2/3/4	AIR CONDITIONING		Live Data	
CLIO1p2/3/4	AIR CONDITIONING		Actuation Test	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read ECU Information	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Live Data	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Actuation Test	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Configuration	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Write Configuration	CF317 AIR CONDITIONING WITH WIRE CONNECTION
CLIO1p2/3/4	AUTOMATIC GEARBOX		Write Configuration	CF074 WRITE TRANSMISSION OIL CHANGE DATE
CLIO1p2/3/4	AUTOMATIC GEARBOX		Write Configuration	CF320 NOTE OIL WEAR COUNTER
CLIO1p2/3/4	AUTOMATIC GEARBOX		Write Configuration	CF315 CHECK MOTOR TORQUE BY ABS
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read ECU Information	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Live Data	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Actuation Test	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Parameters Configuration	VP015 NOTE OIL WEAR COUNTER
CLIO1p2/3/4	AUTOMATIC GEARBOX		Parameters Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read ECU Information	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Live Data	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Actuation Test	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read ECU Information	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Live Data	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Actuation Test	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Erase Fault Code	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read ECU Information	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Live Data	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Actuation Test	
CLIO1p2/3/4	AUTOMATIC GEARBOX		Read Configuration	CF324 AIR CONDITIONING CONNECTION FAULT FINDING
CLIO1p2/3/4	AUTOMATIC GEARBOX		Parameters Configuration	VP015 NOTE OIL WEAR COUNTER
CLIO1p2/3/4	AUTOMATIC GEARBOX		Parameters Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
CLIO1p2/3/4	GAS INJ.		Read Fault Code	
CLIO1p2/3/4	GAS INJ.		Erase Fault Code	
CLIO1p2/3/4	GAS INJ.		Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DOKKER/KANGOO	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Read Fault Code	
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Read ECU Information	
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Live Data	
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Read Configuration	
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Actuation Test	
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR DIFF. PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DOKKER/KANGOO	A.B.S.	ESP	Read Fault Code	
DOKKER/KANGOO	A.B.S.	ESP	Erase Fault Code	
DOKKER/KANGOO	A.B.S.	ESP	Read ECU Information	
DOKKER/KANGOO	A.B.S.	ESP	Live Data	
DOKKER/KANGOO	A.B.S.	ESP	Read Configuration	
DOKKER/KANGOO	A.B.S.	ESP	Actuation Test	
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Other Configuration	VP045 HILL START
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
DOKKER/KANGOO	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
DOKKER/KANGOO	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
DOKKER/KANGOO	A.B.S.	ABS	Read Fault Code	
DOKKER/KANGOO	A.B.S.	ABS	Erase Fault Code	
DOKKER/KANGOO	A.B.S.	ABS	Read ECU Information	
DOKKER/KANGOO	A.B.S.	ABS	Live Data	
DOKKER/KANGOO	A.B.S.	ABS	Actuation Test	
DOKKER/KANGOO	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DOKKER/KANGOO	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DOKKER/KANGOO	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ002 RESET OIL CHANGE COUNTER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
DOKKER/KANGOO	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	UCH	UCH	Read Fault Code	
DOKKER/KANGOO	UCH	UCH	Erase Fault Code	
DOKKER/KANGOO	UCH	UCH	Read ECU Information	
DOKKER/KANGOO	UCH	UCH	Live Data	
DOKKER/KANGOO	UCH	UCH	Read Configuration	
DOKKER/KANGOO	UCH	UCH	Actuation Test	
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF229 ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DOKKER/KANGOO	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
DOKKER/KANGOO	UCH	UCH	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DOKKER/KANGOO	UCH	UCH	Read Fault Code	
DOKKER/KANGOO	UCH	UCH	Erase Fault Code	
DOKKER/KANGOO	UCH	UCH	Read ECU Information	
DOKKER/KANGOO	UCH	UCH	Live Data	
DOKKER/KANGOO	UCH	UCH	Read Configuration	
DOKKER/KANGOO	UCH	UCH	Actuation Test	
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF229 ALARM
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
DOKKER/KANGOO	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DOKKER/KANGOO	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
DOKKER/KANGOO	UCH	UCH	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
DOKKER/KANGOO	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
DOKKER/KANGOO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information	
DOKKER/KANGOO	RADIO	RADIO	Live Data	
DOKKER/KANGOO	RADIO	RADIO	Read Configuration	
DOKKER/KANGOO	RADIO	RADIO	Actuation Test	
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
DOKKER/KANGOO	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
DOKKER/KANGOO	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information	
DOKKER/KANGOO	RADIO	RADIO	Live Data	
DOKKER/KANGOO	RADIO	RADIO	Read Configuration	
DOKKER/KANGOO	RADIO	RADIO	Actuation Test	
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information	
DOKKER/KANGOO	RADIO	RADIO	Live Data	
DOKKER/KANGOO	RADIO	RADIO	Read Configuration	
DOKKER/KANGOO	RADIO	RADIO	Actuation Test	
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Read Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Erase Fault Code	
DOKKER/KANGOO	RADIO	RADIO	Read ECU Information	
DOKKER/KANGOO	RADIO	RADIO	Live Data	
DOKKER/KANGOO	RADIO	RADIO	Read Configuration	
DOKKER/KANGOO	RADIO	RADIO	Actuation Test	
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DOKKER/KANGOO	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
DOKKER/KANGOO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DOKKER/KANGOO	RADIO	RADIO	Erase	VP001 WRITE VIN
DOKKER/KANGOO	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
DOKKER/KANGOO	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
DOKKER/KANGOO	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Read Fault Code	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase Fault Code	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Read ECU Information	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Live Data	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Function Test	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Read Configuration	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Actuation Test	
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ136 DOWNSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFP. SENSOR
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
DOKKER/KANGOO	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
DOKKER/KANGOO	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
DUSTER	INJECTION	V42 INJECTION	Read Fault Code	
DUSTER	INJECTION	V42 INJECTION	Erase Fault Code	
DUSTER	INJECTION	V42 INJECTION	Read ECU Information	
DUSTER	INJECTION	V42 INJECTION	Live Data	
DUSTER	INJECTION	V42 INJECTION	Actuation Test	
DUSTER	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DUSTER	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
DUSTER	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER	INJECTION	INJECTION DCM 3.4	Read Fault Code	
DUSTER	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
DUSTER	INJECTION	INJECTION DCM 3.4	Read ECU Information	
DUSTER	INJECTION	INJECTION DCM 3.4	Live Data	
DUSTER	INJECTION	INJECTION DCM 3.4	Read Configuration	
DUSTER	INJECTION	INJECTION DCM 3.4	Actuation Test	
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
DUSTER	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
DUSTER	INJECTION	SID 305 INJECTION	Read Fault Code	
DUSTER	INJECTION	SID 305 INJECTION	Erase Fault Code	
DUSTER	INJECTION	SID 305 INJECTION	Read ECU Information	
DUSTER	INJECTION	SID 305 INJECTION	Live Data	
DUSTER	INJECTION	SID 305 INJECTION	Read Configuration	
DUSTER	INJECTION	SID 305 INJECTION	Actuation Test	
DUSTER	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER	INJECTION	SID 305 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC004 HIGH PRESSURE CIRCUIT LEAK TEST
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
DUSTER	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Actuation Test	
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Write Configuration	CF001 VEHICLE TYPE
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Write Configuration	CF002 GEARBOX TYPE
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP003 WRITE VIN
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP002 SPEEDO INDEX
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP004 COMPUTER INITIALISATION
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP007 MODIFICATION OF PARAMETERS AFTER INITIALISATION
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP001 VEHICLE PARAMETERS
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
DUSTER	4 WHEELS DRIVE	4 WHEELS DRIVE	Configuration	SC001 CHECK TARGET TEETH
DUSTER	RADIO	RADIO	Read Fault Code	
DUSTER	RADIO	RADIO	Erase Fault Code	
DUSTER	RADIO	RADIO	Read ECU Information	
DUSTER	RADIO	RADIO	Live Data	
DUSTER	RADIO	RADIO	Read Configuration	
DUSTER	RADIO	RADIO	Actuation Test	
DUSTER	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DUSTER	RADIO	RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
DUSTER	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DUSTER	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DUSTER	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
DUSTER	RADIO	RADIO	Read Fault Code	
DUSTER	RADIO	RADIO	Erase Fault Code	
DUSTER	RADIO	RADIO	Read ECU Information	
DUSTER	RADIO	RADIO	Live Data	
DUSTER	RADIO	RADIO	Read Configuration	
DUSTER	RADIO	RADIO	Actuation Test	
DUSTER	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER	RADIO	RADIO	Write Configuration	CF014 DRIVING TYPE
DUSTER	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DUSTER	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DUSTER	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
DUSTER	RADIO	RADIO	Erase	RZ004 RESET RADIO
DUSTER	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DUSTER	INJECTION	INJECTION DCM 1.2	Read Fault Code	
DUSTER	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
DUSTER	INJECTION	INJECTION DCM 1.2	Read ECU Information	
DUSTER	INJECTION	INJECTION DCM 1.2	Live Data	
DUSTER	INJECTION	INJECTION DCM 1.2	Actuation Test	
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
DUSTER	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
DUSTER	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
DUSTER	INJECTION	EMS 3130 INJECTION	Read Fault Code	
DUSTER	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
DUSTER	INJECTION	EMS 3130 INJECTION	Read ECU Information	
DUSTER	INJECTION	EMS 3130 INJECTION	Live Data	
DUSTER	INJECTION	EMS 3130 INJECTION	Read Configuration	
DUSTER	INJECTION	EMS 3130 INJECTION	Actuation Test	
DUSTER	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
DUSTER	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
DUSTER	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
DUSTER	A.B.S.	ESP	Read Fault Code	
DUSTER	A.B.S.	ESP	Erase Fault Code	
DUSTER	A.B.S.	ESP	Read ECU Information	
DUSTER	A.B.S.	ESP	Live Data	
DUSTER	A.B.S.	ESP	Actuation Test	
DUSTER	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
DUSTER	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
DUSTER	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
DUSTER	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
DUSTER	A.B.S.	ESP	Erase	RZ011 SENSOR OFFSETS
DUSTER	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
DUSTER	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
DUSTER	A.B.S.	ABS	Read Fault Code	
DUSTER	A.B.S.	ABS	Erase Fault Code	
DUSTER	A.B.S.	ABS	Read ECU Information	
DUSTER	A.B.S.	ABS	Live Data	
DUSTER	A.B.S.	ABS	Actuation Test	
DUSTER	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DUSTER	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
DUSTER	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DUSTER	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DUSTER	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DUSTER	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	UCH	UCH	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Write Configuration	CF272 SDO
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	UCH	UCH	Read Fault Code	
DUSTER	UCH	UCH	Erase Fault Code	
DUSTER	UCH	UCH	Read ECU Information	
DUSTER	UCH	UCH	Live Data	
DUSTER	UCH	UCH	Read Configuration	
DUSTER	UCH	UCH	Actuation Test	
DUSTER	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
DUSTER	UCH	UCH	Write Configuration	CF272 SDO
DUSTER	UCH	UCH	Other Configuration	VP004 WRITE VIN
DUSTER	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER	UCH	UCH	Configuration	SC008 UCH TYPE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF050 DRIVER'S FRONT INERTIA REEL
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF051 PASSENGER'S FRONT INERTIA REEL
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF048 SEAT BELT REMINDER BUZZER
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF274 PASSENGER'S SEAT BUCKLE SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF275 PASSENGER PRESENCE DETECTION SENSOR
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
DUSTER	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
DUSTER	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
DUSTER	TRACKER	TRACKER	Read Fault Code	
DUSTER	TRACKER	TRACKER	Erase Fault Code	
DUSTER	TRACKER	TRACKER	Read ECU Information	
DUSTER	TRACKER	TRACKER	Live Data	
DUSTER	TRACKER	TRACKER	Read Configuration	
DUSTER	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
DUSTER	TRACKER	TRACKER	Other Configuration	VP001 WRITE V. I. N.
DUSTER	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Read Fault Code	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Read ECU Information	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Live Data	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Read Configuration	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Actuation Test	
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 306 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	SID 306 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	SID 306 INJECTION	Live Data	
DUSTER ph2	INJECTION	SID 306 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	SID 306 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP305 PARAMETRAGE PRIVE 250
DUSTER ph2	INJECTION	SID 306 INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER ph2	INJECTION	SID 306 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 306 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Live Data	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: 02 SENSORS
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Live Data	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	SID 310 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	SID 310 INJECTION	Live Data	
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	SID 310 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Live Data	
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Live Data	
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Live Data	
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Fault Code	
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase Fault Code	
DUSTER ph2	INJECTION	SID 310 INJECTION	Read ECU Information	
DUSTER ph2	INJECTION	SID 310 INJECTION	Live Data	
DUSTER ph2	INJECTION	SID 310 INJECTION	Read Configuration	
DUSTER ph2	INJECTION	SID 310 INJECTION	Actuation Test	
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
DUSTER ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph2	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph2	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph2	A.B.S.	ABS	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph2	A.B.S.	ABS	Erase Fault Code	
DUSTER ph2	A.B.S.	ABS	Read ECU Information	
DUSTER ph2	A.B.S.	ABS	Live Data	
DUSTER ph2	A.B.S.	ABS	Read Configuration	
DUSTER ph2	A.B.S.	ABS	Actuation Test	
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP045 HILL START
DUSTER ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DUSTER ph2	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ012 RESET
DUSTER ph2	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
DUSTER ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DUSTER ph2	A.B.S.	ABS	Read Fault Code	
DUSTER ph2	A.B.S.	ABS	Erase Fault Code	
DUSTER ph2	A.B.S.	ABS	Read ECU Information	
DUSTER ph2	A.B.S.	ABS	Live Data	
DUSTER ph2	A.B.S.	ABS	Actuation Test	
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DUSTER ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DUSTER ph2	A.B.S.	ABS	Erase	RZ012 RESET
DUSTER ph2	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
DUSTER ph2	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DUSTER ph2	A.B.S.	ABS	Read Fault Code	
DUSTER ph2	A.B.S.	ABS	Erase Fault Code	
DUSTER ph2	A.B.S.	ABS	Read ECU Information	
DUSTER ph2	A.B.S.	ABS	Live Data	
DUSTER ph2	A.B.S.	ABS	Read Configuration	
DUSTER ph2	A.B.S.	ABS	Actuation Test	
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
DUSTER ph2	A.B.S.	ABS	Other Configuration	VP045 HILL START
DUSTER ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
DUSTER ph2	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
DUSTER ph2	A.B.S.	ABS	Erase	RZ012 RESET
DUSTER ph2	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
DUSTER ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
DUSTER ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
DUSTER ph2	UCH	UCH	Read Fault Code	
DUSTER ph2	UCH	UCH	Erase Fault Code	
DUSTER ph2	UCH	UCH	Read ECU Information	
DUSTER ph2	UCH	UCH	Live Data	
DUSTER ph2	UCH	UCH	Read Configuration	
DUSTER ph2	UCH	UCH	Actuation Test	
DUSTER ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DUSTER ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF229 ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
DUSTER ph2	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
DUSTER ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DUSTER ph2	UCH	UCH	Read Fault Code	
DUSTER ph2	UCH	UCH	Erase Fault Code	
DUSTER ph2	UCH	UCH	Read ECU Information	
DUSTER ph2	UCH	UCH	Live Data	
DUSTER ph2	UCH	UCH	Read Configuration	
DUSTER ph2	UCH	UCH	Actuation Test	
DUSTER ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DUSTER ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF229 ALARM
DUSTER ph2	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
DUSTER ph2	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
DUSTER ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
DUSTER ph2	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
DUSTER ph2	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
DUSTER ph2	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
DUSTER ph2	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVEE 1
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Live Data	
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
DUSTER ph2	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
DUSTER ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
DUSTER ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
DUSTER ph2	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Actuation Test	
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Write Configuration	CF001 VEHICLE TYPE
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP002 SPEEDO INDEX
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP004 COMPUTER INITIALISATION
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP007 MODIFICATION OF PARAMETERS AFTER INITIALISATION
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Other Configuration	VP003 WRITE VIN
DUSTER ph2	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
DUSTER ph2	RADIO	RADIO	Read Fault Code	
DUSTER ph2	RADIO	RADIO	Erase Fault Code	
DUSTER ph2	RADIO	RADIO	Read ECU Information	
DUSTER ph2	RADIO	RADIO	Live Data	
DUSTER ph2	RADIO	RADIO	Read Configuration	
DUSTER ph2	RADIO	RADIO	Actuation Test	
DUSTER ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph2	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DUSTER ph2	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DUSTER ph2	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
DUSTER ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET



**Diagnosis list Renault\_ v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
DUSTER ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
DUSTER ph2	RADIO	RADIO	Read Fault Code	
DUSTER ph2	RADIO	RADIO	Erase Fault Code	
DUSTER ph2	RADIO	RADIO	Read ECU Information	
DUSTER ph2	RADIO	RADIO	Live Data	
DUSTER ph2	RADIO	RADIO	Read Configuration	
DUSTER ph2	RADIO	RADIO	Actuation Test	
DUSTER ph2	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
DUSTER ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph2	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
DUSTER ph2	RADIO	RADIO	Read Fault Code	
DUSTER ph2	RADIO	RADIO	Erase Fault Code	
DUSTER ph2	RADIO	RADIO	Read ECU Information	
DUSTER ph2	RADIO	RADIO	Live Data	
DUSTER ph2	RADIO	RADIO	Read Configuration	
DUSTER ph2	RADIO	RADIO	Actuation Test	
DUSTER ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph2	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
DUSTER ph2	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
DUSTER ph2	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DUSTER ph2	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
DUSTER ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
DUSTER ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
DUSTER ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION		Read Configuration	
ESPACE	INJECTION		Write Configuration	WITH THERMOPLUNGERS
ESPACE	INJECTION		Write Configuration	WITH CRUISE CONTROL
ESPACE	INJECTION		Write Configuration	WITHOUT CRUISE CONTROL
ESPACE	INJECTION		Write Configuration	WITH AIR CONDITIONING
ESPACE	INJECTION		Write Configuration	WITHOUT AIR CONDITIONING
ESPACE	INJECTION		Write Configuration	INCREMENT OF IDLE SPEED
ESPACE	INJECTION		Write Configuration	DECREMENT IDLE SPEED
ESPACE	INJECTION		Write Configuration	WITH SWIRL FLAP
ESPACE	INJECTION		Write Configuration	WITHOUT SWIRL FLAP
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION		Read Configuration	
ESPACE	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
ESPACE	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
ESPACE	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
ESPACE	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION		Read Configuration	
ESPACE	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION		Read Configuration	
ESPACE	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
ESPACE	INJECTION	DIESEL INJECTION	Read Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Erase Fault Code	
ESPACE	INJECTION	DIESEL INJECTION	Read ECU Information	
ESPACE	INJECTION	DIESEL INJECTION	Live Data	
ESPACE	INJECTION	DIESEL INJECTION	Actuation Test	
ESPACE	INJECTION	DIESEL INJECTION	Read Configuration	
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
ESPACE	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION		Read Configuration	
ESPACE	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
ESPACE	INJECTION		Read Fault Code	
ESPACE	INJECTION		Erase Fault Code	
ESPACE	INJECTION		Read ECU Information	
ESPACE	INJECTION		Live Data	
ESPACE	INJECTION		Actuation Test	
ESPACE	INJECTION		Read Configuration	
ESPACE	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
ESPACE	INSTRUMENT PANEL		Read ECU Information	
ESPACE	INSTRUMENT PANEL		Live Data	
ESPACE	INSTRUMENT PANEL		Read Configuration	
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Read ECU Information	
ESPACE	INSTRUMENT PANEL		Live Data	
ESPACE	INSTRUMENT PANEL		Read Configuration	
ESPACE	INSTRUMENT PANEL		Write Configuration	CONTROL PANEL TYPE
ESPACE	INSTRUMENT PANEL		Write Configuration	VEHICLE ENGINE TYPE
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH RADIO DISPLAY
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT RADIO DISPLAY
ESPACE	INSTRUMENT PANEL		Write Configuration	LEFT HAND DRIVE
ESPACE	INSTRUMENT PANEL		Write Configuration	RIGHT HAND DRIVE
ESPACE	INSTRUMENT PANEL		Write Configuration	OIL LEVEL DISPLAYED 20sec
ESPACE	INSTRUMENT PANEL		Write Configuration	OIL LEVEL DISPLAYED 20 sec WHEN ADAC PRESSED
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Read ECU Information	
ESPACE	INSTRUMENT PANEL		Live Data	
ESPACE	INSTRUMENT PANEL		Read Configuration	
ESPACE	INSTRUMENT PANEL		Write Configuration	CONTROL PANEL TYPE
ESPACE	INSTRUMENT PANEL		Write Configuration	VEHICLE ENGINE TYPE
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH RADIO DISPLAY
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT RADIO DISPLAY
ESPACE	INSTRUMENT PANEL		Write Configuration	LEFT HAND DRIVE
ESPACE	INSTRUMENT PANEL		Write Configuration	RIGHT HAND DRIVE
ESPACE	INSTRUMENT PANEL		Write Configuration	OIL LEVEL DISPLAYED 20sec
ESPACE	INSTRUMENT PANEL		Write Configuration	OIL LEVEL DISPLAYED 20 sec WHEN ADAC PRESSED
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Read ECU Information	
ESPACE	INSTRUMENT PANEL		Live Data	
ESPACE	INSTRUMENT PANEL		Read Configuration	
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Read ECU Information	
ESPACE	INSTRUMENT PANEL		Live Data	
ESPACE	INSTRUMENT PANEL		Read Configuration	
ESPACE	INSTRUMENT PANEL		Write Configuration	WITH HAZARD LAMPS RECALL ON TRF
ESPACE	INSTRUMENT PANEL		Write Configuration	WITHOUT HAZARD LAMPS RECALL ON TRF
ESPACE	AIRBAG / PRETENSIONERS		Read Fault Code	
ESPACE	AIRBAG / PRETENSIONERS		Erase Fault Code	
ESPACE	AIRBAG / PRETENSIONERS		Read ECU Information	
ESPACE	AIRBAG / PRETENSIONERS		Live Data	
ESPACE	AIRBAG / PRETENSIONERS		Actuation Test	
ESPACE	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT SIDE AIRBAGS
ESPACE	AIRBAG / PRETENSIONERS		Write Configuration	WITH SIDE AIRBAGS



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE	ENGINE IMMOBILISER		Actuation Test	
ESPACE	ENGINE IMMOBILISER		Read Configuration	
ESPACE	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 1 KEY
ESPACE	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 2 KEYS
ESPACE	A.B.S.		Read Fault Code	
ESPACE	A.B.S.		Erase Fault Code	
ESPACE	A.B.S.		Read ECU Information	
ESPACE	A.B.S.		Live Data	
ESPACE	A.B.S.		Actuation Test	
ESPACE	A.B.S.		Write Configuration	SPEEDO INDEX
ESPACE	A.B.S.		Read Fault Code	
ESPACE	A.B.S.		Erase Fault Code	
ESPACE	A.B.S.		Read ECU Information	
ESPACE	A.B.S.		Live Data	
ESPACE	A.B.S.		Actuation Test	
ESPACE	A.B.S.		Read Fault Code	
ESPACE	A.B.S.		Erase Fault Code	
ESPACE	A.B.S.		Read ECU Information	
ESPACE	A.B.S.		Live Data	
ESPACE	A.B.S.		Actuation Test	
ESPACE	LIGHTING		Read Fault Code	
ESPACE	LIGHTING		Erase Fault Code	
ESPACE	LIGHTING		Read ECU Information	
ESPACE	LIGHTING		Live Data	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Fault Code	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase Fault Code	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read ECU Information	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Live Data	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Configuration	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Actuation Test	
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Write Configuration	CF009 LANGUAGE
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP002 WRITE VIN
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP005 SERIAL LINK TEST
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP004 MICROPHONE TEST
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP006 AUDIO LINKS TEST
ESPACE IV	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase	RZ001 FAULT MEMORY
ESPACE IV	INJECTION	S3000 INJECTION	Read Fault Code	
ESPACE IV	INJECTION	S3000 INJECTION	Erase Fault Code	
ESPACE IV	INJECTION	S3000 INJECTION	Read ECU Information	
ESPACE IV	INJECTION	S3000 INJECTION	Live Data	
ESPACE IV	INJECTION	S3000 INJECTION	Read Configuration	
ESPACE IV	INJECTION	S3000 INJECTION	Actuation Test	
ESPACE IV	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
ESPACE IV	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
ESPACE IV	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACE IV	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
ESPACE IV	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF178 OIL MEASUREMENT
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF171 PARKING AID
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF172 DIRECTIONAL HEADLIGHTS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF178 OIL MEASUREMENT
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF196 CRUISE CONTR./SP. LIMIT. SPEED DIFF.
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 WRITE VIN
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF171 PARKING AID

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF172 DIRECTIONAL HEADLIGHTS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF196 CRUISE CONTR./SP. LIMIT. SPEED DIFF.
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF178 OIL MEASUREMENT
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Read Fault Code	
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Erase Fault Code	
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Read ECU Information	
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Live Data	
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Actuation Test	
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Other Configuration	VP018 NEUTRAL POSITION PROGRAMMING
ESPACE IV	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Erase	RZ001 FAULT/S MEMORISED
ESPACE IV	INJECTION	INJ. S2000 TURBO	Read Fault Code	
ESPACE IV	INJECTION	INJ. S2000 TURBO	Erase Fault Code	
ESPACE IV	INJECTION	INJ. S2000 TURBO	Read ECU Information	
ESPACE IV	INJECTION	INJ. S2000 TURBO	Live Data	
ESPACE IV	INJECTION	INJ. S2000 TURBO	Read Configuration	
ESPACE IV	INJECTION	INJ. S2000 TURBO	Actuation Test	
ESPACE IV	INJECTION	INJ. S2000 TURBO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJ. S2000 TURBO	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJ. S2000 TURBO	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	INJ. S2000 TURBO	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJ. S2000 TURBO	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE IV	INJECTION	INJECTION DENSO	Read Fault Code	
ESPACE IV	INJECTION	INJECTION DENSO	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION DENSO	Read ECU Information	
ESPACE IV	INJECTION	INJECTION DENSO	Live Data	
ESPACE IV	INJECTION	INJECTION DENSO	Read Configuration	
ESPACE IV	INJECTION	INJECTION DENSO	Actuation Test	
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP010 WRITE V. I. N.
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
ESPACE IV	INJECTION	INJECTION DENSO	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION DENSO	Erase	RZ005 PROGRAMMED VALUES
ESPACE IV	INJECTION	INJECTION EWR 20	Read Fault Code	
ESPACE IV	INJECTION	INJECTION EWR 20	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION EWR 20	Read ECU Information	
ESPACE IV	INJECTION	INJECTION EWR 20	Live Data	
ESPACE IV	INJECTION	INJECTION EWR 20	Actuation Test	
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
ESPACE IV	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE IV	INJECTION	INJECTION EWR 20	Read Fault Code	
ESPACE IV	INJECTION	INJECTION EWR 20	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION EWR 20	Read ECU Information	
ESPACE IV	INJECTION	INJECTION EWR 20	Live Data	
ESPACE IV	INJECTION	INJECTION EWR 20	Read Configuration	
ESPACE IV	INJECTION	INJECTION EWR 20	Actuation Test	
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
ESPACE IV	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE IV	INJECTION	INJECTION S2000	Read Fault Code	
ESPACE IV	INJECTION	INJECTION S2000	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION S2000	Read ECU Information	
ESPACE IV	INJECTION	INJECTION S2000	Live Data	
ESPACE IV	INJECTION	INJECTION S2000	Read Configuration	
ESPACE IV	INJECTION	INJECTION S2000	Actuation Test	
ESPACE IV	INJECTION	INJECTION S2000	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION S2000	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION S2000	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	INJECTION S2000	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION S2000	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE IV	INJECTION	INJECTION S2000	Read Fault Code	
ESPACE IV	INJECTION	INJECTION S2000	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION S2000	Read ECU Information	
ESPACE IV	INJECTION	INJECTION S2000	Live Data	
ESPACE IV	INJECTION	INJECTION S2000	Read Configuration	
ESPACE IV	INJECTION	INJECTION S2000	Actuation Test	
ESPACE IV	INJECTION	INJECTION S2000	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION S2000	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION S2000	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	INJECTION S2000	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION S2000	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE IV	INJECTION	INJECTION DENSO	Read Fault Code	
ESPACE IV	INJECTION	INJECTION DENSO	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION DENSO	Read ECU Information	
ESPACE IV	INJECTION	INJECTION DENSO	Live Data	
ESPACE IV	INJECTION	INJECTION DENSO	Read Configuration	
ESPACE IV	INJECTION	INJECTION DENSO	Actuation Test	
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP010 WRITE V. I. N.
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACE IV	INJECTION	INJECTION DENSO	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
ESPACE IV	INJECTION	INJECTION DENSO	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION DENSO	Erase	RZ005 PROGRAMMED VALUES
ESPACE IV	INJECTION	EDC15 INJECTION	Read Fault Code	
ESPACE IV	INJECTION	EDC15 INJECTION	Erase Fault Code	
ESPACE IV	INJECTION	EDC15 INJECTION	Read ECU Information	
ESPACE IV	INJECTION	EDC15 INJECTION	Live Data	
ESPACE IV	INJECTION	EDC15 INJECTION	Read Configuration	
ESPACE IV	INJECTION	EDC15 INJECTION	Actuation Test	
ESPACE IV	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
ESPACE IV	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE IV	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE IV	INJECTION	EDC15 INJECTION	Read Fault Code	
ESPACE IV	INJECTION	EDC15 INJECTION	Erase Fault Code	
ESPACE IV	INJECTION	EDC15 INJECTION	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE IV	INJECTION	EDC15 INJECTION	Live Data	
ESPACE IV	INJECTION	EDC15 INJECTION	Read Configuration	
ESPACE IV	INJECTION	EDC15 INJECTION	Actuation Test	
ESPACE IV	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
ESPACE IV	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE IV	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE IV	INJECTION	EDC15 INJECTION	Read Fault Code	
ESPACE IV	INJECTION	EDC15 INJECTION	Erase Fault Code	
ESPACE IV	INJECTION	EDC15 INJECTION	Read ECU Information	
ESPACE IV	INJECTION	EDC15 INJECTION	Live Data	
ESPACE IV	INJECTION	EDC15 INJECTION	Read Configuration	
ESPACE IV	INJECTION	EDC15 INJECTION	Actuation Test	
ESPACE IV	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
ESPACE IV	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
ESPACE IV	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE IV	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE IV	INJECTION	INJECTION EWR 20	Read Fault Code	
ESPACE IV	INJECTION	INJECTION EWR 20	Erase Fault Code	
ESPACE IV	INJECTION	INJECTION EWR 20	Read ECU Information	
ESPACE IV	INJECTION	INJECTION EWR 20	Live Data	
ESPACE IV	INJECTION	INJECTION EWR 20	Actuation Test	
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
ESPACE IV	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
ESPACE IV	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
ESPACE IV	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE IV	A.B.S.	ESP	Read Fault Code	
ESPACE IV	A.B.S.	ESP	Erase Fault Code	
ESPACE IV	A.B.S.	ESP	Read ECU Information	
ESPACE IV	A.B.S.	ESP	Live Data	
ESPACE IV	A.B.S.	ESP	Read Configuration	
ESPACE IV	A.B.S.	ESP	Actuation Test	
ESPACE IV	A.B.S.	ESP	Write Configuration	CF080 VEHICLE PARAMETERS
ESPACE IV	A.B.S.	ESP	Write Configuration	CF077 ABS/ESP CALIBRATION
ESPACE IV	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
ESPACE IV	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
ESPACE IV	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
ESPACE IV	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
ESPACE IV	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
ESPACE IV	A.B.S.	ABS	Read Fault Code	
ESPACE IV	A.B.S.	ABS	Erase Fault Code	
ESPACE IV	A.B.S.	ABS	Read ECU Information	
ESPACE IV	A.B.S.	ABS	Live Data	
ESPACE IV	A.B.S.	ABS	Read Configuration	
ESPACE IV	A.B.S.	ABS	Actuation Test	
ESPACE IV	A.B.S.	ABS	Write Configuration	CF080 VEHICLE PARAMETERS
ESPACE IV	A.B.S.	ABS	Write Configuration	CF077 ABS/ESP CALIBRATION
ESPACE IV	A.B.S.	ABS	Write Configuration	CF079 GEARBOX TYPE
ESPACE IV	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
ESPACE IV	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
ESPACE IV	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
ESPACE IV	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
ESPACE IV	A.B.S.	ESP	Read Fault Code	
ESPACE IV	A.B.S.	ESP	Erase Fault Code	
ESPACE IV	A.B.S.	ESP	Read ECU Information	
ESPACE IV	A.B.S.	ESP	Live Data	
ESPACE IV	A.B.S.	ESP	Read Configuration	
ESPACE IV	A.B.S.	ESP	Actuation Test	
ESPACE IV	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
ESPACE IV	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
ESPACE IV	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
ESPACE IV	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
ESPACE IV	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
ESPACE IV	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
ESPACE IV	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
ESPACE IV	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ESPACE IV	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ESPACE IV	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ESPACE IV	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
ESPACE IV	A.B.S.	ESP	Read Fault Code	
ESPACE IV	A.B.S.	ESP	Erase Fault Code	
ESPACE IV	A.B.S.	ESP	Read ECU Information	
ESPACE IV	A.B.S.	ESP	Live Data	
ESPACE IV	A.B.S.	ESP	Read Configuration	
ESPACE IV	A.B.S.	ESP	Actuation Test	
ESPACE IV	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
ESPACE IV	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
ESPACE IV	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
ESPACE IV	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
ESPACE IV	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
ESPACE IV	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
ESPACE IV	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
ESPACE IV	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
ESPACE IV	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ESPACE IV	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ESPACE IV	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ESPACE IV	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF134 TEMPERATURE UNITS
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF146 AUTOMATIC HANDBRAKE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF139 VOICE SYNTHESISER
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF147 NAVIGATION SYSTEM
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF144 HANDS FREE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF154 V4Y AUTOMATIC GEARBOX
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF155 V4Y MANUAL
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF156 OTHER AT
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF157 OTHER MANUAL
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP005 INCREASE FUEL WARNING THRESHOLD
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 DISTANCE BEFORE NEXT OIL CHANGE
ESPACE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ESPACE IV	UCH	UCH	Read Fault Code	
ESPACE IV	UCH	UCH	Erase Fault Code	
ESPACE IV	UCH	UCH	Read ECU Information	
ESPACE IV	UCH	UCH	Live Data	
ESPACE IV	UCH	UCH	Read Configuration	
ESPACE IV	UCH	UCH	Actuation Test	
ESPACE IV	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF132 VEHICLE FAMILY
ESPACE IV	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
ESPACE IV	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
ESPACE IV	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
ESPACE IV	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
ESPACE IV	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
ESPACE IV	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
ESPACE IV	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
ESPACE IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ESPACE IV	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
ESPACE IV	UCH	UCH	Write Configuration	CF098 CARD LOCKING
ESPACE IV	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
ESPACE IV	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
ESPACE IV	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
ESPACE IV	UCH	UCH	Write Configuration	CF009 DEADLOCKING
ESPACE IV	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
ESPACE IV	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
ESPACE IV	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
ESPACE IV	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
ESPACE IV	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
ESPACE IV	UCH	UCH	Write Configuration	CF091 SUNROOF
ESPACE IV	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
ESPACE IV	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
ESPACE IV	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
ESPACE IV	UCH	UCH	Other Configuration	VP004 WRITE VIN
ESPACE IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
ESPACE IV	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
ESPACE IV	UCH	UCH	Configuration	SC011 CHECK CARDS
ESPACE IV	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
ESPACE IV	UCH	UCH	Configuration	SC026 AERIAL TEST
ESPACE IV	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
ESPACE IV	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
ESPACE IV	UCH	UCH	Configuration	SC024 LOCK LATCH LOCKING
ESPACE IV	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
ESPACE IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
ESPACE IV	UCH	UCH	Read Fault Code	
ESPACE IV	UCH	UCH	Erase Fault Code	
ESPACE IV	UCH	UCH	Read ECU Information	
ESPACE IV	UCH	UCH	Live Data	
ESPACE IV	UCH	UCH	Read Configuration	
ESPACE IV	UCH	UCH	Actuation Test	
ESPACE IV	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF132 VEHICLE FAMILY
ESPACE IV	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
ESPACE IV	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
ESPACE IV	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
ESPACE IV	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
ESPACE IV	UCH	UCH	Write Configuration	CF199 RAIN/LUMINOSITY SENSOR TYPE
ESPACE IV	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
ESPACE IV	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
ESPACE IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ESPACE IV	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
ESPACE IV	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
ESPACE IV	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
ESPACE IV	UCH	UCH	Write Configuration	CF009 DEADLOCKING
ESPACE IV	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
ESPACE IV	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
ESPACE IV	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
ESPACE IV	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
ESPACE IV	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
ESPACE IV	UCH	UCH	Write Configuration	CF091 SUNROOF
ESPACE IV	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
ESPACE IV	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
ESPACE IV	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
ESPACE IV	UCH	UCH	Write Configuration	CF186 AUTOMATIC FOLDING OF DOOR MIRRORS
ESPACE IV	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
ESPACE IV	UCH	UCH	Other Configuration	VP004 WRITE VIN
ESPACE IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
ESPACE IV	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
ESPACE IV	UCH	UCH	Configuration	SC011 CHECK CARDS
ESPACE IV	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
ESPACE IV	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
ESPACE IV	UCH	UCH	Configuration	SC026 AERIAL TEST
ESPACE IV	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
ESPACE IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS

**Diagnosis list Renault\_ v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
ESPACE IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF114 AIR CONDITIONING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF103 ALTERNATOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF115 REAR SHELVES
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF113 ADDITIONAL HEATING
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF114 AIR CONDITIONING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF103 ALTERNATOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF115 REAR SHELVES
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF113 ADDITIONAL HEATING
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL ZONE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF114 AIR CONDITIONING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF103 ALTERNATOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF115 REAR SHELVES
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF113 ADDITIONAL HEATING
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL ZONE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF114 AIR CONDITIONING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF103 ALTERNATOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF115 REAR SHELVES
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF113 ADDITIONAL HEATING
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL ZONE
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACE IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT'S MEMORISED
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
ESPACE IV	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Configuration	SC001 ACTUATORS SEQUENTIAL CONTROL
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Live Data	
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Read Configuration	
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Actuation Test	
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
ESPACE IV	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
ESPACE IV	DISCHARGE LAMP	LAD	Read Fault Code	
ESPACE IV	DISCHARGE LAMP	LAD	Erase Fault Code	
ESPACE IV	DISCHARGE LAMP	LAD	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE IV	DISCHARGE LAMP	LAD	Live Data	
ESPACE IV	DISCHARGE LAMP	LAD	Read Configuration	
ESPACE IV	DISCHARGE LAMP	LAD	Actuation Test	
ESPACE IV	DISCHARGE LAMP	LAD	Write Configuration	CF003 VEHICLE TYPE
ESPACE IV	DISCHARGE LAMP	LAD	Write Configuration	CF001 COMPUTER CALIBRATION
ESPACE IV	DISCHARGE LAMP	LAD	Other Configuration	VP001 WRITE VIN
ESPACE IV	DISCHARGE LAMP	LAD	Erase	RZ001 FAULT MEMORY
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Read Fault Code	
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Erase Fault Code	
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Read ECU Information	
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Live Data	
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Read Configuration	
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Actuation Test	
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Write Configuration	CF003 VEHICLE TYPE
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Other Configuration	VP001 WRITE VIN
ESPACE IV	DISCHARGE LAMP	DISCHARGE LAMP	Erase	RZ001 FAULT MEMORY
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Live Data	
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Read Configuration	
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
ESPACE IV	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
ESPACE IV	HEATER	BOLER	Read Fault Code	
ESPACE IV	HEATER	BOLER	Erase Fault Code	
ESPACE IV	HEATER	BOLER	Read ECU Information	
ESPACE IV	HEATER	BOLER	Live Data	
ESPACE IV	HEATER	BOLER	Actuation Test	
ESPACE IV	HEATER	BOLER	Erase	RZ004 FAULT MEMORY
ESPACE IV	HEATER	BOLER	Erase	RZ001 ERASE OVERHEATING COUNTER
ESPACE IV	HEATER	BOLER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
ESPACE V	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
ESPACE V	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
ESPACE V	INJECTION	EDC17 C84 INJECTION	Live Data	
ESPACE V	INJECTION	EDC17 C84 INJECTION	Read Configuration	
ESPACE V	INJECTION	EDC17 C84 INJECTION	Actuation Test	
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V, I, N.
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
ESPACE V	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE V	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
ESPACE V	INJECTION	INJECTION	Read Fault Code	
ESPACE V	INJECTION	INJECTION	Erase Fault Code	
ESPACE V	INJECTION	INJECTION	Read ECU Information	
ESPACE V	INJECTION	INJECTION	Live Data	
ESPACE V	INJECTION	INJECTION	Actuation Test	
ESPACE V	INJECTION	INJECTION	Other Configuration	VP010 WRITE V, I, N.
ESPACE V	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
ESPACE V	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
ESPACE V	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
ESPACE V	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
ESPACE V	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ESPACE V	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
ESPACE V	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
ESPACE V	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
ESPACE V	A.B.S.	ABS	Read Fault Code	
ESPACE V	A.B.S.	ABS	Erase Fault Code	
ESPACE V	A.B.S.	ABS	Read ECU Information	
ESPACE V	A.B.S.	ABS	Live Data	
ESPACE V	A.B.S.	ABS	Read Configuration	
ESPACE V	A.B.S.	ABS	Actuation Test	
ESPACE V	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
ESPACE V	A.B.S.	ABS	Other Configuration	VP043 IMPROVED GRIP FUNCTION
ESPACE V	A.B.S.	ABS	Other Configuration	VP017 GEARBOX TYPE
ESPACE V	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
ESPACE V	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
ESPACE V	A.B.S.	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
ESPACE V	A.B.S.	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
ESPACE V	A.B.S.	ABS	Other Configuration	VP045 HILL START
ESPACE V	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
ESPACE V	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
ESPACE V	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ESPACE V	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ESPACE V	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
ESPACE V	A.B.S.	ABS	Erase	RZ006 STEERING WHEEL ANGLE SENSOR PROGRAMMING
ESPACE V	A.B.S.	ABS	Erase	RZ012 RESET
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP153 ODOMETER IN MILES
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ESPACE V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ESPACE V	UCH	UCH	Read Fault Code	
ESPACE V	UCH	UCH	Erase Fault Code	
ESPACE V	UCH	UCH	Read ECU Information	
ESPACE V	UCH	UCH	Live Data	
ESPACE V	UCH	UCH	Read Configuration	
ESPACE V	UCH	UCH	Actuation Test	
ESPACE V	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
ESPACE V	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
ESPACE V	UCH	UCH	Write Configuration	CF229 ALARM
ESPACE V	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ESPACE V	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
ESPACE V	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
ESPACE V	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
ESPACE V	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
ESPACE V	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
ESPACE V	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
ESPACE V	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
ESPACE V	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
ESPACE V	UCH	UCH	Write Configuration	CF310 STEERING LOCK
ESPACE V	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
ESPACE V	UCH	UCH	Write Configuration	CF313 MAKE
ESPACE V	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
ESPACE V	UCH	UCH	Erase	RZ001 FAULT MEMORY
ESPACE V	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
ESPACE V	UCH	UCH	Read Fault Code	
ESPACE V	UCH	UCH	Erase Fault Code	
ESPACE V	UCH	UCH	Read ECU Information	
ESPACE V	UCH	UCH	Live Data	
ESPACE V	UCH	UCH	Read Configuration	
ESPACE V	UCH	UCH	Actuation Test	
ESPACE V	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
ESPACE V	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ESPACE V	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
ESPACE V	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
ESPACE V	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
ESPACE V	UCH	UCH	Write Configuration	CF229 ALARM
ESPACE V	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
ESPACE V	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
ESPACE V	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
ESPACE V	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
ESPACE V	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
ESPACE V	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
ESPACE V	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
ESPACE V	UCH	UCH	Write Configuration	CF310 STEERING LOCK
ESPACE V	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
ESPACE V	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
ESPACE V	UCH	UCH	Write Configuration	CF313 MAKE
ESPACE V	UCH	UCH	Other Configuration	VP001 WRITE V, I, N.
ESPACE V	UCH	UCH	Erase	RZ001 FAULT MEMORY
ESPACE V	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
ESPACE V	FRONT RADAR	FRONT RADAR	Read Fault Code	
ESPACE V	FRONT RADAR	FRONT RADAR	Erase Fault Code	
ESPACE V	FRONT RADAR	FRONT RADAR	Read ECU Information	
ESPACE V	FRONT RADAR	FRONT RADAR	Live Data	
ESPACE V	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
ESPACE V	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
ESPACE V	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACE V	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP032 AUTOMATIC GEARBOX CONTROL
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP024 PROGRAM CLUTCH ASSEMBLY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
ESPACE V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
ESPACE V	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
ESPACE V	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
ESPACE V	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
ESPACE V	PARKING BRAKE	PARKING BRAKE	Live Data	
ESPACE V	PARKING BRAKE	PARKING BRAKE	Read Configuration	
ESPACE V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
ESPACE V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
ESPACE V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
ESPACE V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
ESPACE V	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
ESPACE V	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
ESPACE V	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
ESPACE V	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
ESPACE V	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
ESPACE V	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
ESPACE V	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
ESPACE V	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
ESPACE V	UPC	UPC	Read Fault Code	
ESPACE V	UPC	UPC	Erase Fault Code	
ESPACE V	UPC	UPC	Read ECU Information	
ESPACE V	UPC	UPC	Live Data	
ESPACE V	UPC	UPC	Read Configuration	
ESPACE V	UPC	UPC	Actuation Test	
ESPACE V	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
ESPACE V	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
ESPACE V	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
ESPACE V	UPC	UPC	Other Configuration	VP003 WRITE VIN
ESPACE V	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
ESPACE V	UPC	UPC	Erase	RZ004 DTC reset
ESPACE V	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
ESPACE V	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
ESPACE V	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
ESPACE V	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
ESPACE V	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
ESPACE V	POWER BACK DOOR	POWER BACK DOOR	Read Fault Code	
ESPACE V	POWER BACK DOOR	POWER BACK DOOR	Erase Fault Code	
ESPACE V	POWER BACK DOOR	POWER BACK DOOR	Read ECU Information	
ESPACE V	POWER BACK DOOR	POWER BACK DOOR	Live Data	
ESPACE V	POWER BACK DOOR	POWER BACK DOOR	Write Configuration	CF001 POWER BACK DOOR CYLINDER
ESPACE V	POWER BACK DOOR	POWER BACK DOOR	Erase	RZ001 FAULT MEMORY
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Read Fault Code	
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Erase Fault Code	
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Read ECU Information	
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Live Data	
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Actuation Test	
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP004 INHIBITION OF 4-WHEEL DRIVE FUNCTION
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP005 REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP001 WRITE VIN
ESPACE V	4 WHEELS STEERING	4 WHEELS STEERING	Erase	RZ001 FAULT MEMORY
ESPACE V	PARKING PROX CAN	PARKING AID	Read Fault Code	
ESPACE V	PARKING PROX CAN	PARKING AID	Erase Fault Code	
ESPACE V	PARKING PROX CAN	PARKING AID	Read ECU Information	
ESPACE V	PARKING PROX CAN	PARKING AID	Live Data	
ESPACE V	PARKING PROX CAN	PARKING AID	Read Configuration	
ESPACE V	PARKING PROX CAN	PARKING AID	Actuation Test	
ESPACE V	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ESPACE V	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
ESPACE V	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
ESPACE V	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
ESPACE V	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
ESPACE V	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
ESPACE V	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
ESPACE V	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read Fault Code	
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Erase Fault Code	
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read ECU Information	
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Live Data	
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Actuation Test	
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Other Configuration	VP003 CONFIGURATION OF SYSTEM COMPONENTS
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Other Configuration	VP001 WRITE VIN
ESPACE V	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Erase	RZ001 FAULT MEMORY
ESPACE V	PILOTED SUSPENSION	Electronically-managed suspension	Read Fault Code	
ESPACE V	PILOTED SUSPENSION	Electronically-managed suspension	Erase Fault Code	
ESPACE V	PILOTED SUSPENSION	Electronically-managed suspension	Read ECU Information	
ESPACE V	PILOTED SUSPENSION	Electronically-managed suspension	Live Data	
ESPACE V	PILOTED SUSPENSION	Electronically-managed suspension	Other Configuration	VP004 WRITE VIN
ESPACE V	PILOTED SUSPENSION	Electronically-managed suspension	Erase	RZ002 FAULT MEMORY
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP009 REAR SLIDE LEARNING
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP008 FRONT SLIDE LEARNING
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP010 LUMBAR LEARNING
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
ESPACE V	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
ESPACE V	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
ESPACE V	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
ESPACE V	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
ESPACE V	FRONT CAMERA	FRONT CAMERA	Live Data	
ESPACE V	FRONT CAMERA	FRONT CAMERA	Read Configuration	
ESPACE V	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION
ESPACE V	FRONT CAMERA	FRONT CAMERA	Other Configuration	CF011 GEOGRAPHICAL ZONE
ESPACE V	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
ESPACE V	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
ESPACE V	RADIO	RADIO NAV.	Read Fault Code	
ESPACE V	RADIO	RADIO NAV.	Erase Fault Code	
ESPACE V	RADIO	RADIO NAV.	Read ECU Information	
ESPACE V	RADIO	RADIO NAV.	Live Data	
ESPACE V	RADIO	RADIO NAV.	Read Configuration	
ESPACE V	RADIO	RADIO NAV.	Actuation Test	
ESPACE V	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
ESPACE V	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
ESPACE V	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
ESPACE V	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
ESPACE V	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
ESPACE V	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
ESPACE V	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
ESPACE V	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
ESPACE V	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
ESPACE V	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
ESPACE V	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ESPACE V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
ESPACE V	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Read Fault Code	
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Erase Fault Code	
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Read ECU Information	
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Live Data	
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Actuation Test	
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Other Configuration	VP002 WRITE VIN
ESPACE V	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Erase	RZ001 FAULT MEMORY
ESPACE V	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
ESPACE V	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
ESPACE V	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
ESPACE V	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
ESPACE V	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VP001 WRITE V. I. N.
ESPACE V	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase	RZ001 FAULT MEMORY
ESPACE V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
ESPACE V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
ESPACE V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
ESPACE V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
ESPACE V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
ESPACE V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
ESPACE V	AMPLIFIER	AMPLIFIER	Read Fault Code	
ESPACE V	AMPLIFIER	AMPLIFIER	Erase Fault Code	
ESPACE V	AMPLIFIER	AMPLIFIER	Read ECU Information	
ESPACE V	AMPLIFIER	AMPLIFIER	Live Data	
ESPACE V	AMPLIFIER	AMPLIFIER	Actuation Test	
ESPACE V	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
ESPACE V	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
ESPACE V	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
ESPACE V	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ESPACE V	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
ESPACE V	INJECTION	MDG1 INJECTION	Read Fault Code	
ESPACE V	INJECTION	MDG1 INJECTION	Erase Fault Code	
ESPACE V	INJECTION	MDG1 INJECTION	Read ECU Information	
ESPACE V	INJECTION	MDG1 INJECTION	Live Data	
ESPACE V	INJECTION	MDG1 INJECTION	Function Test	
ESPACE V	INJECTION	MDG1 INJECTION	Read Configuration	
ESPACE V	INJECTION	MDG1 INJECTION	Actuation Test	
ESPACE V	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ESPACE V	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACE V	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACE V	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ090 STOP AND START FUNCTION
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
ESPACE V	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
ESPACE V	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
ESPACE V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
ESPACEIV ph2/3/4	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP ELECTRICAL CONSUMER PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP035 STOP ELECTRICAL CONSUMER PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC048 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC063 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) DILUTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC069 RESETTING THE DILUTION RATIOS
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ002 EGR ADAPTIVES
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) DILUTION
ESPACEIV ph2/3/4	INJECTION	EDC17 CP58 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF171 PARKING AID
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF172 DIRECTIONAL HEADLIGHTS
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF178 OIL MEASUREMENT
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF196 CRUISE CONTR./SP. LIMIT. SPEED DIFF.
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 WRITE VIN
ESPACEIV ph2/3/4	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Live Data	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Read Configuration	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Actuation Test	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
ESPACEIV ph2/3/4	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Read Fault Code	
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Erase Fault Code	
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Read ECU Information	
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Live Data	
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Read Configuration	
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Actuation Test	
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Write Configuration	CF001 VEHICLE TYPE
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Write Configuration	CF009 DRIVING TYPE
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Write Configuration	CF005 SIGNATURE
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Write Configuration	CF011 DIRECTIONAL HEADLIGHTS
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Write Configuration	CF010 LIGHT SENSOR SIGNAL
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Other Configuration	VP002 SYSTEM INITIALISATION
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	LIGHTING	HEADLIGHT: DIRECT/ADJ	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Read Fault Code	
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Erase Fault Code	
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Read ECU Information	
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Live Data	
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Read Configuration	
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Actuation Test	
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF001 VEHICLE TYPE
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF002 DYNAMIC CORRECTION
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF005 SIGNATURE
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP002 SYSTEM INITIALISATION
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP001 WRITE V. I. N.
ESPACEIV ph2/3/4	LIGHTING	LAMPE A DECHARGE CAN	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Read Fault Code	
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Erase Fault Code	
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Read ECU Information	
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Live Data	
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Read Configuration	
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACEIV ph2/3/4	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF001 VEHICLE TYPE
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP004 NETHERLANDS LEGISLATION
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ003 CUSTOMER SETTINGS AND DETAILS
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF034 CONSTRUCTOR/MANUFACTURER
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF041 ANGLE OF ASSEMBLY
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF044 GSM ANTENNA
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
ESPACEIV ph2/3/4	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
ESPACEIV ph2/3/4	RADIO	LPN	Read Fault Code	
ESPACEIV ph2/3/4	RADIO	LPN	Erase Fault Code	
ESPACEIV ph2/3/4	RADIO	LPN	Read ECU Information	
ESPACEIV ph2/3/4	RADIO	LPN	Live Data	
ESPACEIV ph2/3/4	RADIO	LPN	Read Configuration	
ESPACEIV ph2/3/4	RADIO	LPN	Actuation Test	
ESPACEIV ph2/3/4	RADIO	LPN	Write Configuration	CF026 CD CHANGER AND AUXILIARY INPUT
ESPACEIV ph2/3/4	RADIO	LPN	Write Configuration	CF018 DISTANCE UNITS
ESPACEIV ph2/3/4	RADIO	LPN	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	RADIO	LPN	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
ESPACEIV ph2/3/4	RADIO	LPN	Other Configuration	VP005 COMPUTER CALIBRATION AND OPERATION
ESPACEIV ph2/3/4	RADIO	LPN	Erase	RZ003 FAULT MEMORY



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACEIV ph2/3/4	RADIO	LPN	Erase	RZ001 TEST PARAMETERS
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Read Fault Code	
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Erase Fault Code	
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Read ECU Information	
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Live Data	
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Read Configuration	
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Actuation Test	
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
ESPACEIV ph2/3/4	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF001 VEHICLE TYPE
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ002 ECU MEMORY
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Live Data	
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
ESPACEIV ph2/3/4	MULTIMEDIA CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Live Data	
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V, I, N.
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACEIV ph2/3/4	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Live Data	
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Read Fault Code	
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Erase Fault Code	
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Read ECU Information	
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Live Data	
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Read Configuration	
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Actuation Test	
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Other Configuration	VP035 STOP ELECTRICAL CONSUMER PREVENTION
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Other Configuration	VP012 PREVENTION OF ELECTRICAL CONSUMERS
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Other Configuration	VP010 WRITE V, I, N.
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Erase	RZ007 FAULT MEMORY
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Erase	RZ005 PROGRAMMED VALUES
ESPACEIV ph2/3/4	INJECTION	INJECTION DENSO	Configuration	SC002 ENTER INJECTOR CODES
ESPACEIV ph2/3/4	A.B.S.	ESP	Read Fault Code	
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase Fault Code	
ESPACEIV ph2/3/4	A.B.S.	ESP	Read ECU Information	
ESPACEIV ph2/3/4	A.B.S.	ESP	Live Data	
ESPACEIV ph2/3/4	A.B.S.	ESP	Read Configuration	
ESPACEIV ph2/3/4	A.B.S.	ESP	Actuation Test	
ESPACEIV ph2/3/4	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ESPACEIV ph2/3/4	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
ESPACEIV ph2/3/4	A.B.S.	ESP	Read Fault Code	
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase Fault Code	
ESPACEIV ph2/3/4	A.B.S.	ESP	Read ECU Information	
ESPACEIV ph2/3/4	A.B.S.	ESP	Live Data	
ESPACEIV ph2/3/4	A.B.S.	ESP	Read Configuration	
ESPACEIV ph2/3/4	A.B.S.	ESP	Actuation Test	
ESPACEIV ph2/3/4	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
ESPACEIV ph2/3/4	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACEIV ph2/3/4	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ESPACEIV ph2/3/4	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
ESPACEIV ph2/3/4	UCH	UCH	Read Fault Code	
ESPACEIV ph2/3/4	UCH	UCH	Erase Fault Code	
ESPACEIV ph2/3/4	UCH	UCH	Read ECU Information	
ESPACEIV ph2/3/4	UCH	UCH	Live Data	
ESPACEIV ph2/3/4	UCH	UCH	Read Configuration	
ESPACEIV ph2/3/4	UCH	UCH	Actuation Test	
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF132 VEHICLE FAMILY
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF199 RAIN/LUMINOSITY SENSOR TYPE
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF116 HANDS-FREE LOCKING
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF009 DEADLOCKING
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF033 ELECTRIC CHLD SAFETY
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF091 SUNROOF
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
ESPACEIV ph2/3/4	UCH	UCH	Write Configuration	CF186 AUTOMATIC FOLDING OF DOOR MIRRORS
ESPACEIV ph2/3/4	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
ESPACEIV ph2/3/4	UCH	UCH	Other Configuration	VP004 WRITE VIN
ESPACEIV ph2/3/4	UCH	UCH	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
ESPACEIV ph2/3/4	UCH	UCH	Configuration	SC011 CHECK CARDS
ESPACEIV ph2/3/4	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
ESPACEIV ph2/3/4	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
ESPACEIV ph2/3/4	UCH	UCH	Configuration	SC026 AERIAL TEST
ESPACEIV ph2/3/4	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
ESPACEIV ph2/3/4	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF114 AIR CONDITIONING TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF103 ALTERNATOR TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF115 REAR SHELVES
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF113 ADDITIONAL HEATING
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL ZONE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF114 AIR CONDITIONING TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF103 ALTERNATOR TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF115 REAR SHELVES
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF113 ADDITIONAL HEATING
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL ZONE
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF118 TOXICITY SENSOR
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT'S MEMORISED
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
ESPACEIV ph2/3/4	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Configuration	SC001 ACTUATORS SEQUENTIAL CONTROL
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Live Data	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Read Configuration	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Actuation Test	
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
ESPACEIV ph2/3/4	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Live Data	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Read Configuration	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Live Data	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Read Configuration	
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
ESPACEIV ph2/3/4	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
ESPACEIV ph2/3/4	HEATER	BOILER	Read Fault Code	
ESPACEIV ph2/3/4	HEATER	BOILER	Erase Fault Code	
ESPACEIV ph2/3/4	HEATER	BOILER	Read ECU Information	
ESPACEIV ph2/3/4	HEATER	BOILER	Live Data	
ESPACEIV ph2/3/4	HEATER	BOILER	Actuation Test	
ESPACEIV ph2/3/4	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
ESPACEIV ph2/3/4	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
ESPACEIV ph2/3/4	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
ESPACEIV ph2/3/4	RADIO	RADIO	Read ECU Information	
ESPACEIV ph2/3/4	RADIO	RADIO	Live Data	
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KADJAR	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
KADJAR	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
KADJAR	INJECTION	EDC17 C84 INJECTION	Live Data	
KADJAR	INJECTION	EDC17 C84 INJECTION	Read Configuration	
KADJAR	INJECTION	EDC17 C84 INJECTION	Actuation Test	
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC082 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC080 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC077 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC081 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC079 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC072 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC032 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC033 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC055 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
KADJAR	INJECTION	SID 310 INJECTION	Read Fault Code	
KADJAR	INJECTION	SID 310 INJECTION	Erase Fault Code	
KADJAR	INJECTION	SID 310 INJECTION	Read ECU Information	
KADJAR	INJECTION	SID 310 INJECTION	Live Data	
KADJAR	INJECTION	SID 310 INJECTION	Read Configuration	
KADJAR	INJECTION	SID 310 INJECTION	Actuation Test	
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KADJAR	INJECTION	INJECTION	Read Fault Code	
KADJAR	INJECTION	INJECTION	Erase Fault Code	
KADJAR	INJECTION	INJECTION	Read ECU Information	
KADJAR	INJECTION	INJECTION	Live Data	
KADJAR	INJECTION	INJECTION	Actuation Test	
KADJAR	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
KADJAR	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
KADJAR	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KADJAR	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KADJAR	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KADJAR	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KADJAR	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KADJAR	INJECTION	EMS 3155 INJECTION	Read Fault Code	
KADJAR	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
KADJAR	INJECTION	EMS 3155 INJECTION	Read ECU Information	
KADJAR	INJECTION	EMS 3155 INJECTION	Live Data	
KADJAR	INJECTION	EMS 3155 INJECTION	Read Configuration	
KADJAR	INJECTION	EMS 3155 INJECTION	Actuation Test	
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
KADJAR	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
KADJAR	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
KADJAR	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
KADJAR	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
KADJAR	INJECTION	EDC17 C84 INJECTION	Live Data	
KADJAR	INJECTION	EDC17 C84 INJECTION	Read Configuration	
KADJAR	INJECTION	EDC17 C84 INJECTION	Actuation Test	
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
KADJAR	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC032 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KADJAR	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KADJAR	INJECTION	SID 310 INJECTION	Read Fault Code	
KADJAR	INJECTION	SID 310 INJECTION	Erase Fault Code	
KADJAR	INJECTION	SID 310 INJECTION	Read ECU Information	
KADJAR	INJECTION	SID 310 INJECTION	Live Data	
KADJAR	INJECTION	SID 310 INJECTION	Read Configuration	
KADJAR	INJECTION	SID 310 INJECTION	Actuation Test	
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KADJAR	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KADJAR	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
KADJAR	A.B.S.	ABS	Read Fault Code	
KADJAR	A.B.S.	ABS	Erase Fault Code	
KADJAR	A.B.S.	ABS	Read ECU Information	
KADJAR	A.B.S.	ABS	Live Data	
KADJAR	A.B.S.	ABS	Read Configuration	
KADJAR	A.B.S.	ABS	Actuation Test	
KADJAR	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KADJAR	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KADJAR	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
KADJAR	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KADJAR	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KADJAR	A.B.S.	ABS	Other Configuration	VP045 HILL START
KADJAR	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KADJAR	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KADJAR	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KADJAR	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KADJAR	A.B.S.	ABS	Erase	RZ012 RESET
KADJAR	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
KADJAR	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KADJAR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KADJAR	UCH	UCH	Erase	RZ001 FAULT MEMORY
KADJAR	UCH	UCH	Read Fault Code	
KADJAR	UCH	UCH	Erase Fault Code	
KADJAR	UCH	UCH	Read ECU Information	
KADJAR	UCH	UCH	Live Data	
KADJAR	UCH	UCH	Read Configuration	
KADJAR	UCH	UCH	Actuation Test	
KADJAR	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KADJAR	UCH	UCH	Write Configuration	CF229 ALARM
KADJAR	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KADJAR	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KADJAR	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KADJAR	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KADJAR	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KADJAR	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KADJAR	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KADJAR	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KADJAR	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KADJAR	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KADJAR	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KADJAR	UCH	UCH	Write Configuration	CF313 MAKE
KADJAR	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KADJAR	UCH	UCH	Erase	RZ001 FAULT MEMORY
KADJAR	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR	UCH	UCH	Read Fault Code	
KADJAR	UCH	UCH	Erase Fault Code	
KADJAR	UCH	UCH	Read ECU Information	
KADJAR	UCH	UCH	Live Data	
KADJAR	UCH	UCH	Read Configuration	
KADJAR	UCH	UCH	Actuation Test	
KADJAR	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KADJAR	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KADJAR	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KADJAR	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KADJAR	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KADJAR	UCH	UCH	Write Configuration	CF229 ALARM
KADJAR	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KADJAR	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KADJAR	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KADJAR	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KADJAR	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
KADJAR	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KADJAR	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KADJAR	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KADJAR	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KADJAR	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KADJAR	UCH	UCH	Write Configuration	CF313 MAKE
KADJAR	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KADJAR	UCH	UCH	Erase	RZ001 FAULT MEMORY
KADJAR	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KADJAR	FRONT RADAR	FRONT RADAR	Read Fault Code	
KADJAR	FRONT RADAR	FRONT RADAR	Erase Fault Code	
KADJAR	FRONT RADAR	FRONT RADAR	Read ECU Information	
KADJAR	FRONT RADAR	FRONT RADAR	Live Data	
KADJAR	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
KADJAR	FRONT RADAR	FRONT RADAR	Other Configuration	VP010 WHEEL CIRCUMFERENCE
KADJAR	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
KADJAR	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT
KADJAR	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KADJAR	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KADJAR	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KADJAR	AIR CONDITIONING	CONTROLLED AC	Live Data	
KADJAR	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KADJAR	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
KADJAR	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
KADJAR	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KADJAR	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
KADJAR	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
KADJAR	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
KADJAR	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
KADJAR	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
KADJAR	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
KADJAR	PARKING BRAKE	PARKING BRAKE	Live Data	
KADJAR	PARKING BRAKE	PARKING BRAKE	Read Configuration	
KADJAR	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
KADJAR	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
KADJAR	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
KADJAR	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
KADJAR	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
KADJAR	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
KADJAR	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
KADJAR	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
KADJAR	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
KADJAR	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
KADJAR	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
KADJAR	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
KADJAR	UPC	UPC	Read Fault Code	
KADJAR	UPC	UPC	Erase Fault Code	
KADJAR	UPC	UPC	Read ECU Information	
KADJAR	UPC	UPC	Live Data	
KADJAR	UPC	UPC	Read Configuration	
KADJAR	UPC	UPC	Actuation Test	
KADJAR	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
KADJAR	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
KADJAR	UPC	UPC	Other Configuration	VP003 WRITE VIN
KADJAR	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
KADJAR	UPC	UPC	Erase	RZ004 DTC reset
KADJAR	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
KADJAR	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
KADJAR	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
KADJAR	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
KADJAR	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
KADJAR	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
KADJAR	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
KADJAR	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
KADJAR	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
KADJAR	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
KADJAR	PARKING PROX CAN	PARKING AID	Read Fault Code	
KADJAR	PARKING PROX CAN	PARKING AID	Erase Fault Code	
KADJAR	PARKING PROX CAN	PARKING AID	Read ECU Information	
KADJAR	PARKING PROX CAN	PARKING AID	Live Data	
KADJAR	PARKING PROX CAN	PARKING AID	Read Configuration	
KADJAR	PARKING PROX CAN	PARKING AID	Actuation Test	
KADJAR	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KADJAR	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
KADJAR	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
KADJAR	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
KADJAR	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KADJAR	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
KADJAR	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
KADJAR	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
KADJAR	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
KADJAR	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
KADJAR	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
KADJAR	FRONT CAMERA	FRONT CAMERA	Live Data	
KADJAR	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION
KADJAR	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF011 GEOGRAPHICAL ZONE
KADJAR	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
KADJAR	FRONT CAMERA	FRONT CAMERA	Configuration	SC002 COMPUTER CALIBRATION
KADJAR	RADIO	RADIO	Read Fault Code	
KADJAR	RADIO	RADIO	Erase Fault Code	
KADJAR	RADIO	RADIO	Read ECU Information	
KADJAR	RADIO	RADIO	Live Data	
KADJAR	RADIO	RADIO	Read Configuration	
KADJAR	RADIO	RADIO	Actuation Test	
KADJAR	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KADJAR	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KADJAR	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KADJAR	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
KADJAR	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
KADJAR	RADIO	RADIO NAV.	Read Fault Code	
KADJAR	RADIO	RADIO NAV.	Erase Fault Code	
KADJAR	RADIO	RADIO NAV.	Read ECU Information	
KADJAR	RADIO	RADIO NAV.	Live Data	
KADJAR	RADIO	RADIO NAV.	Read Configuration	
KADJAR	RADIO	RADIO NAV.	Actuation Test	
KADJAR	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
KADJAR	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
KADJAR	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
KADJAR	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
KADJAR	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
KADJAR	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
KADJAR	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
KADJAR	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
KADJAR	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
KADJAR	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
KADJAR	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
KADJAR	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KADJAR	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
KADJAR	AMPLIFIER	AMPLIFIER	Read Fault Code	
KADJAR	AMPLIFIER	AMPLIFIER	Erase Fault Code	
KADJAR	AMPLIFIER	AMPLIFIER	Read ECU Information	
KADJAR	AMPLIFIER	AMPLIFIER	Live Data	
KADJAR	AMPLIFIER	AMPLIFIER	Actuation Test	
KADJAR	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
KADJAR	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
KADJAR	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
KADJAR	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KADJAR	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KADJAR	INJECTION	MDG1 INJECTION	Read Fault Code	
KADJAR	INJECTION	MDG1 INJECTION	Erase Fault Code	
KADJAR	INJECTION	MDG1 INJECTION	Read ECU Information	
KADJAR	INJECTION	MDG1 INJECTION	Live Data	
KADJAR	INJECTION	MDG1 INJECTION	Function Test	
KADJAR	INJECTION	MDG1 INJECTION	Read Configuration	
KADJAR	INJECTION	MDG1 INJECTION	Actuation Test	
KADJAR	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
KADJAR	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
KADJAR	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
KADJAR	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KADJAR	UCH	UCH	Read Fault Code	
KADJAR	UCH	UCH	Erase Fault Code	
KADJAR	UCH	UCH	Read ECU Information	
KADJAR	UCH	UCH	Live Data	
KADJAR	UCH	UCH	Function Test	
KADJAR	UCH	UCH	Read Configuration	
KADJAR	UCH	UCH	Actuation Test	
KADJAR	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KADJAR	UCH	UCH	Write Configuration	CF229 ALARM
KADJAR	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KADJAR	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KADJAR	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KADJAR	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KADJAR	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KADJAR	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KADJAR	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KADJAR	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KADJAR	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KADJAR	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KADJAR	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KADJAR	UCH	UCH	Write Configuration	CF313 MAKE
KADJAR	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KADJAR	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KADJAR	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR	UCH	UCH	Read Fault Code	
KADJAR	UCH	UCH	Erase Fault Code	
KADJAR	UCH	UCH	Read ECU Information	
KADJAR	UCH	UCH	Live Data	
KADJAR	UCH	UCH	Function Test	
KADJAR	UCH	UCH	Read Configuration	
KADJAR	UCH	UCH	Actuation Test	
KADJAR	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KADJAR	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KADJAR	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KADJAR	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KADJAR	UCH	UCH	Write Configuration	CF229 ALARM
KADJAR	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KADJAR	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KADJAR	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KADJAR	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KADJAR	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
KADJAR	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KADJAR	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KADJAR	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KADJAR	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KADJAR	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KADJAR	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
KADJAR	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KADJAR	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
KADJAR	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KADJAR	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KADJAR CN	INJECTION	EMS 3155 INJECTION	Read Fault Code	
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
KADJAR CN	INJECTION	EMS 3155 INJECTION	Read ECU Information	
KADJAR CN	INJECTION	EMS 3155 INJECTION	Live Data	
KADJAR CN	INJECTION	EMS 3155 INJECTION	Read Configuration	
KADJAR CN	INJECTION	EMS 3155 INJECTION	Actuation Test	
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
KADJAR CN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL / SPEED LIMITER PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
KADJAR CN	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST : O2 SENSORS
KADJAR CN	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
KADJAR CN	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KADJAR CN	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KADJAR CN	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
KADJAR CN	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KADJAR CN	INJECTION	INJECTION	Read Fault Code	
KADJAR CN	INJECTION	INJECTION	Erase Fault Code	
KADJAR CN	INJECTION	INJECTION	Read ECU Information	
KADJAR CN	INJECTION	INJECTION	Live Data	
KADJAR CN	INJECTION	INJECTION	Actuation Test	
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR CN	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KADJAR CN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KADJAR CN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KADJAR CN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR CN	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KADJAR CN	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KADJAR CN	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KADJAR CN	A.B.S.	ABS	Read Fault Code	
KADJAR CN	A.B.S.	ABS	Erase Fault Code	
KADJAR CN	A.B.S.	ABS	Read ECU Information	
KADJAR CN	A.B.S.	ABS	Live Data	
KADJAR CN	A.B.S.	ABS	Read Configuration	
KADJAR CN	A.B.S.	ABS	Actuation Test	
KADJAR CN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KADJAR CN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KADJAR CN	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
KADJAR CN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KADJAR CN	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KADJAR CN	A.B.S.	ABS	Other Configuration	VP045 HILL START
KADJAR CN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KADJAR CN	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KADJAR CN	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KADJAR CN	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KADJAR CN	A.B.S.	ABS	Erase	RZ012 RESET
KADJAR CN	A.B.S.	ABS	Erase	RZ012 AIR RECIRCULATION FLAP MOTOR
KADJAR CN	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
KADJAR CN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KADJAR CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KADJAR CN	UCH	UCH	Read Fault Code	
KADJAR CN	UCH	UCH	Erase Fault Code	
KADJAR CN	UCH	UCH	Read ECU Information	
KADJAR CN	UCH	UCH	Live Data	
KADJAR CN	UCH	UCH	Read Configuration	
KADJAR CN	UCH	UCH	Actuation Test	
KADJAR CN	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KADJAR CN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KADJAR CN	UCH	UCH	Write Configuration	CF229 ALARM
KADJAR CN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KADJAR CN	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KADJAR CN	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KADJAR CN	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KADJAR CN	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KADJAR CN	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KADJAR CN	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KADJAR CN	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KADJAR CN	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KADJAR CN	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KADJAR CN	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KADJAR CN	UCH	UCH	Write Configuration	CF313 MAKE
KADJAR CN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KADJAR CN	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KADJAR CN	UCH	UCH	Erase	RZ001 FAULT MEMORY
KADJAR CN	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR CN	UCH	UCH	Read Fault Code	
KADJAR CN	UCH	UCH	Erase Fault Code	
KADJAR CN	UCH	UCH	Read ECU Information	
KADJAR CN	UCH	UCH	Live Data	
KADJAR CN	UCH	UCH	Read Configuration	
KADJAR CN	UCH	UCH	Actuation Test	
KADJAR CN	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KADJAR CN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KADJAR CN	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KADJAR CN	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KADJAR CN	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KADJAR CN	UCH	UCH	Write Configuration	CF229 ALARM
KADJAR CN	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KADJAR CN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KADJAR CN	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KADJAR CN	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KADJAR CN	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
KADJAR CN	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KADJAR CN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KADJAR CN	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KADJAR CN	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KADJAR CN	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KADJAR CN	UCH	UCH	Write Configuration	CF313 MAKE
KADJAR CN	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KADJAR CN	UCH	UCH	Erase	RZ001 FAULT MEMORY
KADJAR CN	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Live Data	
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KADJAR CN	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
KADJAR CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Live Data	
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Read Configuration	
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
KADJAR CN	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
KADJAR CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
KADJAR CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
KADJAR CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
KADJAR CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
KADJAR CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
KADJAR CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
KADJAR CN	UPC	UPC	Read Fault Code	
KADJAR CN	UPC	UPC	Erase Fault Code	
KADJAR CN	UPC	UPC	Read ECU Information	
KADJAR CN	UPC	UPC	Live Data	
KADJAR CN	UPC	UPC	Read Configuration	
KADJAR CN	UPC	UPC	Actuation Test	
KADJAR CN	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
KADJAR CN	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
KADJAR CN	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
KADJAR CN	UPC	UPC	Other Configuration	VP003 WRITE VIN
KADJAR CN	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
KADJAR CN	UPC	UPC	Erase	RZ004 DTC reset
KADJAR CN	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
KADJAR CN	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
KADJAR CN	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
KADJAR CN	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
KADJAR CN	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
KADJAR CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
KADJAR CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
KADJAR CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
KADJAR CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
KADJAR CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
KADJAR CN	PARKING PROX CAN	PARKING AID	Read Fault Code	
KADJAR CN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
KADJAR CN	PARKING PROX CAN	PARKING AID	Read ECU Information	
KADJAR CN	PARKING PROX CAN	PARKING AID	Live Data	
KADJAR CN	PARKING PROX CAN	PARKING AID	Read Configuration	
KADJAR CN	PARKING PROX CAN	PARKING AID	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KADJAR CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KADJAR CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
KADJAR CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
KADJAR CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
KADJAR CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KADJAR CN	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
KADJAR CN	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
KADJAR CN	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
KADJAR CN	RADIO	RADIO NAV.	Read Fault Code	
KADJAR CN	RADIO	RADIO NAV.	Erase Fault Code	
KADJAR CN	RADIO	RADIO NAV.	Read ECU Information	
KADJAR CN	RADIO	RADIO NAV.	Live Data	
KADJAR CN	RADIO	RADIO NAV.	Read Configuration	
KADJAR CN	RADIO	RADIO NAV.	Actuation Test	
KADJAR CN	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
KADJAR CN	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
KADJAR CN	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
KADJAR CN	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
KADJAR CN	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
KADJAR CN	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
KADJAR CN	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
KADJAR CN	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
KADJAR CN	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
KADJAR CN	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
KADJAR CN	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
KADJAR CN	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
KADJAR CN	RADIO	RADIO	Read Fault Code	
KADJAR CN	RADIO	RADIO	Erase Fault Code	
KADJAR CN	RADIO	RADIO	Read ECU Information	
KADJAR CN	RADIO	RADIO	Live Data	
KADJAR CN	RADIO	RADIO	Read Configuration	
KADJAR CN	RADIO	RADIO	Actuation Test	
KADJAR CN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KADJAR CN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KADJAR CN	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
KADJAR CN	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KADJAR CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
KADJAR CN	AMPLIFIER	AMPLIFIER	Read Fault Code	
KADJAR CN	AMPLIFIER	AMPLIFIER	Erase Fault Code	
KADJAR CN	AMPLIFIER	AMPLIFIER	Read ECU Information	
KADJAR CN	AMPLIFIER	AMPLIFIER	Live Data	
KADJAR CN	AMPLIFIER	AMPLIFIER	Actuation Test	
KADJAR CN	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
KADJAR CN	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
KADJAR CN	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
KADJAR CN	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KADJAR CN	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KADJAR CN	INJECTION	INJECTION	Read Fault Code	
KADJAR CN	INJECTION	INJECTION	Erase Fault Code	
KADJAR CN	INJECTION	INJECTION	Read ECU Information	
KADJAR CN	INJECTION	INJECTION	Live Data	
KADJAR CN	INJECTION	INJECTION	Function Test	
KADJAR CN	INJECTION	INJECTION	Actuation Test	
KADJAR CN	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KADJAR CN	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KADJAR CN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KADJAR CN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KADJAR CN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KADJAR CN	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KADJAR CN	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KADJAR CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
KANGOO	INJECTION	SIM 32 INJECTOR	Read Fault Code	
KANGOO	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
KANGOO	INJECTION	SIM 32 INJECTOR	Read ECU Information	
KANGOO	INJECTION	SIM 32 INJECTOR	Live Data	
KANGOO	INJECTION	SIM 32 INJECTOR	Read Configuration	
KANGOO	INJECTION	SIM 32 INJECTOR	Actuation Test	
KANGOO	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
KANGOO	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
KANGOO	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
KANGOO	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
KANGOO	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF578 GEARBOX TYPE
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF582 CRUISE CTRL/SPEED LIMITER
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 PREVENTION OF ELECTRICAL CONSUMERS
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF008 WITH POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF009 WITHOUT POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF004 WITHOUT AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF019 PREHEATING PREVENTION
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF020 STOP PREHEATING PREVENTION
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF020 STOP PREHEATING PREVENTION
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF019 PREHEATING PREVENTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF008 WITH POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF009 WITHOUT POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF004 WITHOUT AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 VEHICLE FUNCTION PROGRAMMING
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF020 STOP PREHEATING PREVENTION
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF019 PREHEATING PREVENTION
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF008 WITH POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF009 WITHOUT POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF004 WITHOUT AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 VEHICLE FUNCTION PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITH THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITHOUT THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF578 GEARBOX TYPE
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF582 CRUISE CTRL/SPEED LIMITER
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 PREVENTION OF ELECTRICAL CONSUMERS
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP003 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 DECREMENT IDLE SPEED
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP003 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO	INJECTION	DIESEL INJECTION	Live Data	
KANGOO	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	INJECTION		Parameters Configuration	VP003 INCREMENT OF IDLE SPEED
KANGOO	INJECTION		Parameters Configuration	VP004 DECREMENT IDLE SPEED
KANGOO	INJECTION		Read Fault Code	
KANGOO	INJECTION		Erase Fault Code	
KANGOO	INJECTION		Read ECU Information	
KANGOO	INJECTION		Live Data	
KANGOO	INJECTION		Actuation Test	
KANGOO	INJECTION		Read Configuration	
KANGOO	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO	AIRBAG / PRETENSIONERS		Read Fault Code	
KANGOO	AIRBAG / PRETENSIONERS		Erase Fault Code	
KANGOO	AIRBAG / PRETENSIONERS		Read ECU Information	
KANGOO	AIRBAG / PRETENSIONERS		Live Data	
KANGOO	AIRBAG / PRETENSIONERS		Read Configuration	
KANGOO	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
KANGOO	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
KANGOO	AIR CONDITIONING		Read Fault Code	
KANGOO	AIR CONDITIONING		Erase Fault Code	
KANGOO	AIR CONDITIONING		Read ECU Information	
KANGOO	AIR CONDITIONING		Live Data	
KANGOO	AIR CONDITIONING		Actuation Test	
KANGOO	AIR CONDITIONING		Write Configuration	WITH HEATED REAR SCREEN
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT HEATED REAR SCREEN
KANGOO	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
KANGOO	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
KANGOO	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
KANGOO	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
KANGOO	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
KANGOO	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
KANGOO	AIR CONDITIONING		Write Configuration	SIEMENS PROBE CONFIGURATION
KANGOO	AIR CONDITIONING		Write Configuration	EEPROM PROBE CONFIGURATION
KANGOO	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
KANGOO	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
KANGOO	AIR CONDITIONING		Read Fault Code	
KANGOO	AIR CONDITIONING		Erase Fault Code	
KANGOO	AIR CONDITIONING		Read ECU Information	
KANGOO	AIR CONDITIONING		Live Data	
KANGOO	AIR CONDITIONING		Actuation Test	
KANGOO	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
KANGOO	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
KANGOO	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
KANGOO	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
KANGOO	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
KANGOO	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
KANGOO	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
KANGOO	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
KANGOO	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
KANGOO	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
KANGOO	AUTOMATIC GEARBOX		Read Fault Code	
KANGOO	AUTOMATIC GEARBOX		Erase Fault Code	
KANGOO	AUTOMATIC GEARBOX		Read ECU Information	
KANGOO	AUTOMATIC GEARBOX		Live Data	
KANGOO	AUTOMATIC GEARBOX		Actuation Test	
KANGOO	AUTOMATIC GEARBOX		Write Configuration	WRITE TRANSMISSION OIL CHANGE DATE
KANGOO	AUTOMATIC GEARBOX		Write Configuration	OIL CHANGE COUNTER OFFSET
KANGOO	AUTOMATIC GEARBOX		Write Configuration	WITH AIR CONDITIONING
KANGOO	AUTOMATIC GEARBOX		Write Configuration	WITHOUT AIR CONDITIONING
KANGOO	AUTOMATIC GEARBOX		Read Fault Code	
KANGOO	AUTOMATIC GEARBOX		Erase Fault Code	
KANGOO	AUTOMATIC GEARBOX		Read ECU Information	
KANGOO	AUTOMATIC GEARBOX		Live Data	
KANGOO	AUTOMATIC GEARBOX		Actuation Test	
KANGOO	AUTOMATIC GEARBOX		Read Configuration	
KANGOO	AUTOMATIC GEARBOX		Write Configuration	CF324 AIR CONDITIONING CONNECTION FAULT FINDING
KANGOO	AUTOMATIC GEARBOX		Parameters Configuration	VP015 NOTE OIL WEAR COUNTER
KANGOO	AUTOMATIC GEARBOX		Parameters Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
KANGOO	AUTOMATIC GEARBOX		Read Fault Code	





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KANGOO II	INJECTION	S3000 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	SID 301 INJECTION	Read Fault Code	
KANGOO II	INJECTION	SID 301 INJECTION	Erase Fault Code	
KANGOO II	INJECTION	SID 301 INJECTION	Read ECU Information	
KANGOO II	INJECTION	SID 301 INJECTION	Live Data	
KANGOO II	INJECTION	SID 301 INJECTION	Read Configuration	
KANGOO II	INJECTION	SID 301 INJECTION	Actuation Test	
KANGOO II	INJECTION	SID 301 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO II	INJECTION	SID 301 INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO II	INJECTION	SID 301 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
KANGOO II	INJECTION	SID 301 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
KANGOO II	INJECTION	SID 301 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO II	INJECTION	SID 301 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO II	INJECTION	SID 301 INJECTION	Configuration	SC013 ENTER VIN CODE
KANGOO II	INJECTION	SID 301 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	SID 301 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
KANGOO II	INJECTION	SID 301 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO II	INJECTION	SID 304 INJECTION	Read Fault Code	
KANGOO II	INJECTION	SID 304 INJECTION	Erase Fault Code	
KANGOO II	INJECTION	SID 304 INJECTION	Read ECU Information	
KANGOO II	INJECTION	SID 304 INJECTION	Live Data	
KANGOO II	INJECTION	SID 304 INJECTION	Read Configuration	
KANGOO II	INJECTION	SID 304 INJECTION	Actuation Test	
KANGOO II	INJECTION	SID 304 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO II	INJECTION	SID 304 INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO II	INJECTION	SID 304 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
KANGOO II	INJECTION	SID 304 INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
KANGOO II	INJECTION	SID 304 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC013 ENTER VIN CODE
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO II	INJECTION	SID 304 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KANGOO II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
KANGOO II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
KANGOO II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
KANGOO II	INJECTION	INJECTION DCM 1.2	Live Data	
KANGOO II	INJECTION	INJECTION DCM 1.2	Read Configuration	
KANGOO II	INJECTION	INJECTION DCM 1.2	Actuation Test	
KANGOO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KANGOO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KANGOO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KANGOO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KANGOO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
KANGOO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
KANGOO II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
KANGOO II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
KANGOO II	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
KANGOO II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
KANGOO II	INJECTION	INJECTION DCM 1.2	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	INJECTION DCM 1.2	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
KANGOO II	INJECTION	INJECTION DCM 1.2	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO II	INJECTION	INJECTION DCM 3.4	Read Fault Code	
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
KANGOO II	INJECTION	INJECTION DCM 3.4	Read ECU Information	
KANGOO II	INJECTION	INJECTION DCM 3.4	Live Data	
KANGOO II	INJECTION	INJECTION DCM 3.4	Read Configuration	
KANGOO II	INJECTION	INJECTION DCM 3.4	Actuation Test	
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V. I. N.
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
KANGOO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO II	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KANGOO II	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
KANGOO II	INJECTION	SID 305 INJECTION	Read Fault Code	
KANGOO II	INJECTION	SID 305 INJECTION	Erase Fault Code	
KANGOO II	INJECTION	SID 305 INJECTION	Read ECU Information	
KANGOO II	INJECTION	SID 305 INJECTION	Live Data	
KANGOO II	INJECTION	SID 305 INJECTION	Read Configuration	
KANGOO II	INJECTION	SID 305 INJECTION	Actuation Test	
KANGOO II	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO II	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO II	INJECTION	SID 305 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO II	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC004 HIGH PRESSURE CIRCUIT LEAK TEST
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO II	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KANGOO II	INJECTION	EMS 3110 INJECTION	Read Fault Code	
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
KANGOO II	INJECTION	EMS 3110 INJECTION	Read ECU Information	
KANGOO II	INJECTION	EMS 3110 INJECTION	Live Data	
KANGOO II	INJECTION	EMS 3110 INJECTION	Read Configuration	
KANGOO II	INJECTION	EMS 3110 INJECTION	Actuation Test	
KANGOO II	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO II	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO II	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
KANGOO II	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO II	A.B.S.	ABS	Read Fault Code	
KANGOO II	A.B.S.	ABS	Erase Fault Code	
KANGOO II	A.B.S.	ABS	Read ECU Information	
KANGOO II	A.B.S.	ABS	Live Data	
KANGOO II	A.B.S.	ABS	Actuation Test	
KANGOO II	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO II	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
KANGOO II	A.B.S.	ESP	Read Fault Code	
KANGOO II	A.B.S.	ESP	Erase Fault Code	
KANGOO II	A.B.S.	ESP	Read ECU Information	
KANGOO II	A.B.S.	ESP	Live Data	
KANGOO II	A.B.S.	ESP	Actuation Test	
KANGOO II	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO II	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
KANGOO II	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
KANGOO II	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
KANGOO II	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
KANGOO II	A.B.S.	ESP	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
KANGOO II	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
KANGOO II	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
KANGOO II	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
KANGOO II	A.B.S.	VSU	Read Fault Code	
KANGOO II	A.B.S.	VSU	Erase Fault Code	
KANGOO II	A.B.S.	VSU	Read ECU Information	
KANGOO II	A.B.S.	VSU	Live Data	
KANGOO II	A.B.S.	VSU	Actuation Test	
KANGOO II	A.B.S.	VSU	Other Configuration	VP007 SPEEDO INDEX
KANGOO II	A.B.S.	VSU	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	A.B.S.	VSU	Other Configuration	VP001 WRITE VIN
KANGOO II	A.B.S.	VSU	Erase	RZ001 FAULT MEMORY
KANGOO II	A.B.S.	VSU	Configuration	SC001 CHECK TARGET TEETH
KANGOO II	A.B.S.	ABS	Read Fault Code	
KANGOO II	A.B.S.	ABS	Erase Fault Code	
KANGOO II	A.B.S.	ABS	Read ECU Information	
KANGOO II	A.B.S.	ABS	Live Data	
KANGOO II	A.B.S.	ABS	Read Configuration	
KANGOO II	A.B.S.	ABS	Actuation Test	
KANGOO II	A.B.S.	ABS	Write Configuration	CF014 COMPUTER CONFIGURATION
KANGOO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
KANGOO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO II	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KANGOO II	A.B.S.	ABS	Other Configuration	VP045 HILL START
KANGOO II	A.B.S.	ABS	Other Configuration	VP043 IMPROVED GRIP FUNCTION
KANGOO II	A.B.S.	ABS	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
KANGOO II	A.B.S.	ABS	Other Configuration	VP051 TYRE PRESSURE MONITOR FUNCTION
KANGOO II	A.B.S.	ABS	Other Configuration	VP052 VACUUM PUMP
KANGOO II	A.B.S.	ABS	Other Configuration	VP048 DRIVING TYPE
KANGOO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO II	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KANGOO II	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KANGOO II	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KANGOO II	A.B.S.	ABS	Erase	RZ012 RESET
KANGOO II	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
KANGOO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO II	A.B.S.	ABS	Read Fault Code	
KANGOO II	A.B.S.	ABS	Erase Fault Code	
KANGOO II	A.B.S.	ABS	Read ECU Information	
KANGOO II	A.B.S.	ABS	Live Data	
KANGOO II	A.B.S.	ABS	Actuation Test	
KANGOO II	A.B.S.	ABS	Write Configuration	CF014 COMPUTER CONFIGURATION
KANGOO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO II	A.B.S.	ABS	Erase	RZ012 RESET
KANGOO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF037 CLOCK
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF042 DRIVE TYPE CONFIGURATION



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KANGOO II	UCH	UCH	Read Fault Code	
KANGOO II	UCH	UCH	Erase Fault Code	
KANGOO II	UCH	UCH	Read ECU Information	
KANGOO II	UCH	UCH	Live Data	
KANGOO II	UCH	UCH	Read Configuration	
KANGOO II	UCH	UCH	Actuation Test	
KANGOO II	UCH	UCH	Other Configuration	VP004 WRITE VIN
KANGOO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
KANGOO II	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
KANGOO II	UCH	UCH	Configuration	SC018 CHECKING A KEY
KANGOO II	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
KANGOO II	UCH	UCH	Read Fault Code	
KANGOO II	UCH	UCH	Erase Fault Code	
KANGOO II	UCH	UCH	Read ECU Information	
KANGOO II	UCH	UCH	Live Data	
KANGOO II	UCH	UCH	Read Configuration	
KANGOO II	UCH	UCH	Actuation Test	
KANGOO II	UCH	UCH	Other Configuration	VP004 WRITE VIN
KANGOO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
KANGOO II	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
KANGOO II	UCH	UCH	Configuration	SC018 CHECKING A KEY
KANGOO II	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
KANGOO II	UCH	UCH	Read Fault Code	
KANGOO II	UCH	UCH	Erase Fault Code	
KANGOO II	UCH	UCH	Read ECU Information	
KANGOO II	UCH	UCH	Live Data	
KANGOO II	UCH	UCH	Read Configuration	
KANGOO II	UCH	UCH	Actuation Test	
KANGOO II	UCH	UCH	Write Configuration	CF273 TIMED LIGHTING SUPPLY
KANGOO II	UCH	UCH	Write Configuration	CF300 STOP AND START CONFIGURATION
KANGOO II	UCH	UCH	Write Configuration	CF301 REAR WIPER INFORMATION
KANGOO II	UCH	UCH	Write Configuration	CF244 FUEL FLAP LOCKING
KANGOO II	UCH	UCH	Write Configuration	CF306 PCHR NUMBER CONTROLLED
KANGOO II	UCH	UCH	Write Configuration	CF304 ACCELERATED IDLE
KANGOO II	UCH	UCH	Write Configuration	CF305 HEATED REAR SCREEN VIA INJECTION SYSTEM
KANGOO II	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
KANGOO II	UCH	UCH	Write Configuration	CF309 AIR CONDITIONING MANAGEMENT
KANGOO II	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KANGOO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
KANGOO II	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
KANGOO II	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF037 FRONT LEFT-HAND BUCKLE PRETENSIONER
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF038 FRONT RIGHT-HAND BUCKLE PRETENSIONER
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF013 FRONT LEFT-HAND CHEST-LEVEL SIDE AIRBAG
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF023 FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF027 LEFT-HAND SIDE IMPACT SENSOR
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF029 RIGHT-HAND SIDE IMPACT SENSOR
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF022 LEFT-HAND CURTAIN AIRBAG
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF024 RIGHT-HAND CURTAIN AIRBAG
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF016 REAR LEFT-HAND INERTIA WHEEL
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF015 REAR RIGHT-HAND INERTIA WHEEL
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KANGOO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Live Data	
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF122 BODYWORK TYPE
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL ZONE
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
KANGOO II	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Read Fault Code	
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Erase Fault Code	
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Read ECU Information	
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Live Data	
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Actuation Test	
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
KANGOO II	AUTOMATIC GEARBOX	DP0 12A2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Read Fault Code	
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Erase Fault Code	
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Read ECU Information	
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Live Data	
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Actuation Test	
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Other Configuration	VP001 WRITE VIN
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Erase	RZ004 FAULT MEMORY
KANGOO II	AUTOMATIC GEARBOX	DP2 12A2005 AUTO G/BOX	Erase	RZ005 AUTO-ADAPTIVES
KANGOO II	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
KANGOO II	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
KANGOO II	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
KANGOO II	VARIABLE P.A.S.	Electric PAS	Live Data	
KANGOO II	VARIABLE P.A.S.	Electric PAS	Read Configuration	
KANGOO II	VARIABLE P.A.S.	Electric PAS	Write Configuration	CF073 MODE NUMBER
KANGOO II	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
KANGOO II	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP001 WRITE VIN
KANGOO II	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
KANGOO II	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
KANGOO II	UPC	UPC	Read Fault Code	
KANGOO II	UPC	UPC	Erase Fault Code	
KANGOO II	UPC	UPC	Read ECU Information	
KANGOO II	UPC	UPC	Live Data	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO II	UPC	UPC	Read Configuration	
KANGOO II	UPC	UPC	Actuation Test	
KANGOO II	UPC	UPC	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO II	UPC	UPC	Other Configuration	VP003 WRITE VIN
KANGOO II	UPC	UPC	Other Configuration	VP005 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	UPC	UPC	Erase	RZ001 FAULT MEMORY
KANGOO II	TYRES	TYRES	Read Fault Code	
KANGOO II	TYRES	TYRES	Erase Fault Code	
KANGOO II	TYRES	TYRES	Read ECU Information	
KANGOO II	TYRES	TYRES	Other Configuration	VP004 WRITE VIN
KANGOO II	TYRES	TYRES	Other Configuration	VP025 COMP CONFIGURATION
KANGOO II	TYRES	TYRES	Erase	RZ002 FAULT MEMORY
KANGOO II	TYRES	TYRES	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Configuration	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Configuration	SC002 COMP CONFIGURATION
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Configuration	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KANGOO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF043 SYSTEM CONFIGURATION
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF034 CONSTRUCTOR/MANUFACTURER
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF044 GSM ANTENNA
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
KANGOO II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
KANGOO II	RADIO	LPN	Read Fault Code	
KANGOO II	RADIO	LPN	Erase Fault Code	
KANGOO II	RADIO	LPN	Read ECU Information	
KANGOO II	RADIO	LPN	Live Data	
KANGOO II	RADIO	LPN	Read Configuration	
KANGOO II	RADIO	LPN	Actuation Test	
KANGOO II	RADIO	LPN	Write Configuration	CF026 CD CHANGER AND AUXILIARY INPUT
KANGOO II	RADIO	LPN	Write Configuration	CF018 DISTANCE UNITS
KANGOO II	RADIO	LPN	Other Configuration	VP001 WRITE VIN
KANGOO II	RADIO	LPN	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KANGOO II	RADIO	LPN	Other Configuration	VP005 COMPUTER CALIBRATION AND OPERATION
KANGOO II	RADIO	LPN	Erase	RZ003 FAULT MEMORY
KANGOO II	RADIO	LPN	Erase	RZ001 TEST PARAMETERS
KANGOO II	RADIO	R108 RADIO	Read Fault Code	
KANGOO II	RADIO	R108 RADIO	Erase Fault Code	
KANGOO II	RADIO	R108 RADIO	Read ECU Information	
KANGOO II	RADIO	R108 RADIO	Live Data	
KANGOO II	RADIO	R108 RADIO	Read Configuration	
KANGOO II	RADIO	R108 RADIO	Actuation Test	
KANGOO II	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
KANGOO II	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KANGOO II	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
KANGOO II	RADIO	R108 RADIO	Configuration	SC002 COMP CONFIGURATION
KANGOO II	RADIO	R208 RADIO	Read Fault Code	
KANGOO II	RADIO	R208 RADIO	Erase Fault Code	
KANGOO II	RADIO	R208 RADIO	Read ECU Information	
KANGOO II	RADIO	R208 RADIO	Live Data	
KANGOO II	RADIO	R208 RADIO	Read Configuration	
KANGOO II	RADIO	R208 RADIO	Actuation Test	
KANGOO II	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KANGOO II	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
KANGOO II	RADIO	R208 RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
KANGOO II	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
KANGOO II	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
KANGOO II	RADIO	RADIO	Read Fault Code	
KANGOO II	RADIO	RADIO	Erase Fault Code	
KANGOO II	RADIO	RADIO	Read ECU Information	
KANGOO II	RADIO	RADIO	Live Data	
KANGOO II	RADIO	RADIO	Read Configuration	
KANGOO II	RADIO	RADIO	Actuation Test	
KANGOO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KANGOO II	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
KANGOO II	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
KANGOO II	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF008 RADIO
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF009 NAVIGATION
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF012 LIGHTING
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
KANGOO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read Fault Code	
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase Fault Code	
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read ECU Information	
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Live Data	
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP003 WRITE VIN
KANGOO II	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ001 FAULT MEMORY
KANGOO II	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
KANGOO II	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
KANGOO II	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO II	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
KANGOO II	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ001 FAULT MEMORY
KANGOO II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
KANGOO II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
KANGOO II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
KANGOO II	PARKING ASSISTANCE	PARKING AID	Live Data	
KANGOO II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
KANGOO II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
KANGOO II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KANGOO II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KANGOO II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
KANGOO II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Read Fault Code	
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Read ECU Information	
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Live Data	
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Read Configuration	
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Actuation Test	
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V. I. N.
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
KANGOO MUX	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ005 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITH THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITHOUT THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	VEHICLE FUNCTION PROGRAMMING
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION		Parameters Configuration	VP003 INCREMENT OF IDLE SPEED
KANGOO MUX	INJECTION		Parameters Configuration	VP004 DECREMENT IDLE SPEED
KANGOO MUX	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	VEHICLE FUNCTION PROGRAMMING
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION		Parameters Configuration	VP003 INCREMENT OF IDLE SPEED
KANGOO MUX	INJECTION		Parameters Configuration	VP004 DECREMENT IDLE SPEED
KANGOO MUX	INJECTION		Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION		Read Fault Code	
KANGOO MUX	INJECTION		Erase Fault Code	
KANGOO MUX	INJECTION		Read ECU Information	
KANGOO MUX	INJECTION		Live Data	
KANGOO MUX	INJECTION		Actuation Test	
KANGOO MUX	INJECTION		Read Configuration	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ008 PROGRAMMING REINITIALISATION
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase Fault Code	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read ECU Information	
KANGOO MUX	INJECTION	DIESEL INJECTION	Live Data	
KANGOO MUX	INJECTION	DIESEL INJECTION	Actuation Test	
KANGOO MUX	INJECTION	DIESEL INJECTION	Read Configuration	
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF578 GEARBOX TYPE
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Write Configuration	CF582 CRUISE CTRL/SPEED LIMITER
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
KANGOO MUX	INJECTION	DIESEL INJECTION	Erase	RZ004 VEHICLE FUNCTION PROGRAMMING
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP004 PREVENTION OF ELECTRICAL CONSUMERS
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP005 INJECTION PROHIBITION
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
KANGOO MUX	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
KANGOO MUX	A.B.S.		Read Fault Code	
KANGOO MUX	A.B.S.		Erase Fault Code	
KANGOO MUX	A.B.S.		Read ECU Information	
KANGOO MUX	A.B.S.		Live Data	
KANGOO MUX	A.B.S.		Actuation Test	
KANGOO MUX	A.B.S.		Read Configuration	
KANGOO MUX	A.B.S.		Specific Command	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
KANGOO MUX	A.B.S.		Parameters Configuration	VP004 VEHICLE PARAMETERS
KANGOO MUX	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
KANGOO MUX	AIRBAG / PRETENSIONERS		Read Fault Code	
KANGOO MUX	AIRBAG / PRETENSIONERS		Erase Fault Code	
KANGOO MUX	AIRBAG / PRETENSIONERS		Read ECU Information	
KANGOO MUX	AIRBAG / PRETENSIONERS		Live Data	
KANGOO MUX	AIRBAG / PRETENSIONERS		Read Configuration	
KANGOO MUX	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
KANGOO MUX	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
KANGOO MUX	AUTOMATIC GEARBOX		Read Fault Code	
KANGOO MUX	AUTOMATIC GEARBOX		Erase Fault Code	
KANGOO MUX	AUTOMATIC GEARBOX		Read ECU Information	





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO MUX	CONNECTION UNIT		Read Configuration	
KANGOO MUX	CONNECTION UNIT		Read Fault Code	
KANGOO MUX	CONNECTION UNIT		Erase Fault Code	
KANGOO MUX	CONNECTION UNIT		Read ECU Information	
KANGOO MUX	CONNECTION UNIT		Live Data	
KANGOO MUX	CONNECTION UNIT		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO MUX	ENGINE IMMOBILISER		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO MUX	ENGINE IMMOBILISER		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO MUX	ENGINE IMMOBILISER		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO MUX	ENGINE IMMOBILISER		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO MUX	ENGINE IMMOBILISER		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO MUX	ENGINE IMMOBILISER		Actuation Test	
KANGOO MUX	ENGINE IMMOBILISER		Read Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Erase Fault Code	
KANGOO MUX	ENGINE IMMOBILISER		Read ECU Information	
KANGOO MUX	ENGINE IMMOBILISER		Live Data	
KANGOO VLL	INJECTION	V42 INJECTION	Read Fault Code	
KANGOO VLL	INJECTION	V42 INJECTION	Erase Fault Code	
KANGOO VLL	INJECTION	V42 INJECTION	Read ECU Information	
KANGOO VLL	INJECTION	V42 INJECTION	Live Data	
KANGOO VLL	INJECTION	V42 INJECTION	Actuation Test	
KANGOO VLL	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO VLL	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO VLL	INJECTION	V42 INJECTION	Read Fault Code	
KANGOO VLL	INJECTION	V42 INJECTION	Erase Fault Code	
KANGOO VLL	INJECTION	V42 INJECTION	Read ECU Information	
KANGOO VLL	INJECTION	V42 INJECTION	Live Data	
KANGOO VLL	INJECTION	V42 INJECTION	Actuation Test	
KANGOO VLL	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO VLL	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO VLL	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO VLL	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Read Fault Code	
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Read ECU Information	
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Live Data	
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Actuation Test	
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V. I. N.
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
KANGOO VLL	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Live Data	
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
KANGOO VLL	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
KANGOO VLL	A.B.S.	ABS	Read Fault Code	
KANGOO VLL	A.B.S.	ABS	Erase Fault Code	
KANGOO VLL	A.B.S.	ABS	Read ECU Information	
KANGOO VLL	A.B.S.	ABS	Live Data	
KANGOO VLL	A.B.S.	ABS	Actuation Test	
KANGOO VLL	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO VLL	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO VLL	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO VLL	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO VLL	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO VLL	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO VLL	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
KANGOO VLL	UCH	UCH	Read Fault Code	
KANGOO VLL	UCH	UCH	Erase Fault Code	
KANGOO VLL	UCH	UCH	Read ECU Information	
KANGOO VLL	UCH	UCH	Live Data	
KANGOO VLL	UCH	UCH	Read Configuration	
KANGOO VLL	UCH	UCH	Actuation Test	
KANGOO VLL	UCH	UCH	Write Configuration	CF272 SDO
KANGOO VLL	UCH	UCH	Other Configuration	VP004 WRITE VIN

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO VLL	UCH	UCH	Erase	RZ001 FAULT MEMORY
KANGOO VLL	UCH	UCH	Configuration	SC008 UCH TYPE
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KANGOO VLL	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
KANGOO VLL	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
KANGOO VLL	TRACKER	TRACKER	Read Fault Code	
KANGOO VLL	TRACKER	TRACKER	Erase Fault Code	
KANGOO VLL	TRACKER	TRACKER	Read ECU Information	
KANGOO VLL	TRACKER	TRACKER	Live Data	
KANGOO VLL	TRACKER	TRACKER	Read Configuration	
KANGOO VLL	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
KANGOO VLL	TRACKER	TRACKER	Other Configuration	VP001 WRITE V. I. N.
KANGOO VLL	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Read Configuration	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: 02 SENSORS
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Read Configuration	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 307 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Read Configuration	
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Read Configuration	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Read Configuration	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read ECU Information	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Live Data	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Actuation Test	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Read Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Erase Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Read ECU Information	
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Live Data	
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Actuation Test	
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
KANGOO ZE/StopStart/ph2	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read ECU Information	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Live Data	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Actuation Test	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read ECU Information	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Live Data	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Configuration	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Actuation Test	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP045 HILL START
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ012 RESET
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read ECU Information	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Configuration	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Actuation Test	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP045 HILL START
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ012 RESET
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Read ECU Information	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Live Data	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Actuation Test	
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP015 RESTART THE COMPUTER
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP015 RESTART THE COMPUTER
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP061 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP059 LCD DISPLAY FUEL GAUGE CALIBRATION
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP058 LCD DISPLAY FUEL GAUGE CALIBRATION
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP060 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP015 RESTART THE COMPUTER
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
KANGOO ZE/StopStart/ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	UCH	UCH	Read Fault Code	
KANGOO ZE/StopStart/ph2	UCH	UCH	Erase Fault Code	
KANGOO ZE/StopStart/ph2	UCH	UCH	Read ECU Information	
KANGOO ZE/StopStart/ph2	UCH	UCH	Live Data	
KANGOO ZE/StopStart/ph2	UCH	UCH	Read Configuration	
KANGOO ZE/StopStart/ph2	UCH	UCH	Actuation Test	
KANGOO ZE/StopStart/ph2	UCH	UCH	Write Configuration	CF273 TIMED LIGHTING SUPPLY
KANGOO ZE/StopStart/ph2	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
KANGOO ZE/StopStart/ph2	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
KANGOO ZE/StopStart/ph2	UCH	UCH	Read Fault Code	
KANGOO ZE/StopStart/ph2	UCH	UCH	Erase Fault Code	
KANGOO ZE/StopStart/ph2	UCH	UCH	Read ECU Information	
KANGOO ZE/StopStart/ph2	UCH	UCH	Live Data	
KANGOO ZE/StopStart/ph2	UCH	UCH	Read Configuration	
KANGOO ZE/StopStart/ph2	UCH	UCH	Actuation Test	
KANGOO ZE/StopStart/ph2	UCH	UCH	Write Configuration	CF273 TIMED LIGHTING SUPPLY
KANGOO ZE/StopStart/ph2	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
KANGOO ZE/StopStart/ph2	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF037 FRONT LEFT-HAND BUCKLE PRETENSIONER
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF038 FRONT RIGHT-HAND BUCKLE PRETENSIONER
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF013 FRONT LEFT-HAND CHEST-LEVEL SIDE AIRBAG
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF023 FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF027 LEFT-HAND SIDE IMPACT SENSOR
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF029 RIGHT-HAND SIDE IMPACT SENSOR
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF022 LEFT-HAND CURTAIN AIRBAG
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF024 RIGHT-HAND CURTAIN AIRBAG
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF030 FRONT LEFT-HAND SEAT BELT SENSOR
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF031 FRONT RIGHT-HAND SEAT BELT SENSOR
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KANGOO ZE/StopStart/ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL_ZONE
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF116 DRIVING TYPE
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF122 BODYWORK TYPE
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP004 COMPUTER REINITIALISATION
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF024 GEOGRAPHICAL_ZONE
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP004 COMPUTER REINITIALISATION
KANGOO ZE/StopStart/ph2	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTMENT
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTMENT
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTMENT
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC004 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
KANGOO ZE/StopStart/ph2	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Live Data	
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Read Configuration	
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Write Configuration	CF073 MODE NUMBER
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
KANGOO ZE/StopStart/ph2	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	UPC	UPC	Read Fault Code	
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	UPC	UPC	Read ECU Information	
KANGOO ZE/StopStart/ph2	UPC	UPC	Live Data	
KANGOO ZE/StopStart/ph2	UPC	UPC	Read Configuration	
KANGOO ZE/StopStart/ph2	UPC	UPC	Actuation Test	
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP003 WRITE VIN
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP005 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	UPC	UPC	Read Fault Code	
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	UPC	UPC	Read ECU Information	
KANGOO ZE/StopStart/ph2	UPC	UPC	Live Data	
KANGOO ZE/StopStart/ph2	UPC	UPC	Actuation Test	
KANGOO ZE/StopStart/ph2	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
KANGOO ZE/StopStart/ph2	UPC	UPC	Write Configuration	CF045 ALTERNATOR FLOATING VOLTAGE
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP003 WRITE VIN
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP022 PARAMETRAGE PRIVE 1
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP023 PARAMETRAGE PRIVE 2
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP024 PARAMETRAGE PRIVE 3

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP025 PARAMETRAGE PRIVE 4
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ004 DTC reset
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
KANGOO ZE/StopStart/ph2	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	UPC	UPC	Read Fault Code	
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	UPC	UPC	Read ECU Information	
KANGOO ZE/StopStart/ph2	UPC	UPC	Live Data	
KANGOO ZE/StopStart/ph2	UPC	UPC	Read Configuration	
KANGOO ZE/StopStart/ph2	UPC	UPC	Actuation Test	
KANGOO ZE/StopStart/ph2	UPC	UPC	Write Configuration	CF045 ALTERNATOR FLOATING VOLTAGE
KANGOO ZE/StopStart/ph2	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP003 WRITE VIN
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP022 PARAMETRAGE PRIVE 1
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP023 PARAMETRAGE PRIVE 2
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP024 PARAMETRAGE PRIVE 3
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP025 PARAMETRAGE PRIVE 4
KANGOO ZE/StopStart/ph2	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ004 DTC reset
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
KANGOO ZE/StopStart/ph2	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
KANGOO ZE/StopStart/ph2	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Read Fault Code	
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Read ECU Information	
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Live Data	
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Other Configuration	VP004 WRITE VIN
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Erase	RZ002 FAULT MEMORY
KANGOO ZE/StopStart/ph2	TYRES	TPMS	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KANGOO ZE/StopStart/ph2	CHARGE CONTROLLER	CHARGE CONTROLLER	Read Fault Code	
KANGOO ZE/StopStart/ph2	CHARGE CONTROLLER	CHARGE CONTROLLER	Erase Fault Code	
KANGOO ZE/StopStart/ph2	CHARGE CONTROLLER	CHARGE CONTROLLER	Read ECU Information	
KANGOO ZE/StopStart/ph2	CHARGE CONTROLLER	CHARGE CONTROLLER	Live Data	
KANGOO ZE/StopStart/ph2	CHARGE CONTROLLER	CHARGE CONTROLLER	Other Configuration	VP002 WRITE VIN
KANGOO ZE/StopStart/ph2	CHARGE CONTROLLER	CHARGE CONTROLLER	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Read Fault Code	
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Erase Fault Code	
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Read ECU Information	
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Live Data	
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Read Configuration	
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Actuation Test	
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read ECU Information	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Live Data	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read Configuration	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Actuation Test	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KANGOO ZE/StopStart/ph2	BCB	BCB	Read Fault Code	
KANGOO ZE/StopStart/ph2	BCB	BCB	Erase Fault Code	
KANGOO ZE/StopStart/ph2	BCB	BCB	Read ECU Information	
KANGOO ZE/StopStart/ph2	BCB	BCB	Live Data	
KANGOO ZE/StopStart/ph2	BCB	BCB	Actuation Test	
KANGOO ZE/StopStart/ph2	BCB	BCB	Other Configuration	VP002 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	BCB	BCB	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	BCB	CHARGER	Read Fault Code	
KANGOO ZE/StopStart/ph2	BCB	CHARGER	Erase Fault Code	
KANGOO ZE/StopStart/ph2	BCB	CHARGER	Read ECU Information	
KANGOO ZE/StopStart/ph2	BCB	CHARGER	Live Data	
KANGOO ZE/StopStart/ph2	BCB	CHARGER	Other Configuration	VP002 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	BCB	CHARGER	Erase	RZ001 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	BMS	BMS	Read Fault Code	
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	BMS	BMS	Read ECU Information	
KANGOO ZE/StopStart/ph2	BMS	BMS	Live Data	
KANGOO ZE/StopStart/ph2	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase	RZ002 TRACTION BATTERY LOCK
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase	RZ003 TRACTION BATTERY INTERLOCK
KANGOO ZE/StopStart/ph2	BMS	BMS	Read Fault Code	
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase Fault Code	
KANGOO ZE/StopStart/ph2	BMS	BMS	Read ECU Information	
KANGOO ZE/StopStart/ph2	BMS	BMS	Live Data	
KANGOO ZE/StopStart/ph2	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
KANGOO ZE/StopStart/ph2	BMS	BMS	Other Configuration	VP015 MODULE CHANGE
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase	RZ002 TRACTION BATTERY LOCK
KANGOO ZE/StopStart/ph2	BMS	BMS	Erase	RZ003 TRACTION BATTERY INTERLOCK
KANGOO ZE/StopStart/ph2	EVC	EVC	Read Fault Code	
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	EVC	EVC	Read ECU Information	
KANGOO ZE/StopStart/ph2	EVC	EVC	Live Data	
KANGOO ZE/StopStart/ph2	EVC	EVC	Read Configuration	
KANGOO ZE/StopStart/ph2	EVC	EVC	Actuation Test	
KANGOO ZE/StopStart/ph2	EVC	EVC	Write Configuration	CF003 HEATING
KANGOO ZE/StopStart/ph2	EVC	EVC	Other Configuration	VP003 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	EVC	EVC	Other Configuration	VP001 VACUUM PUMP AGEING COUNTER
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ002 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ001 VACUUM PUMP AGEING COUNTER
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ005 TRACTION BATTERY LOCK
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ004 FAN ASSEMBLY
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ007 CHARGE WATER PUMP
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ006 DRIVING WATER PUMP
KANGOO ZE/StopStart/ph2	EVC	EVC	Read Fault Code	
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase Fault Code	
KANGOO ZE/StopStart/ph2	EVC	EVC	Read ECU Information	
KANGOO ZE/StopStart/ph2	EVC	EVC	Live Data	
KANGOO ZE/StopStart/ph2	EVC	EVC	Read Configuration	
KANGOO ZE/StopStart/ph2	EVC	EVC	Actuation Test	
KANGOO ZE/StopStart/ph2	EVC	EVC	Other Configuration	VP003 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	EVC	EVC	Other Configuration	VP001 VACUUM PUMP AGEING COUNTER
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ002 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ001 VACUUM PUMP AGEING COUNTER
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ004 FAN ASSEMBLY
KANGOO ZE/StopStart/ph2	EVC	EVC	Erase	RZ006 DRIVING WATER PUMP
KANGOO ZE/StopStart/ph2	PEB	PEB	Read Fault Code	
KANGOO ZE/StopStart/ph2	PEB	PEB	Erase Fault Code	
KANGOO ZE/StopStart/ph2	PEB	PEB	Read ECU Information	
KANGOO ZE/StopStart/ph2	PEB	PEB	Live Data	
KANGOO ZE/StopStart/ph2	PEB	PEB	Other Configuration	VP003 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	PEB	PEB	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	PEB	PEB	Read Fault Code	
KANGOO ZE/StopStart/ph2	PEB	PEB	Erase Fault Code	
KANGOO ZE/StopStart/ph2	PEB	PEB	Read ECU Information	
KANGOO ZE/StopStart/ph2	PEB	PEB	Live Data	
KANGOO ZE/StopStart/ph2	PEB	PEB	Other Configuration	VP003 WRITE V. I. N.
KANGOO ZE/StopStart/ph2	PEB	PEB	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	PEB	PEB	Erase	RZ002 INVERTER FAN ASSEMBLY
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Read Fault Code	
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Erase Fault Code	
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Read ECU Information	
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Live Data	
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Other Configuration	VP003 START AUTHORISATION FROM BMS SAFETY
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Read ECU Information	
KANGOO ZE/StopStart/ph2	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
KANGOO ZE/StopStart/ph2	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Read Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Erase Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Read ECU Information	
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Live Data	
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Read Configuration	
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Actuation Test	
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Write Configuration	CF016 COUNTRY MODEL
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Read Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Erase Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Read ECU Information	
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Live Data	
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Read Configuration	
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Actuation Test	
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Write Configuration	CF016 COUNTRY MODEL
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Write Configuration	CF007 VEHICLE CONFIGURATION
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read ECU Information	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Live Data	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read Configuration	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Actuation Test	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase	RZ004 RESET RADIO
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase Fault Code	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read ECU Information	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Live Data	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Read Configuration	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Actuation Test	
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP003 WRITE VIN
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ002 ECU MEMORY
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KANGOO ZE/StopStart/ph2	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Live Data	
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Read Configuration	
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Actuation Test	
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
KANGOO ZE/StopStart/ph2	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
KANGOO ZE/StopStart/ph2	HEATER	BOILER	Read Fault Code	
KANGOO ZE/StopStart/ph2	HEATER	BOILER	Erase Fault Code	
KANGOO ZE/StopStart/ph2	HEATER	BOILER	Read ECU Information	
KANGOO ZE/StopStart/ph2	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
KANGOO ZE/StopStart/ph2	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
KANGOO ZE/StopStart/ph2	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Live Data	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Function Test	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Read Configuration	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Actuation Test	
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) - DILUTION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 ABLUE SYSTEM PERFORMANCE
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
KANGOO ZE/StopStart/ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
KANGOO ZE/StopStart/ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read ECU Information	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Live Data	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Actuation Test	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read ECU Information	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Live Data	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Actuation Test	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read ECU Information	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Live Data	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Actuation Test	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Read Fault Code	
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase Fault Code	
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Read ECU Information	
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Live Data	
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Read Configuration	
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Actuation Test	
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Other Configuration	VP045 HILL START
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase	RZ012 RESET
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
KOLEOS II CN/QM6 CN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KOLEOS II CN/QM6 CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	UCH	UCH	Read Fault Code	
KOLEOS II CN/QM6 CN	UCH	UCH	Erase Fault Code	
KOLEOS II CN/QM6 CN	UCH	UCH	Read ECU Information	
KOLEOS II CN/QM6 CN	UCH	UCH	Live Data	
KOLEOS II CN/QM6 CN	UCH	UCH	Read Configuration	
KOLEOS II CN/QM6 CN	UCH	UCH	Actuation Test	
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF229 ALARM
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF313 MAKE
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KOLEOS II CN/QM6 CN	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KOLEOS II CN/QM6 CN	UCH	UCH	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KOLEOS II CN/QM6 CN	UCH	UCH	Read Fault Code	
KOLEOS II CN/QM6 CN	UCH	UCH	Erase Fault Code	
KOLEOS II CN/QM6 CN	UCH	UCH	Read ECU Information	
KOLEOS II CN/QM6 CN	UCH	UCH	Live Data	
KOLEOS II CN/QM6 CN	UCH	UCH	Read Configuration	
KOLEOS II CN/QM6 CN	UCH	UCH	Actuation Test	
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF229 ALARM
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KOLEOS II CN/QM6 CN	UCH	UCH	Write Configuration	CF313 MAKE
KOLEOS II CN/QM6 CN	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KOLEOS II CN/QM6 CN	UCH	UCH	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Read Fault Code	
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Erase Fault Code	
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Read ECU Information	
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Live Data	
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Other Configuration	VP010 WHEEL CIRCUMFERENCE
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Live Data	
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
KOLEOS II CN/QM6 CN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Live Data	
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Read Configuration	
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
KOLEOS II CN/QM6 CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
KOLEOS II CN/QM6 CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
KOLEOS II CN/QM6 CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
KOLEOS II CN/QM6 CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
KOLEOS II CN/QM6 CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	UPC	UPC	Read Fault Code	
KOLEOS II CN/QM6 CN	UPC	UPC	Erase Fault Code	
KOLEOS II CN/QM6 CN	UPC	UPC	Read ECU Information	
KOLEOS II CN/QM6 CN	UPC	UPC	Live Data	
KOLEOS II CN/QM6 CN	UPC	UPC	Read Configuration	
KOLEOS II CN/QM6 CN	UPC	UPC	Actuation Test	
KOLEOS II CN/QM6 CN	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
KOLEOS II CN/QM6 CN	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
KOLEOS II CN/QM6 CN	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
KOLEOS II CN/QM6 CN	UPC	UPC	Other Configuration	VP003 WRITE VIN
KOLEOS II CN/QM6 CN	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
KOLEOS II CN/QM6 CN	UPC	UPC	Erase	RZ004 DTC reset
KOLEOS II CN/QM6 CN	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
KOLEOS II CN/QM6 CN	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
KOLEOS II CN/QM6 CN	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
KOLEOS II CN/QM6 CN	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
KOLEOS II CN/QM6 CN	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
KOLEOS II CN/QM6 CN	POWER BACK DOOR	POWER BACK DOOR	Read Fault Code	
KOLEOS II CN/QM6 CN	POWER BACK DOOR	POWER BACK DOOR	Erase Fault Code	
KOLEOS II CN/QM6 CN	POWER BACK DOOR	POWER BACK DOOR	Read ECU Information	
KOLEOS II CN/QM6 CN	POWER BACK DOOR	POWER BACK DOOR	Live Data	
KOLEOS II CN/QM6 CN	POWER BACK DOOR	POWER BACK DOOR	Write Configuration	CF001 POWER BACK DOOR CYLINDER
KOLEOS II CN/QM6 CN	POWER BACK DOOR	POWER BACK DOOR	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
KOLEOS II CN/QM6 CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
KOLEOS II CN/QM6 CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
KOLEOS II CN/QM6 CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
KOLEOS II CN/QM6 CN	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Read Fault Code	
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Read ECU Information	
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Live Data	
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Read Configuration	
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Actuation Test	
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
KOLEOS II CN/QM6 CN	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Live Data	
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF011 GEOGRAPHICAL ZONE
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC002 COMPUTER CALIBRATION
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Read Fault Code	
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Erase Fault Code	
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Read ECU Information	
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Live Data	
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Read Configuration	
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Actuation Test	
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Configuration	SC005 SYSTEM CONFIGURATION
KOLEOS II CN/QM6 CN	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
KOLEOS II CN/QM6 CN	RADIO	RADIO	Read Fault Code	
KOLEOS II CN/QM6 CN	RADIO	RADIO	Erase Fault Code	
KOLEOS II CN/QM6 CN	RADIO	RADIO	Read ECU Information	
KOLEOS II CN/QM6 CN	RADIO	RADIO	Live Data	
KOLEOS II CN/QM6 CN	RADIO	RADIO	Read Configuration	
KOLEOS II CN/QM6 CN	RADIO	RADIO	Actuation Test	
KOLEOS II CN/QM6 CN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KOLEOS II CN/QM6 CN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KOLEOS II CN/QM6 CN	RADIO	RADIO	Write Configuration	CF050 TIME FORMAT
KOLEOS II CN/QM6 CN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
KOLEOS II CN/QM6 CN	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KOLEOS II CN/QM6 CN	RADIO	RADIO	Erase	RZ006 COMPUTER RESET
KOLEOS II CN/QM6 CN	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KOLEOS II CN/QM6 CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
KOLEOS II CN/QM6 CN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
KOLEOS II CN/QM6 CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Read Fault Code	
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Erase Fault Code	
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Read ECU Information	
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Live Data	
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Actuation Test	
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
KOLEOS II CN/QM6 CN	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KOLEOS II CN/QM6 CN	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Read ECU Information	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Live Data	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Function Test	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Actuation Test	
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP010 WRITE VIN
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS II CN/QM6 CN	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Live Data	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Read Configuration	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Actuation Test	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V, I, N.
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
KOLEOS II/QM6	INJECTION	INJECTION	Read Fault Code	
KOLEOS II/QM6	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II/QM6	INJECTION	INJECTION	Read ECU Information	
KOLEOS II/QM6	INJECTION	INJECTION	Live Data	
KOLEOS II/QM6	INJECTION	INJECTION	Actuation Test	
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP010 WRITE V, I, N.
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II/QM6	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS II/QM6	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS II/QM6	INJECTION	INJECTION	Read Fault Code	
KOLEOS II/QM6	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II/QM6	INJECTION	INJECTION	Read ECU Information	
KOLEOS II/QM6	INJECTION	INJECTION	Live Data	
KOLEOS II/QM6	INJECTION	INJECTION	Actuation Test	
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP010 WRITE V, I, N.
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II/QM6	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS II/QM6	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS II/QM6	INJECTION	INJECTION	Read Fault Code	
KOLEOS II/QM6	INJECTION	INJECTION	Erase Fault Code	
KOLEOS II/QM6	INJECTION	INJECTION	Read ECU Information	
KOLEOS II/QM6	INJECTION	INJECTION	Live Data	
KOLEOS II/QM6	INJECTION	INJECTION	Read Configuration	
KOLEOS II/QM6	INJECTION	INJECTION	Actuation Test	
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KOLEOS II/QM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	YP343 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	YP344 HIGH PRESSURE PUMP COUNTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KOLEOS II/QM6	A.B.S.	ABS	Read Fault Code	
KOLEOS II/QM6	A.B.S.	ABS	Erase Fault Code	
KOLEOS II/QM6	A.B.S.	ABS	Read ECU Information	
KOLEOS II/QM6	A.B.S.	ABS	Live Data	
KOLEOS II/QM6	A.B.S.	ABS	Read Configuration	
KOLEOS II/QM6	A.B.S.	ABS	Actuation Test	
KOLEOS II/QM6	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KOLEOS II/QM6	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS II/QM6	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
KOLEOS II/QM6	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
KOLEOS II/QM6	A.B.S.	ABS	Other Configuration	VP045 HILL START
KOLEOS II/QM6	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
KOLEOS II/QM6	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
KOLEOS II/QM6	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
KOLEOS II/QM6	A.B.S.	ABS	Erase	RZ012 RESET
KOLEOS II/QM6	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
KOLEOS II/QM6	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KOLEOS II/QM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	UCH	UCH	Read Fault Code	
KOLEOS II/QM6	UCH	UCH	Erase Fault Code	
KOLEOS II/QM6	UCH	UCH	Read ECU Information	
KOLEOS II/QM6	UCH	UCH	Live Data	
KOLEOS II/QM6	UCH	UCH	Read Configuration	
KOLEOS II/QM6	UCH	UCH	Actuation Test	
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF229 ALARM
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNING LIGHTS
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF313 MAKE
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KOLEOS II/QM6	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KOLEOS II/QM6	UCH	UCH	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KOLEOS II/QM6	UCH	UCH	Read Fault Code	
KOLEOS II/QM6	UCH	UCH	Erase Fault Code	
KOLEOS II/QM6	UCH	UCH	Read ECU Information	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS II/QM6	UCH	UCH	Live Data	
KOLEOS II/QM6	UCH	UCH	Read Configuration	
KOLEOS II/QM6	UCH	UCH	Actuation Test	
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF229 ALARM
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF310 STEERING LOCK
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
KOLEOS II/QM6	UCH	UCH	Write Configuration	CF313 MAKE
KOLEOS II/QM6	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KOLEOS II/QM6	UCH	UCH	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Read Fault Code	
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Erase Fault Code	
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Read ECU Information	
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Live Data	
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Other Configuration	VP010 WHEEL CIRCUMFERENCE
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Live Data	
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
KOLEOS II/QM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Live Data	
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Read Configuration	
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
KOLEOS II/QM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
KOLEOS II/QM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
KOLEOS II/QM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
KOLEOS II/QM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
KOLEOS II/QM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	UPC	UPC	Read Fault Code	
KOLEOS II/QM6	UPC	UPC	Erase Fault Code	
KOLEOS II/QM6	UPC	UPC	Read ECU Information	
KOLEOS II/QM6	UPC	UPC	Live Data	
KOLEOS II/QM6	UPC	UPC	Read Configuration	
KOLEOS II/QM6	UPC	UPC	Actuation Test	
KOLEOS II/QM6	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
KOLEOS II/QM6	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
KOLEOS II/QM6	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
KOLEOS II/QM6	UPC	UPC	Other Configuration	VP003 WRITE VIN
KOLEOS II/QM6	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
KOLEOS II/QM6	UPC	UPC	Erase	RZ004 DTC reset
KOLEOS II/QM6	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
KOLEOS II/QM6	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
KOLEOS II/QM6	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
KOLEOS II/QM6	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
KOLEOS II/QM6	POWER BACK DOOR	POWER BACK DOOR	Read Fault Code	
KOLEOS II/QM6	POWER BACK DOOR	POWER BACK DOOR	Erase Fault Code	
KOLEOS II/QM6	POWER BACK DOOR	POWER BACK DOOR	Read ECU Information	
KOLEOS II/QM6	POWER BACK DOOR	POWER BACK DOOR	Live Data	
KOLEOS II/QM6	POWER BACK DOOR	POWER BACK DOOR	Write Configuration	CF001 POWER BACK DOOR CYLINDER
KOLEOS II/QM6	POWER BACK DOOR	POWER BACK DOOR	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
KOLEOS II/QM6	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
KOLEOS II/QM6	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
KOLEOS II/QM6	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
KOLEOS II/QM6	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Read Fault Code	
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Erase Fault Code	
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Read ECU Information	
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Live Data	
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Read Configuration	
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Actuation Test	
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
KOLEOS II/QM6	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Live Data	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF011 GEOGRAPHICAL ZONE
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Configuration	SC002 COMPUTER CALIBRATION
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Live Data	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Read Configuration	
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP007 PARAMETRAGE PRIVE 4
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Configuration	SC004 RADAR-CAMERA ALIGNMENT ADJUSTEMENT
KOLEOS II/QM6	FRONT CAMERA	FRONT CAMERA	Configuration	SC005 RADAR-CAMERA DRIVING
KOLEOS II/QM6	RADIO	RADIO NAV.	Read Fault Code	
KOLEOS II/QM6	RADIO	RADIO NAV.	Erase Fault Code	
KOLEOS II/QM6	RADIO	RADIO NAV.	Read ECU Information	
KOLEOS II/QM6	RADIO	RADIO NAV.	Live Data	
KOLEOS II/QM6	RADIO	RADIO NAV.	Read Configuration	
KOLEOS II/QM6	RADIO	RADIO NAV.	Actuation Test	
KOLEOS II/QM6	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
KOLEOS II/QM6	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
KOLEOS II/QM6	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
KOLEOS II/QM6	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
KOLEOS II/QM6	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
KOLEOS II/QM6	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
KOLEOS II/QM6	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
KOLEOS II/QM6	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
KOLEOS II/QM6	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
KOLEOS II/QM6	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
KOLEOS II/QM6	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
KOLEOS II/QM6	RADIO	RADIO	Read Fault Code	
KOLEOS II/QM6	RADIO	RADIO	Erase Fault Code	
KOLEOS II/QM6	RADIO	RADIO	Read ECU Information	
KOLEOS II/QM6	RADIO	RADIO	Live Data	
KOLEOS II/QM6	RADIO	RADIO	Read Configuration	
KOLEOS II/QM6	RADIO	RADIO	Actuation Test	
KOLEOS II/QM6	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KOLEOS II/QM6	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KOLEOS II/QM6	RADIO	RADIO	Write Configuration	CF050 TIME FORMAT
KOLEOS II/QM6	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
KOLEOS II/QM6	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KOLEOS II/QM6	RADIO	RADIO	Erase	RZ006 COMPUTER RESET
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KOLEOS II/QM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
KOLEOS II/QM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
KOLEOS II/QM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Read Fault Code	
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Erase Fault Code	
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Read ECU Information	
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Live Data	
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Actuation Test	
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
KOLEOS II/QM6	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KOLEOS II/QM6	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Live Data	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Function Test	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Read Configuration	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Actuation Test	
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SEPOINT VOLTAGE
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
KOLEOS II/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START INJECTION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC072 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC032 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC033 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC055 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC077 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC079 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC080 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC081 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC082 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Read Fault Code	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase Fault Code	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Read ECU Information	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Live Data	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Function Test	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Read Configuration	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Actuation Test	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Read Fault Code	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase Fault Code	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Read ECU Information	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Live Data	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Function Test	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Read Configuration	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Actuation Test	
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Other Configuration	RZ007 FAULT MEMORY
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
KOLEOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
ROL EOS 11/QM6	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
ROL EOS 11/QM6	INJECTION	INJECTION	Read Fault Code	
ROL EOS 11/QM6	INJECTION	INJECTION	Erase Fault Code	
ROL EOS 11/QM6	INJECTION	INJECTION	Read ECU Information	
ROL EOS 11/QM6	INJECTION	INJECTION	Live Data	
ROL EOS 11/QM6	INJECTION	INJECTION	Function Test	
ROL EOS 11/QM6	INJECTION	INJECTION	Actuation Test	
ROL EOS 11/QM6	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ROL EOS 11/QM6	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
ROL EOS 11/QM6	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
ROL EOS 11/QM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
ROL EOS 11/QM6	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
ROL EOS 11/QM6	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ROL EOS 11/QM6	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ROL EOS 11/QM6	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
ROL EOS 11/QM6	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
ROL EOS 11/QM6	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
ROL EOS 11/QM6	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Read Fault Code	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Read ECU Information	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Live Data	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Function Test	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Read Configuration	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Actuation Test	
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALIZATION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ROL EOS 11/QM6	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Live Data	
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Function Test	
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Read Configuration	
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
ROL EOS 11/QM6	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PRESSURE LINE ADBLUE HEATER
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
ROL EOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
KOLEOS 11/QM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
KOLEOS/QM5	INJECTION	2TR INJECTION	Read Fault Code	
KOLEOS/QM5	INJECTION	2TR INJECTION	Erase Fault Code	
KOLEOS/QM5	INJECTION	2TR INJECTION	Read ECU Information	
KOLEOS/QM5	INJECTION	2TR INJECTION	Live Data	
KOLEOS/QM5	INJECTION	2TR INJECTION	Actuation Test	
KOLEOS/QM5	INJECTION	2TR INJECTION	Other Configuration	VP058 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS/QM5	INJECTION	2TR INJECTION	Other Configuration	VP057 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS/QM5	INJECTION	2TR INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
KOLEOS/QM5	INJECTION	2TR INJECTION	Other Configuration	VP064 IGNITION TIMING ADJUSTMENT
KOLEOS/QM5	INJECTION	2TR INJECTION	Other Configuration	VP020 WRITE VIN
KOLEOS/QM5	INJECTION	2TR INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INJECTION	2TR INJECTION	Erase	RZ028 ADAPTIVE VALUE - A/F RATIO
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Live Data	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Live Data	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V. I. N.
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
KOLEOS/QM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC069 RESETTING THE DILUTION RATIOS
KOLEOS/QM5	INJECTION	INJECTION WB56	Read Fault Code	
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase Fault Code	
KOLEOS/QM5	INJECTION	INJECTION WB56	Read ECU Information	
KOLEOS/QM5	INJECTION	INJECTION WB56	Live Data	
KOLEOS/QM5	INJECTION	INJECTION WB56	Read Configuration	
KOLEOS/QM5	INJECTION	INJECTION WB56	Actuation Test	
KOLEOS/QM5	INJECTION	INJECTION WB56	Other Configuration	VP010 WRITE V. I. N.
KOLEOS/QM5	INJECTION	INJECTION WB56	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KOLEOS/QM5	INJECTION	INJECTION WB56	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
KOLEOS/QM5	INJECTION	INJECTION WB56	Other Configuration	VP069 CATALYTIC CONVERTER TEST
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase	RZ034 ECU MEMORY
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase	RZ028 ADAPTIVE VALUE - A/F RATIO
KOLEOS/QM5	INJECTION	INJECTION WB56	Erase	RZ027 ADAPTIVE VALUE - TPS
KOLEOS/QM5	INJECTION	INJECTION WB56	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
KOLEOS/QM5	INJECTION	INJECTION WB56	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
KOLEOS/QM5	INJECTION	INJECTION WB56	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
KOLEOS/QM5	A.B.S.	ABS	Read Fault Code	
KOLEOS/QM5	A.B.S.	ABS	Erase Fault Code	
KOLEOS/QM5	A.B.S.	ABS	Read ECU Information	
KOLEOS/QM5	A.B.S.	ABS	Live Data	
KOLEOS/QM5	A.B.S.	ABS	Actuation Test	
KOLEOS/QM5	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	A.B.S.	ABS	Read Fault Code	
KOLEOS/QM5	A.B.S.	ABS	Erase Fault Code	
KOLEOS/QM5	A.B.S.	ABS	Read ECU Information	
KOLEOS/QM5	A.B.S.	ABS	Live Data	
KOLEOS/QM5	A.B.S.	ABS	Actuation Test	
KOLEOS/QM5	A.B.S.	ABS	Other Configuration	VP036 STEERING ANGLE SENSOR INITIALISATION
KOLEOS/QM5	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP026 SLOPE SENSOR ADJUSTMENT
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF212 TYPE OF PARKING BRAKE
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF202 FREE SHIFT
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF216 FREE SHIFT DISPLAY
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF217 POINTER ANIMATION
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF218 DAYTIME BACKLIGHTS
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF234 BLIND SPOT DETECTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF241 LANGUAGE CONFIGURATION
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP026 SLOPE SENSOR ADJUSTMENT
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
KOLEOS/QM5	UCH	BCM	Read Fault Code	
KOLEOS/QM5	UCH	BCM	Erase Fault Code	
KOLEOS/QM5	UCH	BCM	Read ECU Information	
KOLEOS/QM5	UCH	BCM	Live Data	
KOLEOS/QM5	UCH	BCM	Read Configuration	
KOLEOS/QM5	UCH	BCM	Actuation Test	
KOLEOS/QM5	UCH	BCM	Write Configuration	CF010 HANDS-FREE FUNCTION
KOLEOS/QM5	UCH	BCM	Write Configuration	CF035 RAIN/LIGHT SENSOR
KOLEOS/QM5	UCH	BCM	Write Configuration	CF009 DEADLOCKING
KOLEOS/QM5	UCH	BCM	Write Configuration	CF229 ALARM
KOLEOS/QM5	UCH	BCM	Write Configuration	CF268 RAISING OF ELECT. WINDOW(WITH ANTI-PINCH)
KOLEOS/QM5	UCH	BCM	Write Configuration	CF083 ONE-TOUCH ELECTRIC WINDOW(S)
KOLEOS/QM5	UCH	BCM	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
KOLEOS/QM5	UCH	BCM	Write Configuration	CF112 HEADLIGHT WASHERS
KOLEOS/QM5	UCH	BCM	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KOLEOS/QM5	UCH	BCM	Write Configuration	CF032 SEE-ME-HOME LIGHTING
KOLEOS/QM5	UCH	BCM	Write Configuration	CF119 UNLOCKING MODE, DOORS HANDS FREE
KOLEOS/QM5	UCH	BCM	Write Configuration	CF163 HEAD LAMP BATTERY SAVER FUNCTION
KOLEOS/QM5	UCH	BCM	Write Configuration	CF267 PASSENGER COMPARTMENT HEATING RESISTOR
KOLEOS/QM5	UCH	BCM	Write Configuration	CF179 SEAT BELT REMINDER BUZZER
KOLEOS/QM5	UCH	BCM	Write Configuration	CF274 DONGLE
KOLEOS/QM5	UCH	BCM	Write Configuration	CF277 INDICATOR LIGHT CONFIGURATION
KOLEOS/QM5	UCH	BCM	Other Configuration	VP001 WRITE V. I. N.
KOLEOS/QM5	UCH	BCM	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	UCH	BCM	Erase	RZ010 ANTI-THEFT ALARM TRIGGER S/W
KOLEOS/QM5	UCH	BCM	Configuration	SC005 CARD TESTING
KOLEOS/QM5	UCH	BCM	Configuration	SC008 UCH TYPE
KOLEOS/QM5	AIRBAG / PRETENSIONERS	AIRBAG C/U	Read Fault Code	
KOLEOS/QM5	AIRBAG / PRETENSIONERS	AIRBAG C/U	Erase Fault Code	
KOLEOS/QM5	AIRBAG / PRETENSIONERS	AIRBAG C/U	Read ECU Information	
KOLEOS/QM5	AIRBAG / PRETENSIONERS	AIRBAG C/U	Live Data	
KOLEOS/QM5	AIRBAG / PRETENSIONERS	AIRBAG C/U	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Read Fault Code	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Erase Fault Code	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Read ECU Information	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Live Data	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Erase	RZ004 FAULT MEMORY
KOLEOS/QM5	AUTOMATIC GEARBOX	CVT	Read Fault Code	
KOLEOS/QM5	AUTOMATIC GEARBOX	CVT	Erase Fault Code	
KOLEOS/QM5	AUTOMATIC GEARBOX	CVT	Read ECU Information	
KOLEOS/QM5	AUTOMATIC GEARBOX	CVT	Live Data	
KOLEOS/QM5	AUTOMATIC GEARBOX	CVT	Other Configuration	VP021 RESET OIL CHANGE COUNTER
KOLEOS/QM5	AUTOMATIC GEARBOX	CVT	Erase	RZ004 FAULT MEMORY
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Read Fault Code	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Erase Fault Code	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Read ECU Information	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Live Data	
KOLEOS/QM5	AUTOMATIC GEARBOX	AJO AUTO	Erase	RZ004 FAULT MEMORY
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Live Data	
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Read Configuration	
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Actuation Test	
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP014 BRAKE LINING FRICTION LEARNING
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP016 REAR BRAKE UNIT REPOSITIONING
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP015 REAR BRAKE UNIT INITIALISATION
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Erase	RZ002 SHOE LINING ENERGY COUNTER
KOLEOS/QM5	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Write Configuration	CF001 CONFIGURATION PRIVEE 1
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	VARIABLE P.A.S.	EPS C/U	Read Fault Code	
KOLEOS/QM5	VARIABLE P.A.S.	EPS C/U	Erase Fault Code	
KOLEOS/QM5	VARIABLE P.A.S.	EPS C/U	Read ECU Information	
KOLEOS/QM5	VARIABLE P.A.S.	EPS C/U	Live Data	
KOLEOS/QM5	VARIABLE P.A.S.	EPS C/U	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	UPC	UPC	Read Fault Code	
KOLEOS/QM5	UPC	UPC	Erase Fault Code	
KOLEOS/QM5	UPC	UPC	Read ECU Information	
KOLEOS/QM5	UPC	UPC	Live Data	
KOLEOS/QM5	UPC	UPC	Actuation Test	
KOLEOS/QM5	UPC	UPC	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Read Fault Code	
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Erase Fault Code	
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Read ECU Information	
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Live Data	
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Actuation Test	
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Erase	RZ002 FAULT MEMORY
KOLEOS/QM5	TYRES	TYRE PRESSURE MONITORING	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KOLEOS/QM5	TYRES	TYRES	Read Fault Code	
KOLEOS/QM5	TYRES	TYRES	Erase Fault Code	
KOLEOS/QM5	TYRES	TYRES	Read ECU Information	
KOLEOS/QM5	TYRES	TYRES	Live Data	
KOLEOS/QM5	TYRES	TYRES	Write Configuration	CF009 CONFIGURATION PRIVEE 1
KOLEOS/QM5	TYRES	TYRES	Other Configuration	VP004 WRITE VIN
KOLEOS/QM5	TYRES	TYRES	Other Configuration	VP011 PARAMETRAGE PRIVEE 1
KOLEOS/QM5	TYRES	TYRES	Erase	RZ002 FAULT MEMORY
KOLEOS/QM5	TYRES	TYRES	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
KOLEOS/QM5	4 WHEELS DRIVE	4 WHEEL DRIVE (4WD)	Read Fault Code	
KOLEOS/QM5	4 WHEELS DRIVE	4 WHEEL DRIVE (4WD)	Erase Fault Code	
KOLEOS/QM5	4 WHEELS DRIVE	4 WHEEL DRIVE (4WD)	Read ECU Information	
KOLEOS/QM5	4 WHEELS DRIVE	4 WHEEL DRIVE (4WD)	Live Data	
KOLEOS/QM5	4 WHEELS DRIVE	4 WHEEL DRIVE (4WD)	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Read Fault Code	
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Erase Fault Code	
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Read ECU Information	
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Live Data	
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Read Configuration	
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF010 GEARBOX TYPE
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF011 SENSOR TYPE
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Read Fault Code	
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Erase Fault Code	
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Read ECU Information	
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Live Data	
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Actuation Test	
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Other Configuration	VP001 STEERING ANGLE SENSOR INITIALISATION
KOLEOS/QM5	AUTO FRONT LIGHTING	LAD	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Configuration	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Configuration	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
KOLEOS/QM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF001 VEHICLE TYPE
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF039 GSM CONNECTIVITY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF040 GSM ANTENNA CIRCUIT
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC004 COMP. CONFIGURATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF058 TYPE
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
KOLEOS/QM5	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC004 COMP. CONFIGURATION
KOLEOS/QM5	RADIO	R307 RADIO	Read Fault Code	
KOLEOS/QM5	RADIO	R307 RADIO	Erase Fault Code	
KOLEOS/QM5	RADIO	R307 RADIO	Read ECU Information	
KOLEOS/QM5	RADIO	R307 RADIO	Live Data	
KOLEOS/QM5	RADIO	R307 RADIO	Read Configuration	
KOLEOS/QM5	RADIO	R307 RADIO	Actuation Test	
KOLEOS/QM5	RADIO	R307 RADIO	Write Configuration	CF016 COUNTRY MODEL
KOLEOS/QM5	RADIO	R307 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
KOLEOS/QM5	RADIO	R307 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
KOLEOS/QM5	RADIO	R307 RADIO	Write Configuration	CF014 DRIVING TYPE
KOLEOS/QM5	RADIO	R307 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KOLEOS/QM5	RADIO	R307 RADIO	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	RADIO	R307 RADIO	Other Configuration	VP006 RADIO PROGRAMMING KEY
KOLEOS/QM5	RADIO	R307 RADIO	Erase	RZ003 FAULT MEMORY
KOLEOS/QM5	RADIO	R307 RADIO	Erase	RZ004 RESET RADIO
KOLEOS/QM5	RADIO	RADIO	Read Fault Code	
KOLEOS/QM5	RADIO	RADIO	Read ECU Information	
KOLEOS/QM5	RADIO	RADIO	Live Data	
KOLEOS/QM5	RADIO	LPN	Read Fault Code	
KOLEOS/QM5	RADIO	LPN	Erase Fault Code	
KOLEOS/QM5	RADIO	LPN	Read ECU Information	
KOLEOS/QM5	RADIO	LPN	Live Data	
KOLEOS/QM5	RADIO	LPN	Read Configuration	
KOLEOS/QM5	RADIO	LPN	Actuation Test	
KOLEOS/QM5	RADIO	LPN	Write Configuration	CF013 CD CHANGER
KOLEOS/QM5	RADIO	LPN	Write Configuration	CF018 DISTANCE UNITS
KOLEOS/QM5	RADIO	LPN	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	RADIO	LPN	Other Configuration	VP005 COMPUTER CALIBRATION AND OPERATION
KOLEOS/QM5	RADIO	LPN	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KOLEOS/QM5	RADIO	LPN	Erase	RZ003 FAULT MEMORY
KOLEOS/QM5	RADIO	R208 RADIO	Read Fault Code	
KOLEOS/QM5	RADIO	R208 RADIO	Erase Fault Code	
KOLEOS/QM5	RADIO	R208 RADIO	Read ECU Information	
KOLEOS/QM5	RADIO	R208 RADIO	Live Data	
KOLEOS/QM5	RADIO	R208 RADIO	Read Configuration	
KOLEOS/QM5	RADIO	R208 RADIO	Actuation Test	
KOLEOS/QM5	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KOLEOS/QM5	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KOLEOS/QM5	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
KOLEOS/QM5	RADIO	RADIO	Read Fault Code	
KOLEOS/QM5	RADIO	RADIO	Erase Fault Code	
KOLEOS/QM5	RADIO	RADIO	Read ECU Information	
KOLEOS/QM5	RADIO	RADIO	Live Data	
KOLEOS/QM5	RADIO	RADIO	Read Configuration	
KOLEOS/QM5	RADIO	RADIO	Actuation Test	
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP018 PARAMETRAGE PRIVE 12
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP019 PARAMETRAGE PRIVE 13
KOLEOS/QM5	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KOLEOS/QM5	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
KOLEOS/QM5	RADIO	RADIO	Read Fault Code	
KOLEOS/QM5	RADIO	RADIO	Erase Fault Code	
KOLEOS/QM5	RADIO	RADIO	Read ECU Information	
KOLEOS/QM5	RADIO	RADIO	Live Data	
KOLEOS/QM5	RADIO	RADIO	Read Configuration	
KOLEOS/QM5	RADIO	RADIO	Actuation Test	
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP019 PARAMETRAGE PRIVE 13
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP020 PARAMETRAGE PRIVE 14
KOLEOS/QM5	RADIO	RADIO	Other Configuration	VP021 PARAMETRAGE PRIVE 15
KOLEOS/QM5	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KOLEOS/QM5	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF001 VEHICLE TYPE
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF009 NAVIGATION
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF008 RADIO
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Configuration	SC002 VEHICLE IDENTIFIER
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Read Fault Code	
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Erase Fault Code	
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Read ECU Information	
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Live Data	
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Read Configuration	
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Actuation Test	
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Write Configuration	CF002 COMPUTER CONFIGURATION
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Write Configuration	CF007 SYSTEM CONFIGURATION
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
KOLEOS/QM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Read Fault Code	
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Erase Fault Code	
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Read ECU Information	
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Live Data	
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Actuation Test	
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Other Configuration	VP007 SYSTEM INITIALISATION
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Other Configuration	VP009 EPROM MEMORY WRITE PROCEDURE
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Other Configuration	VP011 EPROM MEMORY WRITE PROCEDURE
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Other Configuration	VP015 EPROM MEMORY WRITE PROCEDURE
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Other Configuration	VP016 EPROM MEMORY WRITE PROCEDURE
KOLEOS/QM5	DISCHARGE LAMP	AHLD C/U	Erase	RZ001 FAULT MEMORY
KWID	INJECTION	INJECTION	Read Fault Code	
KWID	INJECTION	INJECTION	Erase Fault Code	
KWID	INJECTION	INJECTION	Read ECU Information	
KWID	INJECTION	INJECTION	Live Data	
KWID	INJECTION	INJECTION	Actuation Test	
KWID	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KWID	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KWID	INJECTION	INJECTION	Erase	RZ007 FAULT MEMORY
KWID	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KWID	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KWID	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KWID	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KWID	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
KWID	INJECTION	INJECTION	Erase	RZ002 EGR ADAPTIVES
KWID	INJECTION	INJECTION	Configuration	SC001 WRITE SAVED DATA
KWID	INJECTION	INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KWID	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KWID	INJECTION	INJECTION	Read Fault Code	
KWID	INJECTION	INJECTION	Erase Fault Code	
KWID	INJECTION	INJECTION	Read ECU Information	
KWID	INJECTION	INJECTION	Live Data	
KWID	INJECTION	INJECTION	Actuation Test	
KWID	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KWID	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
KWID	INJECTION	INJECTION	Other Configuration	VP383 MEMORISATION OF SPEEDS
KWID	INJECTION	INJECTION	Erase	RZ007 FAULT MEMORY
KWID	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KWID	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KWID	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KWID	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KWID	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
KWID	INJECTION	INJECTION	Erase	RZ002 EGR ADAPTIVES
KWID	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF159 ENGINE IMMOBILISER
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KWID	UCH	UCH	Read Fault Code	
KWID	UCH	UCH	Erase Fault Code	
KWID	UCH	UCH	Read ECU Information	
KWID	UCH	UCH	Live Data	
KWID	UCH	UCH	Actuation Test	
KWID	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KWID	UCH	UCH	Erase	RZ001 FAULT MEMORY
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVE 1
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KWID	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
KWID	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
KWID	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
KWID	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
KWID	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
KWID	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
KWID	RADIO	RADIO	Read Fault Code	
KWID	RADIO	RADIO	Erase Fault Code	
KWID	RADIO	RADIO	Read ECU Information	
KWID	RADIO	RADIO	Live Data	
KWID	RADIO	RADIO	Read Configuration	
KWID	RADIO	RADIO	Actuation Test	
KWID	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KWID	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KWID	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KWID	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KWID	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KWID	RADIO	RADIO	Erase	RZ004 RESET RADIO
KWID	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF255 LANGUAGE VERSION.
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
KWID	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
KWID	UCH	UCH	Read Fault Code	
KWID	UCH	UCH	Erase Fault Code	
KWID	UCH	UCH	Read ECU Information	
KWID	UCH	UCH	Live Data	
KWID	UCH	UCH	Function Test	
KWID	UCH	UCH	Read Configuration	
KWID	UCH	UCH	Actuation Test	
KWID	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KWID	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KWID	UCH	UCH	Write Configuration	CF229 ALARM
KWID	UCH	UCH	Write Configuration	CF294 REMOTE ENGINE STARTING
KWID	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
KWID	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
KWID	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
KWID	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
KWID	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
KWID	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
KWID	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
KWID	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
KWID	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KWID	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
KWID	INJECTION	INJECTION	Read Fault Code	
KWID	INJECTION	INJECTION	Erase Fault Code	
KWID	INJECTION	INJECTION	Read ECU Information	
KWID	INJECTION	INJECTION	Live Data	
KWID	INJECTION	INJECTION	Actuation Test	
KWID	INJECTION	INJECTION	Read Fault Code	
KWID	INJECTION	INJECTION	Erase Fault Code	
KWID	INJECTION	INJECTION	Read ECU Information	
KWID	INJECTION	INJECTION	Live Data	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
KWID	INJECTION	INJECTION	Actuation Test	
KWID	INJECTION	INJECTION	Read Fault Code	
KWID	INJECTION	INJECTION	Erase Fault Code	
KWID	INJECTION	INJECTION	Read ECU Information	
KWID	INJECTION	INJECTION	Live Data	
KWID	INJECTION	INJECTION	Actuation Test	
KWID	ABS	ABS	Read Fault Code	
KWID	ABS	ABS	Erase Fault Code	
KWID	ABS	ABS	Read ECU Information	
KWID	ABS	ABS	Live Data	
KWID	ABS	ABS	Read Configuration	
KWID	ABS	ABS	Actuation Test	
KWID BR	INJECTION	INJECTION	Read Fault Code	
KWID BR	INJECTION	INJECTION	Erase Fault Code	
KWID BR	INJECTION	INJECTION	Read ECU Information	
KWID BR	INJECTION	INJECTION	Live Data	
KWID BR	INJECTION	INJECTION	Actuation Test	
KWID BR	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KWID BR	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
KWID BR	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
KWID BR	INJECTION	INJECTION	Erase	RZ007 FAULT MEMORY
KWID BR	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KWID BR	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KWID BR	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KWID BR	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KWID BR	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
KWID BR	INJECTION	INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
KWID BR	INJECTION	INJECTION	Configuration	SC001 WRITE SAVED DATA
KWID BR	INJECTION	INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KWID BR	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KWID BR	INJECTION	INJECTION	Read Fault Code	
KWID BR	INJECTION	INJECTION	Erase Fault Code	
KWID BR	INJECTION	INJECTION	Read ECU Information	
KWID BR	INJECTION	INJECTION	Live Data	
KWID BR	INJECTION	INJECTION	Actuation Test	
KWID BR	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
KWID BR	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
KWID BR	INJECTION	INJECTION	Other Configuration	VP383 MEMORISATION OF SPEEDS
KWID BR	INJECTION	INJECTION	Erase	RZ007 FAULT MEMORY
KWID BR	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
KWID BR	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
KWID BR	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
KWID BR	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
KWID BR	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
KWID BR	INJECTION	INJECTION	Configuration	SC001 WRITE SAVED DATA
KWID BR	INJECTION	INJECTION	Configuration	SC003 SAVE COMPUTER DATA
KWID BR	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
KWID BR	A.B.S.	ABS	Read Fault Code	
KWID BR	A.B.S.	ABS	Erase Fault Code	
KWID BR	A.B.S.	ABS	Read ECU Information	
KWID BR	A.B.S.	ABS	Live Data	
KWID BR	A.B.S.	ABS	Actuation Test	
KWID BR	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
KWID BR	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
KWID BR	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
KWID BR	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
KWID BR	A.B.S.	ABS	Erase	RZ012 RESET
KWID BR	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
KWID BR	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
KWID BR	UCH	UCH	Read Fault Code	
KWID BR	UCH	UCH	Erase Fault Code	
KWID BR	UCH	UCH	Read ECU Information	
KWID BR	UCH	UCH	Live Data	
KWID BR	UCH	UCH	Read Configuration	
KWID BR	UCH	UCH	Actuation Test	
KWID BR	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
KWID BR	UCH	UCH	Write Configuration	CF229 ALARM
KWID BR	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
KWID BR	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
KWID BR	UCH	UCH	Erase	RZ001 FAULT MEMORY
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVE 1
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVE 1
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
KWID BR	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
KWID BR	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
KWID BR	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
KWID BR	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
KWID BR	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
KWID BR	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
KWID BR	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
KWID BR	RADIO	RADIO	Read Fault Code	
KWID BR	RADIO	RADIO	Erase Fault Code	
KWID BR	RADIO	RADIO	Read ECU Information	
KWID BR	RADIO	RADIO	Live Data	
KWID BR	RADIO	RADIO	Read Configuration	
KWID BR	RADIO	RADIO	Actuation Test	
KWID BR	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
KWID BR	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
KWID BR	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
KWID BR	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
KWID BR	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
KWID BR	RADIO	RADIO	Erase	RZ004 RESET RADIO
KWID BR	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
KWID BR	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
KWID BR	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
KWID BR	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
KWID BR	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
KWID BR	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
KWID BR	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
KWID BR	ABS	ABS	Read Fault Code	
KWID BR	ABS	ABS	Erase Fault Code	
KWID BR	ABS	ABS	Read ECU Information	
KWID BR	ABS	ABS	Live Data	
KWID BR	ABS	ABS	Read Configuration	
KWID BR	ABS	ABS	Actuation Test	
LAGUNA	INJECTION		Read Fault Code	
LAGUNA	INJECTION		Erase Fault Code	
LAGUNA	INJECTION		Read ECU Information	
LAGUNA	INJECTION		Live Data	
LAGUNA	INJECTION		Actuation Test	
LAGUNA	INJECTION		Programming	OXYGEN SENSOR TEST
LAGUNA	INJECTION	DIESEL INJECTION	Read Fault Code	
LAGUNA	INJECTION	DIESEL INJECTION	Erase Fault Code	
LAGUNA	INJECTION	DIESEL INJECTION	Read ECU Information	
LAGUNA	INJECTION	DIESEL INJECTION	Live Data	
LAGUNA	INJECTION	DIESEL INJECTION	Actuation Test	
LAGUNA	INJECTION	DIESEL INJECTION	Read Configuration	
LAGUNA	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
LAGUNA	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
LAGUNA	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
LAGUNA	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
LAGUNA	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
LAGUNA	AUTOMATIC GEARBOX		Read Fault Code	
LAGUNA	AUTOMATIC GEARBOX		Erase Fault Code	
LAGUNA	AUTOMATIC GEARBOX		Read ECU Information	
LAGUNA	AUTOMATIC GEARBOX		Live Data	
LAGUNA	AUTOMATIC GEARBOX		Actuation Test	
LAGUNA	ENGINE IMMOBILISER		Read Fault Code	
LAGUNA	ENGINE IMMOBILISER		Erase Fault Code	
LAGUNA	ENGINE IMMOBILISER		Read ECU Information	
LAGUNA	ENGINE IMMOBILISER		Live Data	
LAGUNA	ENGINE IMMOBILISER		Actuation Test	
LAGUNA	ENGINE IMMOBILISER		Write Configuration	DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE
LAGUNA	ENGINE IMMOBILISER		Write Configuration	DIESEL ENGINE IMMOBILISER
LAGUNA	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 1 KEY
LAGUNA	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 2 KEYS
LAGUNA	ENGINE IMMOBILISER		Write Configuration	WITH INFRA-RED REMOTE CONTROL
LAGUNA	ENGINE IMMOBILISER		Write Configuration	WITH RADIO FREQUENCY REMOTE CONTROL
LAGUNA	ENGINE IMMOBILISER		Write Configuration	WITHOUT TIMED COURTESY LIGHT
LAGUNA	ENGINE IMMOBILISER		Write Configuration	WITH TIMED COURTESY LIGHT
LAGUNA	A.B.S.		Read Fault Code	
LAGUNA	A.B.S.		Erase Fault Code	
LAGUNA	A.B.S.		Read ECU Information	
LAGUNA	A.B.S.		Live Data	
LAGUNA	A.B.S.		Actuation Test	
LAGUNA	A.B.S.		Read Fault Code	
LAGUNA	A.B.S.		Erase Fault Code	
LAGUNA	A.B.S.		Read ECU Information	
LAGUNA	A.B.S.		Live Data	
LAGUNA	A.B.S.		Actuation Test	
LAGUNA	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
LAGUNA	A.B.S.		Read Fault Code	
LAGUNA	A.B.S.		Erase Fault Code	
LAGUNA	A.B.S.		Read ECU Information	
LAGUNA	A.B.S.		Live Data	
LAGUNA	A.B.S.		Actuation Test	
LAGUNA	A.B.S.		Read Fault Code	
LAGUNA	A.B.S.		Erase Fault Code	
LAGUNA	A.B.S.		Read ECU Information	
LAGUNA	A.B.S.		Live Data	
LAGUNA	A.B.S.		Actuation Test	
LAGUNA	INSTRUMENT PANEL		Read Fault Code	
LAGUNA	INSTRUMENT PANEL		Erase Fault Code	
LAGUNA	INSTRUMENT PANEL		Read ECU Information	
LAGUNA	INSTRUMENT PANEL		Live Data	
LAGUNA	INSTRUMENT PANEL		Read Configuration	
LAGUNA	INSTRUMENT PANEL		Write Configuration	NUMBER OF CYLINDERS CONFIGURATION
LAGUNA	INSTRUMENT PANEL		Write Configuration	LANGUAGE CONFIGURATION
LAGUNA	INSTRUMENT PANEL		Write Configuration	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION
LAGUNA	INSTRUMENT PANEL		Write Configuration	ENGINE IMMOBILISER 2
LAGUNA	INSTRUMENT PANEL		Read Fault Code	
LAGUNA	INSTRUMENT PANEL		Erase Fault Code	
LAGUNA	INSTRUMENT PANEL		Read ECU Information	
LAGUNA	INSTRUMENT PANEL		Live Data	
LAGUNA	INSTRUMENT PANEL		Read Configuration	
LAGUNA	INSTRUMENT PANEL		Write Configuration	NUMBER OF CYLINDERS CONFIGURATION
LAGUNA	INSTRUMENT PANEL		Write Configuration	LANGUAGE CONFIGURATION
LAGUNA	INSTRUMENT PANEL		Write Configuration	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION
LAGUNA	INSTRUMENT PANEL		Write Configuration	ENGINE IMMOBILISER 2
LAGUNA	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA	AIRBAG / PRETENSIONERS		Actuation Test	
LAGUNA	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA	AIRBAG / PRETENSIONERS		Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA	AIRBAG / PRETENSIONERS		Write Configuration	LOCK COMPUTER
LAGUNA	AIRBAG / PRETENSIONERS		Write Configuration	UNLOCK COMPUTER
LAGUNA	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT PASSENGER'S FRONTAL AIRBAG
LAGUNA	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT PASSENGER SEAT
LAGUNA	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT AIRBAGS (PRETENSIONERS ONLY)
LAGUNA	AIRBAG / PRETENSIONERS		Write Configuration	WITH PASSENGER'S AIRBAGS
LAGUNA	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA	AIRBAG / PRETENSIONERS		Actuation Test	
LAGUNA	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA	AIR CONDITIONING		Read Fault Code	
LAGUNA	AIR CONDITIONING		Erase Fault Code	
LAGUNA	AIR CONDITIONING		Read ECU Information	
LAGUNA	AIR CONDITIONING		Live Data	
LAGUNA	VARIABLE P.A.S.		Read Fault Code	
LAGUNA	VARIABLE P.A.S.		Erase Fault Code	
LAGUNA	VARIABLE P.A.S.		Read ECU Information	
LAGUNA	VARIABLE P.A.S.		Live Data	
LAGUNA	VARIABLE P.A.S.		Actuation Test	
LAGUNA	VARIABLE P.A.S.		Read Fault Code	
LAGUNA	VARIABLE P.A.S.		Erase Fault Code	
LAGUNA	VARIABLE P.A.S.		Read ECU Information	
LAGUNA	VARIABLE P.A.S.		Live Data	
LAGUNA	VARIABLE P.A.S.		Actuation Test	
LAGUNA	VARIABLE P.A.S.		Read Fault Code	
LAGUNA	VARIABLE P.A.S.		Erase Fault Code	
LAGUNA	VARIABLE P.A.S.		Read ECU Information	
LAGUNA	VARIABLE P.A.S.		Live Data	
LAGUNA	VARIABLE P.A.S.		Actuation Test	
LAGUNA	DRIVER'S POSITION		Read Fault Code	
LAGUNA	DRIVER'S POSITION		Erase Fault Code	
LAGUNA	DRIVER'S POSITION		Read ECU Information	
LAGUNA	DRIVER'S POSITION		Live Data	
LAGUNA	DRIVER'S POSITION		Actuation Test	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF039 UCH
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF146 AUTOMATIC HANDBRAKE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF196 CRUISE CONTR./SP. LIMIT. SPEED DIFF.
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF139 VOICE SYNTHESIZER
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF035 TANK CAPACITY
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF046 GAS RESERV. CAPAC.
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LAGUNA II	INJECTION	INJ. S2000 TURBO	Read Fault Code	
LAGUNA II	INJECTION	INJ. S2000 TURBO	Erase Fault Code	
LAGUNA II	INJECTION	INJ. S2000 TURBO	Read ECU Information	
LAGUNA II	INJECTION	INJ. S2000 TURBO	Live Data	
LAGUNA II	INJECTION	INJ. S2000 TURBO	Read Configuration	
LAGUNA II	INJECTION	INJ. S2000 TURBO	Actuation Test	
LAGUNA II	INJECTION	INJ. S2000 TURBO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	INJ. S2000 TURBO	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	INJ. S2000 TURBO	Other Configuration	VP020 WRITE VIN
LAGUNA II	INJECTION	INJ. S2000 TURBO	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	INJ. S2000 TURBO	Erase	RZ019 PROGRAMMING REINITIALISATION
LAGUNA II	INJECTION	EDC15 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	EDC15 INJECTION	Live Data	
LAGUNA II	INJECTION	EDC15 INJECTION	Read Configuration	
LAGUNA II	INJECTION	EDC15 INJECTION	Actuation Test	
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	EDC15 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	EDC15 INJECTION	Live Data	
LAGUNA II	INJECTION	EDC15 INJECTION	Read Configuration	
LAGUNA II	INJECTION	EDC15 INJECTION	Actuation Test	
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA II	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Live Data	
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LAGUNA II	INJECTION	INJECTION S2000	Read Fault Code	
LAGUNA II	INJECTION	INJECTION S2000	Erase Fault Code	
LAGUNA II	INJECTION	INJECTION S2000	Read ECU Information	
LAGUNA II	INJECTION	INJECTION S2000	Live Data	
LAGUNA II	INJECTION	INJECTION S2000	Read Configuration	
LAGUNA II	INJECTION	INJECTION S2000	Actuation Test	
LAGUNA II	INJECTION	INJECTION S2000	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	INJECTION S2000	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	INJECTION S2000	Other Configuration	VP020 WRITE VIN
LAGUNA II	INJECTION	INJECTION S2000	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	INJECTION S2000	Erase	RZ019 PROGRAMMING REINITIALISATION
LAGUNA II	INJECTION	INJECTION S2000	Read Fault Code	
LAGUNA II	INJECTION	INJECTION S2000	Erase Fault Code	
LAGUNA II	INJECTION	INJECTION S2000	Read ECU Information	
LAGUNA II	INJECTION	INJECTION S2000	Live Data	
LAGUNA II	INJECTION	INJECTION S2000	Read Configuration	
LAGUNA II	INJECTION	INJECTION S2000	Actuation Test	
LAGUNA II	INJECTION	INJECTION S2000	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	INJECTION S2000	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	INJECTION S2000	Other Configuration	VP020 WRITE VIN
LAGUNA II	INJECTION	INJECTION S2000	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	INJECTION S2000	Erase	RZ019 PROGRAMMING REINITIALISATION
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Live Data	
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Actuation Test	
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Other Configuration	VP020 WRITE VIN
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	ME 7.4.6 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LAGUNA II	INJECTION	EDC15 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	EDC15 INJECTION	Live Data	
LAGUNA II	INJECTION	EDC15 INJECTION	Read Configuration	
LAGUNA II	INJECTION	EDC15 INJECTION	Actuation Test	
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNA II	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA II	INJECTION	EDC15 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	EDC15 INJECTION	Live Data	
LAGUNA II	INJECTION	EDC15 INJECTION	Read Configuration	
LAGUNA II	INJECTION	EDC15 INJECTION	Actuation Test	
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNA II	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA II	INJECTION	EDC15 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	EDC15 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	EDC15 INJECTION	Live Data	
LAGUNA II	INJECTION	EDC15 INJECTION	Read Configuration	
LAGUNA II	INJECTION	EDC15 INJECTION	Actuation Test	
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
LAGUNA II	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
LAGUNA II	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNA II	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Live Data	
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNA II	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LAGUNA II	A.B.S.	ABS	Read Fault Code	
LAGUNA II	A.B.S.	ABS	Erase Fault Code	
LAGUNA II	A.B.S.	ABS	Read ECU Information	
LAGUNA II	A.B.S.	ABS	Live Data	
LAGUNA II	A.B.S.	ABS	Read Configuration	
LAGUNA II	A.B.S.	ABS	Actuation Test	
LAGUNA II	A.B.S.	ABS	Write Configuration	CF080 VEHICLE PARAMETERS
LAGUNA II	A.B.S.	ABS	Write Configuration	CF077 ABS/ESP CALIBRATION
LAGUNA II	A.B.S.	ABS	Write Configuration	CF079 GEARBOX TYPE
LAGUNA II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LAGUNA II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LAGUNA II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LAGUNA II	A.B.S.	ESP	Read Fault Code	
LAGUNA II	A.B.S.	ESP	Erase Fault Code	
LAGUNA II	A.B.S.	ESP	Read ECU Information	
LAGUNA II	A.B.S.	ESP	Live Data	
LAGUNA II	A.B.S.	ESP	Read Configuration	
LAGUNA II	A.B.S.	ESP	Actuation Test	
LAGUNA II	A.B.S.	ESP	Write Configuration	CF080 VEHICLE PARAMETERS
LAGUNA II	A.B.S.	ESP	Write Configuration	CF077 ABS/ESP CALIBRATION
LAGUNA II	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
LAGUNA II	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LAGUNA II	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA II	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LAGUNA II	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LAGUNA II	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF047 ADAPTIVE CRUISE CONTROL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF152 P9X AT
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF153 P9X MANUAL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF154 V4Y AUTOMATIC GEARBOX
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF155 V4Y MANUAL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF156 OTHER AT
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF157 OTHER MANUAL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 DISTANCE BEFORE NEXT OIL CHANGE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF047 ADAPTIVE CRUISE CONTROL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF152 P9X AT
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF153 P9X MANUAL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF154 V4Y AUTOMATIC GEARBOX
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF155 V4Y MANUAL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF156 OTHER AT
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF157 OTHER MANUAL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 DISTANCE BEFORE NEXT OIL CHANGE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF047 ADAPTIVE CRUISE CONTROL
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LAGUNA II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LAGUNA II	UCH	UCH	Read Fault Code	
LAGUNA II	UCH	UCH	Erase Fault Code	
LAGUNA II	UCH	UCH	Read ECU Information	
LAGUNA II	UCH	UCH	Live Data	
LAGUNA II	UCH	UCH	Read Configuration	
LAGUNA II	UCH	UCH	Actuation Test	
LAGUNA II	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
LAGUNA II	UCH	UCH	Write Configuration	CF098 CARD LOCKING
LAGUNA II	UCH	UCH	Write Configuration	CF099 CARD REMINDER WARNING
LAGUNA II	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
LAGUNA II	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
LAGUNA II	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESIZER
LAGUNA II	UCH	UCH	Write Configuration	CF012 RAIN SENSOR
LAGUNA II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LAGUNA II	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
LAGUNA II	UCH	UCH	Write Configuration	CF133 POWER-ASSISTED STEERING PROGRAM
LAGUNA II	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
LAGUNA II	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
LAGUNA II	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
LAGUNA II	UCH	UCH	Write Configuration	CF090 DEADLOCKING
LAGUNA II	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
LAGUNA II	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
LAGUNA II	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
LAGUNA II	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNA II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
LAGUNA II	UCH	UCH	Write Configuration	CF107 TIMER COURTESY LIGHT
LAGUNA II	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
LAGUNA II	UCH	UCH	Write Configuration	CF094 AUTOMATIC SEAT RECALL
LAGUNA II	UCH	UCH	Write Configuration	CF119 UNLOCKING MODE DOORS HANDS FREE
LAGUNA II	UCH	UCH	Write Configuration	CF115 DOOR UNLOCKING MODE
LAGUNA II	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
LAGUNA II	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
LAGUNA II	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
LAGUNA II	UCH	UCH	Other Configuration	VP003 VALVE SET SELECTION
LAGUNA II	UCH	UCH	Other Configuration	VP014 CHANGE IN TRIGGERING LIMIT
LAGUNA II	UCH	UCH	Other Configuration	VP004 WRITE VIN
LAGUNA II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNA II	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
LAGUNA II	UCH	UCH	Configuration	SC011 CHECK CARDS
LAGUNA II	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
LAGUNA II	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
LAGUNA II	UCH	UCH	Configuration	SC019 CARD ACCUMULATOR CHARGE TESTER
LAGUNA II	UCH	UCH	Configuration	SC024 LOCK LATCH LOCKING
LAGUNA II	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
LAGUNA II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNA II	UCH	UCH	Read Fault Code	
LAGUNA II	UCH	UCH	Erase Fault Code	
LAGUNA II	UCH	UCH	Read ECU Information	
LAGUNA II	UCH	UCH	Live Data	
LAGUNA II	UCH	UCH	Read Configuration	
LAGUNA II	UCH	UCH	Actuation Test	
LAGUNA II	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA II	UCH	UCH	Write Configuration	CF098 CARD LOCKING
LAGUNA II	UCH	UCH	Write Configuration	CF099 CARD REMINDER WARNING
LAGUNA II	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
LAGUNA II	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
LAGUNA II	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESIZER
LAGUNA II	UCH	UCH	Write Configuration	CF012 RAIN SENSOR
LAGUNA II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LAGUNA II	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
LAGUNA II	UCH	UCH	Write Configuration	CF133 POWER-ASSISTED STEERING PROGRAM
LAGUNA II	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
LAGUNA II	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
LAGUNA II	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
LAGUNA II	UCH	UCH	Write Configuration	CF090 DEADLOCKING
LAGUNA II	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
LAGUNA II	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
LAGUNA II	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
LAGUNA II	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNA II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
LAGUNA II	UCH	UCH	Write Configuration	CF107 TIMER COURTESY LIGHT
LAGUNA II	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
LAGUNA II	UCH	UCH	Write Configuration	CF094 AUTOMATIC SEAT RECALL
LAGUNA II	UCH	UCH	Write Configuration	CF119 UNLOCKING MODE. DOORS HANDS FREE
LAGUNA II	UCH	UCH	Write Configuration	CF115 DOOR UNLOCKING MODE
LAGUNA II	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
LAGUNA II	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
LAGUNA II	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
LAGUNA II	UCH	UCH	Other Configuration	VP004 WRITE VIN
LAGUNA II	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNA II	UCH	UCH	Other Configuration	VP014 CHANGE IN TRIGGERING LIMIT
LAGUNA II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNA II	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
LAGUNA II	UCH	UCH	Configuration	SC011 CHECK CARDS
LAGUNA II	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
LAGUNA II	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
LAGUNA II	UCH	UCH	Configuration	SC019 CARD ACCUMULATOR CHARGE TESTER
LAGUNA II	UCH	UCH	Configuration	SC024 LOCK LATCH LOCKING
LAGUNA II	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
LAGUNA II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LAGUNA II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read Fault Code	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Erase Fault Code	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read ECU Information	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Live Data	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read Configuration	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Actuation Test	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF111 TYPE OF POWER STEERING
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF050 HEATED WINDSCREEN
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF076 COMPRESSOR TYPE
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF110 DRIVE RATIO
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Live Data	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF111 TYPE OF POWER STEERING
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF050 HEATED WINDSCREEN
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Live Data	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF111 TYPE OF POWER STEERING
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF050 HEATED WINDSCREEN
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
LAGUNA II	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read Fault Code	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Erase Fault Code	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read ECU Information	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Live Data	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read Configuration	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Actuation Test	
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF076 COMPRESSOR TYPE
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF110 DRIVE RATIO
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LAGUNA II	AIR CONDITIONING	MANUAL AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT/S MEMORISED
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ004 FAULT MEMORY
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT/S MEMORISED
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
LAGUNA II	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Configuration	SC001 ACTUATORS SEQUENTIAL CONTROL
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read Fault Code	
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase Fault Code	
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read ECU Information	
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Live Data	
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read Configuration	
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Actuation Test	
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Write Configuration	CF317 AIR CONDITIONING WITH WIRE CONNECTION
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Write Configuration	CF316 SELECTOR LEVER LOCKING
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Write Configuration	CF314 TRAJECTORY CONTROL
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Write Configuration	CF320 NOTE OIL WEAR COUNTER
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Write Configuration	CF315 CHECK MOTOR TORQUE BY ABS
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ006 CONVERTER LOCK UP ADAPTIVE
LAGUNA II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ007 OBD MEMORY
LAGUNA II	GAS INJ.	LPG INJECTION	Read Fault Code	
LAGUNA II	GAS INJ.	LPG INJECTION	Erase Fault Code	
LAGUNA II	GAS INJ.	LPG INJECTION	Read ECU Information	
LAGUNA II	GAS INJ.	LPG INJECTION	Live Data	
LAGUNA II	GAS INJ.	LPG INJECTION	Read Configuration	
LAGUNA II	GAS INJ.	LPG INJECTION	Actuation Test	
LAGUNA II	GAS INJ.	LPG INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA II	DISCHARGE LAMP	LAD	Read Fault Code	
LAGUNA II	DISCHARGE LAMP	LAD	Erase Fault Code	
LAGUNA II	DISCHARGE LAMP	LAD	Read ECU Information	
LAGUNA II	DISCHARGE LAMP	LAD	Live Data	
LAGUNA II	DISCHARGE LAMP	LAD	Read Configuration	
LAGUNA II	DISCHARGE LAMP	LAD	Actuation Test	
LAGUNA II	DISCHARGE LAMP	LAD	Write Configuration	CF003 VEHICLE TYPE
LAGUNA II	DISCHARGE LAMP	LAD	Write Configuration	CF001 COMPUTER CALIBRATION
LAGUNA II	DISCHARGE LAMP	LAD	Other Configuration	VP001 WRITE VIN
LAGUNA II	DISCHARGE LAMP	LAD	Erase	RZ001 FAULT MEMORY
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Read Fault Code	
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Erase Fault Code	
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Read ECU Information	
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Live Data	
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Read Configuration	
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Actuation Test	
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Write Configuration	CF003 VEHICLE TYPE
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Other Configuration	VP001 WRITE VIN
LAGUNA II	DISCHARGE LAMP	DISCHARGE LAMP	Erase	RZ001 FAULT MEMORY
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Live Data	
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
LAGUNA II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
LAGUNA II	HEATER	BOILER	Read Fault Code	
LAGUNA II	HEATER	BOILER	Erase Fault Code	
LAGUNA II	HEATER	BOILER	Read ECU Information	
LAGUNA II	HEATER	BOILER	Live Data	
LAGUNA II	HEATER	BOILER	Actuation Test	
LAGUNA II	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
LAGUNA II	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
LAGUNA II	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
LAGUNA III	INJECTION	SID 301 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	SID 301 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	SID 301 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	SID 301 INJECTION	Live Data	
LAGUNA III	INJECTION	SID 301 INJECTION	Read Configuration	
LAGUNA III	INJECTION	SID 301 INJECTION	Actuation Test	
LAGUNA III	INJECTION	SID 301 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	SID 301 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	SID 301 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	SID 301 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	SID 301 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNA III	INJECTION	SID 301 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LAGUNA III	INJECTION	SID 301 INJECTION	Erase	RZ002 EGR ADAPTIVES
LAGUNA III	INJECTION	SID 301 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	SID 301 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	SID 301 INJECTION	Configuration	SC003 SAVE COMPUTER DATA

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA III	INJECTION	SID 301 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNA III	INJECTION	SID 301 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	S3000 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	S3000 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	S3000 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	S3000 INJECTION	Live Data	
LAGUNA III	INJECTION	S3000 INJECTION	Read Configuration	
LAGUNA III	INJECTION	S3000 INJECTION	Actuation Test	
LAGUNA III	INJECTION	S3000 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	S3000 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	S3000 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LAGUNA III	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNA III	INJECTION	S3000 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LAGUNA III	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Live Data	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	INJECTION WB56	Read Fault Code	
LAGUNA III	INJECTION	INJECTION WB56	Erase Fault Code	
LAGUNA III	INJECTION	INJECTION WB56	Read ECU Information	
LAGUNA III	INJECTION	INJECTION WB56	Live Data	
LAGUNA III	INJECTION	INJECTION WB56	Read Configuration	
LAGUNA III	INJECTION	INJECTION WB56	Actuation Test	
LAGUNA III	INJECTION	INJECTION WB56	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	INJECTION WB56	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	INJECTION WB56	Other Configuration	VP014 PARAMETRAGE PRIVE 1
LAGUNA III	INJECTION	INJECTION WB56	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	INJECTION WB56	Other Configuration	VP069 CATALYTIC CONVERTER TEST
LAGUNA III	INJECTION	INJECTION WB56	Other Configuration	VP070 AIR PATH PROGRAMMING
LAGUNA III	INJECTION	INJECTION WB56	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	INJECTION WB56	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	INJECTION EWR 21	Read Fault Code	
LAGUNA III	INJECTION	INJECTION EWR 21	Erase Fault Code	
LAGUNA III	INJECTION	INJECTION EWR 21	Read ECU Information	
LAGUNA III	INJECTION	INJECTION EWR 21	Live Data	
LAGUNA III	INJECTION	INJECTION EWR 21	Read Configuration	
LAGUNA III	INJECTION	INJECTION EWR 21	Actuation Test	
LAGUNA III	INJECTION	INJECTION EWR 21	Other Configuration	VP014 PARAMETRAGE PRIVE 1
LAGUNA III	INJECTION	INJECTION EWR 21	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	INJECTION EWR 21	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	INJECTION EWR 21	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	INJECTION EWR 21	Other Configuration	VP069 CATALYTIC CONVERTER TEST
LAGUNA III	INJECTION	INJECTION EWR 21	Other Configuration	VP070 AIR PATH PROGRAMMING
LAGUNA III	INJECTION	INJECTION EWR 21	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	INJECTION EWR 21	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Live Data	
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Read Configuration	
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Actuation Test	
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	EDC16CP42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LAGUNA III	INJECTION	SID 305 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	SID 305 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	SID 305 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	SID 305 INJECTION	Live Data	
LAGUNA III	INJECTION	SID 305 INJECTION	Read Configuration	
LAGUNA III	INJECTION	SID 305 INJECTION	Actuation Test	
LAGUNA III	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
LAGUNA III	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Live Data	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LAGUNA III	INJECTION	EDC16 CP33 INJECTION	Configuration	SC063 PROGRAMMING REINITIALISATION
LAGUNA III	INJECTION	EMS 3110 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	EMS 3110 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	EMS 3110 INJECTION	Live Data	
LAGUNA III	INJECTION	EMS 3110 INJECTION	Read Configuration	
LAGUNA III	INJECTION	EMS 3110 INJECTION	Actuation Test	
LAGUNA III	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LAGUNA III	INJECTION	EMS 3110 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LAGUNA III	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LAGUNA III	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LAGUNA III	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA III	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Read Fault Code	
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase Fault Code	
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Read ECU Information	
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Live Data	
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Read Configuration	
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Actuation Test	
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP153 PARAMETRAGE PRIVE 98
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ002 EGR ADAPTIVES
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LAGUNA III	INJECTION	EDC17 CP58 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LAGUNA III	A.B.S.	ABS	Read Fault Code	
LAGUNA III	A.B.S.	ABS	Erase Fault Code	
LAGUNA III	A.B.S.	ABS	Read ECU Information	
LAGUNA III	A.B.S.	ABS	Live Data	
LAGUNA III	A.B.S.	ABS	Read Configuration	
LAGUNA III	A.B.S.	ABS	Actuation Test	
LAGUNA III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LAGUNA III	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LAGUNA III	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LAGUNA III	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LAGUNA III	A.B.S.	ESP	Read Fault Code	
LAGUNA III	A.B.S.	ESP	Erase Fault Code	
LAGUNA III	A.B.S.	ESP	Read ECU Information	
LAGUNA III	A.B.S.	ESP	Live Data	
LAGUNA III	A.B.S.	ESP	Read Configuration	
LAGUNA III	A.B.S.	ESP	Actuation Test	
LAGUNA III	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LAGUNA III	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LAGUNA III	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA III	A.B.S.	ESP	Other Configuration	VP045 HILL START
LAGUNA III	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LAGUNA III	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LAGUNA III	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LAGUNA III	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LAGUNA III	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LAGUNA III	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
LAGUNA III	UCH	UCH	Read Fault Code	
LAGUNA III	UCH	UCH	Erase Fault Code	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA III	UCH	UCH	Read ECU Information	
LAGUNA III	UCH	UCH	Live Data	
LAGUNA III	UCH	UCH	Read Configuration	
LAGUNA III	UCH	UCH	Actuation Test	
LAGUNA III	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNA III	UCH	UCH	Write Configuration	CF293 INTERIOR AMBIENCE LIGHTING
LAGUNA III	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNA III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LAGUNA III	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNA III	UCH	UCH	Configuration	SC005 CARD TESTING
LAGUNA III	UCH	UCH	Configuration	SC008 UCH TYPE
LAGUNA III	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNA III	UCH	UCH	Configuration	SC038 READING THE VALVE SET AND VALVE CODES
LAGUNA III	UCH	UCH	Read Fault Code	
LAGUNA III	UCH	UCH	Erase Fault Code	
LAGUNA III	UCH	UCH	Read ECU Information	
LAGUNA III	UCH	UCH	Live Data	
LAGUNA III	UCH	UCH	Read Configuration	
LAGUNA III	UCH	UCH	Actuation Test	
LAGUNA III	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNA III	UCH	UCH	Write Configuration	CF293 INTERIOR AMBIENCE LIGHTING
LAGUNA III	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNA III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LAGUNA III	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNA III	UCH	UCH	Configuration	SC005 CARD TESTING
LAGUNA III	UCH	UCH	Configuration	SC008 UCH TYPE
LAGUNA III	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNA III	UCH	UCH	Configuration	SC038 READING THE VALVE SET AND VALVE CODES
LAGUNA III	UCH	UCH	Read Fault Code	
LAGUNA III	UCH	UCH	Erase Fault Code	
LAGUNA III	UCH	UCH	Read ECU Information	
LAGUNA III	UCH	UCH	Live Data	
LAGUNA III	UCH	UCH	Read Configuration	
LAGUNA III	UCH	UCH	Actuation Test	
LAGUNA III	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNA III	UCH	UCH	Read Fault Code	
LAGUNA III	UCH	UCH	Erase Fault Code	
LAGUNA III	UCH	UCH	Read ECU Information	
LAGUNA III	UCH	UCH	Live Data	
LAGUNA III	UCH	UCH	Read Configuration	
LAGUNA III	UCH	UCH	Actuation Test	
LAGUNA III	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNA III	UCH	UCH	Write Configuration	CF293 INTERIOR AMBIENCE LIGHTING
LAGUNA III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LAGUNA III	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNA III	UCH	UCH	Configuration	SC005 CARD TESTING
LAGUNA III	UCH	UCH	Configuration	SC008 UCH TYPE
LAGUNA III	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNA III	UCH	UCH	Configuration	SC038 READING THE VALVE SET AND VALVE CODES
LAGUNA III	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP019 PASSENGER AIR BAG LOCKING MODE
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LAGUNA III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF024 GEOGRAPHICAL ZONE
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
LAGUNA III	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Read Fault Code	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Erase Fault Code	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Read ECU Information	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Live Data	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Read Configuration	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Actuation Test	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Other Configuration	VP001 WRITE VIN
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ001 FAULT/S MEMORISED
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTMENT
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTMENT
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTMENT
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
LAGUNA III	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Read Fault Code	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Erase Fault Code	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Read ECU Information	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Live Data	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Read Configuration	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Actuation Test	
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Other Configuration	VP001 WRITE VIN
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ001 FAULT/S MEMORISED
LAGUNA III	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Live Data	
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Read Configuration	
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP012 ASSISTED ENGAGEMENT WHEN STATIONARY
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Configuration	SC009 PREPARATION BEFORE AUTOMATIC CONFIGURATION
LAGUNA III	PARKING BRAKE	PARKING BRAKE	Configuration	SC010 INITIALISATION AFTER AUTOMATIC CONFIGURATION
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
LAGUNA III	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LAGUNA III	UPC	UPC	Read Fault Code	
LAGUNA III	UPC	UPC	Erase Fault Code	
LAGUNA III	UPC	UPC	Read ECU Information	
LAGUNA III	UPC	UPC	Live Data	
LAGUNA III	UPC	UPC	Read Configuration	
LAGUNA III	UPC	UPC	Actuation Test	
LAGUNA III	UPC	UPC	Other Configuration	VP003 WRITE VIN
LAGUNA III	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LAGUNA III	UPC	UPC	Erase	RZ001 FAULT MEMORY
LAGUNA III	UPC	UPC	Read Fault Code	
LAGUNA III	UPC	UPC	Erase Fault Code	
LAGUNA III	UPC	UPC	Read ECU Information	
LAGUNA III	UPC	UPC	Live Data	
LAGUNA III	UPC	UPC	Actuation Test	
LAGUNA III	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
LAGUNA III	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LAGUNA III	UPC	UPC	Other Configuration	VP003 WRITE VIN
LAGUNA III	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
LAGUNA III	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
LAGUNA III	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
LAGUNA III	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
LAGUNA III	UPC	UPC	Other Configuration	VP022 PARAMETRAGE PRIVE 1
LAGUNA III	UPC	UPC	Other Configuration	VP023 PARAMETRAGE PRIVE 2
LAGUNA III	UPC	UPC	Other Configuration	VP024 PARAMETRAGE PRIVE 3
LAGUNA III	UPC	UPC	Other Configuration	VP025 PARAMETRAGE PRIVE 4
LAGUNA III	UPC	UPC	Erase	RZ004 DTC reset
LAGUNA III	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
LAGUNA III	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
LAGUNA III	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
LAGUNA III	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
LAGUNA III	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
LAGUNA III	UPC	UPC	Read Fault Code	
LAGUNA III	UPC	UPC	Erase Fault Code	
LAGUNA III	UPC	UPC	Read ECU Information	
LAGUNA III	UPC	UPC	Live Data	
LAGUNA III	UPC	UPC	Actuation Test	
LAGUNA III	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
LAGUNA III	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LAGUNA III	UPC	UPC	Other Configuration	VP003 WRITE VIN
LAGUNA III	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
LAGUNA III	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
LAGUNA III	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
LAGUNA III	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
LAGUNA III	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
LAGUNA III	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
LAGUNA III	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
LAGUNA III	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
LAGUNA III	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
LAGUNA III	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
LAGUNA III	UPC	UPC	Erase	RZ004 DTC reset
LAGUNA III	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
LAGUNA III	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
LAGUNA III	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
LAGUNA III	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
LAGUNA III	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
LAGUNA III	UPC	UPC	Read Fault Code	
LAGUNA III	UPC	UPC	Erase Fault Code	
LAGUNA III	UPC	UPC	Read ECU Information	
LAGUNA III	UPC	UPC	Live Data	
LAGUNA III	UPC	UPC	Actuation Test	
LAGUNA III	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
LAGUNA III	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LAGUNA III	UPC	UPC	Other Configuration	VP003 WRITE VIN
LAGUNA III	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
LAGUNA III	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
LAGUNA III	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
LAGUNA III	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
LAGUNA III	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
LAGUNA III	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
LAGUNA III	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
LAGUNA III	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
LAGUNA III	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
LAGUNA III	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
LAGUNA III	UPC	UPC	Erase	RZ004 DTC reset
LAGUNA III	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
LAGUNA III	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
LAGUNA III	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
LAGUNA III	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
LAGUNA III	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Read Fault Code	
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Erase Fault Code	
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Read ECU Information	
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Live Data	
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Read Configuration	
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Actuation Test	
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP001 WRITE VIN
LAGUNA III	LIGHTING	XEN BULB CORN. LIGHTS	Erase	RZ001 FAULT MEMORY
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Read Fault Code	
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Erase Fault Code	
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Read ECU Information	
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Live Data	
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Actuation Test	
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP001 WRITE VIN
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP004 INHIBITION OF 4-WHEEL DRIVE FUNCTION
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP005 REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION
LAGUNA III	4 WHEELS STEERING	4 WHEELS STEERING	Erase	RZ001 FAULT MEMORY
LAGUNA III	PARKING PROX CAN	PARKING AID	Read Fault Code	
LAGUNA III	PARKING PROX CAN	PARKING AID	Erase Fault Code	
LAGUNA III	PARKING PROX CAN	PARKING AID	Read ECU Information	
LAGUNA III	PARKING PROX CAN	PARKING AID	Live Data	
LAGUNA III	PARKING PROX CAN	PARKING AID	Read Configuration	
LAGUNA III	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA III	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
LAGUNA III	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LAGUNA III	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
LAGUNA III	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
LAGUNA III	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
LAGUNA III	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
LAGUNA III	PARKING PROX CAN	PARKING AID	Read Fault Code	
LAGUNA III	PARKING PROX CAN	PARKING AID	Erase Fault Code	
LAGUNA III	PARKING PROX CAN	PARKING AID	Read ECU Information	
LAGUNA III	PARKING PROX CAN	PARKING AID	Live Data	
LAGUNA III	PARKING PROX CAN	PARKING AID	Read Configuration	
LAGUNA III	PARKING PROX CAN	PARKING AID	Actuation Test	
LAGUNA III	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LAGUNA III	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
LAGUNA III	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
LAGUNA III	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Read Fault Code	
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Erase Fault Code	
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Read ECU Information	
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Live Data	
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Actuation Test	
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP001 WRITE VIN
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Erase	RZ001 FAULT MEMORY
LAGUNA III	DRIVER'S DOOR	DRIVER'S DOOR	Configuration	SC002 FROST MANAGEMENT MODE
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Read Fault Code	
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase Fault Code	
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Read ECU Information	
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Live Data	
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Actuation Test	
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Other Configuration	VP001 WRITE VIN
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase	RZ001 FAULT MEMORY
LAGUNA III	PASSENGER'S DOOR	PASSENGER'S DOOR	Configuration	SC002 FROST MANAGEMENT MODE
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Read Fault Code	
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Erase Fault Code	
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Read ECU Information	
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Live Data	
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP002 PROGRAMMING OF SEAT STOPS
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP003 WRITE VIN
LAGUNA III	DRIVER'S SEAT	SEAT MEMORY	Erase	RZ001 FAULT MEMORY
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LAGUNA III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LAGUNA III	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Read ECU Information	
LAGUNA III	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Other Configuration	VP001 COMPUTER REINITIALISATION
LAGUNA III	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Read ECU Information	
LAGUNA III	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Other Configuration	VP001 COMPUTER REINITIALISATION
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
LAGUNA III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
LAGUNA III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
LAGUNA III	RADIO	RADIO	Read Fault Code	
LAGUNA III	RADIO	RADIO	Read ECU Information	
LAGUNA III	RADIO	R307 RADIO	Read Fault Code	
LAGUNA III	RADIO	R307 RADIO	Erase Fault Code	
LAGUNA III	RADIO	R307 RADIO	Read ECU Information	
LAGUNA III	RADIO	R307 RADIO	Live Data	
LAGUNA III	RADIO	R307 RADIO	Read Configuration	
LAGUNA III	RADIO	R307 RADIO	Actuation Test	
LAGUNA III	RADIO	R307 RADIO	Write Configuration	CF016 COUNTRY MODEL
LAGUNA III	RADIO	R307 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
LAGUNA III	RADIO	R307 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LAGUNA III	RADIO	R307 RADIO	Other Configuration	VP001 WRITE VIN
LAGUNA III	RADIO	R307 RADIO	Erase	RZ003 FAULT MEMORY
LAGUNA III	RADIO	R307 RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
LAGUNA III	RADIO	R307 RADIO	Erase	RZ001 TEST PARAMETERS
LAGUNA III	RADIO	R307 RADIO	Erase	RZ004 RESET RADIO
LAGUNA III	RADIO	LPN	Read Fault Code	
LAGUNA III	RADIO	LPN	Erase Fault Code	
LAGUNA III	RADIO	LPN	Read ECU Information	
LAGUNA III	RADIO	LPN	Live Data	
LAGUNA III	RADIO	LPN	Read Configuration	
LAGUNA III	RADIO	LPN	Actuation Test	
LAGUNA III	RADIO	LPN	Write Configuration	CF026 CD CHANGER AND AUXILIARY INPUT
LAGUNA III	RADIO	LPN	Other Configuration	VP001 WRITE VIN
LAGUNA III	RADIO	LPN	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LAGUNA III	RADIO	LPN	Erase	RZ003 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA III	RADIO	R208 RADIO	Read Fault Code	
LAGUNA III	RADIO	R208 RADIO	Erase Fault Code	
LAGUNA III	RADIO	R208 RADIO	Read ECU Information	
LAGUNA III	RADIO	R208 RADIO	Live Data	
LAGUNA III	RADIO	R208 RADIO	Read Configuration	
LAGUNA III	RADIO	R208 RADIO	Actuation Test	
LAGUNA III	RADIO	R208 RADIO	Write Configuration	CF016 COUNTRY MODEL
LAGUNA III	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
LAGUNA III	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
LAGUNA III	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
LAGUNA III	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
LAGUNA III	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LAGUNA III	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
LAGUNA III	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
LAGUNA III	RADIO	R108 RADIO	Read Fault Code	
LAGUNA III	RADIO	R108 RADIO	Erase Fault Code	
LAGUNA III	RADIO	R108 RADIO	Read ECU Information	
LAGUNA III	RADIO	R108 RADIO	Live Data	
LAGUNA III	RADIO	R108 RADIO	Read Configuration	
LAGUNA III	RADIO	R108 RADIO	Actuation Test	
LAGUNA III	RADIO	R108 RADIO	Write Configuration	CF016 COUNTRY MODEL
LAGUNA III	RADIO	R108 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
LAGUNA III	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
LAGUNA III	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LAGUNA III	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
LAGUNA III	RADIO	RADIO	Read Fault Code	
LAGUNA III	RADIO	RADIO	Erase Fault Code	
LAGUNA III	RADIO	RADIO	Read ECU Information	
LAGUNA III	RADIO	RADIO	Live Data	
LAGUNA III	RADIO	RADIO	Read Configuration	
LAGUNA III	RADIO	RADIO	Actuation Test	
LAGUNA III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LAGUNA III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LAGUNA III	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LAGUNA III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LAGUNA III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LAGUNA III	RADIO	RADIO	Erase	RZ004 RESET RADIO
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
LAGUNA III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
LAGUNA III	AMPLIFIER	AMPLIFIER	Read Fault Code	
LAGUNA III	AMPLIFIER	AMPLIFIER	Erase Fault Code	
LAGUNA III	AMPLIFIER	AMPLIFIER	Read ECU Information	
LAGUNA III	AMPLIFIER	AMPLIFIER	Live Data	
LAGUNA III	AMPLIFIER	AMPLIFIER	Read Configuration	
LAGUNA III	AMPLIFIER	AMPLIFIER	Actuation Test	
LAGUNA III	AMPLIFIER	AMPLIFIER	Write Configuration	CF001 SUBWOOFER
LAGUNA III	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
LAGUNA III	AMPLIFIER	AMPLIFIER	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LAGUNA III	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
LAGUNA III	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
LAGUNA III	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ002 ECU MEMORY
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read Fault Code	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Erase Fault Code	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read ECU Information	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Live Data	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Actuation Test	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read Configuration	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	WITH THERMOPLUNGERS
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	WITHOUT THERMOPLUNGERS
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	WITH AIR CONDITIONING
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	WITHOUT AIR CONDITIONING
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	INCREMENT OF IDLE SPEED
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	DECREMENT IDLE SPEED
LAGUNA phase 2	INJECTION		Read Fault Code	
LAGUNA phase 2	INJECTION		Erase Fault Code	
LAGUNA phase 2	INJECTION		Read ECU Information	
LAGUNA phase 2	INJECTION		Live Data	
LAGUNA phase 2	INJECTION		Actuation Test	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read Fault Code	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Erase Fault Code	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read ECU Information	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Live Data	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Actuation Test	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read Configuration	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
LAGUNA phase 2	INJECTION		Read Fault Code	
LAGUNA phase 2	INJECTION		Erase Fault Code	
LAGUNA phase 2	INJECTION		Read ECU Information	
LAGUNA phase 2	INJECTION		Live Data	
LAGUNA phase 2	INJECTION		Actuation Test	
LAGUNA phase 2	INJECTION		Read Configuration	
LAGUNA phase 2	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read Fault Code	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Erase Fault Code	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read ECU Information	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Live Data	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Actuation Test	
LAGUNA phase 2	INJECTION	DIESEL INJECTION	Read Configuration	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNA phase 2	A.B.S.		Read ECU Information	
LAGUNA phase 2	A.B.S.		Live Data	
LAGUNA phase 2	A.B.S.		Actuation Test	
LAGUNA phase 2	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
LAGUNA phase 2	A.B.S.		Read Fault Code	
LAGUNA phase 2	A.B.S.		Erase Fault Code	
LAGUNA phase 2	A.B.S.		Read ECU Information	
LAGUNA phase 2	A.B.S.		Live Data	
LAGUNA phase 2	A.B.S.		Actuation Test	
LAGUNA phase 2	A.B.S.		Read Fault Code	
LAGUNA phase 2	A.B.S.		Erase Fault Code	
LAGUNA phase 2	A.B.S.		Read ECU Information	
LAGUNA phase 2	A.B.S.		Live Data	
LAGUNA phase 2	A.B.S.		Actuation Test	
LAGUNA phase 2	INSTRUMENT PANEL		Read Fault Code	
LAGUNA phase 2	INSTRUMENT PANEL		Erase Fault Code	
LAGUNA phase 2	INSTRUMENT PANEL		Read ECU Information	
LAGUNA phase 2	INSTRUMENT PANEL		Live Data	
LAGUNA phase 2	INSTRUMENT PANEL		Read Configuration	
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	NUMBER OF CYLINDERS CONFIGURATION
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	LANGUAGE CONFIGURATION
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	ENGINE IMMOBILISER 2
LAGUNA phase 2	INSTRUMENT PANEL		Read Fault Code	
LAGUNA phase 2	INSTRUMENT PANEL		Erase Fault Code	
LAGUNA phase 2	INSTRUMENT PANEL		Read ECU Information	
LAGUNA phase 2	INSTRUMENT PANEL		Live Data	
LAGUNA phase 2	INSTRUMENT PANEL		Read Configuration	
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	NUMBER OF CYLINDERS CONFIGURATION
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	LANGUAGE CONFIGURATION
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION
LAGUNA phase 2	INSTRUMENT PANEL		Write Configuration	ENGINE IMMOBILISER 2
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Actuation Test	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Configuration	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Write Configuration	LOCK COMPUTER
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Write Configuration	UNLOCK COMPUTER
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT PASSENGER'S FRONTAL AIRBAG
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT PASSENGER SEAT
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT AIRBAGS (PRETENSIONERS ONLY)
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Write Configuration	WITH PASSENGER'S AIRBAGS
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read ECU Information	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Actuation Test	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Configuration	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Programming	SIDE SENSORS PROGRAMMING
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Read Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Erase Fault Code	
LAGUNA phase 2	AIRBAG / PRETENSIONERS		Live Data	
LAGUNA phase 2	AIR CONDITIONING		Read Fault Code	
LAGUNA phase 2	AIR CONDITIONING		Erase Fault Code	
LAGUNA phase 2	AIR CONDITIONING		Read ECU Information	
LAGUNA phase 2	AIR CONDITIONING		Live Data	
LAGUNA phase 2	GAS INJ.		Read Fault Code	
LAGUNA phase 2	GAS INJ.		Erase Fault Code	
LAGUNA phase 2	GAS INJ.		Read ECU Information	
LAGUNA phase 2	GAS INJ.		Live Data	
LAGUNA phase 2	GAS INJ.		Actuation Test	
LAGUNA phase 2	GAS INJ.		Read Configuration	
LAGUNA phase 2	VARIABLE P.A.S.		Read Fault Code	
LAGUNA phase 2	VARIABLE P.A.S.		Erase Fault Code	
LAGUNA phase 2	VARIABLE P.A.S.		Read ECU Information	
LAGUNA phase 2	VARIABLE P.A.S.		Live Data	
LAGUNA phase 2	VARIABLE P.A.S.		Actuation Test	
LAGUNA phase 2	VARIABLE P.A.S.		Read Fault Code	
LAGUNA phase 2	VARIABLE P.A.S.		Erase Fault Code	
LAGUNA phase 2	VARIABLE P.A.S.		Read ECU Information	
LAGUNA phase 2	VARIABLE P.A.S.		Live Data	
LAGUNA phase 2	VARIABLE P.A.S.		Actuation Test	
LAGUNA phase 2	VARIABLE P.A.S.		Read Fault Code	
LAGUNA phase 2	VARIABLE P.A.S.		Erase Fault Code	
LAGUNA phase 2	VARIABLE P.A.S.		Read ECU Information	
LAGUNA phase 2	VARIABLE P.A.S.		Live Data	
LAGUNA phase 2	VARIABLE P.A.S.		Actuation Test	
LAGUNA phase 2	DRIVER'S POSITION		Read Fault Code	
LAGUNA phase 2	DRIVER'S POSITION		Erase Fault Code	
LAGUNA phase 2	DRIVER'S POSITION		Read ECU Information	
LAGUNA phase 2	DRIVER'S POSITION		Live Data	
LAGUNA phase 2	DRIVER'S POSITION		Actuation Test	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Read Fault Code	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Erase Fault Code	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Read ECU Information	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Live Data	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Read Configuration	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Actuation Test	
LAGUNAII ph2	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
LAGUNAII ph2	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
LAGUNAII ph2	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
LAGUNAII ph2	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNAII ph2	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNAII ph2	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LAGUNAII ph2	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Live Data	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LAGUNAII ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF039 UCH
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF146 AUTOMATIC HANDBRAKE
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CONTR/SPD LIMITER
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF196 CRUISE CONTR/SP. LIMIT. SPEED DIFF.
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF139 VOICE SYNTHESISER
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF035 TANK CAPACITY
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF046 GAS RESERV. CAPAC.
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LAGUNAII ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Read Fault Code	
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Erase Fault Code	
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Read ECU Information	
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Live Data	
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Read Configuration	
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Actuation Test	
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF001 VEHICLE TYPE
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF002 DYNAMIC CORRECTION
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF004 DIPPED HEADLIGHTS RAISE
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF005 SIGNATURE
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP002 SYSTEM INITIALISATION
LAGUNAII ph2	LIGHTING	LAMPE A DECHARGE CAN	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF001 VEHICLE TYPE
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP004 NETHERLANDS LEGISLATION
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ003 CUSTOMER SETTINGS AND DETAILS
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP005 COMP CONFIGURATION
LAGUNAII ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Fault Code	
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase Fault Code	
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read ECU Information	
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Live Data	
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Configuration	
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Actuation Test	
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Write Configuration	CF009 LANGUAGE
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP002 WRITE VIN
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP005 SERIAL LINK TEST
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP004 MICROPHONE TEST
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP006 AUDIO LINKS TEST
LAGUNAII ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase	RZ001 FAULT MEMORY



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Read Fault Code	
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Erase Fault Code	
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Read ECU Information	
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Live Data	
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Actuation Test	
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNAII ph2	INJECTION	ME 7.4.6 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Read Fault Code	
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Erase Fault Code	
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Read ECU Information	
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Live Data	
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Read Configuration	
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Actuation Test	
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LAGUNAII ph2	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Live Data	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Read Configuration	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Actuation Test	
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING RENINITIALISATION
LAGUNAII ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LAGUNAII ph2	A.B.S.	ABS	Read Fault Code	
LAGUNAII ph2	A.B.S.	ABS	Erase Fault Code	
LAGUNAII ph2	A.B.S.	ABS	Read ECU Information	
LAGUNAII ph2	A.B.S.	ABS	Live Data	
LAGUNAII ph2	A.B.S.	ABS	Read Configuration	
LAGUNAII ph2	A.B.S.	ABS	Actuation Test	
LAGUNAII ph2	A.B.S.	ABS	Write Configuration	CF079 GEARBOX TYPE
LAGUNAII ph2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LAGUNAII ph2	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
LAGUNAII ph2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNAII ph2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LAGUNAII ph2	A.B.S.	ESP	Read Fault Code	
LAGUNAII ph2	A.B.S.	ESP	Erase Fault Code	
LAGUNAII ph2	A.B.S.	ESP	Read ECU Information	
LAGUNAII ph2	A.B.S.	ESP	Live Data	
LAGUNAII ph2	A.B.S.	ESP	Read Configuration	
LAGUNAII ph2	A.B.S.	ESP	Actuation Test	
LAGUNAII ph2	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LAGUNAII ph2	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LAGUNAII ph2	A.B.S.	ESP	Read Fault Code	
LAGUNAII ph2	A.B.S.	ESP	Erase Fault Code	
LAGUNAII ph2	A.B.S.	ESP	Read ECU Information	
LAGUNAII ph2	A.B.S.	ESP	Live Data	
LAGUNAII ph2	A.B.S.	ESP	Read Configuration	
LAGUNAII ph2	A.B.S.	ESP	Actuation Test	
LAGUNAII ph2	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
LAGUNAII ph2	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LAGUNAII ph2	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LAGUNAII ph2	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LAGUNAII ph2	UCH	UCH	Read Fault Code	
LAGUNAII ph2	UCH	UCH	Erase Fault Code	
LAGUNAII ph2	UCH	UCH	Read ECU Information	
LAGUNAII ph2	UCH	UCH	Live Data	
LAGUNAII ph2	UCH	UCH	Read Configuration	
LAGUNAII ph2	UCH	UCH	Actuation Test	
LAGUNAII ph2	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF132 VEHICLE FAMILY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
LAGUNAII ph2	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF116 HANDS-FREE LOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
LAGUNAII ph2	UCH	UCH	Write Configuration	CF009 DEADLOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
LAGUNAII ph2	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
LAGUNAII ph2	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNAII ph2	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF091 SUNROOF
LAGUNAII ph2	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
LAGUNAII ph2	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP004 WRITE VIN
LAGUNAII ph2	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNAII ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
LAGUNAII ph2	UCH	UCH	Configuration	SC011 CHECK CARDS
LAGUNAII ph2	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
LAGUNAII ph2	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
LAGUNAII ph2	UCH	UCH	Configuration	SC026 AERIAL TEST
LAGUNAII ph2	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
LAGUNAII ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNAII ph2	UCH	UCH	Read Fault Code	
LAGUNAII ph2	UCH	UCH	Erase Fault Code	
LAGUNAII ph2	UCH	UCH	Read ECU Information	
LAGUNAII ph2	UCH	UCH	Live Data	
LAGUNAII ph2	UCH	UCH	Read Configuration	
LAGUNAII ph2	UCH	UCH	Actuation Test	
LAGUNAII ph2	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF098 CARD LOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF099 CARD REMINDER WARNING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
LAGUNAII ph2	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESISER
LAGUNAII ph2	UCH	UCH	Write Configuration	CF012 RAIN SENSOR
LAGUNAII ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF133 POWER-ASSISTED STEERING PROGRAM
LAGUNAII ph2	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
LAGUNAII ph2	UCH	UCH	Write Configuration	CF090 DEADLOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
LAGUNAII ph2	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF107 TIMER COURTESY LIGHT
LAGUNAII ph2	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF094 AUTOMATIC SEAT RECALL
LAGUNAII ph2	UCH	UCH	Write Configuration	CF119 UNLOCKING MODE. DOORS HANDS FREE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF115 DOOR UNLOCKING MODE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP014 CHANGE IN TRIGGERING LIMIT
LAGUNAII ph2	UCH	UCH	Other Configuration	VP004 WRITE VIN
LAGUNAII ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
LAGUNAII ph2	UCH	UCH	Configuration	SC011 CHECK CARDS
LAGUNAII ph2	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
LAGUNAII ph2	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
LAGUNAII ph2	UCH	UCH	Configuration	SC019 CARD ACCUMULATOR CHARGE TESTER
LAGUNAII ph2	UCH	UCH	Configuration	SC024 LOCK LATCH LOCKING
LAGUNAII ph2	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
LAGUNAII ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNAII ph2	UCH	UCH	Read Fault Code	
LAGUNAII ph2	UCH	UCH	Erase Fault Code	
LAGUNAII ph2	UCH	UCH	Read ECU Information	
LAGUNAII ph2	UCH	UCH	Live Data	
LAGUNAII ph2	UCH	UCH	Read Configuration	
LAGUNAII ph2	UCH	UCH	Actuation Test	
LAGUNAII ph2	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF098 CARD LOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF099 CARD REMINDER WARNING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
LAGUNAII ph2	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESISER
LAGUNAII ph2	UCH	UCH	Write Configuration	CF012 RAIN SENSOR
LAGUNAII ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF133 POWER-ASSISTED STEERING PROGRAM
LAGUNAII ph2	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
LAGUNAII ph2	UCH	UCH	Write Configuration	CF090 DEADLOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
LAGUNAII ph2	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF107 TIMER COURTESY LIGHT
LAGUNAII ph2	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF094 AUTOMATIC SEAT RECALL
LAGUNAII ph2	UCH	UCH	Write Configuration	CF119 UNLOCKING MODE. DOORS HANDS FREE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF115 DOOR UNLOCKING MODE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP004 WRITE VIN
LAGUNAII ph2	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP014 CHANGE IN TRIGGERING LIMIT
LAGUNAII ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
LAGUNAII ph2	UCH	UCH	Configuration	SC011 CHECK CARDS
LAGUNAII ph2	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
LAGUNAII ph2	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
LAGUNAII ph2	UCH	UCH	Configuration	SC019 CARD ACCUMULATOR CHARGE TESTER
LAGUNAII ph2	UCH	UCH	Configuration	SC024 LOCK LATCH LOCKING
LAGUNAII ph2	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
LAGUNAII ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNAII ph2	UCH	UCH	Read Fault Code	
LAGUNAII ph2	UCH	UCH	Erase Fault Code	
LAGUNAII ph2	UCH	UCH	Read ECU Information	
LAGUNAII ph2	UCH	UCH	Live Data	
LAGUNAII ph2	UCH	UCH	Read Configuration	
LAGUNAII ph2	UCH	UCH	Actuation Test	
LAGUNAII ph2	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF132 VEHICLE FAMILY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNAII ph2	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
LAGUNAII ph2	UCH	UCH	Write Configuration	CF199 RAIN/LUMINOSITY SENSOR TYPE
LAGUNAII ph2	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
LAGUNAII ph2	UCH	UCH	Write Configuration	CF116 HANDS-FREE LOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
LAGUNAII ph2	UCH	UCH	Write Configuration	CF009 DEADLOCKING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
LAGUNAII ph2	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
LAGUNAII ph2	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
LAGUNAII ph2	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
LAGUNAII ph2	UCH	UCH	Write Configuration	CF091 SUNROOF
LAGUNAII ph2	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
LAGUNAII ph2	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
LAGUNAII ph2	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LAGUNAII ph2	UCH	UCH	Other Configuration	VP004 WRITE VIN
LAGUNAII ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
LAGUNAII ph2	UCH	UCH	Configuration	SC011 CHECK CARDS
LAGUNAII ph2	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
LAGUNAII ph2	UCH	UCH	Configuration	SC026 AERIAL TEST
LAGUNAII ph2	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
LAGUNAII ph2	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
LAGUNAII ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF111 TYPE OF POWER STEERING
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF050 HEATED WINDSCREEN
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read Fault Code	
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Erase Fault Code	
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read ECU Information	
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Live Data	
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Read Configuration	
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Actuation Test	
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF076 COMPRESSOR TYPE
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Write Configuration	CF110 DRIVE RATIO
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	AIR CONDITIONING	MANUAL AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT/S MEMORISED
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
LAGUNAII ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Configuration	SC001 ACTUATORS SEQUENTIAL CONTROL
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Read Fault Code	
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Erase Fault Code	
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Read ECU Information	
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Live Data	
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Actuation Test	
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
LAGUNAII ph2	AUTOMATIC GEARBOX	DPO 12a2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Live Data	
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Read Configuration	
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Actuation Test	
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
LAGUNAII ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Live Data	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Read Configuration	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Live Data	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Read Configuration	
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
LAGUNAII ph2	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
LAGUNAII ph2	HEATER	BOILER	Read Fault Code	
LAGUNAII ph2	HEATER	BOILER	Erase Fault Code	
LAGUNAII ph2	HEATER	BOILER	Read ECU Information	
LAGUNAII ph2	HEATER	BOILER	Live Data	
LAGUNAII ph2	HEATER	BOILER	Actuation Test	
LAGUNAII ph2	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
LAGUNAII ph2	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
LAGUNAII ph2	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
LAGUNAII ph2	RADIO	RADIO	Read ECU Information	
LAGUNAII ph2	RADIO	RADIO	Live Data	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER REGENERATION
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC004 HIGH PRESSURE CIRCUIT LEAK TEST
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LATITUDE/SM5	INJECTION	INJECTION WB56	Read Fault Code	
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase Fault Code	
LATITUDE/SM5	INJECTION	INJECTION WB56	Read ECU Information	
LATITUDE/SM5	INJECTION	INJECTION WB56	Live Data	
LATITUDE/SM5	INJECTION	INJECTION WB56	Read Configuration	
LATITUDE/SM5	INJECTION	INJECTION WB56	Actuation Test	
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP069 CATALYTIC CONVERTER TEST
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ007 FAULT MEMORY
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ034 ECU MEMORY
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ028 ADAPTIVE VALUE - A/F RATIO
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ027 ADAPTIVE VALUE - TPS
LATITUDE/SM5	INJECTION	INJECTION WB56	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	INJECTION WB56	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
LATITUDE/SM5	INJECTION	INJECTION WB56	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Read Fault Code	
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Erase Fault Code	
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Read ECU Information	
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Live Data	
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Read Configuration	
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Actuation Test	
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Other Configuration	VP069 CATALYTIC CONVERTER TEST
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Erase	RZ034 ECU MEMORY
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
LATITUDE/SM5	INJECTION	INJECTION EWR 21	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
LATITUDE/SM5	INJECTION	INJECTION WB56	Read Fault Code	
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LATITUDE/SM5	INJECTION	INJECTION WB56	Read ECU Information	
LATITUDE/SM5	INJECTION	INJECTION WB56	Live Data	
LATITUDE/SM5	INJECTION	INJECTION WB56	Read Configuration	
LATITUDE/SM5	INJECTION	INJECTION WB56	Actuation Test	
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	INJECTION WB56	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ034 ECU MEMORY
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ028 ADAPTIVE VALUE - A/F RATIO
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ006 SELF LEARNING VALUE ERASE -BUTANE RATIO MODELING
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ007 SELF LEARNING VALUE ERASE - FUEL PUMP PWM
LATITUDE/SM5	INJECTION	INJECTION WB56	Erase	RZ027 ADAPTIVE VALUE - TPS
LATITUDE/SM5	INJECTION	INJECTION WB56	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	INJECTION WB56	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
LATITUDE/SM5	INJECTION	INJECTION WB56	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EDC16CP42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ002 EGR ADAPTIVES
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LATITUDE/SM5	INJECTION	EDC17 CP58 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Other Configuration	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EDC16 CP33 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LATITUDE/SM5	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Read Fault Code	
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Read ECU Information	
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Live Data	
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Read Configuration	
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Actuation Test	
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
LATITUDE/SM5	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LATITUDE/SM5	A.B.S.	ABS	Read Fault Code	
LATITUDE/SM5	A.B.S.	ABS	Erase Fault Code	
LATITUDE/SM5	A.B.S.	ABS	Read ECU Information	
LATITUDE/SM5	A.B.S.	ABS	Live Data	
LATITUDE/SM5	A.B.S.	ABS	Read Configuration	
LATITUDE/SM5	A.B.S.	ABS	Actuation Test	
LATITUDE/SM5	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LATITUDE/SM5	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LATITUDE/SM5	A.B.S.	ESP	Read Fault Code	
LATITUDE/SM5	A.B.S.	ESP	Erase Fault Code	
LATITUDE/SM5	A.B.S.	ESP	Read ECU Information	
LATITUDE/SM5	A.B.S.	ESP	Live Data	
LATITUDE/SM5	A.B.S.	ESP	Read Configuration	
LATITUDE/SM5	A.B.S.	ESP	Actuation Test	
LATITUDE/SM5	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LATITUDE/SM5	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LATITUDE/SM5	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LATITUDE/SM5	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LATITUDE/SM5	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LATITUDE/SM5	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF175 COMMANDE PRIVEE 1
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
LATITUDE/SM5	UCH	UCH	Read Fault Code	
LATITUDE/SM5	UCH	UCH	Erase Fault Code	
LATITUDE/SM5	UCH	UCH	Read ECU Information	
LATITUDE/SM5	UCH	UCH	Live Data	
LATITUDE/SM5	UCH	UCH	Read Configuration	
LATITUDE/SM5	UCH	UCH	Actuation Test	
LATITUDE/SM5	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LATITUDE/SM5	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LATITUDE/SM5	UCH	UCH	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	UCH	UCH	Configuration	SC005 CARD TESTING
LATITUDE/SM5	UCH	UCH	Configuration	SC008 UCH TYPE
LATITUDE/SM5	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LATITUDE/SM5	UCH	UCH	Configuration	SC038 READING THE VALVE SET AND VALVE CODES
LATITUDE/SM5	UCH	UCH	Read Fault Code	
LATITUDE/SM5	UCH	UCH	Erase Fault Code	
LATITUDE/SM5	UCH	UCH	Read ECU Information	
LATITUDE/SM5	UCH	UCH	Live Data	
LATITUDE/SM5	UCH	UCH	Read Configuration	
LATITUDE/SM5	UCH	UCH	Actuation Test	
LATITUDE/SM5	UCH	UCH	Write Configuration	CF287 COLUMN STEERING LOCK
LATITUDE/SM5	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LATITUDE/SM5	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
LATITUDE/SM5	UCH	UCH	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	UCH	UCH	Configuration	SC005 CARD TESTING
LATITUDE/SM5	UCH	UCH	Configuration	SC008 UCH TYPE
LATITUDE/SM5	UCH	UCH	Configuration	SC038 READING THE VALVE SET AND VALVE CODES
LATITUDE/SM5	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LATITUDE/SM5	UCH	UCH	Read Fault Code	
LATITUDE/SM5	UCH	UCH	Erase Fault Code	
LATITUDE/SM5	UCH	UCH	Read ECU Information	
LATITUDE/SM5	UCH	UCH	Live Data	
LATITUDE/SM5	UCH	UCH	Read Configuration	
LATITUDE/SM5	UCH	UCH	Actuation Test	
LATITUDE/SM5	UCH	UCH	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LATITUDE/SM5	UCH	UCH	Other Configuration	VP010 WRITE VIN
LATITUDE/SM5	UCH	UCH	Other Configuration	VP006 LOCK COMPUTER
LATITUDE/SM5	UCH	UCH	Other Configuration	VP007 UNLOCK COMPUTER
LATITUDE/SM5	UCH	UCH	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	UCH	UCH	Configuration	SC004 READING IMPACT CONTEXTS
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Live Data	
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Read Configuration	
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	AIR BAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF024 GEOGRAPHICAL ZONE
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
LATITUDE/SM5	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Read Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Erase Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Read ECU Information	
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Live Data	
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Actuation Test	
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTMENT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTMENT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ013 RESET CLUTCH DATA
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
LATITUDE/SM5	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Live Data	
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Read Configuration	
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Actuation Test	
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP012 ASSISTED ENGAGEMENT WHEN STATIONARY
LATITUDE/SM5	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
LATITUDE/SM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
LATITUDE/SM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
LATITUDE/SM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
LATITUDE/SM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LATITUDE/SM5	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LATITUDE/SM5	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LATITUDE/SM5	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LATITUDE/SM5	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	UPC	UPC	Read Fault Code	
LATITUDE/SM5	UPC	UPC	Erase Fault Code	
LATITUDE/SM5	UPC	UPC	Read ECU Information	
LATITUDE/SM5	UPC	UPC	Live Data	
LATITUDE/SM5	UPC	UPC	Read Configuration	
LATITUDE/SM5	UPC	UPC	Actuation Test	
LATITUDE/SM5	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LATITUDE/SM5	UPC	UPC	Other Configuration	VP003 WRITE VIN
LATITUDE/SM5	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
LATITUDE/SM5	UPC	UPC	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	UPC	UPC	Read Fault Code	
LATITUDE/SM5	UPC	UPC	Erase Fault Code	
LATITUDE/SM5	UPC	UPC	Read ECU Information	
LATITUDE/SM5	UPC	UPC	Live Data	
LATITUDE/SM5	UPC	UPC	Read Configuration	
LATITUDE/SM5	UPC	UPC	Actuation Test	
LATITUDE/SM5	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
LATITUDE/SM5	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
LATITUDE/SM5	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LATITUDE/SM5	UPC	UPC	Other Configuration	VP003 WRITE VIN
LATITUDE/SM5	UPC	UPC	Erase	RZ004 DTC reset
LATITUDE/SM5	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
LATITUDE/SM5	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Read Fault Code	
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Erase Fault Code	
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Read ECU Information	
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Live Data	
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Read Configuration	
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Actuation Test	
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	LIGHTING	XEN BULB CORN. LIGHTS	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Read Fault Code	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Erase Fault Code	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Read ECU Information	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Live Data	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Read Configuration	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Read Fault Code	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Erase Fault Code	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Read ECU Information	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Live Data	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Read Configuration	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Actuation Test	
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Read Fault Code	
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Erase Fault Code	
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Read ECU Information	
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Live Data	
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Actuation Test	
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	DRIVER'S DOOR	DRIVER'S DOOR	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Read Fault Code	
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase Fault Code	
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Read ECU Information	
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Live Data	
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Actuation Test	
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Read Fault Code	
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Erase Fault Code	
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Read ECU Information	
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Live Data	
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP002 PROGRAMMING OF SEAT STOPS
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP003 WRITE VIN
LATITUDE/SM5	DRIVER'S SEAT	SEAT MEMORY	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LATITUDE/SM5	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LATITUDE/SM5	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Read ECU Information	
LATITUDE/SM5	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Live Data	
LATITUDE/SM5	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Other Configuration	VP001 COMPUTER REINITIALISATION
LATITUDE/SM5	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Read ECU Information	
LATITUDE/SM5	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Live Data	
LATITUDE/SM5	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Other Configuration	VP001 COMPUTER REINITIALISATION
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
LATITUDE/SM5	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF043 SYSTEM CONFIGURATION
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
LATITUDE/SM5	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
LATITUDE/SM5	RADIO	R208 RADIO	Read Fault Code	
LATITUDE/SM5	RADIO	R208 RADIO	Erase Fault Code	
LATITUDE/SM5	RADIO	R208 RADIO	Read ECU Information	
LATITUDE/SM5	RADIO	R208 RADIO	Live Data	
LATITUDE/SM5	RADIO	R208 RADIO	Read Configuration	
LATITUDE/SM5	RADIO	R208 RADIO	Actuation Test	
LATITUDE/SM5	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
LATITUDE/SM5	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
LATITUDE/SM5	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
LATITUDE/SM5	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
LATITUDE/SM5	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LATITUDE/SM5	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
LATITUDE/SM5	RADIO	R307 RADIO	Read Fault Code	
LATITUDE/SM5	RADIO	R307 RADIO	Erase Fault Code	
LATITUDE/SM5	RADIO	R307 RADIO	Read ECU Information	
LATITUDE/SM5	RADIO	R307 RADIO	Live Data	
LATITUDE/SM5	RADIO	R307 RADIO	Read Configuration	
LATITUDE/SM5	RADIO	R307 RADIO	Actuation Test	
LATITUDE/SM5	RADIO	R307 RADIO	Write Configuration	CF016 COUNTRY MODEL
LATITUDE/SM5	RADIO	R307 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
LATITUDE/SM5	RADIO	R307 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LATITUDE/SM5	RADIO	R307 RADIO	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	RADIO	R307 RADIO	Erase	RZ003 FAULT MEMORY
LATITUDE/SM5	RADIO	RADIO	Read Fault Code	
LATITUDE/SM5	RADIO	RADIO	Erase Fault Code	
LATITUDE/SM5	RADIO	RADIO	Read ECU Information	
LATITUDE/SM5	RADIO	RADIO	Live Data	
LATITUDE/SM5	RADIO	RADIO	Read Configuration	
LATITUDE/SM5	RADIO	RADIO	Actuation Test	
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LATITUDE/SM5	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LATITUDE/SM5	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LATITUDE/SM5	RADIO	RADIO	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LATITUDE/SM5	RADIO	RADIO	Erase Fault Code	
LATITUDE/SM5	RADIO	RADIO	Read ECU Information	
LATITUDE/SM5	RADIO	RADIO	Live Data	
LATITUDE/SM5	RADIO	RADIO	Read Configuration	
LATITUDE/SM5	RADIO	RADIO	Actuation Test	
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
LATITUDE/SM5	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LATITUDE/SM5	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LATITUDE/SM5	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
LATITUDE/SM5	RADIO	RADIO	Erase	RZ004 RESET RADIO
LATITUDE/SM5	RADIO	RADIO	Read Fault Code	
LATITUDE/SM5	RADIO	RADIO	Erase Fault Code	
LATITUDE/SM5	RADIO	RADIO	Read ECU Information	
LATITUDE/SM5	RADIO	RADIO	Live Data	
LATITUDE/SM5	RADIO	RADIO	Read Configuration	
LATITUDE/SM5	RADIO	RADIO	Actuation Test	
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LATITUDE/SM5	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LATITUDE/SM5	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LATITUDE/SM5	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LATITUDE/SM5	RADIO	RADIO	Erase	RZ004 RESET RADIO
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Read Fault Code	
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Erase Fault Code	
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Read ECU Information	
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Live Data	
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Read Configuration	
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Actuation Test	
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Write Configuration	CF001 SUBWOOFER
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
LATITUDE/SM5	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ002 ECU MEMORY
LOGGY	INJECTION	V42 INJECTION	Read Fault Code	
LOGGY	INJECTION	V42 INJECTION	Erase Fault Code	
LOGGY	INJECTION	V42 INJECTION	Read ECU Information	
LOGGY	INJECTION	V42 INJECTION	Live Data	
LOGGY	INJECTION	V42 INJECTION	Read Configuration	
LOGGY	INJECTION	V42 INJECTION	Actuation Test	
LOGGY	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGGY	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGGY	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGGY	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGGY	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGGY	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	EMS 3150 INJECTION	Read Fault Code	
LOGGY	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
LOGGY	INJECTION	EMS 3150 INJECTION	Read ECU Information	
LOGGY	INJECTION	EMS 3150 INJECTION	Live Data	
LOGGY	INJECTION	EMS 3150 INJECTION	Read Configuration	
LOGGY	INJECTION	EMS 3150 INJECTION	Actuation Test	
LOGGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
LOGGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
LOGGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
LOGGY	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVE EVAP PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGGY	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGGY	INJECTION	INJECTION DCM 3.4	Read Fault Code	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
LOGGY	INJECTION	INJECTION DCM 3.4	Read ECU Information	
LOGGY	INJECTION	INJECTION DCM 3.4	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGGY	INJECTION	INJECTION DCM 3.4	Read Configuration	
LOGGY	INJECTION	INJECTION DCM 3.4	Actuation Test	
LOGGY	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
LOGGY	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGGY	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
LOGGY	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
LOGGY	INJECTION	EDC17 C42 INJECTION	Live Data	
LOGGY	INJECTION	EDC17 C42 INJECTION	Read Configuration	
LOGGY	INJECTION	EDC17 C42 INJECTION	Actuation Test	
LOGGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGGY	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGGY	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGGY	INJECTION	SID 306 INJECTION	Read Fault Code	
LOGGY	INJECTION	SID 306 INJECTION	Erase Fault Code	
LOGGY	INJECTION	SID 306 INJECTION	Read ECU Information	
LOGGY	INJECTION	SID 306 INJECTION	Live Data	
LOGGY	INJECTION	SID 306 INJECTION	Read Configuration	
LOGGY	INJECTION	SID 306 INJECTION	Actuation Test	
LOGGY	INJECTION	SID 306 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	SID 306 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	SID 306 INJECTION	Other Configuration	VP305 PARAMETRAGE PRIVE 250
LOGGY	INJECTION	SID 306 INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LOGGY	INJECTION	SID 306 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGGY	INJECTION	SID 306 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGGY	INJECTION	SID 306 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGGY	INJECTION	SID 306 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGGY	INJECTION	SID 306 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	SID 306 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGGY	INJECTION	SID 310 INJECTION	Read Fault Code	
LOGGY	INJECTION	SID 310 INJECTION	Erase Fault Code	
LOGGY	INJECTION	SID 310 INJECTION	Read ECU Information	
LOGGY	INJECTION	SID 310 INJECTION	Live Data	
LOGGY	INJECTION	SID 310 INJECTION	Read Configuration	
LOGGY	INJECTION	SID 310 INJECTION	Actuation Test	
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGGY	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) DILUTION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) DILUTION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) DILUTION
LOGGY	INJECTION	EMS 3125 INJECTION	Read Fault Code	
LOGGY	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
LOGGY	INJECTION	EMS 3125 INJECTION	Read ECU Information	
LOGGY	INJECTION	EMS 3125 INJECTION	Live Data	
LOGGY	INJECTION	EMS 3125 INJECTION	Read Configuration	
LOGGY	INJECTION	EMS 3125 INJECTION	Actuation Test	
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGGY	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGGY	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGGY	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGGY	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	EMS 3155 INJECTION	Read Fault Code	
LOGGY	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
LOGGY	INJECTION	EMS 3155 INJECTION	Read ECU Information	
LOGGY	INJECTION	EMS 3155 INJECTION	Live Data	
LOGGY	INJECTION	EMS 3155 INJECTION	Read Configuration	
LOGGY	INJECTION	EMS 3155 INJECTION	Actuation Test	
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
LOGGY	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGGY	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGGY	INJECTION	EMS 3120 INJECTION	Read Fault Code	
LOGGY	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
LOGGY	INJECTION	EMS 3120 INJECTION	Read ECU Information	
LOGGY	INJECTION	EMS 3120 INJECTION	Live Data	
LOGGY	INJECTION	EMS 3120 INJECTION	Read Configuration	
LOGGY	INJECTION	EMS 3120 INJECTION	Actuation Test	
LOGGY	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGGY	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGGY	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGGY	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
LOGGY	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
LOGGY	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
LOGGY	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
LOGGY	INJECTION	EDC17 C84 INJECTION	Live Data	
LOGGY	INJECTION	EDC17 C84 INJECTION	Read Configuration	
LOGGY	INJECTION	EDC17 C84 INJECTION	Actuation Test	
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGGY	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
LOGGY	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGGY	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGGY	A.B.S.	ESP	Read Fault Code	
LOGGY	A.B.S.	ESP	Erase Fault Code	
LOGGY	A.B.S.	ESP	Read ECU Information	
LOGGY	A.B.S.	ESP	Live Data	
LOGGY	A.B.S.	ESP	Read Configuration	
LOGGY	A.B.S.	ESP	Actuation Test	
LOGGY	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGGY	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
LOGGY	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
LOGGY	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LOGGY	A.B.S.	ESP	Other Configuration	VP045 HILL START
LOGGY	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
LOGGY	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LOGGY	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LOGGY	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LOGGY	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
LOGGY	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
LOGGY	A.B.S.	ABS	Read Fault Code	
LOGGY	A.B.S.	ABS	Erase Fault Code	
LOGGY	A.B.S.	ABS	Read ECU Information	
LOGGY	A.B.S.	ABS	Live Data	
LOGGY	A.B.S.	ABS	Actuation Test	
LOGGY	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGGY	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGGY	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGGY	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGGY	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LOGGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LODGY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LODGY	UCH	UCH	Read Fault Code	
LODGY	UCH	UCH	Erase Fault Code	
LODGY	UCH	UCH	Read ECU Information	
LODGY	UCH	UCH	Live Data	
LODGY	UCH	UCH	Read Configuration	
LODGY	UCH	UCH	Actuation Test	
LODGY	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LODGY	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LODGY	UCH	UCH	Write Configuration	CF229 ALARM
LODGY	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LODGY	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LODGY	UCH	UCH	Erase	RZ001 FAULT MEMORY
LODGY	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LODGY	UCH	UCH	Read Fault Code	
LODGY	UCH	UCH	Erase Fault Code	
LODGY	UCH	UCH	Read ECU Information	
LODGY	UCH	UCH	Live Data	
LODGY	UCH	UCH	Read Configuration	
LODGY	UCH	UCH	Actuation Test	
LODGY	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LODGY	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LODGY	UCH	UCH	Write Configuration	CF229 ALARM
LODGY	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
LODGY	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LODGY	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LODGY	UCH	UCH	Erase	RZ001 FAULT MEMORY
LODGY	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
LODGY	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
LODGY	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
LODGY	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
LODGY	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
LODGY	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
LODGY	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LODGY	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
LODGY	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LODGY	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LODGY	RADIO	RADIO	Read Fault Code	
LODGY	RADIO	RADIO	Erase Fault Code	
LODGY	RADIO	RADIO	Read ECU Information	
LODGY	RADIO	RADIO	Live Data	
LODGY	RADIO	RADIO	Read Configuration	
LODGY	RADIO	RADIO	Actuation Test	
LODGY	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LODGY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LODGY	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LODGY	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
LODGY	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
LODGY	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
LODGY	RADIO	RADIO	Read Fault Code	
LODGY	RADIO	RADIO	Erase Fault Code	
LODGY	RADIO	RADIO	Read ECU Information	
LODGY	RADIO	RADIO	Live Data	
LODGY	RADIO	RADIO	Read Configuration	
LODGY	RADIO	RADIO	Actuation Test	
LODGY	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
LODGY	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LODGY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LODGY	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LODGY	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LODGY	RADIO	RADIO	Read Fault Code	
LODGY	RADIO	RADIO	Erase Fault Code	
LODGY	RADIO	RADIO	Read ECU Information	
LODGY	RADIO	RADIO	Live Data	
LODGY	RADIO	RADIO	Read Configuration	
LODGY	RADIO	RADIO	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LODGY	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LODGY	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LODGY	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
LODGY	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LODGY	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LODGY	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LODGY	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
LODGY	INJECTION	MDG1 INJECTION	Read Fault Code	
LODGY	INJECTION	MDG1 INJECTION	Erase Fault Code	
LODGY	INJECTION	MDG1 INJECTION	Read ECU Information	
LODGY	INJECTION	MDG1 INJECTION	Live Data	
LODGY	INJECTION	MDG1 INJECTION	Function Test	
LODGY	INJECTION	MDG1 INJECTION	Read Configuration	
LODGY	INJECTION	MDG1 INJECTION	Actuation Test	
LODGY	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ044 ATR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ072 ATR FLOWMETER PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ135 ATR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ088 ATR DAMPER VALVE PROGRAMMING
LODGY	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
LODGY	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LODGY	INJECTION	EMS 3160 INJECTION	Read Fault Code	
LODGY	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
LODGY	INJECTION	EMS 3160 INJECTION	Read ECU Information	
LODGY	INJECTION	EMS 3160 INJECTION	Live Data	
LODGY	INJECTION	EMS 3160 INJECTION	Function Test	
LODGY	INJECTION	EMS 3160 INJECTION	Read Configuration	
LODGY	INJECTION	EMS 3160 INJECTION	Actuation Test	
LODGY	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LODGY	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LODGY	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LODGY	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LODGY	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LODGY	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LODGY	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LODGY	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
LODGY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
LOGAN	INJECTION	V42 INJECTION	Read Fault Code	
LOGAN	INJECTION	V42 INJECTION	Erase Fault Code	
LOGAN	INJECTION	V42 INJECTION	Read ECU Information	
LOGAN	INJECTION	V42 INJECTION	Live Data	
LOGAN	INJECTION	V42 INJECTION	Actuation Test	
LOGAN	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN	INJECTION	INJECTION DCM 3.4	Read Fault Code	
LOGAN	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
LOGAN	INJECTION	INJECTION DCM 3.4	Read ECU Information	
LOGAN	INJECTION	INJECTION DCM 3.4	Live Data	
LOGAN	INJECTION	INJECTION DCM 3.4	Read Configuration	
LOGAN	INJECTION	INJECTION DCM 3.4	Actuation Test	
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
LOGAN	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LOGAN	RADIO	RADIO	Read Fault Code	
LOGAN	RADIO	RADIO	Erase Fault Code	
LOGAN	RADIO	RADIO	Read ECU Information	
LOGAN	RADIO	RADIO	Live Data	
LOGAN	RADIO	RADIO	Read Configuration	
LOGAN	RADIO	RADIO	Actuation Test	
LOGAN	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN	RADIO	RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
LOGAN	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LOGAN	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
LOGAN	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
LOGAN	RADIO	RADIO	Configuration	SC009 COMP CONFIGURATION
LOGAN	RADIO	RADIO	Read Fault Code	
LOGAN	RADIO	RADIO	Erase Fault Code	
LOGAN	RADIO	RADIO	Read ECU Information	
LOGAN	RADIO	RADIO	Live Data	
LOGAN	RADIO	RADIO	Read Configuration	
LOGAN	RADIO	RADIO	Actuation Test	
LOGAN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN	RADIO	RADIO	Write Configuration	CF014 DRIVING TYPE
LOGAN	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LOGAN	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LOGAN	RADIO	RADIO	Erase	RZ004 RESET RADIO
LOGAN	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
LOGAN	INJECTION	INJECTION DCM 1.2	Read Fault Code	
LOGAN	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
LOGAN	INJECTION	INJECTION DCM 1.2	Read ECU Information	
LOGAN	INJECTION	INJECTION DCM 1.2	Live Data	
LOGAN	INJECTION	INJECTION DCM 1.2	Actuation Test	
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
LOGAN	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGAN	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
LOGAN	INJECTION	SIM 32 INJECTOR	Read Fault Code	
LOGAN	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
LOGAN	INJECTION	SIM 32 INJECTOR	Read ECU Information	
LOGAN	INJECTION	SIM 32 INJECTOR	Live Data	
LOGAN	INJECTION	SIM 32 INJECTOR	Read Configuration	
LOGAN	INJECTION	SIM 32 INJECTOR	Actuation Test	
LOGAN	INJECTION	SIM 32 INJECTOR	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	SIM 32 INJECTOR	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	SIM 32 INJECTOR	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	SIRIUS 32 INJECTION	Read Fault Code	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase Fault Code	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Read ECU Information	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Live Data	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Read Configuration	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Actuation Test	
LOGAN	INJECTION	SIRIUS 32 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ094 DLE SPEED LEARNING
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
LOGAN	INJECTION	SIRIUS 32 INJECTION	Erase	RZ096 TORQUE LEARNING



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Live Data	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
LOGAN	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	EMS 3130 INJECTION	Read Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Read ECU Information	
LOGAN	INJECTION	EMS 3130 INJECTION	Live Data	
LOGAN	INJECTION	EMS 3130 INJECTION	Read Configuration	
LOGAN	INJECTION	EMS 3130 INJECTION	Actuation Test	
LOGAN	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	INJECTION	EMS 3130 INJECTION	Read Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
LOGAN	INJECTION	EMS 3130 INJECTION	Read ECU Information	
LOGAN	INJECTION	EMS 3130 INJECTION	Live Data	
LOGAN	INJECTION	EMS 3130 INJECTION	Read Configuration	
LOGAN	INJECTION	EMS 3130 INJECTION	Actuation Test	
LOGAN	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
LOGAN	A.B.S.	ABS	Read Fault Code	
LOGAN	A.B.S.	ABS	Erase Fault Code	
LOGAN	A.B.S.	ABS	Read ECU Information	
LOGAN	A.B.S.	ABS	Live Data	
LOGAN	A.B.S.	ABS	Actuation Test	
LOGAN	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
LOGAN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
LOGAN	A.B.S.	ABS	Read Fault Code	
LOGAN	A.B.S.	ABS	Erase Fault Code	
LOGAN	A.B.S.	ABS	Read ECU Information	
LOGAN	A.B.S.	ABS	Live Data	
LOGAN	A.B.S.	ABS	Actuation Test	
LOGAN	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
LOGAN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	CF272 SDO
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	UCH	UCH	Read Fault Code	
LOGAN	UCH	UCH	Erase Fault Code	
LOGAN	UCH	UCH	Read ECU Information	
LOGAN	UCH	UCH	Live Data	
LOGAN	UCH	UCH	Read Configuration	
LOGAN	UCH	UCH	Actuation Test	
LOGAN	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
LOGAN	UCH	UCH	Other Configuration	CF272 SDO
LOGAN	UCH	UCH	Other Configuration	VP004 WRITE VIN
LOGAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN	UCH	UCH	Configuration	SC008 UCH TYPE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF020 FRONT LEFT-HAND INERTIA WHEEL
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF021 FRONT RIGHT-HAND INERTIA WHEEL
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF048 SEAT BELT REMINDER BUZZER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LOGAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LOGAN	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LOGAN	GAS INJ.	GAS INJECTION 3000	Read Fault Code	
LOGAN	GAS INJ.	GAS INJECTION 3000	Erase Fault Code	
LOGAN	GAS INJ.	GAS INJECTION 3000	Read ECU Information	
LOGAN	GAS INJ.	GAS INJECTION 3000	Live Data	
LOGAN	GAS INJ.	GAS INJECTION 3000	Read Configuration	
LOGAN	GAS INJ.	GAS INJECTION 3000	Actuation Test	
LOGAN	GAS INJ.	GAS INJECTION 3000	Other Configuration	VP001 WRITE VIN
LOGAN	GAS INJ.	GAS INJECTION 3000	Erase	RZ001 FAULT MEMORY
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
LOGAN	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN	TRACKER	TRACKER	Read Fault Code	
LOGAN	TRACKER	TRACKER	Erase Fault Code	
LOGAN	TRACKER	TRACKER	Read ECU Information	
LOGAN	TRACKER	TRACKER	Live Data	
LOGAN	TRACKER	TRACKER	Read Configuration	
LOGAN	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
LOGAN	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
LOGAN	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
LOGAN	INJECTION	EMS 3120 INJECTION	Read Fault Code	
LOGAN	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
LOGAN	INJECTION	EMS 3120 INJECTION	Read ECU Information	
LOGAN	INJECTION	EMS 3120 INJECTION	Live Data	
LOGAN	INJECTION	EMS 3120 INJECTION	Function Test	
LOGAN	INJECTION	EMS 3120 INJECTION	Read Configuration	
LOGAN	INJECTION	EMS 3120 INJECTION	Actuation Test	
LOGAN	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V. I. N.
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGAN	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Read Fault Code	
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Read ECU Information	
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Live Data	
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Read Configuration	
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Actuation Test	
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Read Fault Code	
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Read ECU Information	
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Live Data	
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Read Configuration	
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Actuation Test	
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGAN IISANDERO II	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Live Data	
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Read Configuration	
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Actuation Test	
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ071 MANIFOLD PRESSURE SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ002 EGR ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ017 EGR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN IISANDERO II	INJECTION	EDC17 C42 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Read Fault Code	
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Read ECU Information	
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Live Data	
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Read Configuration	
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Actuation Test	
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Read Fault Code	
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Read ECU Information	
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Live Data	
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Read Configuration	
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Actuation Test	
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Erase	RZ116 CLUTCH END OF TRAVEL WIRING SWITCH
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC001 WRITE SAVED DATA

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC048 WRITE SAVED DATA
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN IISANDERO II	INJECTION	V50 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Read Fault Code	
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Read ECU Information	
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Live Data	
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Read Configuration	
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Actuation Test	
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN IISANDERO II	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Live Data	
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Read Configuration	
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Actuation Test	
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN IISANDERO II	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN IISANDERO II	A.B.S.	ABS	Read Fault Code	
LOGAN IISANDERO II	A.B.S.	ABS	Erase Fault Code	
LOGAN IISANDERO II	A.B.S.	ABS	Read ECU Information	
LOGAN IISANDERO II	A.B.S.	ABS	Live Data	
LOGAN IISANDERO II	A.B.S.	ABS	Read Configuration	
LOGAN IISANDERO II	A.B.S.	ABS	Actuation Test	
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP045 HILL START
LOGAN IISANDERO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN IISANDERO II	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LOGAN IISANDERO II	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LOGAN IISANDERO II	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LOGAN IISANDERO II	A.B.S.	ABS	Erase	RZ012 RESET
LOGAN IISANDERO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN IISANDERO II	A.B.S.	ABS	Read Fault Code	
LOGAN IISANDERO II	A.B.S.	ABS	Erase Fault Code	
LOGAN IISANDERO II	A.B.S.	ABS	Read ECU Information	
LOGAN IISANDERO II	A.B.S.	ABS	Live Data	
LOGAN IISANDERO II	A.B.S.	ABS	Actuation Test	
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN IISANDERO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN IISANDERO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN //SANDERO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN //SANDERO II	A.B.S.	ABS	Read Fault Code	
LOGAN //SANDERO II	A.B.S.	ABS	Erase Fault Code	
LOGAN //SANDERO II	A.B.S.	ABS	Read ECU Information	
LOGAN //SANDERO II	A.B.S.	ABS	Live Data	
LOGAN //SANDERO II	A.B.S.	ABS	Read Configuration	
LOGAN //SANDERO II	A.B.S.	ABS	Actuation Test	
LOGAN //SANDERO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
LOGAN //SANDERO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN //SANDERO II	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
LOGAN //SANDERO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
LOGAN //SANDERO II	A.B.S.	ABS	Other Configuration	VP045 HILL START
LOGAN //SANDERO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
LOGAN //SANDERO II	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
LOGAN //SANDERO II	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
LOGAN //SANDERO II	A.B.S.	ABS	Erase	RZ012 RESET
LOGAN //SANDERO II	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
LOGAN //SANDERO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF225 BATTERY CHARGE WARNING INFORMATION
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
LOGAN //SANDERO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	UCH	UCH	Read Fault Code	
LOGAN //SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN //SANDERO II	UCH	UCH	Read ECU Information	
LOGAN //SANDERO II	UCH	UCH	Live Data	
LOGAN //SANDERO II	UCH	UCH	Read Configuration	
LOGAN //SANDERO II	UCH	UCH	Actuation Test	
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LOGAN //SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN //SANDERO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN //SANDERO II	UCH	UCH	Read Fault Code	
LOGAN //SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN //SANDERO II	UCH	UCH	Read ECU Information	
LOGAN //SANDERO II	UCH	UCH	Live Data	
LOGAN //SANDERO II	UCH	UCH	Read Configuration	
LOGAN //SANDERO II	UCH	UCH	Actuation Test	
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
LOGAN //SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN //SANDERO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN //SANDERO II	UCH	UCH	Read Fault Code	
LOGAN //SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN //SANDERO II	UCH	UCH	Read ECU Information	
LOGAN //SANDERO II	UCH	UCH	Live Data	
LOGAN //SANDERO II	UCH	UCH	Read Configuration	
LOGAN //SANDERO II	UCH	UCH	Actuation Test	
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN //SANDERO II	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
LOGAN //SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN //SANDERO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
LOGAN //SANDERO II	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
LOGAN //SANDERO II	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
LOGAN //SANDERO II	UCH	UCH	Erase	RZ002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN //SANDERO II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
LOGAN //SANDERO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
LOGAN //SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
LOGAN //SANDERO II	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ014 RESET CLUTCH DATA PROTECTION
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ015 RESET GEARBOX DATA
LOGAN //SANDERO II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ013 RESET CLUTCH DATA
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
LOGAN //SANDERO II	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	RADIO	RADIO	Read Fault Code	
LOGAN //SANDERO II	RADIO	RADIO	Erase Fault Code	
LOGAN //SANDERO II	RADIO	RADIO	Read ECU Information	
LOGAN //SANDERO II	RADIO	RADIO	Live Data	
LOGAN //SANDERO II	RADIO	RADIO	Read Configuration	
LOGAN //SANDERO II	RADIO	RADIO	Actuation Test	
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN //SANDERO II	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
LOGAN //SANDERO II	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
LOGAN //SANDERO II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
LOGAN //SANDERO II	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
LOGAN //SANDERO II	RADIO	RADIO	Read Fault Code	
LOGAN //SANDERO II	RADIO	RADIO	Erase Fault Code	
LOGAN //SANDERO II	RADIO	RADIO	Read ECU Information	
LOGAN //SANDERO II	RADIO	RADIO	Live Data	
LOGAN //SANDERO II	RADIO	RADIO	Read Configuration	
LOGAN //SANDERO II	RADIO	RADIO	Actuation Test	
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN //SANDERO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN //SANDERO II	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
LOGAN //SANDERO II	RADIO	RADIO	Read Fault Code	
LOGAN //SANDERO II	RADIO	RADIO	Erase Fault Code	
LOGAN //SANDERO II	RADIO	RADIO	Read ECU Information	
LOGAN //SANDERO II	RADIO	RADIO	Live Data	
LOGAN //SANDERO II	RADIO	RADIO	Read Configuration	
LOGAN //SANDERO II	RADIO	RADIO	Actuation Test	
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
LOGAN //SANDERO II	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
LOGAN //SANDERO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
LOGAN //SANDERO II	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
LOGAN //SANDERO II	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
LOGAN //SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
LOGAN //SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
LOGAN //SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
LOGAN //SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	TRACKER	TRACKER	Read Fault Code	
LOGAN II/SANDERO II	TRACKER	TRACKER	Erase Fault Code	
LOGAN II/SANDERO II	TRACKER	TRACKER	Read ECU Information	
LOGAN II/SANDERO II	TRACKER	TRACKER	Live Data	
LOGAN II/SANDERO II	TRACKER	TRACKER	Read Configuration	
LOGAN II/SANDERO II	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
LOGAN II/SANDERO II	TRACKER	TRACKER	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Function Test	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
LOGAN II/SANDERO II	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Read Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Read ECU Information	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Live Data	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Function Test	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Read Configuration	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Actuation Test	
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
LOGAN II/SANDERO II	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
LOGAN II/SANDERO II	UCH	UCH	Read Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Erase Fault Code	
LOGAN II/SANDERO II	UCH	UCH	Read ECU Information	
LOGAN II/SANDERO II	UCH	UCH	Live Data	
LOGAN II/SANDERO II	UCH	UCH	Function Test	
LOGAN II/SANDERO II	UCH	UCH	Read Configuration	
LOGAN II/SANDERO II	UCH	UCH	Actuation Test	
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF229 ALARM
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF009 DEADLOCKING
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
LOGAN II/SANDERO II	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
LOGAN II/SANDERO II	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
LOGAN II/SANDERO II	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Function Test	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
LOGAN II/SANDERO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL_ZONE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
LOGAN 11/SANDERO 11	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP006 AIR RECIRCULATION FLAP MOTOR
LOGAN 11/SANDERO 11	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
LOGAN 11/SANDERO 11	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
LOGAN 11/SANDERO 11	UPC	UPC	Read Fault Code	
LOGAN 11/SANDERO 11	UPC	UPC	Erase Fault Code	
LOGAN 11/SANDERO 11	UPC	UPC	Read ECU Information	
LOGAN 11/SANDERO 11	UPC	UPC	Live Data	
LOGAN 11/SANDERO 11	UPC	UPC	Function Test	
LOGAN 11/SANDERO 11	UPC	UPC	Actuation Test	
LOGAN 11/SANDERO 11	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
LOGAN 11/SANDERO 11	UPC	UPC	Other Configuration	VP003 WRITE VIN
LOGAN 11/SANDERO 11	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
LOGAN 11/SANDERO 11	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
LOGAN 11/SANDERO 11	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
MAST RWD ph2	INJECTION	DIESEL INJECTION	Read Fault Code	
MAST RWD ph2	INJECTION	DIESEL INJECTION	Erase Fault Code	
MAST RWD ph2	INJECTION	DIESEL INJECTION	Read ECU Information	
MAST RWD ph2	INJECTION	DIESEL INJECTION	Live Data	
MAST RWD ph2	INJECTION	DIESEL INJECTION	Actuation Test	
MAST RWD ph2	INJECTION	DIESEL INJECTION	Read Configuration	
MAST RWD ph2	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
MAST RWD ph2	INJECTION	DIESEL INJECTION	Erase	RZ010 ADAPTIVES ON EGR VALVE FAULT
MAST RWD ph2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP026 FUEL SUPPLY PREVENTION
MAST RWD ph2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP032 SPECIAL NOTES ON COMMERCIAL VEHICLES
MAST RWD ph2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
MAST RWD ph2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP011 INCREMENT OF IDLE SPEED
MAST RWD ph2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP010 DECREMENT IDLE SPEED
MAST RWD ph2	AIRBAG / PRETENSIONERS		Read Fault Code	
MAST RWD ph2	AIRBAG / PRETENSIONERS		Erase Fault Code	
MAST RWD ph2	AIRBAG / PRETENSIONERS		Read ECU Information	
MAST RWD ph2	AIRBAG / PRETENSIONERS		Live Data	
MAST RWD ph2	AIRBAG / PRETENSIONERS		Read Configuration	
MAST RWD ph2	AIRBAG / PRETENSIONERS		Specific Command	SC005 CONFIGURATION OF SYSTEM COMPONENTS
MAST RWD ph2	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
MAST RWD ph2	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
MAST RWD ph2	ADAPTATION UNIT		Read ECU Information	
MAST RWD ph2	ADAPTATION UNIT		Live Data	
MAST RWD ph2	CONNECTION UNIT		Read Fault Code	
MAST RWD ph2	CONNECTION UNIT		Erase Fault Code	
MAST RWD ph2	CONNECTION UNIT		Read ECU Information	
MAST RWD ph2	CONNECTION UNIT		Live Data	
MAST RWD ph2	CONNECTION UNIT		Actuation Test	
MAST RWD ph2	CONNECTION UNIT		Read Fault Code	
MAST RWD ph2	CONNECTION UNIT		Erase Fault Code	
MAST RWD ph2	CONNECTION UNIT		Read ECU Information	
MAST RWD ph2	CONNECTION UNIT		Live Data	
MAST RWD ph2	CONNECTION UNIT		Actuation Test	
MAST RWD ph2	ENGINE IMMOBILISER		Read Fault Code	
MAST RWD ph2	ENGINE IMMOBILISER		Erase Fault Code	
MAST RWD ph2	ENGINE IMMOBILISER		Read ECU Information	
MAST RWD ph2	ENGINE IMMOBILISER		Live Data	
MAST RWD ph2	ENGINE IMMOBILISER		Actuation Test	
MAST RWD ph2	ENGINE IMMOBILISER		Read Fault Code	
MAST RWD ph2	ENGINE IMMOBILISER		Erase Fault Code	
MAST RWD ph2	ENGINE IMMOBILISER		Read ECU Information	
MAST RWD ph2	ENGINE IMMOBILISER		Live Data	
MAST RWD ph2	ENGINE IMMOBILISER		Actuation Test	
MAST RWD ph2	A.B.S.		Read Fault Code	
MAST RWD ph2	A.B.S.		Erase Fault Code	
MAST RWD ph2	A.B.S.		Read ECU Information	
MAST RWD ph2	A.B.S.		Live Data	
MAST RWD ph2	A.B.S.		Actuation Test	
MAST RWD ph2	A.B.S.		Write Configuration	CF010 SPEEDO INDEX
MAST RWD ph2	A.B.S.		Live Data	
MAST RWD ph2	A.B.S.		Actuation Test	
MAST RWD ph2	A.B.S.		Write Configuration	CF010 SPEEDO INDEX
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Read Fault Code	
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Erase Fault Code	
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Read ECU Information	
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Live Data	
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Read Configuration	
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Actuation Test	
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Configuration	SC001 WRITE SAVED DATA
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MAST RWD ph3	INJECTION	EDC16 C41 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MAST RWD ph3	A.B.S.	ABS	Read Fault Code	
MAST RWD ph3	A.B.S.	ABS	Erase Fault Code	
MAST RWD ph3	A.B.S.	ABS	Read ECU Information	
MAST RWD ph3	A.B.S.	ABS	Live Data	
MAST RWD ph3	A.B.S.	ABS	Read Configuration	
MAST RWD ph3	A.B.S.	ABS	Actuation Test	
MAST RWD ph3	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MAST RWD ph3	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MAST RWD ph3	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MAST RWD ph3	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
MAST RWD ph3	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MAST RWD ph3	A.B.S.	ABS	Configuration	SC007 BLEEDING THE BRAKING SYSTEM
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Live Data	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP005 COMP CONFIGURATION
MAST RWD ph3	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	UCH	UCH	Read Fault Code	
MAST RWD ph3	UCH	UCH	Erase Fault Code	
MAST RWD ph3	UCH	UCH	Read ECU Information	
MAST RWD ph3	UCH	UCH	Live Data	
MAST RWD ph3	UCH	UCH	Read Configuration	
MAST RWD ph3	UCH	UCH	Actuation Test	
MAST RWD ph3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MAST RWD ph3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MAST RWD ph3	UCH	UCH	Read Fault Code	
MAST RWD ph3	UCH	UCH	Erase Fault Code	
MAST RWD ph3	UCH	UCH	Read ECU Information	
MAST RWD ph3	UCH	UCH	Live Data	
MAST RWD ph3	UCH	UCH	Read Configuration	
MAST RWD ph3	UCH	UCH	Actuation Test	
MAST RWD ph3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
MAST RWD ph3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MAST RWD ph3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MAST RWD ph3	UCH	UCH	Read Fault Code	
MAST RWD ph3	UCH	UCH	Erase Fault Code	
MAST RWD ph3	UCH	UCH	Read ECU Information	
MAST RWD ph3	UCH	UCH	Live Data	
MAST RWD ph3	UCH	UCH	Read Configuration	
MAST RWD ph3	UCH	UCH	Actuation Test	
MAST RWD ph3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
MAST RWD ph3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MAST RWD ph3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MAST RWD ph3	UCH	UCH	Read Fault Code	
MAST RWD ph3	UCH	UCH	Erase Fault Code	
MAST RWD ph3	UCH	UCH	Read ECU Information	
MAST RWD ph3	UCH	UCH	Live Data	
MAST RWD ph3	UCH	UCH	Read Configuration	
MAST RWD ph3	UCH	UCH	Actuation Test	
MAST RWD ph3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
MAST RWD ph3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MAST RWD ph3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ001 FAULT MEMORY
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Actuation Test	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF572 DECREMENT IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF001 PASSENGER COMPARTMENT HEATING RESISTOR
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF579 AIR CONDITIONING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ007 EGR VALVE PROGRAMMING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Parameters Configuration	VP001 WRITE VIN
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Parameters Configuration	VP028 VAN FAST IDLE SPEED INCREASE
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Parameters Configuration	VP029 VAN FAST IDLE SPEED DECREASE
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Specific Command	SC004 ENTER INJECTOR CALIBRATION DATA
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Actuation Test	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF572 DECREMENT IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF006 WITH THERMOPLUNGERS
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF005 WITHOUT THERMOPLUNGERS
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF589 WITH BOILER
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF590 WITHOUT BOILER
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF579 AIR CONDITIONING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ007 EGR VALVE PROGRAMMING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Parameters Configuration	VP001 WRITE VIN
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Actuation Test	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF581 THERMOPLUNGERS
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF579 AIR CONDITIONING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF584 POWER ASSISTED STEERING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF572 DECREMENT IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Actuation Test	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF581 THERMOPLUNGERS
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF579 AIR CONDITIONING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF584 POWER ASSISTED STEERING
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF572 DECREMENT IDLE SPEED
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Actuation Test	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MAST RWD ph3	ADAPTATION UNIT	ADAPTATION UNIT	Actuation Test	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER	PILOTED SUSPENSION		Erase Fault Code	
MASTER	PILOTED SUSPENSION		Read ECU Information	
MASTER	PILOTED SUSPENSION		Live Data	
MASTER	CONNECTION UNIT		Read Fault Code	
MASTER	CONNECTION UNIT		Erase Fault Code	
MASTER	CONNECTION UNIT		Read ECU Information	
MASTER	CONNECTION UNIT		Live Data	
MASTER	CONNECTION UNIT		Actuation Test	
MASTER	CONNECTION UNIT		Write Configuration	WITH INFRA-RED REMOTE CONTROL
MASTER	CONNECTION UNIT		Write Configuration	WITH RADIO FREQUENCY REMOTE CONTROL
MASTER	CONNECTION UNIT		Write Configuration	ONE-TOUCH CENTRAL DOOR LOCKING BUTTON
MASTER	CONNECTION UNIT		Write Configuration	ROCKER CENTRAL DOOR LOCKING BUTTON
MASTER	CONNECTION UNIT		Write Configuration	WITHOUT TIMED COURTESY LIGHT
MASTER	CONNECTION UNIT		Write Configuration	WITH TIMED COURTESY LIGHT
MASTER	CONNECTION UNIT		Write Configuration	RAID FUNCTION AUTHORISATION
MASTER	CONNECTION UNIT		Write Configuration	ATUO LOCKING WHEN DRIVING FUNCTION PREVENTION
MASTER	ENGINE IMMOBILISER		Read Fault Code	
MASTER	ENGINE IMMOBILISER		Erase Fault Code	
MASTER	ENGINE IMMOBILISER		Read ECU Information	
MASTER	ENGINE IMMOBILISER		Live Data	
MASTER	ENGINE IMMOBILISER		Actuation Test	
MASTER	ENGINE IMMOBILISER		Write Configuration	DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE
MASTER	ENGINE IMMOBILISER		Write Configuration	CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER
MASTER	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 1 KEY
MASTER	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 2 KEYS
MASTER	A.B.S.		Read Fault Code	
MASTER	A.B.S.		Erase Fault Code	
MASTER	A.B.S.		Read ECU Information	
MASTER	A.B.S.		Live Data	
MASTER	A.B.S.		Actuation Test	
MASTER	A.B.S.		Read Fault Code	
MASTER	A.B.S.		Erase Fault Code	
MASTER	A.B.S.		Read ECU Information	
MASTER	A.B.S.		Live Data	
MASTER	A.B.S.		Actuation Test	
MASTER	AIRBAG / PRETENSIONERS		Read Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Erase Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Read ECU Information	
MASTER	AIRBAG / PRETENSIONERS		Live Data	
MASTER	AIRBAG / PRETENSIONERS		Actuation Test	
MASTER	AIRBAG / PRETENSIONERS		Read Configuration	
MASTER	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
MASTER	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
MASTER	AIRBAG / PRETENSIONERS		Read Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Erase Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Read ECU Information	
MASTER	AIRBAG / PRETENSIONERS		Live Data	
MASTER	AIRBAG / PRETENSIONERS		Actuation Test	
MASTER	AIRBAG / PRETENSIONERS		Read Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Erase Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Read ECU Information	
MASTER	AIRBAG / PRETENSIONERS		Live Data	
MASTER	AIRBAG / PRETENSIONERS		Actuation Test	
MASTER	AIRBAG / PRETENSIONERS		Read Configuration	
MASTER	AIRBAG / PRETENSIONERS		Programming	SIDE SENSORS PROGRAMMING
MASTER	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
MASTER	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
MASTER	AIRBAG / PRETENSIONERS		Read Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Erase Fault Code	
MASTER	AIRBAG / PRETENSIONERS		Live Data	
MASTER III	INJECTION	EDC17 C11 INJECTION	Read Fault Code	
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase Fault Code	
MASTER III	INJECTION	EDC17 C11 INJECTION	Read ECU Information	
MASTER III	INJECTION	EDC17 C11 INJECTION	Live Data	
MASTER III	INJECTION	EDC17 C11 INJECTION	Read Configuration	
MASTER III	INJECTION	EDC17 C11 INJECTION	Actuation Test	
MASTER III	INJECTION	EDC17 C11 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MASTER III	INJECTION	EDC17 C11 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ001 FAULT MEMORY
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ035 AVERAGE AIR TEMPERATURE
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ063 PREHEATER UNIT
MASTER III	INJECTION	EDC17 C11 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC040 SPEED LIMITER
MASTER III	INJECTION	EDC17 C11 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MASTER III	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
MASTER III	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
MASTER III	INJECTION	EDC17 C42 INJECTION	Live Data	
MASTER III	INJECTION	EDC17 C42 INJECTION	Read Configuration	
MASTER III	INJECTION	EDC17 C42 INJECTION	Actuation Test	
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MASTER III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ035 AVERAGE AIR TEMPERATURE
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MASTER III	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MASTER III	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MASTER III	INJECTION	SID 309 INJECTION	Read Fault Code	
MASTER III	INJECTION	SID 309 INJECTION	Erase Fault Code	
MASTER III	INJECTION	SID 309 INJECTION	Read ECU Information	
MASTER III	INJECTION	SID 309 INJECTION	Live Data	
MASTER III	INJECTION	SID 309 INJECTION	Read Configuration	
MASTER III	INJECTION	SID 309 INJECTION	Actuation Test	
MASTER III	INJECTION	SID 309 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MASTER III	INJECTION	SID 309 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MASTER III	INJECTION	SID 309 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MASTER III	INJECTION	SID 309 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MASTER III	INJECTION	SID 309 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MASTER III	INJECTION	SID 309 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ001 FAULT MEMORY
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ074 SWIRL FLAP
MASTER III	INJECTION	SID 309 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC040 SPEED LIMITER
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MASTER III	INJECTION	SID 309 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MASTER III	INJECTION	SID 310 INJECTION	Read Fault Code	
MASTER III	INJECTION	SID 310 INJECTION	Erase Fault Code	
MASTER III	INJECTION	SID 310 INJECTION	Read ECU Information	
MASTER III	INJECTION	SID 310 INJECTION	Live Data	
MASTER III	INJECTION	SID 310 INJECTION	Read Configuration	
MASTER III	INJECTION	SID 310 INJECTION	Actuation Test	
MASTER III	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MASTER III	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MASTER III	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MASTER III	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MASTER III	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MASTER III	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
MASTER III	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) OXIDATION
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
MASTER III	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	A.B.S.	ABS	Read Fault Code	
MASTER III	A.B.S.	ABS	Erase Fault Code	
MASTER III	A.B.S.	ABS	Read ECU Information	
MASTER III	A.B.S.	ABS	Live Data	
MASTER III	A.B.S.	ABS	Actuation Test	
MASTER III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MASTER III	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MASTER III	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MASTER III	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MASTER III	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MASTER III	A.B.S.	ESP	Read Fault Code	
MASTER III	A.B.S.	ESP	Erase Fault Code	
MASTER III	A.B.S.	ESP	Read ECU Information	
MASTER III	A.B.S.	ESP	Live Data	
MASTER III	A.B.S.	ESP	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER III	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
MASTER III	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
MASTER III	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	A.B.S.	ESP	Other Configuration	VP044 ACCELERATION SENSOR
MASTER III	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MASTER III	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
MASTER III	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
MASTER III	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MASTER III	A.B.S.	ABS	Read Fault Code	
MASTER III	A.B.S.	ABS	Erase Fault Code	
MASTER III	A.B.S.	ABS	Read ECU Information	
MASTER III	A.B.S.	ABS	Live Data	
MASTER III	A.B.S.	ABS	Actuation Test	
MASTER III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MASTER III	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MASTER III	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MASTER III	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MASTER III	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MASTER III	A.B.S.	ABS	Read Fault Code	
MASTER III	A.B.S.	ABS	Erase Fault Code	
MASTER III	A.B.S.	ABS	Read ECU Information	
MASTER III	A.B.S.	ABS	Live Data	
MASTER III	A.B.S.	ABS	Read Configuration	
MASTER III	A.B.S.	ABS	Actuation Test	
MASTER III	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
MASTER III	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MASTER III	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MASTER III	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
MASTER III	A.B.S.	ABS	Other Configuration	VP045 HILL START
MASTER III	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MASTER III	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ012 RESET
MASTER III	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MASTER III	A.B.S.	ABS	Read Fault Code	
MASTER III	A.B.S.	ABS	Erase Fault Code	
MASTER III	A.B.S.	ABS	Read ECU Information	
MASTER III	A.B.S.	ABS	Live Data	
MASTER III	A.B.S.	ABS	Read Configuration	
MASTER III	A.B.S.	ABS	Actuation Test	
MASTER III	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
MASTER III	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MASTER III	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MASTER III	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
MASTER III	A.B.S.	ABS	Other Configuration	VP045 HILL START
MASTER III	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MASTER III	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MASTER III	A.B.S.	ABS	Erase	RZ012 RESET
MASTER III	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP015 RESTART THE COMPUTER
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP015 RESTART THE COMPUTER
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP015 RESTART THE COMPUTER
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP061 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP059 LCD DISPLAY FUEL GAUGE CALIBRATION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP058 LCD DISPLAY FUEL GAUGE CALIBRATION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP060 ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MASTER III	UCH	UCH	Read Fault Code	
MASTER III	UCH	UCH	Erase Fault Code	
MASTER III	UCH	UCH	Read ECU Information	
MASTER III	UCH	UCH	Live Data	
MASTER III	UCH	UCH	Read Configuration	
MASTER III	UCH	UCH	Actuation Test	
MASTER III	UCH	UCH	Write Configuration	CF273 TIMED LIGHTING SUPPLY
MASTER III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
MASTER III	UCH	UCH	Erase	RZ001 FAULT MEMORY
MASTER III	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
MASTER III	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
MASTER III	UCH	UCH	Read Fault Code	
MASTER III	UCH	UCH	Erase Fault Code	
MASTER III	UCH	UCH	Read ECU Information	
MASTER III	UCH	UCH	Live Data	
MASTER III	UCH	UCH	Read Configuration	
MASTER III	UCH	UCH	Actuation Test	
MASTER III	UCH	UCH	Write Configuration	CF273 TIMED LIGHTING SUPPLY
MASTER III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
MASTER III	UCH	UCH	Erase	RZ001 FAULT MEMORY
MASTER III	UCH	UCH	Erase	RZ012 STORED ENERGY MANAGEMENT DATA
MASTER III	UCH	UCH	Configuration	SC048 UCH CONFIGURATION
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MASTER III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Live Data	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP003 PARAMETRAGE PRIVE 1
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
MASTER III	AUTOMATIC GEARBOX	BVR PA	Read Fault Code	
MASTER III	AUTOMATIC GEARBOX	BVR PA	Erase Fault Code	
MASTER III	AUTOMATIC GEARBOX	BVR PA	Read ECU Information	
MASTER III	AUTOMATIC GEARBOX	BVR PA	Live Data	
MASTER III	AUTOMATIC GEARBOX	BVR PA	Actuation Test	
MASTER III	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MASTER III	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
MASTER III	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP017 PROGRAM CLUTCH OPEN POSITION
MASTER III	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP001 WRITE VIN
MASTER III	AUTOMATIC GEARBOX	BVR PA	Erase	RZ004 FAULT MEMORY
MASTER III	AUTOMATIC GEARBOX	BVR PA	Erase	RZ002 PROGRAMMED VALUES
MASTER III	AUTOMATIC GEARBOX	BVR PA	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
MASTER III	AUTOMATIC GEARBOX	BVR PA	Erase	RZ003 PROGRAMME SLIP POINT
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Read Fault Code	
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Erase Fault Code	
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Read ECU Information	
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Live Data	
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Actuation Test	
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Other Configuration	VP001 WRITE VIN
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Other Configuration	VP029 MEMORISATION OF SPEEDS
MASTER III	AUTOMATIC GEARBOX	ROBOTIZED GEARBOX ZA	Erase	RZ004 FAULT MEMORY
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Configuration	
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Write Configuration	CF014 TUNING VERSION NUMBER
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
MASTER III	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
MASTER III	UPC	UPC	Read Fault Code	
MASTER III	UPC	UPC	Erase Fault Code	
MASTER III	UPC	UPC	Read ECU Information	
MASTER III	UPC	UPC	Live Data	
MASTER III	UPC	UPC	Read Configuration	
MASTER III	UPC	UPC	Actuation Test	
MASTER III	UPC	UPC	Write Configuration	CF018 FRONT FOG LIGHTS
MASTER III	UPC	UPC	Other Configuration	VP003 WRITE VIN
MASTER III	UPC	UPC	Other Configuration	VP005 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	UPC	UPC	Erase	RZ001 FAULT MEMORY
MASTER III	UPC	UPC	Read Fault Code	
MASTER III	UPC	UPC	Erase Fault Code	
MASTER III	UPC	UPC	Read ECU Information	
MASTER III	UPC	UPC	Live Data	
MASTER III	UPC	UPC	Actuation Test	
MASTER III	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
MASTER III	UPC	UPC	Write Configuration	CF045 ALTERNATOR FLOATING VOLTAGE
MASTER III	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MASTER III	UPC	UPC	Other Configuration	VP003 WRITE VIN
MASTER III	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
MASTER III	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
MASTER III	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
MASTER III	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
MASTER III	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
MASTER III	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
MASTER III	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
MASTER III	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
MASTER III	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
MASTER III	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
MASTER III	UPC	UPC	Other Configuration	VP022 PARAMETRAGE PRIVE 1
MASTER III	UPC	UPC	Other Configuration	VP023 PARAMETRAGE PRIVE 2
MASTER III	UPC	UPC	Other Configuration	VP024 PARAMETRAGE PRIVE 3
MASTER III	UPC	UPC	Other Configuration	VP025 PARAMETRAGE PRIVE 4
MASTER III	UPC	UPC	Erase	RZ004 DTC reset
MASTER III	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER III	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
MASTER III	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
MASTER III	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MASTER III	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MASTER III	UPC	UPC	Read Fault Code	
MASTER III	UPC	UPC	Erase Fault Code	
MASTER III	UPC	UPC	Read ECU Information	
MASTER III	UPC	UPC	Live Data	
MASTER III	UPC	UPC	Read Configuration	
MASTER III	UPC	UPC	Actuation Test	
MASTER III	UPC	UPC	Write Configuration	CF045 ALTERNATOR FLOATING VOLTAGE
MASTER III	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
MASTER III	UPC	UPC	Other Configuration	VP003 WRITE VIN
MASTER III	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
MASTER III	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
MASTER III	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
MASTER III	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
MASTER III	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
MASTER III	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
MASTER III	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
MASTER III	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
MASTER III	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
MASTER III	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
MASTER III	UPC	UPC	Other Configuration	VP022 PARAMETRAGE PRIVE 1
MASTER III	UPC	UPC	Other Configuration	VP023 PARAMETRAGE PRIVE 2
MASTER III	UPC	UPC	Other Configuration	VP024 PARAMETRAGE PRIVE 3
MASTER III	UPC	UPC	Other Configuration	VP025 PARAMETRAGE PRIVE 4
MASTER III	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MASTER III	UPC	UPC	Erase	RZ004 DTC reset
MASTER III	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MASTER III	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
MASTER III	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
MASTER III	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MASTER III	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MASTER III	TYRES	TPMS	Read Fault Code	
MASTER III	TYRES	TPMS	Erase Fault Code	
MASTER III	TYRES	TPMS	Read ECU Information	
MASTER III	TYRES	TPMS	Live Data	
MASTER III	TYRES	TPMS	Other Configuration	VP004 WRITE VIN
MASTER III	TYRES	TPMS	Erase	RZ002 FAULT MEMORY
MASTER III	TYRES	TPMS	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Read Fault Code	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase Fault Code	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Read ECU Information	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Other Configuration	VP014 WRITE VIN
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase	RZ002 FAULT MEMORY
MASTER III	LIGHTING	CORNERING LIGHTS	Read Fault Code	
MASTER III	LIGHTING	CORNERING LIGHTS	Erase Fault Code	
MASTER III	LIGHTING	CORNERING LIGHTS	Read ECU Information	
MASTER III	LIGHTING	CORNERING LIGHTS	Live Data	
MASTER III	LIGHTING	CORNERING LIGHTS	Actuation Test	
MASTER III	LIGHTING	CORNERING LIGHTS	Other Configuration	VP001 WRITE VIN
MASTER III	LIGHTING	CORNERING LIGHTS	Erase	RZ001 FAULT MEMORY
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Read Fault Code	
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Erase Fault Code	
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Read ECU Information	
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Live Data	
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Other Configuration	VP016 WRITE VIN
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Other Configuration	VP019 INTERIOR AERIAL 1 TEST
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Other Configuration	VP020 INTERIOR AERIAL 2 TEST
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Other Configuration	VP021 EXTERNAL BOOT AERIAL TEST
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Other Configuration	VP022 FRONT LEFT-HAND EXTERNAL AERIAL TEST
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Other Configuration	VP023 FRONT RIGHT-HAND EXTERNAL AERIAL TEST
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Erase	RZ004 HANDS-FREE CARDS LOW BATTERY COUNTER
MASTER III	HANDS-FREE ACCESS	HANDS-FREE CARD PROGRAMMING	Erase	RZ005 FAULT MEMORY
MASTER III	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
MASTER III	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
MASTER III	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
MASTER III	FRONT CAMERA	FRONT CAMERA	Live Data	
MASTER III	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
MASTER III	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
MASTER III	FRONT CAMERA	FRONT CAMERA	Erase	RZ002 ECU MEMORY
MASTER III	RADIO	RADIO	Read Fault Code	
MASTER III	RADIO	RADIO	Erase Fault Code	
MASTER III	RADIO	RADIO	Read ECU Information	
MASTER III	RADIO	RADIO	Live Data	
MASTER III	RADIO	RADIO	Read Configuration	
MASTER III	RADIO	RADIO	Actuation Test	
MASTER III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
MASTER III	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MASTER III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP004 ADBLUE PRESSURE PREPARATION TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP002 ADBLUE SMALL QUANTITY TEST METERING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP003 ADBLUE LARGE VOLUME TEST METERING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP005 ADBLUE SPRAY TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP009 ADBLUE BACKFLOW PUMP TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP008 ADBLUE INJECTOR RELEASE TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ004 FAULT MEMORY
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ001 ADBLUE TANK PROGRAMMING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ003 ADBLUE INJECTOR PROGRAMMING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ002 ADBLUE PUMP MODULE PROGRAMMING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ005 ADBLUE DOSING MODULE CATALYST
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
MASTER III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
MASTER III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
MASTER III	RADIO	R108 RADIO	Read Fault Code	
MASTER III	RADIO	R108 RADIO	Erase Fault Code	
MASTER III	RADIO	R108 RADIO	Read ECU Information	
MASTER III	RADIO	R108 RADIO	Live Data	
MASTER III	RADIO	R108 RADIO	Read Configuration	
MASTER III	RADIO	R108 RADIO	Actuation Test	
MASTER III	RADIO	R108 RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	R108 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
MASTER III	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MASTER III	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
MASTER III	RADIO	R208 RADIO	Read Fault Code	
MASTER III	RADIO	R208 RADIO	Erase Fault Code	
MASTER III	RADIO	R208 RADIO	Read ECU Information	
MASTER III	RADIO	R208 RADIO	Live Data	
MASTER III	RADIO	R208 RADIO	Read Configuration	
MASTER III	RADIO	R208 RADIO	Actuation Test	
MASTER III	RADIO	R208 RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
MASTER III	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
MASTER III	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
MASTER III	RADIO	R208 RADIO	Write Configuration	CF007 VEHICLE CONFIGURATION
MASTER III	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MASTER III	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
MASTER III	RADIO	RADIO	Read Fault Code	
MASTER III	RADIO	RADIO	Erase Fault Code	
MASTER III	RADIO	RADIO	Read ECU Information	
MASTER III	RADIO	RADIO	Live Data	
MASTER III	RADIO	RADIO	Read Configuration	
MASTER III	RADIO	RADIO	Actuation Test	
MASTER III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
MASTER III	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MASTER III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MASTER III	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
MASTER III	RADIO	RADIO	Erase	RZ004 RESET RADIO
MASTER III	RADIO	RADIO	Read Fault Code	
MASTER III	RADIO	RADIO	Erase Fault Code	
MASTER III	RADIO	RADIO	Read ECU Information	
MASTER III	RADIO	RADIO	Live Data	
MASTER III	RADIO	RADIO	Read Configuration	
MASTER III	RADIO	RADIO	Actuation Test	
MASTER III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MASTER III	RADIO	RADIO	Erase	RZ004 RESET RADIO
MASTER III	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
MASTER III	RADIO	RADIO	Read Fault Code	
MASTER III	RADIO	RADIO	Erase Fault Code	
MASTER III	RADIO	RADIO	Read ECU Information	
MASTER III	RADIO	RADIO	Live Data	
MASTER III	RADIO	RADIO	Read Configuration	
MASTER III	RADIO	RADIO	Actuation Test	
MASTER III	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
MASTER III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MASTER III	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
MASTER III	RADIO	RADIO	Read Fault Code	
MASTER III	RADIO	RADIO	Erase Fault Code	
MASTER III	RADIO	RADIO	Read ECU Information	
MASTER III	RADIO	RADIO	Live Data	
MASTER III	RADIO	RADIO	Read Configuration	
MASTER III	RADIO	RADIO	Actuation Test	
MASTER III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
MASTER III	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MASTER III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF005 HOUR SETTING
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
MASTER III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read Fault Code	
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase Fault Code	
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read ECU Information	
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Live Data	
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP003 WRITE VIN
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ001 FAULT MEMORY
MASTER III	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ002 ECU MEMORY
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Live Data	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
MASTER III	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
MASTER III	TRACKER	TRACKER	Read Fault Code	
MASTER III	TRACKER	TRACKER	Erase Fault Code	
MASTER III	TRACKER	TRACKER	Read ECU Information	
MASTER III	TRACKER	TRACKER	Live Data	
MASTER III	TRACKER	TRACKER	Read Configuration	
MASTER III	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
MASTER III	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
MASTER III	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Read Fault Code	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase Fault Code	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Read ECU Information	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Live Data	
MASTER III	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
MASTER III	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
MASTER III	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
MASTER III	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
MASTER III	PARKING ASSISTANCE	PARKING AID	Live Data	
MASTER III	PARKING ASSISTANCE	PARKING AID	Read Configuration	
MASTER III	PARKING ASSISTANCE	PARKING AID	Actuation Test	
MASTER III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MASTER III	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MASTER III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
MASTER III	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MASTER III	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
MASTER III	INJECTION	SID321 INJECTION	Read Fault Code	
MASTER III	INJECTION	SID321 INJECTION	Erase Fault Code	
MASTER III	INJECTION	SID321 INJECTION	Read ECU Information	
MASTER III	INJECTION	SID321 INJECTION	Live Data	
MASTER III	INJECTION	SID321 INJECTION	Function Test	
MASTER III	INJECTION	SID321 INJECTION	Actuation Test	
MASTER III	INJECTION	SID321 INJECTION	Other Configuration	VP010 WRITE V. I. N.
MASTER III	INJECTION	SID321 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ125 COMPUTER RESET
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ150 DOWNSTREAM NITROGEN OXIDE SENSOR
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ151 UPSTREAM NITROGEN OXIDE SENSOR
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ159 SCR AMMONIA LEAK COUNTER RESET
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MASTER III	INJECTION	SID321 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC001 WRITE SAVED DATA
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC040 SPEED LIMITER
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC083 Adblue SYSTEM PERFORMANCE
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MASTER III	INJECTION	SID321 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
MASTER III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
MASTER III	FRONT RADAR	FRONT RADAR	Read Fault Code	
MASTER III	FRONT RADAR	FRONT RADAR	Erase Fault Code	
MASTER III	FRONT RADAR	FRONT RADAR	Read ECU Information	
MASTER III	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
MASTER III	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
MASTER III	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
MASTER III	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
MASTER III	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
MASTER III	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
MASTER III	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Read Fault Code	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System info	Function menu	Subfunction menu
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Read ECU Information	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Live Data	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Function Test	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Read Configuration	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Actuation Test	
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Write Configuration	CF001 BUZZER VOLUME
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Write Configuration	CF013 REAR DETECTION
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Write Configuration	CF012 FRONT DETECTION
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Write Configuration	CF006 TONE ADJUSTMENT
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MASTER III	PARKING PROX CAN	PARKING ASSISTANCE	Other Configuration	VP001 WRITE VIN
MASTER III	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
MASTER III	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
MASTER III	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
MASTER III	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
MASTER III	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
MASTER III	DASHBOARD ADAPTATION BOX	DASHBOARD ADAPTATION BOX	Read Fault Code	
MASTER III	DASHBOARD ADAPTATION BOX	DASHBOARD ADAPTATION BOX	Erase Fault Code	
MASTER III	DASHBOARD ADAPTATION BOX	DASHBOARD ADAPTATION BOX	Read ECU Information	
MASTER III	DASHBOARD ADAPTATION BOX	DASHBOARD ADAPTATION BOX	Live Data	
MASTER III	DASHBOARD ADAPTATION BOX	DASHBOARD ADAPTATION BOX	Function Test	
MASTER III	DASHBOARD ADAPTATION BOX	DASHBOARD ADAPTATION BOX	Write Configuration	CF001 COMPUTER INITIALISATION
MASTER III	RADIO	RADIO	Read Fault Code	
MASTER III	RADIO	RADIO	Erase Fault Code	
MASTER III	RADIO	RADIO	Read ECU Information	
MASTER III	RADIO	RADIO	Live Data	
MASTER III	RADIO	RADIO	Function Test	
MASTER III	RADIO	RADIO	Read Configuration	
MASTER III	RADIO	RADIO	Actuation Test	
MASTER III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MASTER III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MASTER III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MASTER III	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PRESSURE LINE ADBLUE HEATER
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
MASTER III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
MASTER III	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VP002 WRITE VIN
MASTER III	INJECTION	STD321 INJECTION	Read Fault Code	
MASTER III	INJECTION	STD321 INJECTION	Erase Fault Code	
MASTER III	INJECTION	STD321 INJECTION	Read ECU Information	
MASTER III	INJECTION	STD321 INJECTION	Live Data	
MASTER III	INJECTION	STD321 INJECTION	Actuation Test	
MASTER III	PARKING ASSISTANCE	PARKING ASSISTANCE	Read Fault Code	
MASTER III	PARKING ASSISTANCE	PARKING ASSISTANCE	Erase Fault Code	
MASTER III	PARKING ASSISTANCE	PARKING ASSISTANCE	Read ECU Information	
MASTER III	PARKING ASSISTANCE	PARKING ASSISTANCE	Live Data	
MASTER III	PARKING ASSISTANCE	PARKING ASSISTANCE	Read Configuration	
MASTER III	PARKING ASSISTANCE	PARKING ASSISTANCE	Actuation Test	
MASTER ph 2	INJECTION	DIESEL INJECTION	Read Fault Code	
MASTER ph 2	INJECTION	DIESEL INJECTION	Erase Fault Code	
MASTER ph 2	INJECTION	DIESEL INJECTION	Read ECU Information	
MASTER ph 2	INJECTION	DIESEL INJECTION	Live Data	
MASTER ph 2	INJECTION	DIESEL INJECTION	Actuation Test	
MASTER ph 2	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MASTER ph 2	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
MASTER ph 2	INJECTION	DIESEL INJECTION	Write Configuration	CF001 PASSENGER COMPARTMENT HEATING RESISTOR
MASTER ph 2	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
MASTER ph 2	INJECTION	DIESEL INJECTION	Write Configuration	R2003 ENGINE PARAMETER ADAPTIVES
MASTER ph 2	INJECTION	DIESEL INJECTION	Erase	R2007 EGR VALVE PROGRAMMING
MASTER ph 2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
MASTER ph 2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP028 VAN FAST IDLE SPEED INCREASE
MASTER ph 2	INJECTION	DIESEL INJECTION	Parameters Configuration	VP029 VAN FAST IDLE SPEED DECREASE
MASTER ph 2	INJECTION	DIESEL INJECTION	Specific Command	SC004 ENTER INJECTOR CALIBRATION DATA
MASTER ph 2	INJECTION	DIESEL INJECTION	Read Fault Code	
MASTER ph 2	INJECTION	DIESEL INJECTION	Erase Fault Code	
MASTER ph 2	INJECTION	DIESEL INJECTION	Read ECU Information	
MASTER ph 2	INJECTION	DIESEL INJECTION	Live Data	
MASTER ph 2	INJECTION	DIESEL INJECTION	Actuation Test	
MASTER ph 2	INJECTION	DIESEL INJECTION	Read Configuration	
MASTER ph 2	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER ph 3	INJECTION	EDC15 INJECTION	Write Configuration	CF042 BOILER
MASTER ph 3	INJECTION	EDC15 INJECTION	Write Configuration	CF020 INCREMENT OF IDLE SPEED
MASTER ph 3	INJECTION	EDC15 INJECTION	Write Configuration	CF021 DECREMENT IDLE SPEED
MASTER ph 3	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MASTER ph 3	INJECTION	EDC15 INJECTION	Other Configuration	VP038 VAN FAST IDLE SPEED INCREASE
MASTER ph 3	INJECTION	EDC15 INJECTION	Other Configuration	VP039 VAN FAST IDLE SPEED DECREASE
MASTER ph 3	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
MASTER ph 3	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MASTER ph 3	INJECTION	EDC15 INJECTION	Erase	RZ017 EGR PROGRAMMING
MASTER ph 3	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MASTER ph 3	INJECTION	EDC15 INJECTION	Configuration	SC040 SPEED LIMITER
MASTER ph 3	A.B.S.	ABS	Read Fault Code	
MASTER ph 3	A.B.S.	ABS	Erase Fault Code	
MASTER ph 3	A.B.S.	ABS	Read ECU Information	
MASTER ph 3	A.B.S.	ABS	Live Data	
MASTER ph 3	A.B.S.	ABS	Actuation Test	
MASTER ph 3	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER ph 3	A.B.S.	ABS	Other Configuration	VP007 SPEED INDEX
MASTER ph 3	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MASTER ph 3	A.B.S.	ESP	Read Fault Code	
MASTER ph 3	A.B.S.	ESP	Erase Fault Code	
MASTER ph 3	A.B.S.	ESP	Read ECU Information	
MASTER ph 3	A.B.S.	ESP	Live Data	
MASTER ph 3	A.B.S.	ESP	Read Configuration	
MASTER ph 3	A.B.S.	ESP	Actuation Test	
MASTER ph 3	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MASTER ph 3	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER ph 3	A.B.S.	ESP	Other Configuration	VP007 SPEED INDEX
MASTER ph 3	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
MASTER ph 3	A.B.S.	ESP	Configuration	SC007 BLEEDING THE BRAKING SYSTEM
MASTER ph 3	UCH	UCH	Read Fault Code	
MASTER ph 3	UCH	UCH	Erase Fault Code	
MASTER ph 3	UCH	UCH	Read ECU Information	
MASTER ph 3	UCH	UCH	Live Data	
MASTER ph 3	UCH	UCH	Read Configuration	
MASTER ph 3	UCH	UCH	Actuation Test	
MASTER ph 3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
MASTER ph 3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MASTER ph 3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MASTER ph 3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MASTER ph 3	UCH	UCH	Read Fault Code	
MASTER ph 3	UCH	UCH	Erase Fault Code	
MASTER ph 3	UCH	UCH	Read ECU Information	
MASTER ph 3	UCH	UCH	Live Data	
MASTER ph 3	UCH	UCH	Read Configuration	
MASTER ph 3	UCH	UCH	Actuation Test	
MASTER ph 3	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
MASTER ph 3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MASTER ph 3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MASTER ph 3	UCH	UCH	Read Fault Code	
MASTER ph 3	UCH	UCH	Erase Fault Code	
MASTER ph 3	UCH	UCH	Read ECU Information	
MASTER ph 3	UCH	UCH	Live Data	
MASTER ph 3	UCH	UCH	Read Configuration	
MASTER ph 3	UCH	UCH	Actuation Test	
MASTER ph 3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
MASTER ph 3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MASTER ph 3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MASTER ph 3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MASTER ph 3	UCH	UCH	Read Fault Code	
MASTER ph 3	UCH	UCH	Erase Fault Code	
MASTER ph 3	UCH	UCH	Read ECU Information	
MASTER ph 3	UCH	UCH	Live Data	
MASTER ph 3	UCH	UCH	Read Configuration	
MASTER ph 3	UCH	UCH	Actuation Test	
MASTER ph 3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
MASTER ph 3	UCH	UCH	Other Configuration	VP004 WRITE VIN
MASTER ph 3	UCH	UCH	Erase	RZ001 FAULT MEMORY
MASTER ph 3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MASTER ph 3	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Read Fault Code	
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Erase Fault Code	
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Read ECU Information	
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Live Data	
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Actuation Test	
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP017 PROGRAM CLUTCH OPEN POSITION
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP014 WRITE CLUTCH INITIAL CLOSED POSITION
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP001 WRITE VIN
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ001 FAULTS/MEMORISED
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ003 PROGRAMME SLIP POINT
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ002 PROGRAMMED VALUES
MASTER ph 3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ010 REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT
MASTER ph 3	TRACKER	TRACKER	Read Fault Code	
MASTER ph 3	TRACKER	TRACKER	Erase Fault Code	
MASTER ph 3	TRACKER	TRACKER	Read ECU Information	
MASTER ph 3	TRACKER	TRACKER	Live Data	
MASTER ph 3	TRACKER	TRACKER	Read Configuration	
MASTER ph 3	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
MASTER ph 3	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
MASTER ph 3	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
MASTER ph 3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MASTER ph 3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MASTER ph 3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MASTER ph 3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
MASTER ph 3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ001 FAULT MEMORY
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Read Fault Code	
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Erase Fault Code	
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Read ECU Information	
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Live Data	
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Actuation Test	
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Erase	RZ001 FAULT MEMORY
MASTER ph 3	PILOTED SUSPENSION	PILOTED SUSPENSION	Configuration	SC001 PROGRAMME PNEUMATIC SUSPENSION
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Live Data	
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Read Configuration	
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
MASTER ph 3	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
MASTER RWD	ENGINE IMMOBILISER		Write Configuration	DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE
MASTER RWD	ENGINE IMMOBILISER		Write Configuration	CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER
MASTER RWD	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 1 KEY
MASTER RWD	ENGINE IMMOBILISER		Write Configuration	PROGRAMMING WITH 2 KEYS
MASTER RWD	INJECTION		Read ECU Information	
MASTER RWD	INJECTION		Live Data	
MASTER RWD	AIRBAG / PRETENSIONERS		Read Fault Code	
MASTER RWD	AIRBAG / PRETENSIONERS		Erase Fault Code	
MASTER RWD	AIRBAG / PRETENSIONERS		Read ECU Information	
MASTER RWD	AIRBAG / PRETENSIONERS		Live Data	
MASTER RWD	AIRBAG / PRETENSIONERS		Actuation Test	
MASTER RWD	AIRBAG / PRETENSIONERS		Read Configuration	
MASTER RWD	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
MASTER RWD	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANE II	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANE II	INJECTION	DDCR INJECTION	Read Fault Code	
MEGANE II	INJECTION	DDCR INJECTION	Erase Fault Code	
MEGANE II	INJECTION	DDCR INJECTION	Read ECU Information	
MEGANE II	INJECTION	DDCR INJECTION	Live Data	
MEGANE II	INJECTION	DDCR INJECTION	Read Configuration	
MEGANE II	INJECTION	DDCR INJECTION	Actuation Test	
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	DDCR INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	DDCR INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	DDCR INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANE II	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANE II	INJECTION	DDCR INJECTION	Read Fault Code	
MEGANE II	INJECTION	DDCR INJECTION	Erase Fault Code	
MEGANE II	INJECTION	DDCR INJECTION	Read ECU Information	
MEGANE II	INJECTION	DDCR INJECTION	Live Data	
MEGANE II	INJECTION	DDCR INJECTION	Read Configuration	
MEGANE II	INJECTION	DDCR INJECTION	Actuation Test	
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE II	INJECTION	DDCR INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANE II	INJECTION	DDCR INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	DDCR INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	DDCR INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	DDCR INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	SID 301 INJECTION	Read Fault Code	
MEGANE II	INJECTION	SID 301 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	SID 301 INJECTION	Read ECU Information	
MEGANE II	INJECTION	SID 301 INJECTION	Live Data	
MEGANE II	INJECTION	SID 301 INJECTION	Read Configuration	
MEGANE II	INJECTION	SID 301 INJECTION	Actuation Test	
MEGANE II	INJECTION	SID 301 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	SID 301 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	SID 301 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	SID 301 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANE II	INJECTION	SID 301 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	SID 301 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	SID 301 INJECTION	Configuration	SC013 ENTER VIN CODE
MEGANE II	INJECTION	SID 301 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MEGANE II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MEGANE II	INJECTION	INJECTION DCM 1.2	Live Data	
MEGANE II	INJECTION	INJECTION DCM 1.2	Actuation Test	
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Erase	RZ034 ECU MEMORY
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MEGANE II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MEGANE II	INJECTION	INJECTION DCM 1.2	Live Data	
MEGANE II	INJECTION	INJECTION DCM 1.2	Read Configuration	
MEGANE II	INJECTION	INJECTION DCM 1.2	Actuation Test	
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP035 STOP ELECTRICAL CONSUMER PREVENTION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE II	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 C36 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 C36 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 C36 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
MEGANE II	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE II	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MEGANE II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MEGANE II	INJECTION	INJECTION DCM 1.2	Live Data	
MEGANE II	INJECTION	INJECTION DCM 1.2	Read Configuration	
MEGANE II	INJECTION	INJECTION DCM 1.2	Actuation Test	
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MEGANE II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC040 SPEED LIMITER
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
MEGANE II	INJECTION	INJECTION DCM 1.2	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Live Data	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE II	INJECTION	S3000 INJECTION	Read Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Erase Fault Code	
MEGANE II	INJECTION	S3000 INJECTION	Read ECU Information	
MEGANE II	INJECTION	S3000 INJECTION	Live Data	
MEGANE II	INJECTION	S3000 INJECTION	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	INJECTION	S3000 INJECTION	Actuation Test	
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MEGANE II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE II	A.B.S.	ABS 8.0	Read Fault Code	
MEGANE II	A.B.S.	ABS 8.0	Erase Fault Code	
MEGANE II	A.B.S.	ABS 8.0	Read ECU Information	
MEGANE II	A.B.S.	ABS 8.0	Live Data	
MEGANE II	A.B.S.	ABS 8.0	Actuation Test	
MEGANE II	A.B.S.	ABS 8.0	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ABS 8.0	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ABS 8.0	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ABS 8.0	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ABS 8.0	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ABS 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0	Live Data	
MEGANE II	A.B.S.	ESP 8.0	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ABS 8.0 V2	Read Fault Code	
MEGANE II	A.B.S.	ABS 8.0 V2	Erase Fault Code	
MEGANE II	A.B.S.	ABS 8.0 V2	Read ECU Information	
MEGANE II	A.B.S.	ABS 8.0 V2	Live Data	
MEGANE II	A.B.S.	ABS 8.0 V2	Actuation Test	
MEGANE II	A.B.S.	ABS 8.0 V2	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ABS 8.0 V2	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ABS 8.0 V2	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ABS 8.0 V2	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ABS 8.0 V2	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ABS 8.0 V2	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0 V2	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V2	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V2	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0 V2	Live Data	
MEGANE II	A.B.S.	ESP 8.0 V2	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0 V2	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0 V2	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0 V2	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0 V2	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0 V3	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0 V3	Live Data	
MEGANE II	A.B.S.	ESP 8.0 V3	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ABS 8.0 V3	Read Fault Code	
MEGANE II	A.B.S.	ABS 8.0 V3	Erase Fault Code	
MEGANE II	A.B.S.	ABS 8.0 V3	Read ECU Information	
MEGANE II	A.B.S.	ABS 8.0 V3	Live Data	
MEGANE II	A.B.S.	ABS 8.0 V3	Actuation Test	
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ABS 8.0 V3	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ABS 8.0 V3	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ABS 8.0 V3	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0 V3	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0 V3	Live Data	
MEGANE II	A.B.S.	ESP 8.0 V3	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0 V2	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V2	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V2	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0 V2	Live Data	
MEGANE II	A.B.S.	ESP 8.0 V2	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0 V2	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0 V2	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0 V2	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0 V2	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0 V2	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	A.B.S.	ABS 8.0 V3	Read Fault Code	
MEGANE II	A.B.S.	ABS 8.0 V3	Erase Fault Code	
MEGANE II	A.B.S.	ABS 8.0 V3	Read ECU Information	
MEGANE II	A.B.S.	ABS 8.0 V3	Live Data	
MEGANE II	A.B.S.	ABS 8.0 V3	Actuation Test	
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ABS 8.0 V3	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
MEGANE II	A.B.S.	ABS 8.0 V3	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ABS 8.0 V3	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ABS 8.0 V3	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0 V3	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0 V3	Live Data	
MEGANE II	A.B.S.	ESP 8.0 V3	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0	Live Data	
MEGANE II	A.B.S.	ESP 8.0	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
MEGANE II	A.B.S.	ESP 8.0	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	A.B.S.	ESP 8.0 V3	Read Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Erase Fault Code	
MEGANE II	A.B.S.	ESP 8.0 V3	Read ECU Information	
MEGANE II	A.B.S.	ESP 8.0 V3	Live Data	
MEGANE II	A.B.S.	ESP 8.0 V3	Actuation Test	
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP004 VEHICLE PARAMETERS
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP007 SPEEDO INDEX
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP001 WRITE VIN
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MEGANE II	A.B.S.	ESP 8.0 V3	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ001 FAULT MEMORY
MEGANE II	A.B.S.	ESP 8.0 V3	Erase	RZ003 ESP SENSOR PROGRAMMING
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC001 CHECK TARGET TEETH
MEGANE II	A.B.S.	ESP 8.0 V3	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF034 BODYWORK TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF006 VEHICLE SPEED SIGNAL TRANSMITTER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF035 TANK CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF036 CARDKEY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF038 RHEOSTAT PRESENCE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF037 CLOCK
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE CURRENT VALUE IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE CURRENT VALUE IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF034 BODYWORK TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF006 VEHICLE SPEED SIGNAL TRANSMITTER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF035 TANK CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF036 CARD/KEY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF038 RHEOSTAT PRESENCE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF037 CLOCK
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MEGANE II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	
MEGANE II	UCH	UCH	Actuation Test	
MEGANE II	UCH	UCH	Write Configuration	CF018 AUTOMATIC RELOCKING
MEGANE II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
MEGANE II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
MEGANE II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE II	UCH	UCH	Other Configuration	VP004 WRITE VIN
MEGANE II	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANE II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
MEGANE II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	
MEGANE II	UCH	UCH	Actuation Test	
MEGANE II	UCH	UCH	Write Configuration	CF018 AUTOMATIC RELOCKING
MEGANE II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
MEGANE II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
MEGANE II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE II	UCH	UCH	Other Configuration	VP004 WRITE VIN
MEGANE II	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	UCH	UCH	Actuation Test	
MEGANE II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
MEGANE II	UCH	UCH	Write Configuration	CF104 CHILDPROOF LOCK
MEGANE II	UCH	UCH	Write Configuration	CF018 AUTOMATIC RELOCKING
MEGANE II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
MEGANE II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE II	UCH	UCH	Other Configuration	VP004 WRITE VIN
MEGANE II	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	
MEGANE II	UCH	UCH	Actuation Test	
MEGANE II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
MEGANE II	UCH	UCH	Write Configuration	CF018 AUTOMATIC RELOCKING
MEGANE II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
MEGANE II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE II	UCH	UCH	Other Configuration	VP004 WRITE VIN
MEGANE II	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANE II	UCH	UCH	Configuration	SC016 CHILDPROOF LOCK
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	
MEGANE II	UCH	UCH	Actuation Test	
MEGANE II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
MEGANE II	UCH	UCH	Write Configuration	CF009 DEADLOCKING
MEGANE II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE II	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
MEGANE II	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
MEGANE II	UCH	UCH	Write Configuration	CF028 ENGINE TYPE
MEGANE II	UCH	UCH	Write Configuration	CF166 REAR SCREEN WIPER
MEGANE II	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
MEGANE II	UCH	UCH	Write Configuration	CF135 UPC COMP. TYPE
MEGANE II	UCH	UCH	Other Configuration	VP004 WRITE VIN
MEGANE II	UCH	UCH	Other Configuration	VP016 NEW VEHICLE STORAGE MODE DEACTIVATION
MEGANE II	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC016 CHILDPROOF LOCK
MEGANE II	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	
MEGANE II	UCH	UCH	Actuation Test	
MEGANE II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
MEGANE II	UCH	UCH	Write Configuration	CF009 DEADLOCKING
MEGANE II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE II	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
MEGANE II	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
MEGANE II	UCH	UCH	Write Configuration	CF028 ENGINE TYPE
MEGANE II	UCH	UCH	Write Configuration	CF166 REAR SCREEN WIPER
MEGANE II	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
MEGANE II	UCH	UCH	Write Configuration	CF135 UPC COMP. TYPE
MEGANE II	UCH	UCH	Write Configuration	CF224 REAR ACCESS AERIALS
MEGANE II	UCH	UCH	Other Configuration	VP004 WRITE VIN
MEGANE II	UCH	UCH	Other Configuration	VP016 NEW VEHICLE STORAGE MODE DEACTIVATION
MEGANE II	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC016 CHILDPROOF LOCK
MEGANE II	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANE II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
MEGANE II	UCH	UCH	Read Fault Code	
MEGANE II	UCH	UCH	Erase Fault Code	
MEGANE II	UCH	UCH	Read ECU Information	
MEGANE II	UCH	UCH	Live Data	
MEGANE II	UCH	UCH	Read Configuration	
MEGANE II	UCH	UCH	Write Configuration	CF299 B/C WITH FR/RR THORAX + HEAD AIRBAGS
MEGANE II	UCH	UCH	Write Configuration	CF298 B/C WITH FRONT THORAX + HEAD AIRBAGS
MEGANE II	UCH	UCH	Write Configuration	CF297 B/C WITHOUT SIDE AIRBAGS
MEGANE II	UCH	UCH	Write Configuration	CF300 G/S WITH HEAD AIRBAGS
MEGANE II	UCH	UCH	Write Configuration	CF301 G/S WITHOUT HEAD AIRBAG
MEGANE II	UCH	UCH	Write Configuration	CF283 DRIVER'S LAP STRAP/SEAT AIRBAG
MEGANE II	UCH	UCH	Write Configuration	CF282 PASSENGER'S LAP STRAP/SEAT AIRBAG
MEGANE II	UCH	UCH	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
MEGANE II	UCH	UCH	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
MEGANE II	UCH	UCH	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
MEGANE II	UCH	UCH	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
MEGANE II	UCH	UCH	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
MEGANE II	UCH	UCH	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
MEGANE II	UCH	UCH	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
MEGANE II	UCH	UCH	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
MEGANE II	UCH	UCH	Write Configuration	CF225 REAR THORAX SIDE AIR BAG, DRIVER SIDE
MEGANE II	UCH	UCH	Write Configuration	CF226 REAR THORAX SIDE AIR BAG, PASSENGER SIDE
MEGANE II	UCH	UCH	Write Configuration	CF284 FRONT BUCKLE PRETENSIONERS
MEGANE II	UCH	UCH	Write Configuration	CF278 REAR INERTIA REELS
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Read Fault Code	
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Erase Fault Code	
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Read ECU Information	
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Live Data	
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Read Configuration	
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF299 B/C WITH FR/RR THORAX + HEAD AIRBAGS
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF298 B/C WITH FRONT THORAX + HEAD AIRBAGS
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF297 B/C WITHOUT SIDE AIRBAGS
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF300 G/S WITH HEAD AIRBAGS
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF301 G/S WITHOUT HEAD AIRBAG
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF283 DRIVER'S LAP STRAP/SEAT AIRBAG
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF282 PASSENGER'S LAP STRAP/SEAT AIRBAG
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF225 REAR THORAX SIDE AIR BAG, DRIVER SIDE
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF226 REAR THORAX SIDE AIR BAG, PASSENGER SIDE
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF284 FRONT BUCKLE PRETENSIONERS
MEGANE II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF278 REAR INERTIA REELS





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE II	SUNROOF CONTROL UNIT	UCT E84	Live Data	
MEGANE II	SUNROOF CONTROL UNIT	UCT E84	Read Configuration	
MEGANE II	SUNROOF CONTROL UNIT	UCT E84	Actuation Test	
MEGANE II	SUNROOF CONTROL UNIT	UCT E84	Write Configuration	CF001 ROLL BARS
MEGANE II	SUNROOF CONTROL UNIT	UCT E84	Other Configuration	VP002 WRITE V.I.N.
MEGANE II	SUNROOF CONTROL UNIT	UCT E84	Erase	RZ001 FAULT MEMORY
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Read Fault Code	
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Erase Fault Code	
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Read ECU Information	
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Live Data	
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Read Configuration	
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Actuation Test	
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF001 VEHICLE TYPE
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF002 DYNAMIC CORRECTION
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF005 SIGNATURE
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP001 WRITE VIN
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP002 SYSTEM INITIALISATION
MEGANE II	LIGHTING	LAMPE A DECHARGE CAN	Erase	RZ001 FAULT MEMORY
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP005 COMP CONFIGURATION
MEGANE II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read Fault Code	
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase Fault Code	
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read ECU Information	
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Live Data	
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Actuation Test	
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ006 CONVERTER LOCK UP ADAPTIVE
MEGANE II	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
MEGANE II	GAS INJ.	GAS INJECTION 3000	Read Fault Code	
MEGANE II	GAS INJ.	GAS INJECTION 3000	Erase Fault Code	
MEGANE II	GAS INJ.	GAS INJECTION 3000	Read ECU Information	
MEGANE II	GAS INJ.	GAS INJECTION 3000	Live Data	
MEGANE II	GAS INJ.	GAS INJECTION 3000	Read Configuration	
MEGANE II	GAS INJ.	GAS INJECTION 3000	Actuation Test	
MEGANE II	GAS INJ.	GAS INJECTION 3000	Other Configuration	VP001 WRITE VIN
MEGANE II	GAS INJ.	GAS INJECTION 3000	Erase	RZ001 FAULT MEMORY
MEGANE II	TRACKER	TRACKER	Read Fault Code	
MEGANE II	TRACKER	TRACKER	Erase Fault Code	
MEGANE II	TRACKER	TRACKER	Read ECU Information	
MEGANE II	TRACKER	TRACKER	Live Data	
MEGANE II	TRACKER	TRACKER	Read Configuration	
MEGANE II	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
MEGANE II	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
MEGANE II	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
MEGANE II	DISCHARGE LAMP	LAD	Read Fault Code	
MEGANE II	DISCHARGE LAMP	LAD	Erase Fault Code	
MEGANE II	DISCHARGE LAMP	LAD	Read ECU Information	
MEGANE II	DISCHARGE LAMP	LAD	Live Data	
MEGANE II	DISCHARGE LAMP	LAD	Read Configuration	
MEGANE II	DISCHARGE LAMP	LAD	Write Configuration	CF004 COMPUTER ADDRESS
MEGANE II	DISCHARGE LAMP	LAD	Other Configuration	VP001 WRITE VIN
MEGANE II	DISCHARGE LAMP	LAD	Erase	RZ001 FAULT MEMORY
MEGANE II	Left COSLAD	Left LAD	Read Fault Code	
MEGANE II	Left COSLAD	Left LAD	Erase Fault Code	
MEGANE II	Left COSLAD	Left LAD	Read ECU Information	
MEGANE II	Left COSLAD	Left LAD	Live Data	
MEGANE II	Left COSLAD	Left LAD	Read Configuration	
MEGANE II	Left COSLAD	Left LAD	Actuation Test	
MEGANE II	Left COSLAD	Left LAD	Write Configuration	CF004 COMPUTER ADDRESS
MEGANE II	Left COSLAD	Left LAD	Write Configuration	CF003 VEHICLE TYPE
MEGANE II	Left COSLAD	Left LAD	Write Configuration	CF001 COMPUTER CALIBRATION
MEGANE II	Left COSLAD	Left LAD	Other Configuration	VP001 WRITE VIN
MEGANE II	Left COSLAD	Left LAD	Erase	RZ001 FAULT MEMORY
MEGANE II	Right COSLAD	Right LAD	Read Fault Code	
MEGANE II	Right COSLAD	Right LAD	Erase Fault Code	
MEGANE II	Right COSLAD	Right LAD	Read ECU Information	
MEGANE II	Right COSLAD	Right LAD	Live Data	
MEGANE II	Right COSLAD	Right LAD	Read Configuration	
MEGANE II	Right COSLAD	Right LAD	Actuation Test	
MEGANE II	Right COSLAD	Right LAD	Write Configuration	CF004 COMPUTER ADDRESS
MEGANE II	Right COSLAD	Right LAD	Write Configuration	CF003 VEHICLE TYPE
MEGANE II	Right COSLAD	Right LAD	Write Configuration	CF001 COMPUTER CALIBRATION
MEGANE II	Right COSLAD	Right LAD	Other Configuration	VP001 WRITE VIN
MEGANE II	Right COSLAD	Right LAD	Erase	RZ001 FAULT MEMORY
MEGANE II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Live Data	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
MEGANE II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANE II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MEGANE II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
MEGANE II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
MEGANE II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Live Data	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
MEGANE II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
MEGANE II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANE II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MEGANE II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
MEGANE II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MEGANE II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Live Data	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Read Configuration	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Actuation Test	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC081 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV	INJECTION	INJECTION	Read Fault Code	
MEGANE IV	INJECTION	INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	INJECTION	Read ECU Information	
MEGANE IV	INJECTION	INJECTION	Live Data	
MEGANE IV	INJECTION	INJECTION	Actuation Test	
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
MEGANE IV	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE IV	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANE IV	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
MEGANE IV	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
MEGANE IV	INJECTION	EMS 3155 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	EMS 3155 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	EMS 3155 INJECTION	Live Data	
MEGANE IV	INJECTION	EMS 3155 INJECTION	Read Configuration	
MEGANE IV	INJECTION	EMS 3155 INJECTION	Actuation Test	
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
MEGANE IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EMS 3155 INJECTION	Configuration	SC001 START OBD TEST: O2 SENSORS
MEGANE IV	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV	INJECTION	EMS 3155 INJECTION	Configuration	SC081 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV	INJECTION	INJECTION	Read Fault Code	
MEGANE IV	INJECTION	INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	INJECTION	Read ECU Information	
MEGANE IV	INJECTION	INJECTION	Live Data	
MEGANE IV	INJECTION	INJECTION	Read Configuration	
MEGANE IV	INJECTION	INJECTION	Actuation Test	
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE IV	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
MEGANE IV	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
MEGANE IV	INJECTION	INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
MEGANE IV	INJECTION	INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	SID 310 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	SID 310 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	SID 310 INJECTION	Live Data	
MEGANE IV	INJECTION	SID 310 INJECTION	Read Configuration	
MEGANE IV	INJECTION	SID 310 INJECTION	Actuation Test	
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Live Data	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Read Configuration	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Actuation Test	
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV	INJECTION	SID 310 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	SID 310 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	SID 310 INJECTION	Live Data	
MEGANE IV	INJECTION	SID 310 INJECTION	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	INJECTION	SID 310 INJECTION	Actuation Test	
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV	INJECTION	SID 310 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	SID 310 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	SID 310 INJECTION	Live Data	
MEGANE IV	INJECTION	SID 310 INJECTION	Read Configuration	
MEGANE IV	INJECTION	SID 310 INJECTION	Actuation Test	
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP389 CDC SETPOINT VOLTAGE
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	SID 310 INJECTION	Other Configuration	VP388 INVERTER ACTIVATION REQUEST
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
MEGANE IV	INJECTION	SID 310 INJECTION	Erase	RZ123 TRACTION BATTERY RELAY
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV	INJECTION	INJECTION	Read Fault Code	
MEGANE IV	INJECTION	INJECTION	Read ECU Information	
MEGANE IV	INJECTION	INJECTION	Live Data	
MEGANE IV	A.B.S.	ABS	Read Fault Code	
MEGANE IV	A.B.S.	ABS	Erase Fault Code	
MEGANE IV	A.B.S.	ABS	Read ECU Information	
MEGANE IV	A.B.S.	ABS	Live Data	
MEGANE IV	A.B.S.	ABS	Read Configuration	
MEGANE IV	A.B.S.	ABS	Actuation Test	
MEGANE IV	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
MEGANE IV	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MEGANE IV	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MEGANE IV	A.B.S.	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
MEGANE IV	A.B.S.	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
MEGANE IV	A.B.S.	ABS	Other Configuration	VP045 HILL START
MEGANE IV	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MEGANE IV	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MEGANE IV	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MEGANE IV	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MEGANE IV	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MEGANE IV	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
MEGANE IV	A.B.S.	ABS	Erase	RZ006 STEERING WHEEL ANGLE SENSOR PROGRAMMING
MEGANE IV	A.B.S.	ABS	Erase	RZ012 RESET
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE IV	UCH	UCH	Read Fault Code	
MEGANE IV	UCH	UCH	Erase Fault Code	
MEGANE IV	UCH	UCH	Read ECU Information	
MEGANE IV	UCH	UCH	Live Data	
MEGANE IV	UCH	UCH	Read Configuration	
MEGANE IV	UCH	UCH	Actuation Test	
MEGANE IV	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
MEGANE IV	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
MEGANE IV	UCH	UCH	Write Configuration	CF229 ALARM
MEGANE IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE IV	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
MEGANE IV	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
MEGANE IV	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
MEGANE IV	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
MEGANE IV	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
MEGANE IV	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
MEGANE IV	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
MEGANE IV	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
MEGANE IV	UCH	UCH	Write Configuration	CF310 STEERING LOCK
MEGANE IV	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
MEGANE IV	UCH	UCH	Write Configuration	CF313 MAKE
MEGANE IV	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
MEGANE IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE IV	UCH	UCH	Read Fault Code	
MEGANE IV	UCH	UCH	Erase Fault Code	
MEGANE IV	UCH	UCH	Read ECU Information	
MEGANE IV	UCH	UCH	Live Data	
MEGANE IV	UCH	UCH	Read Configuration	
MEGANE IV	UCH	UCH	Actuation Test	
MEGANE IV	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
MEGANE IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE IV	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
MEGANE IV	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
MEGANE IV	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
MEGANE IV	UCH	UCH	Write Configuration	CF229 ALARM
MEGANE IV	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
MEGANE IV	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
MEGANE IV	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
MEGANE IV	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
MEGANE IV	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
MEGANE IV	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
MEGANE IV	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
MEGANE IV	UCH	UCH	Write Configuration	CF310 STEERING LOCK
MEGANE IV	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
MEGANE IV	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
MEGANE IV	UCH	UCH	Write Configuration	CF313 MAKE
MEGANE IV	UCH	UCH	Other Configuration	VP001 WRITE V.I.N
MEGANE IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MEGANE IV	FRONT RADAR	FRONT RADAR	Read Fault Code	
MEGANE IV	FRONT RADAR	FRONT RADAR	Erase Fault Code	
MEGANE IV	FRONT RADAR	FRONT RADAR	Read ECU Information	
MEGANE IV	FRONT RADAR	FRONT RADAR	Live Data	
MEGANE IV	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
MEGANE IV	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
MEGANE IV	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Live Data	
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
MEGANE IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTMENT
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTMENT
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTMENT
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
MEGANE IV	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP032 AUTOMATIC GEARBOX CONTROL
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP024 PROGRAM CLUTCH ASSEMBLY
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
MEGANE IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
MEGANE IV	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Live Data	
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Read Configuration	
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
MEGANE IV	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
MEGANE IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
MEGANE IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
MEGANE IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
MEGANE IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
MEGANE IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Actuation Test	
MEGANE IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase	RZ010 FAULT MEMORY
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
MEGANE IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
MEGANE IV	UPC	UPC	Read Fault Code	
MEGANE IV	UPC	UPC	Erase Fault Code	
MEGANE IV	UPC	UPC	Read ECU Information	
MEGANE IV	UPC	UPC	Live Data	
MEGANE IV	UPC	UPC	Read Configuration	
MEGANE IV	UPC	UPC	Actuation Test	
MEGANE IV	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
MEGANE IV	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
MEGANE IV	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
MEGANE IV	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANE IV	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
MEGANE IV	UPC	UPC	Erase	RZ004 DTC reset
MEGANE IV	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
MEGANE IV	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MEGANE IV	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
MEGANE IV	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANE IV	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Read Fault Code	
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Erase Fault Code	
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Read ECU Information	
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Live Data	
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Actuation Test	
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP004 INHIBITION OF 4-WHEEL DRIVE FUNCTION
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP005 REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP001 WRITE VIN
MEGANE IV	4 WHEELS STEERING	4 WHEELS STEERING	Erase	RZ001 FAULT MEMORY
MEGANE IV	PARKING PROX CAN	PARKING AID	Read Fault Code	
MEGANE IV	PARKING PROX CAN	PARKING AID	Erase Fault Code	
MEGANE IV	PARKING PROX CAN	PARKING AID	Read ECU Information	
MEGANE IV	PARKING PROX CAN	PARKING AID	Live Data	
MEGANE IV	PARKING PROX CAN	PARKING AID	Read Configuration	
MEGANE IV	PARKING PROX CAN	PARKING AID	Actuation Test	
MEGANE IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANE IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
MEGANE IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
MEGANE IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
MEGANE IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MEGANE IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MEGANE IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
MEGANE IV	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP009 REAR SLIDE LEARNING
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP008 FRONT SLIDE LEARNING
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP010 LUMBAR LEARNING
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
MEGANE IV	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Live Data	
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Read Configuration	
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF011 GEOGRAPHICAL ZONE
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
MEGANE IV	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
MEGANE IV	RADIO	RADIO NAV.	Read Fault Code	
MEGANE IV	RADIO	RADIO NAV.	Erase Fault Code	
MEGANE IV	RADIO	RADIO NAV.	Read ECU Information	
MEGANE IV	RADIO	RADIO NAV.	Live Data	
MEGANE IV	RADIO	RADIO NAV.	Read Configuration	
MEGANE IV	RADIO	RADIO NAV.	Actuation Test	
MEGANE IV	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
MEGANE IV	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
MEGANE IV	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
MEGANE IV	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
MEGANE IV	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
MEGANE IV	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
MEGANE IV	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
MEGANE IV	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
MEGANE IV	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
MEGANE IV	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
MEGANE IV	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
MEGANE IV	RADIO	RADIO	Read Fault Code	
MEGANE IV	RADIO	RADIO	Erase Fault Code	
MEGANE IV	RADIO	RADIO	Read ECU Information	
MEGANE IV	RADIO	RADIO	Live Data	
MEGANE IV	RADIO	RADIO	Read Configuration	
MEGANE IV	RADIO	RADIO	Actuation Test	
MEGANE IV	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MEGANE IV	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MEGANE IV	RADIO	RADIO	Write Configuration	CF050 TIME FORMAT
MEGANE IV	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MEGANE IV	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
MEGANE IV	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MEGANE IV	RADIO	RADIO	Erase	RZ006 COMPUTER RESET
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANE IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
MEGANE IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
MEGANE IV	BMS	BMS	Read Fault Code	
MEGANE IV	BMS	BMS	Erase Fault Code	
MEGANE IV	BMS	BMS	Read ECU Information	
MEGANE IV	BMS	BMS	Live Data	
MEGANE IV	BMS	BMS	Actuation Test	
MEGANE IV	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
MEGANE IV	BMS	BMS	Other Configuration	VP015 MODULE CHANGE
MEGANE IV	BMS	BMS	Erase	RZ001 FAULT MEMORY
MEGANE IV	BMS	BMS	Configuration	SC002 SAVE COMPUTER DATA
MEGANE IV	BMS	BMS	Configuration	SC003 WRITE SAVED DATA
MEGANE IV	PEB	PEB	Read Fault Code	
MEGANE IV	PEB	PEB	Erase Fault Code	
MEGANE IV	PEB	PEB	Read ECU Information	
MEGANE IV	PEB	PEB	Live Data	
MEGANE IV	PEB	PEB	Other Configuration	VP003 WRITE V.I.N.
MEGANE IV	PEB	PEB	Erase	RZ001 FAULT MEMORY
MEGANE IV	BMS SAFETY	BMS SAFETY	Read Fault Code	
MEGANE IV	BMS SAFETY	BMS SAFETY	Erase Fault Code	
MEGANE IV	BMS SAFETY	BMS SAFETY	Read ECU Information	
MEGANE IV	BMS SAFETY	BMS SAFETY	Other Configuration	VP003 START AUTHORISATION FROM BMS SAFETY
MEGANE IV	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
MEGANE IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
MEGANE IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
MEGANE IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
MEGANE IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
MEGANE IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VP001 WRITE V.I.N.
MEGANE IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase	RZ001 FAULT MEMORY
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
MEGANE IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
MEGANE IV	AMPLIFIER	AMPLIFIER	Read Fault Code	
MEGANE IV	AMPLIFIER	AMPLIFIER	Erase Fault Code	
MEGANE IV	AMPLIFIER	AMPLIFIER	Read ECU Information	
MEGANE IV	AMPLIFIER	AMPLIFIER	Live Data	
MEGANE IV	AMPLIFIER	AMPLIFIER	Actuation Test	
MEGANE IV	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
MEGANE IV	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
MEGANE IV	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
MEGANE IV	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MEGANE IV	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
MEGANE IV	INJECTION	MDG1 INJECTION	Read Fault Code	
MEGANE IV	INJECTION	MDG1 INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	MDG1 INJECTION	Read ECU Information	
MEGANE IV	INJECTION	MDG1 INJECTION	Live Data	
MEGANE IV	INJECTION	MDG1 INJECTION	Function Test	
MEGANE IV	INJECTION	MDG1 INJECTION	Read Configuration	
MEGANE IV	INJECTION	MDG1 INJECTION	Actuation Test	
MEGANE IV	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
MEGANE IV	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ005 ENGINE ADAPTIVES
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
MEGANE IV	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
MEGANE IV	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV	INJECTION	INJECTION	Read Fault Code	
MEGANE IV	INJECTION	INJECTION	Erase Fault Code	
MEGANE IV	INJECTION	INJECTION	Read ECU Information	
MEGANE IV	INJECTION	INJECTION	Live Data	
MEGANE IV	INJECTION	INJECTION	Function Test	
MEGANE IV	INJECTION	INJECTION	Actuation Test	
MEGANE IV	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV	INJECTION	INJECTION	Other Configuration	VP040 PARTICLE FILTER REGENERATION
MEGANE IV	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANE IV	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV	INJECTION	INJECTION	Erase	RZ091 WASTE GATE REGULATION
MEGANE IV	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
MEGANE IV	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
MEGANE IV	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
MEGANE IV	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
MEGANE IV	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
MEGANE IV	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
MEGANE IV	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
MEGANE IV	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF093 VEHICLE LAYOUT
MEGANE IV	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF094 MODE
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
MEGANE IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE VIN
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV SEDAN	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV SEDAN	INJECTION	INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV SEDAN	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV SEDAN	INJECTION	INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
MEGANE IV SEDAN	INJECTION	INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
MEGANE IV SEDAN	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV SEDAN	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV SEDAN	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV SEDAN	A.B.S.	ABS	Read Fault Code	
MEGANE IV SEDAN	A.B.S.	ABS	Erase Fault Code	
MEGANE IV SEDAN	A.B.S.	ABS	Read ECU Information	
MEGANE IV SEDAN	A.B.S.	ABS	Live Data	
MEGANE IV SEDAN	A.B.S.	ABS	Read Configuration	
MEGANE IV SEDAN	A.B.S.	ABS	Actuation Test	
MEGANE IV SEDAN	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
MEGANE IV SEDAN	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MEGANE IV SEDAN	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MEGANE IV SEDAN	A.B.S.	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
MEGANE IV SEDAN	A.B.S.	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
MEGANE IV SEDAN	A.B.S.	ABS	Other Configuration	VP045 HILL START
MEGANE IV SEDAN	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ006 STEERING WHEEL ANGLE SENSOR PROGRAMMING
MEGANE IV SEDAN	A.B.S.	ABS	Erase	RZ012 RESET
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE IV SEDAN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	UCH	UCH	Read Fault Code	
MEGANE IV SEDAN	UCH	UCH	Erase Fault Code	
MEGANE IV SEDAN	UCH	UCH	Read ECU Information	
MEGANE IV SEDAN	UCH	UCH	Live Data	
MEGANE IV SEDAN	UCH	UCH	Read Configuration	
MEGANE IV SEDAN	UCH	UCH	Actuation Test	
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF229 ALARM
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF310 STEERING LOCK
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF313 MAKE
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
MEGANE IV SEDAN	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
MEGANE IV SEDAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	UCH	UCH	Read Fault Code	
MEGANE IV SEDAN	UCH	UCH	Erase Fault Code	
MEGANE IV SEDAN	UCH	UCH	Read ECU Information	
MEGANE IV SEDAN	UCH	UCH	Live Data	
MEGANE IV SEDAN	UCH	UCH	Read Configuration	
MEGANE IV SEDAN	UCH	UCH	Actuation Test	
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF229 ALARM
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF310 STEERING LOCK
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
MEGANE IV SEDAN	UCH	UCH	Write Configuration	CF313 MAKE
MEGANE IV SEDAN	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
MEGANE IV SEDAN	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MEGANE IV SEDAN	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Read Fault Code	
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Erase Fault Code	
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Read ECU Information	
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Live Data	
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Live Data	
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP035 PARAMETRAGE PRIVE 5
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
MEGANE IV SEDAN	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Live Data	
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Read Configuration	
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
MEGANE IV SEDAN	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
MEGANE IV SEDAN	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
MEGANE IV SEDAN	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
MEGANE IV SEDAN	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
MEGANE IV SEDAN	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	UPC	UPC	Read Fault Code	
MEGANE IV SEDAN	UPC	UPC	Erase Fault Code	
MEGANE IV SEDAN	UPC	UPC	Read ECU Information	
MEGANE IV SEDAN	UPC	UPC	Live Data	
MEGANE IV SEDAN	UPC	UPC	Read Configuration	
MEGANE IV SEDAN	UPC	UPC	Actuation Test	
MEGANE IV SEDAN	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
MEGANE IV SEDAN	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
MEGANE IV SEDAN	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
MEGANE IV SEDAN	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANE IV SEDAN	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
MEGANE IV SEDAN	UPC	UPC	Erase	RZ004 DTC reset
MEGANE IV SEDAN	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
MEGANE IV SEDAN	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANE IV SEDAN	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Read Fault Code	
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Read ECU Information	
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Live Data	
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Read Configuration	
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Actuation Test	
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP009 REAR SLIDE LEARNING
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP008 FRONT SLIDE LEARNING
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP010 LUMBAR LEARNING
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
MEGANE IV SEDAN	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Live Data	
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Read Configuration	
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF011 GEOGRAPHICAL ZONE
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	RADIO	RADIO NAV.	Read Fault Code	
MEGANE IV SEDAN	RADIO	RADIO NAV.	Erase Fault Code	
MEGANE IV SEDAN	RADIO	RADIO NAV.	Read ECU Information	
MEGANE IV SEDAN	RADIO	RADIO NAV.	Live Data	
MEGANE IV SEDAN	RADIO	RADIO NAV.	Read Configuration	
MEGANE IV SEDAN	RADIO	RADIO NAV.	Actuation Test	
MEGANE IV SEDAN	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
MEGANE IV SEDAN	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
MEGANE IV SEDAN	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
MEGANE IV SEDAN	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
MEGANE IV SEDAN	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
MEGANE IV SEDAN	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
MEGANE IV SEDAN	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
MEGANE IV SEDAN	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
MEGANE IV SEDAN	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
MEGANE IV SEDAN	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
MEGANE IV SEDAN	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
MEGANE IV SEDAN	RADIO	RADIO	Read Fault Code	
MEGANE IV SEDAN	RADIO	RADIO	Erase Fault Code	
MEGANE IV SEDAN	RADIO	RADIO	Read ECU Information	
MEGANE IV SEDAN	RADIO	RADIO	Live Data	
MEGANE IV SEDAN	RADIO	RADIO	Read Configuration	
MEGANE IV SEDAN	RADIO	RADIO	Actuation Test	
MEGANE IV SEDAN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MEGANE IV SEDAN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MEGANE IV SEDAN	RADIO	RADIO	Write Configuration	CF050 TIME FORMAT
MEGANE IV SEDAN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
MEGANE IV SEDAN	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MEGANE IV SEDAN	RADIO	RADIO	Erase	RZ006 COMPUTER RESET
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANE IV SEDAN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
MEGANE IV SEDAN	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
MEGANE IV SEDAN	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
MEGANE IV SEDAN	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
MEGANE IV SEDAN	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
MEGANE IV SEDAN	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VP001 WRITE V.I.N.
MEGANE IV SEDAN	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
MEGANE IV SEDAN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Read Fault Code	
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Erase Fault Code	
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Read ECU Information	
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Live Data	
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Actuation Test	
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
MEGANE IV SEDAN	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Read Fault Code	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase Fault Code	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Read ECU Information	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Live Data	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Function Test	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Read Configuration	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Actuation Test	
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFP. SENSOR
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
MEGANE IV SEDAN	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER







**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
MEGANE/SCEN.	INJECTION		Read Fault Code	
MEGANE/SCEN.	INJECTION		Erase Fault Code	
MEGANE/SCEN.	INJECTION		Read ECU Information	
MEGANE/SCEN.	INJECTION		Live Data	
MEGANE/SCEN.	INJECTION		Actuation Test	
MEGANE/SCEN.	INJECTION		Read Configuration	
MEGANE/SCEN.	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read ECU Information	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Live Data	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Actuation Test	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Configuration	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF580 POWER STEERING ELECTRIC PUMP UNIT
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read ECU Information	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Live Data	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Actuation Test	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Configuration	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF578 GEARBOX TYPE
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
MEGANE/SCEN.	INJECTION		Read Fault Code	
MEGANE/SCEN.	INJECTION		Erase Fault Code	
MEGANE/SCEN.	INJECTION		Read ECU Information	
MEGANE/SCEN.	INJECTION		Live Data	
MEGANE/SCEN.	INJECTION		Actuation Test	
MEGANE/SCEN.	INJECTION		Read Configuration	
MEGANE/SCEN.	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
MEGANE/SCEN.	INJECTION		Parameters Configuration	VP001 WRITE VIN
MEGANE/SCEN.	INJECTION		Read Fault Code	
MEGANE/SCEN.	INJECTION		Erase Fault Code	
MEGANE/SCEN.	INJECTION		Read ECU Information	
MEGANE/SCEN.	INJECTION		Live Data	
MEGANE/SCEN.	INJECTION		Actuation Test	
MEGANE/SCEN.	INJECTION		Read Configuration	
MEGANE/SCEN.	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read ECU Information	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Live Data	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Actuation Test	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Configuration	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF015 WITHOUT AIR CONDITIONING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF014 WITH AIR CONDITIONING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF588 WITHOUT POWER STEERING ELECTRIC PUMP UNIT
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF587 WITH POWER STEERING ELECTRIC PUMP UNIT
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF006 WITHOUT THERMOPLUNGERS
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF005 WITH THERMOPLUNGERS
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF589 WITH BOILER
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF590 WITHOUT BOILER
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase	RZ003 ENGINE PARAMETER ADAPTIVES
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase	RZ007 EGR VALVE PROGRAMMING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Erase Fault Code	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read ECU Information	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Live Data	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Actuation Test	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Read Configuration	
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF581 THERMOPLUNGERS
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF579 AIR CONDITIONING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF584 POWER ASSISTED STEERING
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF571 INCREMENT OF IDLE SPEED
MEGANE/SCEN.	INJECTION	DIESEL INJECTION	Write Configuration	CF572 DECREMENT IDLE SPEED
MEGANE/SCEN.	INJECTION		Read Fault Code	
MEGANE/SCEN.	INJECTION		Erase Fault Code	
MEGANE/SCEN.	INJECTION		Read ECU Information	
MEGANE/SCEN.	INJECTION		Live Data	
MEGANE/SCEN.	INJECTION		Actuation Test	
MEGANE/SCEN.	INJECTION		Read Configuration	
MEGANE/SCEN.	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
MEGANE/SCEN.	A.B.S.		Read Fault Code	
MEGANE/SCEN.	A.B.S.		Erase Fault Code	
MEGANE/SCEN.	A.B.S.		Read ECU Information	
MEGANE/SCEN.	A.B.S.		Live Data	
MEGANE/SCEN.	A.B.S.		Actuation Test	
MEGANE/SCEN.	A.B.S.		Parameters Configuration	VP004 VEHICLE PARAMETERS
MEGANE/SCEN.	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
MEGANE/SCEN.	A.B.S.		Parameters Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Read Fault Code	
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Erase Fault Code	
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Read ECU Information	
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Live Data	
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Actuation Test	
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Read Configuration	
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Parameters Configuration	VP003 LOCK PASSENGER'S FRONT AIR BAG
MEGANE/SCEN.	AIRBAG / PRETENSIONERS		Parameters Configuration	VP004 UNLOCK PASSENGER'S FRONT AIR BAG
MEGANE/SCEN.	AIR CONDITIONING		Read Fault Code	
MEGANE/SCEN.	AIR CONDITIONING		Erase Fault Code	
MEGANE/SCEN.	AIR CONDITIONING		Read ECU Information	
MEGANE/SCEN.	AIR CONDITIONING		Live Data	
MEGANE/SCEN.	AIR CONDITIONING		Actuation Test	
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITH HEATED REAR SCREEN
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITHOUT HEATED REAR SCREEN
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
MEGANE/SCEN.	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EDC16 C36 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC004 HIGH PRESSURE CIRCUIT LEAK TEST
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Live Data	
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Read Configuration	
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Actuation Test	
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC047 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC048 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ035 AVERAGE AIR TEMPERATURE
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ063 PREHEATER UNIT
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC048 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EDC17 CP19 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	V40 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ074 SWIRL FLAP
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ075 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 INJECTION PUMP ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	EDC17 C42 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	SID 307 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Other Configuration	VP067 STATIC TEST
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Other Configuration	VP214 PARAMETRAGE PRIVE 159
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Other Configuration	VP215 PARAMETRAGE PRIVE 160
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ091 WASTE GATE REGULATION
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ117 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EMS 3150 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 SWIRL FLAP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ064 EGR BYPASS PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2007 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2072 AIR FLOWMETER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2077 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2069 FUEL PUMP PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2012 EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2044 AIR DAMPER VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2002 EGR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2066 EXHAUST FLAP LOW SETTING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2014 ADAPTIVES ON AIR INTAKE FLAP FAULT
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2099 STOP AND START FUNCTION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2079 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2097 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2093 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2087 CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Erase	R2120 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC081 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC081 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC081 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2033 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2039 CAMSHAFT SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2064 ALCOHOL LEVEL PROG.
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2046 INJECTOR ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2099 STOP AND START FUNCTION
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2079 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2091 WASTE GATE REGULATION
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Erase	R2097 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Read Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Read ECU Information	
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Live Data	
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Read Configuration	
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Actuation Test	
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2001 FAULT MEMORY
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2037 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2031 PROGRAMMING THROTTLE LIMITS
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2003 ENGINE ADAPTIVES
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2093 INJECTION PUMP ADAPTATIVES
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2039 CAMSHAFT SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2091 WASTE GATE REGULATION
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2061 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2079 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	R2077 INJECTION PUMP ADAPTATIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANIII/SCENICIII	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANIII/SCENICIII	A.B.S.	ABS	Read Fault Code	
MEGANIII/SCENICIII	A.B.S.	ABS	Erase Fault Code	
MEGANIII/SCENICIII	A.B.S.	ABS	Read ECU Information	
MEGANIII/SCENICIII	A.B.S.	ABS	Live Data	
MEGANIII/SCENICIII	A.B.S.	ABS	Read Configuration	
MEGANIII/SCENICIII	A.B.S.	ABS	Actuation Test	
MEGANIII/SCENICIII	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MEGANIII/SCENICIII	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MEGANIII/SCENICIII	A.B.S.	ESP	Read Fault Code	
MEGANIII/SCENICIII	A.B.S.	ESP	Erase Fault Code	
MEGANIII/SCENICIII	A.B.S.	ESP	Read ECU Information	
MEGANIII/SCENICIII	A.B.S.	ESP	Live Data	
MEGANIII/SCENICIII	A.B.S.	ESP	Read Configuration	
MEGANIII/SCENICIII	A.B.S.	ESP	Actuation Test	
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP045 HILL START
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
MEGANIII/SCENICIII	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
MEGANIII/SCENICIII	A.B.S.	ESP	Read Fault Code	
MEGANIII/SCENICIII	A.B.S.	ESP	Erase Fault Code	
MEGANIII/SCENICIII	A.B.S.	ESP	Read ECU Information	
MEGANIII/SCENICIII	A.B.S.	ESP	Live Data	
MEGANIII/SCENICIII	A.B.S.	ESP	Read Configuration	
MEGANIII/SCENICIII	A.B.S.	ESP	Actuation Test	
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	A.B.S.	ESP	Other Configuration	VP045 HILL START
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MEGANIII/SCENICIII	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
MEGANIII/SCENICIII	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP032 EEPROM MEMORY WRITE PROCEDURE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF210 UNIT OF VOLUME
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
MEGANIII/SCENICIII	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	UCH	UCH	Read Fault Code	
MEGANIII/SCENICIII	UCH	UCH	Erase Fault Code	
MEGANIII/SCENICIII	UCH	UCH	Read ECU Information	
MEGANIII/SCENICIII	UCH	UCH	Live Data	
MEGANIII/SCENICIII	UCH	UCH	Read Configuration	
MEGANIII/SCENICIII	UCH	UCH	Actuation Test	
MEGANIII/SCENICIII	UCH	UCH	Write Configuration	CF223 CONFIGURATION RESERVEE 10
MEGANIII/SCENICIII	UCH	UCH	Write Configuration	CF290 STEERING LOCK
MEGANIII/SCENICIII	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
MEGANIII/SCENICIII	UCH	UCH	Other Configuration	VP019 PARAMETRAGE PRIVE 9
MEGANIII/SCENICIII	UCH	UCH	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	UCH	UCH	Configuration	SC005 CARD TESTING
MEGANIII/SCENICIII	UCH	UCH	Configuration	SC008 UCH TYPE
MEGANIII/SCENICIII	UCH	UCH	Configuration	SC047 VALVE CODE READING
MEGANIII/SCENICIII	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Live Data	
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
MEGANIII/SCENICIII	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Read Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Erase Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Read ECU Information	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Live Data	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Actuation Test	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Erase	RZ001 FAULT/S MEMORISED
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AJO AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
MEGANIII/SCENICIII	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Live Data	
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Read Configuration	
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Actuation Test	
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP012 ASSISTED ENGAGEMENT WHEN STATIONARY
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
MEGANIII/SCENICIII	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Actuation Test	
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	UPC	UPC	Read Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Erase Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Read ECU Information	
MEGANIII/SCENICIII	UPC	UPC	Live Data	
MEGANIII/SCENICIII	UPC	UPC	Actuation Test	
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	UPC	UPC	Read Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Erase Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Read ECU Information	
MEGANIII/SCENICIII	UPC	UPC	Live Data	
MEGANIII/SCENICIII	UPC	UPC	Actuation Test	
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	UPC	UPC	Read Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Erase Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Read ECU Information	
MEGANIII/SCENICIII	UPC	UPC	Live Data	
MEGANIII/SCENICIII	UPC	UPC	Actuation Test	
MEGANIII/SCENICIII	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP022 PARAMETRAGE PRIVE 1
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP023 PARAMETRAGE PRIVE 2
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP024 PARAMETRAGE PRIVE 3
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP025 PARAMETRAGE PRIVE 4
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ004 DTC reset
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
MEGANIII/SCENICIII	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANIII/SCENICIII	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANIII/SCENICIII	UPC	UPC	Read Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Erase Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Read ECU Information	
MEGANIII/SCENICIII	UPC	UPC	Live Data	
MEGANIII/SCENICIII	UPC	UPC	Actuation Test	
MEGANIII/SCENICIII	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ004 DTC reset
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
MEGANIII/SCENICIII	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANIII/SCENICIII	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANIII/SCENICIII	UPC	UPC	Read Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Erase Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Read ECU Information	
MEGANIII/SCENICIII	UPC	UPC	Live Data	
MEGANIII/SCENICIII	UPC	UPC	Actuation Test	
MEGANIII/SCENICIII	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ004 DTC reset
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
MEGANIII/SCENICIII	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
MEGANIII/SCENICIII	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANIII/SCENICIII	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANIII/SCENICIII	UPC	UPC	Read Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Erase Fault Code	
MEGANIII/SCENICIII	UPC	UPC	Read ECU Information	
MEGANIII/SCENICIII	UPC	UPC	Live Data	
MEGANIII/SCENICIII	UPC	UPC	Actuation Test	
MEGANIII/SCENICIII	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP010 NUMBER OF STARTING 3
MEGANIII/SCENICIII	UPC	UPC	Other Configuration	VP011 NUMBER OF STARTING 4



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP008 NUMBER OF STARTING 1
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP009 NUMBER OF STARTING 2
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP012 CORROSION BATTERY COUNTER MEMORISED
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP013 CORROSION BATTERY COUNTER ESTIMATED
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP014 BATTERY CORROSION COUNTER
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP015 BATTERY CYCLE COUNTER MEMORISED
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP016 BATTERY CYCLE COUNTER ESTIMATED
MEGANEIII/SCENICIII	UPC	UPC	Other Configuration	VP017 BATTERY CYCLE COUNTER
MEGANEIII/SCENICIII	UPC	UPC	Erase	RZ004 DTC reset
MEGANEIII/SCENICIII	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
MEGANEIII/SCENICIII	UPC	UPC	Erase	RZ010 NUMBER OF STARTING
MEGANEIII/SCENICIII	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
MEGANEIII/SCENICIII	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANEIII/SCENICIII	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Read Fault Code	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Erase Fault Code	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Read ECU Information	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Live Data	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Actuation Test	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Other Configuration	VP002 WRITE V.I.N.
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Other Configuration	VP004 COMPUTER INITIALISATION
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Other Configuration	VP003 COMPUTER PROGRAMMING/INITIALISATION
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	SUNROOF	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Read Fault Code	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Erase Fault Code	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Read ECU Information	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Live Data	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Actuation Test	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Other Configuration	VP002 WRITE V.I.N.
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Erase	RZ002 COMPUTER RESET
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Read Fault Code	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Erase Fault Code	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Read ECU Information	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Live Data	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Actuation Test	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Other Configuration	VP002 WRITE V.I.N.
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	REMOVABLE ROOF	Erase	RZ002 COMPUTER RESET
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Read Fault Code	
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Erase Fault Code	
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Read ECU Information	
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Read Configuration	
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Actuation Test	
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	LIGHTING	XEN BULB CORN. LIGHTS	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Read Fault Code	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Erase Fault Code	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Read ECU Information	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Live Data	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Read Configuration	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Read Fault Code	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Erase Fault Code	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Read ECU Information	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Live Data	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Read Configuration	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Actuation Test	
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Read Fault Code	
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Erase Fault Code	
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Read ECU Information	
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Live Data	
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Actuation Test	
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP004 COMPUTER REINITIALISATION
MEGANEIII/SCENICIII	DRIVER'S DOOR	DRIVER'S DOOR	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	PASSENGER'S DOOR	PASSENGER'S DOOR	Read Fault Code	
MEGANEIII/SCENICIII	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase Fault Code	
MEGANEIII/SCENICIII	PASSENGER'S DOOR	PASSENGER'S DOOR	Read ECU Information	
MEGANEIII/SCENICIII	PASSENGER'S DOOR	PASSENGER'S DOOR	Live Data	
MEGANEIII/SCENICIII	PASSENGER'S DOOR	PASSENGER'S DOOR	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Read Fault Code	
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Erase Fault Code	
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Read ECU Information	
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Live Data	
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP002 PROGRAMMING OF SEAT STOPS
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP003 WRITE VIN
MEGANEIII/SCENICIII	DRIVER'S SEAT	SEAT MEMORY	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Live Data	
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
MEGANEIII/SCENICIII	FRONT CAMERA	FRONT CAMERA	Erase	RZ002 ECU MEMORY
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
MEGANIII/SCENICIII	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
MEGANIII/SCENICIII	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
MEGANIII/SCENICIII	RADIO	R108 RADIO	Read Fault Code	
MEGANIII/SCENICIII	RADIO	R108 RADIO	Erase Fault Code	
MEGANIII/SCENICIII	RADIO	R108 RADIO	Read ECU Information	
MEGANIII/SCENICIII	RADIO	R108 RADIO	Live Data	
MEGANIII/SCENICIII	RADIO	R108 RADIO	Read Configuration	
MEGANIII/SCENICIII	RADIO	R108 RADIO	Actuation Test	
MEGANIII/SCENICIII	RADIO	R108 RADIO	Write Configuration	CF016 COUNTRY MODEL
MEGANIII/SCENICIII	RADIO	R108 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
MEGANIII/SCENICIII	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MEGANIII/SCENICIII	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
MEGANIII/SCENICIII	RADIO	LPN	Read Fault Code	
MEGANIII/SCENICIII	RADIO	LPN	Erase Fault Code	
MEGANIII/SCENICIII	RADIO	LPN	Read ECU Information	
MEGANIII/SCENICIII	RADIO	LPN	Live Data	
MEGANIII/SCENICIII	RADIO	LPN	Read Configuration	
MEGANIII/SCENICIII	RADIO	LPN	Actuation Test	
MEGANIII/SCENICIII	RADIO	LPN	Write Configuration	CF026 CD CHANGER AND AUXILIARY INPUT
MEGANIII/SCENICIII	RADIO	LPN	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	LPN	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MEGANIII/SCENICIII	RADIO	LPN	Erase	RZ003 FAULT MEMORY
MEGANIII/SCENICIII	RADIO	R307 RADIO	Read Fault Code	
MEGANIII/SCENICIII	RADIO	R307 RADIO	Erase Fault Code	
MEGANIII/SCENICIII	RADIO	R307 RADIO	Read ECU Information	
MEGANIII/SCENICIII	RADIO	R307 RADIO	Live Data	
MEGANIII/SCENICIII	RADIO	R307 RADIO	Read Configuration	
MEGANIII/SCENICIII	RADIO	R307 RADIO	Actuation Test	
MEGANIII/SCENICIII	RADIO	R307 RADIO	Write Configuration	CF016 COUNTRY MODEL
MEGANIII/SCENICIII	RADIO	R307 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
MEGANIII/SCENICIII	RADIO	R307 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MEGANIII/SCENICIII	RADIO	R307 RADIO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	R307 RADIO	Erase	RZ003 FAULT MEMORY
MEGANIII/SCENICIII	RADIO	R307 RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
MEGANIII/SCENICIII	RADIO	R307 RADIO	Erase	RZ001 TEST PARAMETERS
MEGANIII/SCENICIII	RADIO	R307 RADIO	Erase	RZ004 RESET RADIO
MEGANIII/SCENICIII	RADIO	R208 RADIO	Read Fault Code	
MEGANIII/SCENICIII	RADIO	R208 RADIO	Erase Fault Code	
MEGANIII/SCENICIII	RADIO	R208 RADIO	Read ECU Information	
MEGANIII/SCENICIII	RADIO	R208 RADIO	Live Data	
MEGANIII/SCENICIII	RADIO	R208 RADIO	Read Configuration	
MEGANIII/SCENICIII	RADIO	R208 RADIO	Actuation Test	
MEGANIII/SCENICIII	RADIO	R208 RADIO	Write Configuration	CF016 COUNTRY MODEL
MEGANIII/SCENICIII	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
MEGANIII/SCENICIII	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
MEGANIII/SCENICIII	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
MEGANIII/SCENICIII	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
MEGANIII/SCENICIII	RADIO	R208 RADIO	Write Configuration	CF007 VEHICLE CONFIGURATION
MEGANIII/SCENICIII	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MEGANIII/SCENICIII	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
MEGANIII/SCENICIII	RADIO	RADIO	Read Fault Code	
MEGANIII/SCENICIII	RADIO	RADIO	Erase Fault Code	
MEGANIII/SCENICIII	RADIO	RADIO	Read ECU Information	
MEGANIII/SCENICIII	RADIO	RADIO	Live Data	
MEGANIII/SCENICIII	RADIO	RADIO	Read Configuration	
MEGANIII/SCENICIII	RADIO	RADIO	Actuation Test	
MEGANIII/SCENICIII	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
MEGANIII/SCENICIII	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MEGANIII/SCENICIII	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
MEGANIII/SCENICIII	RADIO	RADIO	Write Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MEGANIII/SCENICIII	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MEGANIII/SCENICIII	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
MEGANIII/SCENICIII	RADIO	RADIO	Erase	RZ004 RESET RADIO
MEGANIII/SCENICIII	RADIO	RADIO	Read Fault Code	
MEGANIII/SCENICIII	RADIO	RADIO	Erase Fault Code	
MEGANIII/SCENICIII	RADIO	RADIO	Read ECU Information	
MEGANIII/SCENICIII	RADIO	RADIO	Live Data	
MEGANIII/SCENICIII	RADIO	RADIO	Read Configuration	
MEGANIII/SCENICIII	RADIO	RADIO	Actuation Test	
MEGANIII/SCENICIII	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
MEGANIII/SCENICIII	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANIII/SCENICIII	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
MEGANIII/SCENICIII	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
MEGANIII/SCENICIII	RADIO	RADIO	Erase	RZ004 RESET RADIO
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF005 HOUR SETTING
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
MEGANIII/SCENICIII	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read Fault Code	
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase Fault Code	
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read ECU Information	
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Live Data	
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP003 WRITE VIN
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ001 FAULT MEMORY
MEGANIII/SCENICIII	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ002 ECU MEMORY
MODUS	INJECTION	SIM 32 INJECTOR	Read Fault Code	
MODUS	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
MODUS	INJECTION	SIM 32 INJECTOR	Read ECU Information	
MODUS	INJECTION	SIM 32 INJECTOR	Live Data	
MODUS	INJECTION	SIM 32 INJECTOR	Read Configuration	
MODUS	INJECTION	SIM 32 INJECTOR	Actuation Test	
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MODUS	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC007 START OBD TEST: O2 SENSORS
MODUS	INJECTION	S3000 INJECTION	Read Fault Code	
MODUS	INJECTION	S3000 INJECTION	Erase Fault Code	
MODUS	INJECTION	S3000 INJECTION	Read ECU Information	
MODUS	INJECTION	S3000 INJECTION	Live Data	
MODUS	INJECTION	S3000 INJECTION	Read Configuration	
MODUS	INJECTION	S3000 INJECTION	Actuation Test	
MODUS	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
MODUS	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MODUS	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MODUS	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MODUS	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MODUS	INJECTION	INJECTION DCM 1.2	Live Data	
MODUS	INJECTION	INJECTION DCM 1.2	Read Configuration	
MODUS	INJECTION	INJECTION DCM 1.2	Actuation Test	
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MODUS	INJECTION	S3000 INJECTION	Read Fault Code	
MODUS	INJECTION	S3000 INJECTION	Erase Fault Code	
MODUS	INJECTION	S3000 INJECTION	Read ECU Information	
MODUS	INJECTION	S3000 INJECTION	Live Data	
MODUS	INJECTION	S3000 INJECTION	Read Configuration	
MODUS	INJECTION	S3000 INJECTION	Actuation Test	
MODUS	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
MODUS	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MODUS	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
MODUS	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MODUS	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MODUS	INJECTION	SID 301 INJECTION	Read Fault Code	
MODUS	INJECTION	SID 301 INJECTION	Erase Fault Code	
MODUS	INJECTION	SID 301 INJECTION	Read ECU Information	
MODUS	INJECTION	SID 301 INJECTION	Live Data	
MODUS	INJECTION	SID 301 INJECTION	Read Configuration	
MODUS	INJECTION	SID 301 INJECTION	Actuation Test	
MODUS	INJECTION	SID 301 INJECTION	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	SID 301 INJECTION	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	SID 301 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
MODUS	INJECTION	SID 301 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	SID 301 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MODUS	INJECTION	SID 301 INJECTION	Configuration	SC001 WRITE SAVED DATA
MODUS	INJECTION	SID 301 INJECTION	Configuration	SC013 ENTER VIN CODE
MODUS	INJECTION	SID 301 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MODUS	INJECTION	SIM 32 INJECTOR	Read Fault Code	
MODUS	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
MODUS	INJECTION	SIM 32 INJECTOR	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MODUS	INJECTION	SIM 32 INJECTOR	Live Data	
MODUS	INJECTION	SIM 32 INJECTOR	Read Configuration	
MODUS	INJECTION	SIM 32 INJECTOR	Actuation Test	
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MODUS	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MODUS	INJECTION	INJECTION DCM 1.2	Live Data	
MODUS	INJECTION	INJECTION DCM 1.2	Read Configuration	
MODUS	INJECTION	INJECTION DCM 1.2	Actuation Test	
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MODUS	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MODUS	INJECTION	INJECTION DCM 1.2	Live Data	
MODUS	INJECTION	INJECTION DCM 1.2	Read Configuration	
MODUS	INJECTION	INJECTION DCM 1.2	Actuation Test	
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MODUS	INJECTION	SIM 32 INJECTOR	Read Fault Code	
MODUS	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
MODUS	INJECTION	SIM 32 INJECTOR	Read ECU Information	
MODUS	INJECTION	SIM 32 INJECTOR	Live Data	
MODUS	INJECTION	SIM 32 INJECTOR	Read Configuration	
MODUS	INJECTION	SIM 32 INJECTOR	Actuation Test	
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
MODUS	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC007 START OBD TEST: O2 SENSORS
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC001 WRITE SAVED DATA
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC003 SAVE COMPUTER DATA
MODUS	INJECTION	SIM 32 INJECTOR	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MODUS	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MODUS	INJECTION	INJECTION DCM 1.2	Live Data	
MODUS	INJECTION	INJECTION DCM 1.2	Read Configuration	
MODUS	INJECTION	INJECTION DCM 1.2	Actuation Test	
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MODUS	INJECTION	SID 304 INJECTION	Read Fault Code	
MODUS	INJECTION	SID 304 INJECTION	Erase Fault Code	
MODUS	INJECTION	SID 304 INJECTION	Read ECU Information	
MODUS	INJECTION	SID 304 INJECTION	Live Data	
MODUS	INJECTION	SID 304 INJECTION	Read Configuration	
MODUS	INJECTION	SID 304 INJECTION	Actuation Test	
MODUS	INJECTION	SID 304 INJECTION	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	SID 304 INJECTION	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	SID 304 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
MODUS	INJECTION	SID 304 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	SID 304 INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
MODUS	INJECTION	SID 304 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MODUS	INJECTION	SID 304 INJECTION	Configuration	SC001 WRITE SAVED DATA
MODUS	INJECTION	SID 304 INJECTION	Configuration	SC013 ENTER VIN CODE
MODUS	INJECTION	SID 304 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MODUS	INJECTION	INJECTION DCM 1.2	Read Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
MODUS	INJECTION	INJECTION DCM 1.2	Read ECU Information	
MODUS	INJECTION	INJECTION DCM 1.2	Live Data	
MODUS	INJECTION	INJECTION DCM 1.2	Read Configuration	
MODUS	INJECTION	INJECTION DCM 1.2	Actuation Test	
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
MODUS	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC040 SPEED LIMITER
MODUS	INJECTION	INJECTION DCM 1.2	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
MODUS	INJECTION	INJECTION DCM 3.4	Read Fault Code	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MODUS	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
MODUS	INJECTION	INJECTION DCM 3.4	Read ECU Information	
MODUS	INJECTION	INJECTION DCM 3.4	Live Data	
MODUS	INJECTION	INJECTION DCM 3.4	Read Configuration	
MODUS	INJECTION	INJECTION DCM 3.4	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
MODUS	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MODUS	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MODUS	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
MODUS	INJECTION	EMS 3110 INJECTION	Read Fault Code	
MODUS	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
MODUS	INJECTION	EMS 3110 INJECTION	Read ECU Information	
MODUS	INJECTION	EMS 3110 INJECTION	Live Data	
MODUS	INJECTION	EMS 3110 INJECTION	Read Configuration	
MODUS	INJECTION	EMS 3110 INJECTION	Actuation Test	
MODUS	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MODUS	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MODUS	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC040 SPEED LIMITER
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
MODUS	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MODUS	A.B.S.	ABS 8.0 X77	Read Fault Code	
MODUS	A.B.S.	ABS 8.0 X77	Erase Fault Code	
MODUS	A.B.S.	ABS 8.0 X77	Read ECU Information	
MODUS	A.B.S.	ABS 8.0 X77	Live Data	
MODUS	A.B.S.	ABS 8.0 X77	Actuation Test	
MODUS	A.B.S.	ABS 8.0 X77	Other Configuration	VP007 SPEEDO INDEX
MODUS	A.B.S.	ABS 8.0 X77	Other Configuration	VP001 WRITE VIN
MODUS	A.B.S.	ABS 8.0 X77	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	A.B.S.	ABS 8.0 X77	Erase	RZ001 FAULT MEMORY
MODUS	A.B.S.	ABS 8.0 X77	Configuration	SC001 CHECK TARGET TEETH
MODUS	A.B.S.	ABS 8.0 X77	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MODUS	A.B.S.	ESP 8.0 X77	Read Fault Code	
MODUS	A.B.S.	ESP 8.0 X77	Erase Fault Code	
MODUS	A.B.S.	ESP 8.0 X77	Read ECU Information	
MODUS	A.B.S.	ESP 8.0 X77	Live Data	
MODUS	A.B.S.	ESP 8.0 X77	Actuation Test	
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP004 VEHICLE PARAMETERS
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP007 SPEEDO INDEX
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP001 WRITE VIN
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MODUS	A.B.S.	ESP 8.0 X77	Erase	RZ001 FAULT MEMORY
MODUS	A.B.S.	ESP 8.0 X77	Erase	RZ003 ESP SENSOR PROGRAMMING
MODUS	A.B.S.	ESP 8.0 X77	Configuration	SC001 CHECK TARGET TEETH
MODUS	A.B.S.	ESP 8.0 X77	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MODUS	A.B.S.	VSU	Read Fault Code	
MODUS	A.B.S.	VSU	Erase Fault Code	
MODUS	A.B.S.	VSU	Read ECU Information	
MODUS	A.B.S.	VSU	Live Data	
MODUS	A.B.S.	VSU	Actuation Test	
MODUS	A.B.S.	VSU	Other Configuration	VP007 SPEEDO INDEX
MODUS	A.B.S.	VSU	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	A.B.S.	VSU	Other Configuration	VP001 WRITE VIN
MODUS	A.B.S.	VSU	Erase	RZ001 FAULT MEMORY
MODUS	A.B.S.	VSU	Configuration	SC001 CHECK TARGET TEETH
MODUS	A.B.S.	ABS	Read Fault Code	
MODUS	A.B.S.	ABS	Erase Fault Code	
MODUS	A.B.S.	ABS	Read ECU Information	
MODUS	A.B.S.	ABS	Live Data	
MODUS	A.B.S.	ABS	Actuation Test	
MODUS	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
MODUS	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
MODUS	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	A.B.S.	ABS	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
MODUS	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
MODUS	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
MODUS	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MODUS	A.B.S.	ESP 8.0 X77	Read Fault Code	
MODUS	A.B.S.	ESP 8.0 X77	Erase Fault Code	
MODUS	A.B.S.	ESP 8.0 X77	Read ECU Information	
MODUS	A.B.S.	ESP 8.0 X77	Live Data	
MODUS	A.B.S.	ESP 8.0 X77	Actuation Test	
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP004 VEHICLE PARAMETERS
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP007 SPEEDO INDEX
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP001 WRITE VIN
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
MODUS	A.B.S.	ESP 8.0 X77	Other Configuration	VP032 VEH. SPEED AT INITIALISATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MODUS	A.B.S.	ESP 8.0 X77	Erase	RZ001 FAULT MEMORY
MODUS	A.B.S.	ESP 8.0 X77	Erase	RZ003 ESP SENSOR PROGRAMMING
MODUS	A.B.S.	ESP 8.0 X77	Configuration	SC001 CHECK TARGET TEETH
MODUS	A.B.S.	ESP 8.0 X77	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP019 FUEL SENDER CALIBRATION (EUROPE)
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP018 FUEL SENDER CALIBRATION (DOI).
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP019 FUEL SENDER CALIBRATION (EUROPE)
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP018 FUEL SENDER CALIBRATION (DOI).
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF202 FREE SHIFT
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP035 MODUS FUEL SENDER CALIBRATION (EUROPE)
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP018 FUEL SENDER CALIBRATION (DOI).
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP036 MODUS LONG FUEL SENDER CALIBRATION (EUROPE)
MODUS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
MODUS	UCH	UCH MODUS	Read Fault Code	
MODUS	UCH	UCH MODUS	Erase Fault Code	
MODUS	UCH	UCH MODUS	Read ECU Information	
MODUS	UCH	UCH MODUS	Live Data	
MODUS	UCH	UCH MODUS	Read Configuration	
MODUS	UCH	UCH MODUS	Actuation Test	
MODUS	UCH	UCH MODUS	Write Configuration	CF027 WINDSCREEN TYPE
MODUS	UCH	UCH MODUS	Write Configuration	CF112 HEADLIGHT WASHERS
MODUS	UCH	UCH MODUS	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
MODUS	UCH	UCH MODUS	Write Configuration	CF020 DRIVING TYPE
MODUS	UCH	UCH MODUS	Write Configuration	CF009 DEADLOCKING
MODUS	UCH	UCH MODUS	Write Configuration	CF110 TAILGATE FLAP
MODUS	UCH	UCH MODUS	Write Configuration	CF109 3-BUTTON KEY
MODUS	UCH	UCH MODUS	Write Configuration	CF104 CHILDPROOF LOCK
MODUS	UCH	UCH MODUS	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
MODUS	UCH	UCH MODUS	Write Configuration	CF118 UCH TYPE
MODUS	UCH	UCH MODUS	Other Configuration	VP004 WRITE VIN
MODUS	UCH	UCH MODUS	Other Configuration	VP016 NEW VEHICLE STORAGE MODE DEACTIVATION
MODUS	UCH	UCH MODUS	Other Configuration	RZ001 FAULT MEMORY
MODUS	UCH	UCH MODUS	Erase	SC018 CHECKING A KEY
MODUS	UCH	UCH MODUS	Configuration	
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Read Fault Code	
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Erase Fault Code	
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Read ECU Information	
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Live Data	
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Read Configuration	
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF010 WITH FR CHEST AIRBAGS+HEAD-LEVEL AIRBAGS
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF011 W FR CHEST AIRBAGS W/OUT HEAD-LVL AIRBAGS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF012 WITHOUT SIDE AIRBAGS
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF217 DRIVER LAP STRAP PRETENSIONER
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF218 PASSENGER LAP STRAP PRETENSIONER
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF009 FRONT SEAT BELT RETRACTORS
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF278 REAR INERTIA REELS
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF289 DRIVER'S SEAT POSITION SENSOR
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF207 DRIVER'S LATERAL SENSOR
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF208 PASSENGER'S LATERAL SENSOR
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF274 PASSENGER'S SEAT BUCKLE SENSOR
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF275 PASSENGER PRESENCE DETECTION SENSOR
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Other Configuration	VP010 WRITE VIN
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Erase	RZ001 FAULT MEMORY
MODUS	AIRBAG / PRETENSIONERS	AB9 AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
MODUS	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
MODUS	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
MODUS	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
MODUS	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
MODUS	AIR CONDITIONING	AIR CONDITIONING	Live Data	
MODUS	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
MODUS	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
MODUS	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF044 VEHICLE TYPE
MODUS	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF117 HEATING RESISTOR TYPE
MODUS	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF024 GEOGRAPHICAL ZONE
MODUS	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
MODUS	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read Fault Code	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase Fault Code	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read ECU Information	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Live Data	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Actuation Test	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Read Fault Code	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase Fault Code	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Read ECU Information	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Live Data	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Actuation Test	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP017 PROGRAM CLUTCH OPEN POSITION
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP001 WRITE VIN
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ001 FAULT'S MEMORISED
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ002 PROGRAMMED VALUES
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read Fault Code	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase Fault Code	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read ECU Information	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Live Data	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Actuation Test	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Read Fault Code	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase Fault Code	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Read ECU Information	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Live Data	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Actuation Test	
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP017 PROGRAM CLUTCH OPEN POSITION
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Other Configuration	VP001 WRITE VIN
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ001 FAULT'S MEMORISED
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ002 PROGRAMMED VALUES
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
MODUS	AUTOMATIC GEARBOX	JA AUTO_GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read Fault Code	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase Fault Code	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Read ECU Information	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Live Data	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Actuation Test	
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
MODUS	AUTOMATIC GEARBOX	DPO 1a2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
MODUS	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
MODUS	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
MODUS	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
MODUS	VARIABLE P.A.S.	Electric PAS	Live Data	
MODUS	VARIABLE P.A.S.	Electric PAS	Read Configuration	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP001 WRITE VIN
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP006 COMPUTER CALIBRATION
MODUS	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
MODUS	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
MODUS	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
MODUS	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
MODUS	VARIABLE P.A.S.	Electric PAS	Live Data	
MODUS	VARIABLE P.A.S.	Electric PAS	Read Configuration	
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP001 WRITE VIN
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
MODUS	VARIABLE P.A.S.	Electric PAS	Other Configuration	VP006 COMPUTER CALIBRATION
MODUS	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
MODUS	UPC	UPC	Read Fault Code	
MODUS	UPC	UPC	Erase Fault Code	
MODUS	UPC	UPC	Read ECU Information	
MODUS	UPC	UPC	Live Data	
MODUS	UPC	UPC	Read Configuration	
MODUS	UPC	UPC	Actuation Test	
MODUS	UPC	UPC	Other Configuration	VP003 WRITE VIN
MODUS	UPC	UPC	Other Configuration	VP004 VEHICLE PARAMETERS
MODUS	UPC	UPC	Erase	RZ001 FAULT MEMORY
MODUS	UPC	UPC	Read Fault Code	
MODUS	UPC	UPC	Erase Fault Code	
MODUS	UPC	UPC	Read ECU Information	
MODUS	UPC	UPC	Live Data	
MODUS	UPC	UPC	Read Configuration	
MODUS	UPC	UPC	Actuation Test	
MODUS	UPC	UPC	Other Configuration	VP003 WRITE VIN
MODUS	UPC	UPC	Other Configuration	VP004 VEHICLE PARAMETERS
MODUS	UPC	UPC	Other Configuration	VP021 VEHICLE PARAMETERS
MODUS	UPC	UPC	Erase	RZ001 FAULT MEMORY
MODUS	TYRES	TPMS MODUS	Read Fault Code	
MODUS	TYRES	TPMS MODUS	Erase Fault Code	
MODUS	TYRES	TPMS MODUS	Read ECU Information	
MODUS	TYRES	TPMS MODUS	Live Data	
MODUS	TYRES	TPMS MODUS	Read Configuration	
MODUS	TYRES	TPMS MODUS	Write Configuration	CF005 VEHICLE TYPE
MODUS	TYRES	TPMS MODUS	Other Configuration	VP004 WRITE VIN
MODUS	TYRES	TPMS MODUS	Other Configuration	VP021 SELECTION OF VALVE SET
MODUS	TYRES	TPMS MODUS	Erase	RZ002 FAULT MEMORY
MODUS	TYRES	TPMS MODUS	Configuration	SC006 READING THE VALVE SET AND VALVE CODES
MODUS	TYRES	TPMS MODUS	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
MODUS	TYRES	TPMS MODUS	Configuration	SC001 PROGRAMMING A VALVE CODE
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Read Fault Code	
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Erase Fault Code	
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Read ECU Information	
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Live Data	
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Read Configuration	
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Actuation Test	
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF001 VEHICLE TYPE
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF002 DYNAMIC CORRECTION
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF004 DIPPED HEADLIGHTS RAISE
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF005 SIGNATURE
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Write Configuration	CF006 CORNERING LIGHTS
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP001 WRITE VIN
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
MODUS	LIGHTING	XEN BULB CORN. LIGHTS	Erase	RZ001 FAULT MEMORY
MODUS	LIGHTING	CORNERING LIGHTS	Read Fault Code	
MODUS	LIGHTING	CORNERING LIGHTS	Erase Fault Code	
MODUS	LIGHTING	CORNERING LIGHTS	Read ECU Information	
MODUS	LIGHTING	CORNERING LIGHTS	Live Data	
MODUS	LIGHTING	CORNERING LIGHTS	Read Configuration	
MODUS	LIGHTING	CORNERING LIGHTS	Actuation Test	
MODUS	LIGHTING	CORNERING LIGHTS	Write Configuration	CF001 VEHICLE TYPE
MODUS	LIGHTING	CORNERING LIGHTS	Write Configuration	CF006 CORNERING LIGHTS
MODUS	LIGHTING	CORNERING LIGHTS	Other Configuration	VP001 WRITE VIN
MODUS	LIGHTING	CORNERING LIGHTS	Erase	RZ001 FAULT MEMORY
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Read Fault Code	
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Erase Fault Code	
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Read ECU Information	
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Live Data	
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Read Configuration	
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Actuation Test	
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Write Configuration	CF009 LANGUAGE
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Other Configuration	VP004 MICROPHONE TEST
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Other Configuration	VP005 SERIAL LINK TEST
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Other Configuration	VP006 AUDIO LINKS TEST
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Other Configuration	VP002 WRITE VIN
MODUS	HANDS-FREE KIT	HANDS FREE TELEPHONE 2	Erase	RZ001 FAULT MEMORY
MODUS	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
MODUS	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
MODUS	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
MODUS	PARKING ASSISTANCE	PARKING AID	Live Data	
MODUS	PARKING ASSISTANCE	PARKING AID	Read Configuration	
MODUS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
MODUS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MODUS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MODUS	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
MODUS	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
MODUS	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
MODUS	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
MODUS	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
MODUS	PARKING ASSISTANCE	PARKING AID	Live Data	
MODUS	PARKING ASSISTANCE	PARKING AID	Read Configuration	
MODUS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
MODUS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MODUS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
MODUS	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
MODUS	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
MODUS	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ032 AIR PATH PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC004 HIGH PRESSURE CIRCUIT LEAK TEST
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 305 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ051 INJECTOR ADAPTIVES NO. 1
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ052 INJECTOR ADAPTIVES NO. 2
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ053 INJECTOR ADAPTIVES NO. 3
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Erase	RZ054 INJECTOR ADAPTIVES NO. 4
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC047 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC048 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	V40 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP153 PARAMETRAGE PRIVE 98
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ074 SWIRL FLAP
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Configuration	SC047 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3120 INJECTION	Configuration	SC048 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP010 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ099 STOP AND START FUNCTION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ091 WASTE GATE REGULATION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
NEW SM3/FLUENCE/MEGANE	INJECTION	EMS 3125 INJECTION	Configuration	SC040 SPEED LIMITER
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Live Data	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Read Configuration	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Actuation Test	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Other Configuration	VP007 SPEED INDEX
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Live Data	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Read Configuration	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Actuation Test	
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Other Configuration	VP007 SPEED INDEX
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Other Configuration	VP045 HILL START
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
NEW SM3/FLUENCE/MEGANE	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Live Data	
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Other Configuration	VP007 SPEED INDEX
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	A.B.S.	VSU	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP032 EEPROM MEMORY WRITE PROCEDURE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP032 EEPROM MEMORY WRITE PROCEDURE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF179 REV COUNTER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF253 VOLTMETER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF254 AMMETER
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC016 DISTANCE BEFORE NEXT MAINTENANCE
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Live Data	
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Read Configuration	
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Actuation Test	
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Write Configuration	CF223 CONFIGURATION RESERVEE 10
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Write Configuration	CF290 STEERING LOCK
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Configuration	SC005 CARD TESTING
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Configuration	SC008 UCH TYPE
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Configuration	SC047 VALVE CODE READING
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
NEW SM3/FLUENCE/MEGANE	UCH	UCH	Configuration	SC018 CHECKING A KEY
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Live Data	
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTMENT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTMENT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTMENT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT

**Diagnosis list Renault\_ v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Live Data	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Read Configuration	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Actuation Test	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP012 ASSISTED ENGAGEMENT WHEN STATIONARY
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Actuation Test	
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Live Data	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Actuation Test	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Other Configuration	VP003 WRITE VIN
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Live Data	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Actuation Test	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Other Configuration	VP003 WRITE VIN
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Live Data	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Actuation Test	
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Write Configuration	CF037 STOP&START FUNCTION CONFIGURATION
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Write Configuration	CF043 ESM INHIBITION COMMAND
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Write Configuration	CF044 ESM ACTIVATION COMMAND
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Other Configuration	VP003 WRITE VIN
NEW SM3/FLUENCE/MEGANE	UPC	UPC	Erase	RZ004 DTC reset
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Live Data	
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Actuation Test	
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Other Configuration	VP002 WRITE V.I.N
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Other Configuration	VP004 COMPUTER INITIALISATION
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Other Configuration	VP003 COMPUTER PROGRAMMING/INITIALISATION
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	SUNROOF	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Read Configuration	
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Actuation Test	
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	LIGHTING	XEN BULB CORN LIGHTS	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Live Data	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Read Configuration	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Live Data	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Read Configuration	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Actuation Test	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Live Data	
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Actuation Test	
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP004 COMPUTER REINITIALISATION
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	DRIVER'S DOOR	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Live Data	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Actuation Test	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Other Configuration	VP002 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Live Data	
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Write Configuration	CF003 CHARGE PLUG
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Write Configuration	CF002 INSTRUMENT PANEL
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Write Configuration	CF001 BMS
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Other Configuration	VP002 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	BCB	BCB	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Live Data	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ002 TRACTION BATTERY LOCK
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ003 TRACTION BATTERY INTERLOCK
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Live Data	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Other Configuration	VP015 MODULE CHANGE
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ002 TRACTION BATTERY LOCK
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ003 TRACTION BATTERY INTERLOCK
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Live Data	
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Other Configuration	VP015 MODULE CHANGE
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ002 TRACTION BATTERY LOCK
NEW SM3/FLUENCE/MEGANE	BMS	BMS	Erase	RZ003 TRACTION BATTERY INTERLOCK
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Live Data	
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Read Configuration	
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Actuation Test	
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Write Configuration	CF003 HEATING
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Other Configuration	VP003 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Other Configuration	VP001 VACUUM PUMP AGEING COUNTER
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ002 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ001 VACUUM PUMP AGEING COUNTER
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ005 TRACTION BATTERY LOCK
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ004 FAN ASSEMBLY
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ007 CHARGE WATER PUMP
NEW SM3/FLUENCE/MEGANE	EVC	EVC	Erase	RZ006 DRIVING WATER PUMP
NEW SM3/FLUENCE/MEGANE	PEB	PEB	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	PEB	PEB	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	PEB	PEB	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	PEB	PEB	Live Data	
NEW SM3/FLUENCE/MEGANE	PEB	PEB	Other Configuration	VP003 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	PEB	PEB	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Live Data	
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Other Configuration	VP003 START AUTHORISATION FROM BMS SAFETY
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Live Data	
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Read Configuration	
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Actuation Test	
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Write Configuration	CF016 COUNTRY MODEL
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Live Data	
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Read Configuration	
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Actuation Test	
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Write Configuration	CF016 COUNTRY MODEL
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Write Configuration	CF007 VEHICLE CONFIGURATION
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Live Data	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read Configuration	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Actuation Test	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Live Data	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read Configuration	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Actuation Test	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase	RZ004 RESET RADIO
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Live Data	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Read Configuration	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Actuation Test	
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	RADIO	RADIO	Erase	RZ004 RESET RADIO
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF005 HOUR SETTING
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Live Data	
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Read Configuration	
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Actuation Test	
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Write Configuration	CF001 SUBWOOFER

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ002 ECU MEMORY
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Read Fault Code	
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Erase Fault Code	
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Read ECU Information	
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Live Data	
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Read Configuration	
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
NEW SM3/FLUENCE/MEGANE	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	V42 INJECTION	Read Fault Code	
SANDERO	INJECTION	V42 INJECTION	Erase Fault Code	
SANDERO	INJECTION	V42 INJECTION	Read ECU Information	
SANDERO	INJECTION	V42 INJECTION	Live Data	
SANDERO	INJECTION	V42 INJECTION	Actuation Test	
SANDERO	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SANDERO	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SANDERO	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
SANDERO	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SANDERO	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
SANDERO	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
SANDERO	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
SANDERO	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
SANDERO	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SANDERO	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SANDERO	INJECTION	INJECTION DCM 3.4	Read Fault Code	
SANDERO	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
SANDERO	INJECTION	INJECTION DCM 3.4	Read ECU Information	
SANDERO	INJECTION	INJECTION DCM 3.4	Live Data	
SANDERO	INJECTION	INJECTION DCM 3.4	Read Configuration	
SANDERO	INJECTION	INJECTION DCM 3.4	Actuation Test	
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
SANDERO	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS); DILUTION
SANDERO	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
SANDERO	RADIO	RADIO	Read Fault Code	
SANDERO	RADIO	RADIO	Erase Fault Code	
SANDERO	RADIO	RADIO	Read ECU Information	
SANDERO	RADIO	RADIO	Live Data	
SANDERO	RADIO	RADIO	Read Configuration	
SANDERO	RADIO	RADIO	Actuation Test	
SANDERO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SANDERO	RADIO	RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
SANDERO	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
SANDERO	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
SANDERO	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
SANDERO	RADIO	RADIO	Configuration	SC009 COMP CONFIGURATION
SANDERO	RADIO	RADIO	Read Fault Code	
SANDERO	RADIO	RADIO	Erase Fault Code	
SANDERO	RADIO	RADIO	Read ECU Information	
SANDERO	RADIO	RADIO	Live Data	
SANDERO	RADIO	RADIO	Read Configuration	
SANDERO	RADIO	RADIO	Actuation Test	
SANDERO	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
SANDERO	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SANDERO	RADIO	RADIO	Write Configuration	CF014 DRIVING TYPE
SANDERO	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SANDERO	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
SANDERO	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
SANDERO	RADIO	RADIO	Erase	RZ004 RESET RADIO
SANDERO	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
SANDERO	INJECTION	INJECTION DCM 1.2	Read Fault Code	
SANDERO	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
SANDERO	INJECTION	INJECTION DCM 1.2	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SANDERO	INJECTION	INJECTION DCM 1.2	Live Data	
SANDERO	INJECTION	INJECTION DCM 1.2	Actuation Test	
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SANDERO	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SANDERO	INJECTION	INJECTION DCM 1.2	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SANDERO	INJECTION	SIM 32 INJECTOR	Read Fault Code	
SANDERO	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
SANDERO	INJECTION	SIM 32 INJECTOR	Read ECU Information	
SANDERO	INJECTION	SIM 32 INJECTOR	Live Data	
SANDERO	INJECTION	SIM 32 INJECTOR	Read Configuration	
SANDERO	INJECTION	SIM 32 INJECTOR	Actuation Test	
SANDERO	INJECTION	SIM 32 INJECTOR	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	SIM 32 INJECTOR	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	SIM 32 INJECTOR	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	SIRIUS 32 INJECTION	Read Fault Code	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase Fault Code	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Read ECU Information	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Live Data	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Read Configuration	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Actuation Test	
SANDERO	INJECTION	SIRIUS 32 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ094 IDLE SPEED LEARNING
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
SANDERO	INJECTION	SIRIUS 32 INJECTION	Erase	RZ096 TORQUE LEARNING
SANDERO	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Live Data	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
SANDERO	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	EMS 3130 INJECTION	Read Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Read ECU Information	
SANDERO	INJECTION	EMS 3130 INJECTION	Live Data	
SANDERO	INJECTION	EMS 3130 INJECTION	Read Configuration	
SANDERO	INJECTION	EMS 3130 INJECTION	Actuation Test	
SANDERO	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	INJECTION	EMS 3130 INJECTION	Read Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Erase Fault Code	
SANDERO	INJECTION	EMS 3130 INJECTION	Read ECU Information	
SANDERO	INJECTION	EMS 3130 INJECTION	Live Data	
SANDERO	INJECTION	EMS 3130 INJECTION	Read Configuration	
SANDERO	INJECTION	EMS 3130 INJECTION	Actuation Test	
SANDERO	INJECTION	EMS 3130 INJECTION	Other Configuration	VP020 WRITE VIN
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ007 FAULT MEMORY
SANDERO	INJECTION	EMS 3130 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SANDERO	A.B.S.	ABS	Read Fault Code	
SANDERO	A.B.S.	ABS	Erase Fault Code	
SANDERO	A.B.S.	ABS	Read ECU Information	
SANDERO	A.B.S.	ABS	Live Data	
SANDERO	A.B.S.	ABS	Actuation Test	
SANDERO	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
SANDERO	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
SANDERO	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
SANDERO	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
SANDERO	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
SANDERO	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SANDERO	A.B.S.	ABS	Read Fault Code	
SANDERO	A.B.S.	ABS	Erase Fault Code	
SANDERO	A.B.S.	ABS	Read ECU Information	
SANDERO	A.B.S.	ABS	Live Data	
SANDERO	A.B.S.	ABS	Actuation Test	
SANDERO	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
SANDERO	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
SANDERO	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
SANDERO	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
SANDERO	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
SANDERO	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Write Configuration	CF272 SDO
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	UCH	UCH	Configuration	SC052 UCH TYPE
SANDERO	UCH	UCH	Read Fault Code	
SANDERO	UCH	UCH	Erase Fault Code	
SANDERO	UCH	UCH	Read ECU Information	
SANDERO	UCH	UCH	Live Data	
SANDERO	UCH	UCH	Read Configuration	
SANDERO	UCH	UCH	Actuation Test	
SANDERO	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
SANDERO	UCH	UCH	Write Configuration	CF272 SDO
SANDERO	UCH	UCH	Other Configuration	VP004 WRITE VIN
SANDERO	UCH	UCH	Erase	RZ001 FAULT MEMORY
SANDERO	UCH	UCH	Configuration	SC008 UCH TYPE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF020 FRONT LEFT-HAND INERTIA WHEEL
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF021 FRONT RIGHT-HAND INERTIA WHEEL
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF048 SEAT BELT REMINDER BUZZER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SANDERO	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase Fault Code	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Read ECU Information	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Live Data	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Actuation Test	
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP001 WRITE VIN
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ004 FAULT MEMORY
SANDERO	AUTOMATIC GEARBOX	DPO TA2005 ATX	Erase	RZ005 AUTO-ADAPTIVES
SANDERO	GAS INJ.	GAS INJECTION 3000	Read Fault Code	
SANDERO	GAS INJ.	GAS INJECTION 3000	Erase Fault Code	
SANDERO	GAS INJ.	GAS INJECTION 3000	Read ECU Information	
SANDERO	GAS INJ.	GAS INJECTION 3000	Live Data	
SANDERO	GAS INJ.	GAS INJECTION 3000	Read Configuration	
SANDERO	GAS INJ.	GAS INJECTION 3000	Actuation Test	
SANDERO	GAS INJ.	GAS INJECTION 3000	Other Configuration	VP001 WRITE VIN
SANDERO	GAS INJ.	GAS INJECTION 3000	Erase	RZ001 FAULT MEMORY
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Read Configuration	
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP005 WRITE DATE OF AFTER SALES OPERATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP006 COMPUTER CALIBRATION
SANDERO	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
SANDERO	TRACKER	TRACKER	Read Fault Code	
SANDERO	TRACKER	TRACKER	Erase Fault Code	
SANDERO	TRACKER	TRACKER	Read ECU Information	
SANDERO	TRACKER	TRACKER	Live Data	
SANDERO	TRACKER	TRACKER	Read Configuration	
SANDERO	TRACKER	TRACKER	Write Configuration	CF001 SVT CONFIGURATION
SANDERO	TRACKER	TRACKER	Other Configuration	VP001 WRITE V.I.N.
SANDERO	TRACKER	TRACKER	Erase	RZ001 FAULT MEMORY
SANDERO	INJECTION	EMS 3120 INJECTION	Read Fault Code	
SANDERO	INJECTION	EMS 3120 INJECTION	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SANDERO	INJECTION	EMS 3120 INJECTION	Read ECU Information	
SANDERO	INJECTION	EMS 3120 INJECTION	Live Data	
SANDERO	INJECTION	EMS 3120 INJECTION	Function Test	
SANDERO	INJECTION	EMS 3120 INJECTION	Read Configuration	
SANDERO	INJECTION	EMS 3120 INJECTION	Actuation Test	
SANDERO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SANDERO	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SANDERO	INJECTION	EMS 3120 INJECTION	Erase	RZ046 INJECTOR ADAPTIVES
SANDERO	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
SANDERO	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SANDERO	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	S3000 INJECTION	Read Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Read ECU Information	
SCENIC II	INJECTION	S3000 INJECTION	Live Data	
SCENIC II	INJECTION	S3000 INJECTION	Read Configuration	
SCENIC II	INJECTION	S3000 INJECTION	Actuation Test	
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
SCENIC II	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
SCENIC II	INJECTION	DDCR INJECTION	Read Fault Code	
SCENIC II	INJECTION	DDCR INJECTION	Erase Fault Code	
SCENIC II	INJECTION	DDCR INJECTION	Read ECU Information	
SCENIC II	INJECTION	DDCR INJECTION	Live Data	
SCENIC II	INJECTION	DDCR INJECTION	Read Configuration	
SCENIC II	INJECTION	DDCR INJECTION	Actuation Test	
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	DDCR INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	DDCR INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	DDCR INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	S3000 INJECTION	Read Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Read ECU Information	
SCENIC II	INJECTION	S3000 INJECTION	Live Data	
SCENIC II	INJECTION	S3000 INJECTION	Read Configuration	
SCENIC II	INJECTION	S3000 INJECTION	Actuation Test	
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	INJECTION	S3000 INJECTION	Read Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Read ECU Information	
SCENIC II	INJECTION	S3000 INJECTION	Live Data	
SCENIC II	INJECTION	S3000 INJECTION	Read Configuration	
SCENIC II	INJECTION	S3000 INJECTION	Actuation Test	
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
SCENIC II	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
SCENIC II	INJECTION	DDCR INJECTION	Read Fault Code	
SCENIC II	INJECTION	DDCR INJECTION	Erase Fault Code	
SCENIC II	INJECTION	DDCR INJECTION	Read ECU Information	
SCENIC II	INJECTION	DDCR INJECTION	Live Data	
SCENIC II	INJECTION	DDCR INJECTION	Read Configuration	
SCENIC II	INJECTION	DDCR INJECTION	Actuation Test	
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC II	INJECTION	DDCR INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	DDCR INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	DDCR INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	DDCR INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	DDCR INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	SID 301 INJECTION	Read Fault Code	
SCENIC II	INJECTION	SID 301 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	SID 301 INJECTION	Read ECU Information	
SCENIC II	INJECTION	SID 301 INJECTION	Live Data	
SCENIC II	INJECTION	SID 301 INJECTION	Read Configuration	
SCENIC II	INJECTION	SID 301 INJECTION	Actuation Test	
SCENIC II	INJECTION	SID 301 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	SID 301 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	SID 301 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	SID 301 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	SID 301 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	SID 301 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	SID 301 INJECTION	Configuration	SC013 ENTER VIN CODE
SCENIC II	INJECTION	SID 301 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
SCENIC II	INJECTION	INJECTION DCM 1.2	Live Data	
SCENIC II	INJECTION	INJECTION DCM 1.2	Actuation Test	
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	S3000 INJECTION	Read Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Read ECU Information	
SCENIC II	INJECTION	S3000 INJECTION	Live Data	
SCENIC II	INJECTION	S3000 INJECTION	Read Configuration	
SCENIC II	INJECTION	S3000 INJECTION	Actuation Test	
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
SCENIC II	INJECTION	INJECTION DCM 1.2	Live Data	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Configuration	
SCENIC II	INJECTION	INJECTION DCM 1.2	Actuation Test	
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
SCENIC II	INJECTION	INJECTION DCM 1.2	Live Data	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Configuration	
SCENIC II	INJECTION	INJECTION DCM 1.2	Actuation Test	
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
SCENIC II	INJECTION	INJECTION DCM 1.2	Live Data	
SCENIC II	INJECTION	INJECTION DCM 1.2	Read Configuration	
SCENIC II	INJECTION	INJECTION DCM 1.2	Actuation Test	
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	SID 304 INJECTION	Read Fault Code	
SCENIC II	INJECTION	SID 304 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	SID 304 INJECTION	Read ECU Information	
SCENIC II	INJECTION	SID 304 INJECTION	Live Data	
SCENIC II	INJECTION	SID 304 INJECTION	Read Configuration	
SCENIC II	INJECTION	SID 304 INJECTION	Actuation Test	
SCENIC II	INJECTION	SID 304 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	SID 304 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	SID 304 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	SID 304 INJECTION	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	SID 304 INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
SCENIC II	INJECTION	SID 304 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	SID 304 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	SID 304 INJECTION	Configuration	SC013 ENTER VIN CODE
SCENIC II	INJECTION	SID 304 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C3 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
SCENIC II	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP035 STOP ELECTRICAL CONSUMER PREVENTION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC II	INJECTION	S3000 INJECTION	Read Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	S3000 INJECTION	Read ECU Information	
SCENIC II	INJECTION	S3000 INJECTION	Live Data	
SCENIC II	INJECTION	S3000 INJECTION	Read Configuration	
SCENIC II	INJECTION	S3000 INJECTION	Actuation Test	
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC II	INJECTION	INJECTION DGM 1.2	Read Fault Code	
SCENIC II	INJECTION	INJECTION DGM 1.2	Erase Fault Code	
SCENIC II	INJECTION	INJECTION DGM 1.2	Read ECU Information	
SCENIC II	INJECTION	INJECTION DGM 1.2	Live Data	
SCENIC II	INJECTION	INJECTION DGM 1.2	Read Configuration	
SCENIC II	INJECTION	INJECTION DGM 1.2	Actuation Test	
SCENIC II	INJECTION	INJECTION DGM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DGM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DGM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DGM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC II	INJECTION	INJECTION DGM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
SCENIC II	INJECTION	INJECTION DGM 1.2	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	INJECTION DGM 1.2	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	INJECTION DGM 1.2	Erase	RZ002 EGR ADAPTIVES
SCENIC II	INJECTION	INJECTION DGM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
SCENIC II	INJECTION	INJECTION DGM 1.2	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	INJECTION DGM 1.2	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	INJECTION DGM 1.2	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	INJECTION DGM 1.2	Configuration	SC040 SPEED LIMITER
SCENIC II	INJECTION	INJECTION DGM 1.2	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
SCENIC II	INJECTION	INJECTION DGM 1.2	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Live Data	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC II	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC II	A.B.S.	ABS 8.0	Read Fault Code	
SCENIC II	A.B.S.	ABS 8.0	Erase Fault Code	
SCENIC II	A.B.S.	ABS 8.0	Read ECU Information	
SCENIC II	A.B.S.	ABS 8.0	Live Data	
SCENIC II	A.B.S.	ABS 8.0	Actuation Test	
SCENIC II	A.B.S.	ABS 8.0	Other Configuration	VP007 SPEEDO INDEX
SCENIC II	A.B.S.	ABS 8.0	Other Configuration	VP001 WRITE VIN
SCENIC II	A.B.S.	ABS 8.0	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	A.B.S.	ABS 8.0	Erase	RZ001 FAULT MEMORY
SCENIC II	A.B.S.	ABS 8.0	Configuration	SC001 CHECK TARGET TEETH
SCENIC II	A.B.S.	ABS 8.0	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
SCENIC II	A.B.S.	ESP 8.0	Read Fault Code	
SCENIC II	A.B.S.	ESP 8.0	Erase Fault Code	
SCENIC II	A.B.S.	ESP 8.0	Read ECU Information	
SCENIC II	A.B.S.	ESP 8.0	Live Data	
SCENIC II	A.B.S.	ESP 8.0	Actuation Test	
SCENIC II	A.B.S.	ESP 8.0	Other Configuration	VP004 VEHICLE PARAMETERS







**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
SCENIC II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SCENIC II	UCH	UCH	Other Configuration	VP004 WRITE VIN
SCENIC II	UCH	UCH	Erase	RZ001 FAULT MEMORY
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC005 CARD TESTING
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SCENIC II	UCH	UCH	Read Fault Code	
SCENIC II	UCH	UCH	Erase Fault Code	
SCENIC II	UCH	UCH	Read ECU Information	
SCENIC II	UCH	UCH	Live Data	
SCENIC II	UCH	UCH	Read Configuration	
SCENIC II	UCH	UCH	Actuation Test	
SCENIC II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
SCENIC II	UCH	UCH	Write Configuration	CF018 AUTOMATIC RELOCKING
SCENIC II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
SCENIC II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SCENIC II	UCH	UCH	Other Configuration	VP004 WRITE VIN
SCENIC II	UCH	UCH	Erase	RZ001 FAULT MEMORY
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC005 CARD TESTING
SCENIC II	UCH	UCH	Configuration	SC016 CHILDPROOF LOCK
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SCENIC II	UCH	UCH	Read Fault Code	
SCENIC II	UCH	UCH	Erase Fault Code	
SCENIC II	UCH	UCH	Read ECU Information	
SCENIC II	UCH	UCH	Live Data	
SCENIC II	UCH	UCH	Read Configuration	
SCENIC II	UCH	UCH	Actuation Test	
SCENIC II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
SCENIC II	UCH	UCH	Write Configuration	CF009 DEADLOCKING
SCENIC II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SCENIC II	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
SCENIC II	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
SCENIC II	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
SCENIC II	UCH	UCH	Write Configuration	CF028 ENGINE TYPE
SCENIC II	UCH	UCH	Write Configuration	CF166 REAR SCREEN WIPER
SCENIC II	UCH	UCH	Write Configuration	CF135 UPC COMP. TYPE
SCENIC II	UCH	UCH	Other Configuration	VP004 WRITE VIN
SCENIC II	UCH	UCH	Erase	RZ001 FAULT MEMORY
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC016 CHILDPROOF LOCK
SCENIC II	UCH	UCH	Configuration	SC005 CARD TESTING
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SCENIC II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
SCENIC II	UCH	UCH	Read Fault Code	
SCENIC II	UCH	UCH	Erase Fault Code	
SCENIC II	UCH	UCH	Read ECU Information	
SCENIC II	UCH	UCH	Live Data	
SCENIC II	UCH	UCH	Read Configuration	
SCENIC II	UCH	UCH	Actuation Test	
SCENIC II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
SCENIC II	UCH	UCH	Write Configuration	CF009 DEADLOCKING
SCENIC II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SCENIC II	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
SCENIC II	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
SCENIC II	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
SCENIC II	UCH	UCH	Write Configuration	CF028 ENGINE TYPE
SCENIC II	UCH	UCH	Write Configuration	CF166 REAR SCREEN WIPER
SCENIC II	UCH	UCH	Write Configuration	CF135 UPC COMP. TYPE
SCENIC II	UCH	UCH	Write Configuration	CF224 REAR ACCESS AERIALS
SCENIC II	UCH	UCH	Other Configuration	VP004 WRITE VIN
SCENIC II	UCH	UCH	Other Configuration	VP016 NEW VEHICLE STORAGE MODE DEACTIVATION
SCENIC II	UCH	UCH	Erase	RZ001 FAULT MEMORY
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC016 CHILDPROOF LOCK
SCENIC II	UCH	UCH	Configuration	SC005 CARD TESTING
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC008 UCH TYPE
SCENIC II	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SCENIC II	UCH	UCH	Configuration	SC001 READ VALVE SET AND MEMORISED CODES
SCENIC II	UCH	UCH	Read Fault Code	
SCENIC II	UCH	UCH	Erase Fault Code	
SCENIC II	UCH	UCH	Read ECU Information	
SCENIC II	UCH	UCH	Live Data	
SCENIC II	UCH	UCH	Read Configuration	
SCENIC II	UCH	UCH	Actuation Test	
SCENIC II	UCH	UCH	Write Configuration	CF299 B/C WITH FR/RR THORAX + HEAD AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF298 B/C WITH FRONT THORAX + HEAD AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF297 B/C WITHOUT SIDE AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF300 G/S WITH HEAD AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF301 G/S WITHOUT HEAD AIRBAG
SCENIC II	UCH	UCH	Write Configuration	CF302 J WITH/OUT SIDE AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF303 J WITH/OUT SIDE AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF306 E WITH/OUT SIDE AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF305 E WITH SIDE AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF307 KL WITHOUT SIDE AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF308 KL WITH F CHEST + CURT AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF309 KL WITH F/R CHEST + CURT AIRBAGS
SCENIC II	UCH	UCH	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
SCENIC II	UCH	UCH	Write Configuration	CF283 DRIVER'S LAP STRAP/SEAT AIRBAG
SCENIC II	UCH	UCH	Write Configuration	CF282 PASSENGER'S LAP STRAP/SEAT AIRBAG
SCENIC II	UCH	UCH	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
SCENIC II	UCH	UCH	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
SCENIC II	UCH	UCH	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
SCENIC II	UCH	UCH	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
SCENIC II	UCH	UCH	Write Configuration	CF284 DRIVER'SIDE REAR FRONTAL AIRBAG
SCENIC II	UCH	UCH	Write Configuration	CF285 PASSENGER SIDE REAR FRONTAL AIRBAG
SCENIC II	UCH	UCH	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
SCENIC II	UCH	UCH	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
SCENIC II	UCH	UCH	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Read Fault Code	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Erase Fault Code	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Read ECU Information	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Live Data	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Read Configuration	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF299 B/C WITH FR/RR THORAX + HEAD AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF298 B/C WITH FRONT THORAX + HEAD AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF297 B/C WITHOUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF300 G/S WITH HEAD AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF301 G/S WITHOUT HEAD AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF302 J WITH/OUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF303 J WITH/OUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF306 E WITH/OUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF305 E WITH SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF307 KL WITHOUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF308 KL WITH F CHEST + CURT AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF309 KL WITH F/R CHEST + CURT AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF283 DRIVER'S LAP STRAP/SEAT AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF282 PASSENGER'S LAP STRAP/SEAT AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF284 DRIVER'SIDE REAR FRONTAL AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF285 PASSENGER SIDE REAR FRONTAL AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF225 REAR THORAX SIDE AIR BAG, DRIVER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF226 REAR THORAX SIDE AIR BAG, PASSENGER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF284 FRONT BUCKLE PRETENSIONERS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF278 REAR INERTIA REELS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF289 DRIVER'S SEAT POSITION SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF274 PASSENGER'S SEAT BUCKLE SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF293 DRIVER'S SIDE REAR STRAP SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF292 PASSENGER SIDE REAR STRAP SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF275 PASSENGER PRESENCE DETECTION SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Other Configuration	VP006 LOCK COMPUTER
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Other Configuration	VP007 UNLOCK COMPUTER
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Other Configuration	VP010 WRITE VIN
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Erase	RZ001 FAULT MEMORY
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG ACU4 MK2	Configuration	SC004 READING IMPACT CONTEXTS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Read Fault Code	
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Erase Fault Code	
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Read ECU Information	
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Live Data	
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Read Configuration	
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF299 B/C WITH FR/RR THORAX + HEAD AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF298 B/C WITH FRONT THORAX + HEAD AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF297 B/C WITHOUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF300 G/S WITH HEAD AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF301 G/S WITHOUT HEAD AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF302 J WITH SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF303 J WITH SIDE AB W/O REAR CHEST AB
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF306 E WITHOUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF305 E WITH SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF307 K/L WITHOUT SIDE AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF308 K/L WITH F CHEST + CURT AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF309 K/L WITH F/R CHEST + CURT AIRBAGS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF283 DRIVER'S LAP STRAP/SEAT AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF282 PASSENGER'S LAP STRAP/SEAT AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF236 PASSENGER FRONT AIR BAG CIRCUIT 1
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF229 PASSENGER FRONT AIR BAG CIRCUIT 2
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF230 DRIVER FRONT AIR BAG CIRCUIT 1
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF231 DRIVER FRONT AIR BAG CIRCUIT 2
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF294 DRIVER' SIDE REAR FRONTAL AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF295 PASSENGER SIDE REAR FRONTAL AIRBAG
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF225 REAR THORAX SIDE AIR BAG, DRIVER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF226 REAR THORAX SIDE AIR BAG, PASSENGER SIDE
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF284 FRONT BUCKLE PRETENSIONERS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF278 REAR INERTIA REELS
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF289 DRIVER'S SEAT POSITION SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF274 PASSENGER'S SEAT BUCKLE SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF293 DRIVER'S SIDE REAR STRAP SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF292 PASSENGER SIDE REAR STRAP SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF275 PASSENGER PRESENCE DETECTION SENSOR
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Other Configuration	VP010 WRITE VIN
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Erase	RZ001 FAULT MEMORY
SCENIC II	AIRBAG / PRETENSIONERS	ACU4 AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF215 VEHICLE TYPE
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SCENIC II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Live Data	
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF117 HEATING RESISTOR TYPE
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
SCENIC II	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Read Fault Code	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase Fault Code	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Read ECU Information	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Live Data	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Actuation Test	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Read Fault Code	
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Erase Fault Code	
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Read ECU Information	
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Live Data	
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Actuation Test	
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Other Configuration	VP001 WRITE VIN
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ001 FAULT MEMORY
SCENIC II	AUTOMATIC GEARBOX	AJ0 AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Read Fault Code	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase Fault Code	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Read ECU Information	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Live Data	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Actuation Test	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	UPC	UPC	Actuation Test	
SCENIC II	UPC	UPC	Other Configuration	VP003 WRITE VIN
SCENIC II	UPC	UPC	Other Configuration	VP004 VEHICLE PARAMETERS
SCENIC II	UPC	UPC	Erase	RZ001 FAULT MEMORY
SCENIC II	UPC	UPC	Read Fault Code	
SCENIC II	UPC	UPC	Erase Fault Code	
SCENIC II	UPC	UPC	Read ECU Information	
SCENIC II	UPC	UPC	Live Data	
SCENIC II	UPC	UPC	Read Configuration	
SCENIC II	UPC	UPC	Actuation Test	
SCENIC II	UPC	UPC	Other Configuration	VP003 WRITE VIN
SCENIC II	UPC	UPC	Other Configuration	VP004 VEHICLE PARAMETERS
SCENIC II	UPC	UPC	Erase	RZ001 FAULT MEMORY
SCENIC II	PARKING PROX CAN	PARKING AID	Read Fault Code	
SCENIC II	PARKING PROX CAN	PARKING AID	Erase Fault Code	
SCENIC II	PARKING PROX CAN	PARKING AID	Read ECU Information	
SCENIC II	PARKING PROX CAN	PARKING AID	Live Data	
SCENIC II	PARKING PROX CAN	PARKING AID	Read Configuration	
SCENIC II	PARKING PROX CAN	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
SCENIC II	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
SCENIC II	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
SCENIC II	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
SCENIC II	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
SCENIC II	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
SCENIC II	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
SCENIC II	PARKING PROX CAN	PARKING AID	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP005 COMP CONFIGURATION
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF001 VEHICLE TYPE
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP004 NETHERLANDS LEGISLATION
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
SCENIC II	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ003 CUSTOMER SETTINGS AND DETAILS
SCENIC II	RADIO	LPN	Read Fault Code	
SCENIC II	RADIO	LPN	Erase Fault Code	
SCENIC II	RADIO	LPN	Read ECU Information	
SCENIC II	RADIO	LPN	Live Data	
SCENIC II	RADIO	LPN	Read Configuration	
SCENIC II	RADIO	LPN	Actuation Test	
SCENIC II	RADIO	LPN	Write Configuration	CF026 CD CHANGER AND AUXILIARY INPUT
SCENIC II	RADIO	LPN	Write Configuration	CF018 DISTANCE UNITS
SCENIC II	RADIO	LPN	Other Configuration	VP001 WRITE VIN
SCENIC II	RADIO	LPN	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SCENIC II	RADIO	LPN	Other Configuration	VP005 COMPUTER CALIBRATION AND OPERATION
SCENIC II	RADIO	LPN	Erase	RZ003 FAULT MEMORY
SCENIC II	RADIO	LPN	Erase	RZ001 TEST PARAMETERS
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF001 VEHICLE TYPE
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ002 ECU MEMORY
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
SCENIC II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Read Fault Code	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase Fault Code	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Read ECU Information	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Live Data	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Actuation Test	
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP001 WRITE VIN
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP015 NOTE OIL WEAR COUNTER
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Other Configuration	VP016 WRITE TRANSMISSION OIL CHANGE DATE
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase	RZ004 FAULT MEMORY
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase	RZ006 CONVERTER LOCK UP ADAPTIVE
SCENIC II	AUTOMATIC GEARBOX	DP0 Ta2000 AUTO TRANS	Erase	RZ005 AUTO-ADAPTIVES
SCENIC II	GAS INJ.	GAS INJECTION 3000	Read Fault Code	
SCENIC II	GAS INJ.	GAS INJECTION 3000	Erase Fault Code	
SCENIC II	GAS INJ.	GAS INJECTION 3000	Read ECU Information	
SCENIC II	GAS INJ.	GAS INJECTION 3000	Live Data	
SCENIC II	GAS INJ.	GAS INJECTION 3000	Read Configuration	
SCENIC II	GAS INJ.	GAS INJECTION 3000	Actuation Test	
SCENIC II	GAS INJ.	GAS INJECTION 3000	Other Configuration	VP001 WRITE VIN
SCENIC II	GAS INJ.	GAS INJECTION 3000	Erase	RZ001 FAULT MEMORY
SCENIC II	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Live Data	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Read Configuration	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Actuation Test	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
SCENIC II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
SCENIC II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
SCENIC II	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
SCENIC II	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
SCENIC II	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
SCENIC II	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
SCENIC II	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC II	PARKING BRAKE	PARKING BRAKE	Live Data	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Read Configuration	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Actuation Test	
SCENIC II	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
SCENIC II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
SCENIC II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
SCENIC II	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
SCENIC II	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
SCENIC II	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
SCENIC II	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
SCENIC II	DISCHARGE LAMP	LAD	Read Fault Code	
SCENIC II	DISCHARGE LAMP	LAD	Erase Fault Code	
SCENIC II	DISCHARGE LAMP	LAD	Read ECU Information	
SCENIC II	DISCHARGE LAMP	LAD	Live Data	
SCENIC II	DISCHARGE LAMP	LAD	Read Configuration	
SCENIC II	DISCHARGE LAMP	LAD	Actuation Test	
SCENIC II	DISCHARGE LAMP	LAD	Write Configuration	CF003 VEHICLE TYPE
SCENIC II	DISCHARGE LAMP	LAD	Write Configuration	CF001 COMPUTER CALIBRATION
SCENIC II	DISCHARGE LAMP	LAD	Other Configuration	VP001 WRITE VIN
SCENIC II	DISCHARGE LAMP	LAD	Erase	RZ001 FAULT MEMORY
SCENIC II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Live Data	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
SCENIC II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
SCENIC II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
SCENIC II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
SCENIC II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
SCENIC II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Live Data	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
SCENIC II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
SCENIC II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
SCENIC II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
SCENIC II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
SCENIC II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
SCENIC II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
SCENIC II	RADIO	RADIO	Read ECU Information	
SCENIC II	RADIO	RADIO	Live Data	
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Live Data	
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Read Configuration	
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Actuation Test	
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC IV	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
SCENIC IV	INJECTION	SID 310 INJECTION	Read Fault Code	
SCENIC IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	SID 310 INJECTION	Read ECU Information	
SCENIC IV	INJECTION	SID 310 INJECTION	Live Data	
SCENIC IV	INJECTION	SID 310 INJECTION	Read Configuration	
SCENIC IV	INJECTION	SID 310 INJECTION	Actuation Test	
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	EMS 3155 INJECTION	Read Fault Code	
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	EMS 3155 INJECTION	Read ECU Information	
SCENIC IV	INJECTION	EMS 3155 INJECTION	Live Data	
SCENIC IV	INJECTION	EMS 3155 INJECTION	Read Configuration	
SCENIC IV	INJECTION	EMS 3155 INJECTION	Actuation Test	
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
SCENIC IV	INJECTION	EMS 3155 INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ001 FAULT MEMORY
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ075 CAMSHAFT NO. 2 SENSOR PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ091 WASTE GATE REGULATION
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ099 STOP AND START FUNCTION
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ103 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ104 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Erase	RZ105 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3155 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
SCENIC IV	INJECTION	EMS 3155 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC IV	INJECTION	EMS 3155 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC IV	INJECTION	EMS 3155 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	EMS 3155 INJECTION	Configuration	SC040 SPEED LIMITER
SCENIC IV	INJECTION	EMS 3155 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
SCENIC IV	INJECTION	SID 310 INJECTION	Read Fault Code	
SCENIC IV	INJECTION	SID 310 INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	SID 310 INJECTION	Read ECU Information	
SCENIC IV	INJECTION	SID 310 INJECTION	Live Data	
SCENIC IV	INJECTION	SID 310 INJECTION	Read Configuration	
SCENIC IV	INJECTION	SID 310 INJECTION	Actuation Test	
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP389 CDC SETPOINT VOLTAGE
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC IV	INJECTION	SID 310 INJECTION	Other Configuration	VP388 INVERTER ACTIVATION REQUEST
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SCENIC IV	INJECTION	SID 310 INJECTION	Erase	RZ123 TRACTION BATTERY RELAY
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
SCENIC IV	INJECTION	INJECTION	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC IV	INJECTION	INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	INJECTION	Live Data	
SCENIC IV	INJECTION	INJECTION	Actuation Test	
SCENIC IV	INJECTION	INJECTION	Erase	RZ007 FAULT MEMORY
SCENIC IV	INJECTION	INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
SCENIC IV	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
SCENIC IV	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	INJECTION	Erase	RZ091 WASTE GATE REGULATION
SCENIC IV	A.B.S.	ABS	Read Fault Code	
SCENIC IV	A.B.S.	ABS	Erase Fault Code	
SCENIC IV	A.B.S.	ABS	Read ECU Information	
SCENIC IV	A.B.S.	ABS	Live Data	
SCENIC IV	A.B.S.	ABS	Read Configuration	
SCENIC IV	A.B.S.	ABS	Actuation Test	
SCENIC IV	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
SCENIC IV	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
SCENIC IV	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
SCENIC IV	A.B.S.	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
SCENIC IV	A.B.S.	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
SCENIC IV	A.B.S.	ABS	Other Configuration	VP045 HILL START
SCENIC IV	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
SCENIC IV	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
SCENIC IV	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
SCENIC IV	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
SCENIC IV	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
SCENIC IV	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
SCENIC IV	A.B.S.	ABS	Erase	RZ006 STEERING WHEEL ANGLE SENSOR PROGRAMMING
SCENIC IV	A.B.S.	ABS	Erase	RZ012 RESET
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
SCENIC IV	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
SCENIC IV	UCH	UCH	Read Fault Code	
SCENIC IV	UCH	UCH	Erase Fault Code	
SCENIC IV	UCH	UCH	Read ECU Information	
SCENIC IV	UCH	UCH	Live Data	
SCENIC IV	UCH	UCH	Read Configuration	
SCENIC IV	UCH	UCH	Actuation Test	
SCENIC IV	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
SCENIC IV	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
SCENIC IV	UCH	UCH	Write Configuration	CF229 ALARM
SCENIC IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SCENIC IV	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
SCENIC IV	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
SCENIC IV	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
SCENIC IV	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
SCENIC IV	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
SCENIC IV	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
SCENIC IV	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
SCENIC IV	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
SCENIC IV	UCH	UCH	Write Configuration	CF310 STEERING LOCK
SCENIC IV	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
SCENIC IV	UCH	UCH	Write Configuration	CF313 MAKE
SCENIC IV	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
SCENIC IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
SCENIC IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SCENIC IV	UCH	UCH	Read Fault Code	
SCENIC IV	UCH	UCH	Erase Fault Code	
SCENIC IV	UCH	UCH	Read ECU Information	
SCENIC IV	UCH	UCH	Live Data	
SCENIC IV	UCH	UCH	Read Configuration	
SCENIC IV	UCH	UCH	Actuation Test	
SCENIC IV	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
SCENIC IV	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
SCENIC IV	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
SCENIC IV	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
SCENIC IV	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
SCENIC IV	UCH	UCH	Write Configuration	CF229 ALARM
SCENIC IV	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
SCENIC IV	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
SCENIC IV	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
SCENIC IV	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
SCENIC IV	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
SCENIC IV	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
SCENIC IV	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
SCENIC IV	UCH	UCH	Write Configuration	CF310 STEERING LOCK
SCENIC IV	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
SCENIC IV	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
SCENIC IV	UCH	UCH	Write Configuration	CF313 MAKE
SCENIC IV	UCH	UCH	Other Configuration	VP001 WRITE V.I.N
SCENIC IV	UCH	UCH	Erase	RZ001 FAULT MEMORY
SCENIC IV	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SCENIC IV	UCH	UCH	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	VP006 LOCK COMPUTER
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Live Data	
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
SCENIC IV	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP032 AUTOMATIC GEARBOX CONTROL
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP024 PROGRAM CLUTCH ASSEMBLY
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
SCENIC IV	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Live Data	
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Read Configuration	
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
SCENIC IV	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
SCENIC IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
SCENIC IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
SCENIC IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
SCENIC IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
SCENIC IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Actuation Test	
SCENIC IV	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase	RZ010 FAULT MEMORY
SCENIC IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
SCENIC IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
SCENIC IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
SCENIC IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
SCENIC IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
SCENIC IV	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
SCENIC IV	UPC	UPC	Read Fault Code	
SCENIC IV	UPC	UPC	Erase Fault Code	
SCENIC IV	UPC	UPC	Read ECU Information	
SCENIC IV	UPC	UPC	Live Data	
SCENIC IV	UPC	UPC	Read Configuration	
SCENIC IV	UPC	UPC	Actuation Test	
SCENIC IV	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
SCENIC IV	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
SCENIC IV	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
SCENIC IV	UPC	UPC	Other Configuration	VP003 WRITE VIN
SCENIC IV	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
SCENIC IV	UPC	UPC	Erase	RZ004 DTC reset
SCENIC IV	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
SCENIC IV	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
SCENIC IV	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
SCENIC IV	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
SCENIC IV	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
SCENIC IV	PARKING PROX CAN	PARKING AID	Read Fault Code	
SCENIC IV	PARKING PROX CAN	PARKING AID	Erase Fault Code	
SCENIC IV	PARKING PROX CAN	PARKING AID	Read ECU Information	
SCENIC IV	PARKING PROX CAN	PARKING AID	Live Data	
SCENIC IV	PARKING PROX CAN	PARKING AID	Read Configuration	
SCENIC IV	PARKING PROX CAN	PARKING AID	Actuation Test	
SCENIC IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
SCENIC IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
SCENIC IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
SCENIC IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
SCENIC IV	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
SCENIC IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
SCENIC IV	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
SCENIC IV	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP009 REAR SLIDE LEARNING
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP008 FRONT SLIDE LEARNING
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP010 LUMBAR LEARNING
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
SCENIC IV	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Live Data	
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Read Configuration	
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP007 PARAMETRAGE PRIVE 4
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Configuration	SC004 RADAR-CAMERA ALIGNMENT ADJUSTEMENT
SCENIC IV	FRONT CAMERA	FRONT CAMERA	Configuration	SC005 RADAR-CAMERA DRIVING
SCENIC IV	RADIO	RADIO NAV.	Read Fault Code	
SCENIC IV	RADIO	RADIO NAV.	Erase Fault Code	
SCENIC IV	RADIO	RADIO NAV.	Read ECU Information	
SCENIC IV	RADIO	RADIO NAV.	Live Data	
SCENIC IV	RADIO	RADIO NAV.	Read Configuration	
SCENIC IV	RADIO	RADIO NAV.	Actuation Test	
SCENIC IV	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
SCENIC IV	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
SCENIC IV	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
SCENIC IV	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
SCENIC IV	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
SCENIC IV	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
SCENIC IV	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
SCENIC IV	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
SCENIC IV	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY
SCENIC IV	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC IV	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
SCENIC IV	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
SCENIC IV	RADIO	RADIO	Read Fault Code	
SCENIC IV	RADIO	RADIO	Erase Fault Code	
SCENIC IV	RADIO	RADIO	Read ECU Information	
SCENIC IV	RADIO	RADIO	Live Data	
SCENIC IV	RADIO	RADIO	Read Configuration	
SCENIC IV	RADIO	RADIO	Actuation Test	
SCENIC IV	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
SCENIC IV	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SCENIC IV	RADIO	RADIO	Write Configuration	CF050 TIME FORMAT
SCENIC IV	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
SCENIC IV	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
SCENIC IV	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
SCENIC IV	RADIO	RADIO	Erase	RZ006 COMPUTER RESET
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
SCENIC IV	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
SCENIC IV	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Read Fault Code	
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Erase Fault Code	
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Read ECU Information	
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Live Data	
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Actuation Test	
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Other Configuration	VP002 WRITE VIN
SCENIC IV	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	COLLAPSIBLE SEAT	Erase	RZ001 FAULT MEMORY
SCENIC IV	BMS	BMS	Read Fault Code	
SCENIC IV	BMS	BMS	Erase Fault Code	
SCENIC IV	BMS	BMS	Read ECU Information	
SCENIC IV	BMS	BMS	Live Data	
SCENIC IV	BMS	BMS	Actuation Test	
SCENIC IV	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
SCENIC IV	BMS	BMS	Other Configuration	VP015 MODULE CHANGE
SCENIC IV	BMS	BMS	Erase	RZ001 FAULT MEMORY
SCENIC IV	PEB	PEB	Read Fault Code	
SCENIC IV	PEB	PEB	Erase Fault Code	
SCENIC IV	PEB	PEB	Read ECU Information	
SCENIC IV	PEB	PEB	Live Data	
SCENIC IV	PEB	PEB	Other Configuration	VP003 WRITE V.I.N.
SCENIC IV	PEB	PEB	Erase	RZ001 FAULT MEMORY
SCENIC IV	BMS SAFETY	BMS SAFETY	Read Fault Code	
SCENIC IV	BMS SAFETY	BMS SAFETY	Erase Fault Code	
SCENIC IV	BMS SAFETY	BMS SAFETY	Read ECU Information	
SCENIC IV	BMS SAFETY	BMS SAFETY	Other Configuration	VP003 START AUTHORISATION FROM BMS SAFETY
SCENIC IV	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
SCENIC IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
SCENIC IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
SCENIC IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
SCENIC IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
SCENIC IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VP001 WRITE V.I.N.
SCENIC IV	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase	RZ001 FAULT MEMORY
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
SCENIC IV	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
SCENIC IV	AMPLIFIER	AMPLIFIER	Read Fault Code	
SCENIC IV	AMPLIFIER	AMPLIFIER	Erase Fault Code	
SCENIC IV	AMPLIFIER	AMPLIFIER	Read ECU Information	
SCENIC IV	AMPLIFIER	AMPLIFIER	Live Data	
SCENIC IV	AMPLIFIER	AMPLIFIER	Actuation Test	
SCENIC IV	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
SCENIC IV	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
SCENIC IV	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
SCENIC IV	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SCENIC IV	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
SCENIC IV	INJECTION	MDG1 INJECTION	Read Fault Code	
SCENIC IV	INJECTION	MDG1 INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	MDG1 INJECTION	Read ECU Information	
SCENIC IV	INJECTION	MDG1 INJECTION	Live Data	
SCENIC IV	INJECTION	MDG1 INJECTION	Function Test	
SCENIC IV	INJECTION	MDG1 INJECTION	Read Configuration	
SCENIC IV	INJECTION	MDG1 INJECTION	Actuation Test	
SCENIC IV	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
SCENIC IV	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC IV	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC IV	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
SCENIC IV	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
SCENIC IV	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Read Fault Code	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Read ECU Information	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Live Data	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Function Test	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Read Configuration	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Actuation Test	
SCENIC IV	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
SCENIC IV	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
SCENIC IV	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
SCENIC IV	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
SCENIC IV	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
SCENIC IV	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PRESSURE LINE ADBLUE HEATER
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
SCENIC IV	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
SM7 -L47	INJECTION	INJECTION EWR 21	Read Fault Code	
SM7 -L47	INJECTION	INJECTION EWR 21	Erase Fault Code	
SM7 -L47	INJECTION	INJECTION EWR 21	Read ECU Information	
SM7 -L47	INJECTION	INJECTION EWR 21	Live Data	
SM7 -L47	INJECTION	INJECTION EWR 21	Read Configuration	
SM7 -L47	INJECTION	INJECTION EWR 21	Actuation Test	
SM7 -L47	INJECTION	INJECTION EWR 21	Other Configuration	VP010 WRITE V.I.N.
SM7 -L47	INJECTION	INJECTION EWR 21	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SM7 -L47	INJECTION	INJECTION EWR 21	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
SM7 -L47	INJECTION	INJECTION EWR 21	Other Configuration	VP069 CATALYTIC CONVERTER TEST
SM7 -L47	INJECTION	INJECTION EWR 21	Erase	RZ001 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SM7 - L47	INJECTION	INJECTION EWR 21	Erase	RZ034 ECU MEMORY
SM7 - L47	INJECTION	INJECTION EWR 21	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
SM7 - L47	INJECTION	INJECTION EWR 21	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SM7 - L47	INJECTION	INJECTION EWR 21	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
SM7 - L47	INJECTION	INJECTION EWR 21	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
SM7 - L47	INJECTION	INJECTION WB56	Read Fault Code	
SM7 - L47	INJECTION	INJECTION WB56	Erase Fault Code	
SM7 - L47	INJECTION	INJECTION WB56	Read ECU Information	
SM7 - L47	INJECTION	INJECTION WB56	Live Data	
SM7 - L47	INJECTION	INJECTION WB56	Read Configuration	
SM7 - L47	INJECTION	INJECTION WB56	Actuation Test	
SM7 - L47	INJECTION	INJECTION WB56	Other Configuration	VP010 WRITE V.I.N.
SM7 - L47	INJECTION	INJECTION WB56	Other Configuration	VP036 FUEL SUPPLY PREVENTION
SM7 - L47	INJECTION	INJECTION WB56	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ001 FAULT MEMORY
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ034 ECU MEMORY
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ022 ERASE IDLE REGULATION ADAPTIVES
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ028 ADAPTIVE VALUE - A/F RATIO
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ006 SELF LEARNING VALUE ERASE -BUTANE RATIO MODELING
SM7 - L47	INJECTION	INJECTION WB56	Erase	RZ027 ADAPTIVE VALUE - TPS
SM7 - L47	INJECTION	INJECTION WB56	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
SM7 - L47	INJECTION	INJECTION WB56	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
SM7 - L47	INJECTION	INJECTION WB56	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
SM7 - L47	A.B.S.	ESP	Read Fault Code	
SM7 - L47	A.B.S.	ESP	Erase Fault Code	
SM7 - L47	A.B.S.	ESP	Read ECU Information	
SM7 - L47	A.B.S.	ESP	Live Data	
SM7 - L47	A.B.S.	ESP	Read Configuration	
SM7 - L47	A.B.S.	ESP	Actuation Test	
SM7 - L47	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
SM7 - L47	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
SM7 - L47	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
SM7 - L47	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
SM7 - L47	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
SM7 - L47	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
SM7 - L47	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
SM7 - L47	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
SM7 - L47	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF197 TYRE PRESSURE MONITOR FUNCTION
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF175 COMMANDE PRVVEE 1
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
SM7 - L47	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC001 DISTANCE BEFORE NEXT OIL CHANGE
SM7 - L47	UCH	UCH	Read Fault Code	
SM7 - L47	UCH	UCH	Erase Fault Code	
SM7 - L47	UCH	UCH	Read ECU Information	
SM7 - L47	UCH	UCH	Live Data	
SM7 - L47	UCH	UCH	Read Configuration	
SM7 - L47	UCH	UCH	Actuation Test	
SM7 - L47	UCH	UCH	Write Configuration	CF287 COLUMN STEERING LOCK
SM7 - L47	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
SM7 - L47	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
SM7 - L47	UCH	UCH	Erase	RZ001 FAULT MEMORY
SM7 - L47	UCH	UCH	Configuration	SC005 CARD TESTING
SM7 - L47	UCH	UCH	Configuration	SC008 UCH TYPE
SM7 - L47	UCH	UCH	Configuration	SC038 READING THE VALVE SET AND VALVE CODES
SM7 - L47	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
SM7 - L47	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Live Data	
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF024 GEOGRAPHICAL ZONE
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
SM7 - L47	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read Fault Code	
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase Fault Code	
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Read ECU Information	
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Live Data	
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP001 WRITE VIN
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ004 FAULT MEMORY
SM7 - L47	AUTOMATIC GEARBOX	AUTO TRANSMISSION CVT	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Read Fault Code	
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Erase Fault Code	
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Read ECU Information	
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Live Data	
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Actuation Test	
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Other Configuration	VP001 WRITE VIN
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Erase	RZ004 FAULT MEMORY
SM7 - L47	AUTOMATIC GEARBOX	AJO AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTEMENT
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP007 PARAMETRAGE PRIVE 2
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ011 RESET
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ016 LAUNCH CONTROL COUNTER
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC003 SAVE COMPUTER DATA
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC004 WRITE SAVED DATA
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC008 COMPUTER PROGRAMMING
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC010 PROGRAM CLUTCH ASSEMBLY
SM7 - L47	AUTOMATIC GEARBOX	AUTO GEARBOX	Configuration	SC012 CLUTCH TORQUE RECOVERY
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Live Data	
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Read Configuration	
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Actuation Test	
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP012 ASSISTED ENGAGEMENT WHEN STATIONARY
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Configuration	SC010 INITIALISATION AFTER AUTOMATIC CONFIGURATION
SM7 - L47	PARKING BRAKE	PARKING BRAKE	Configuration	SC009 PREPARATION BEFORE AUTOMATIC CONFIGURATION
SM7 - L47	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
SM7 - L47	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
SM7 - L47	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
SM7 - L47	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
SM7 - L47	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Other Configuration	VP001 WRITE VIN
SM7 - L47	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase	RZ001 FAULT MEMORY
SM7 - L47	VARIABLE P.A.S.	PAS PUMP ASS.	Read Fault Code	
SM7 - L47	VARIABLE P.A.S.	PAS PUMP ASS.	Erase Fault Code	
SM7 - L47	VARIABLE P.A.S.	PAS PUMP ASS.	Read ECU Information	
SM7 - L47	VARIABLE P.A.S.	PAS PUMP ASS.	Live Data	
SM7 - L47	VARIABLE P.A.S.	PAS PUMP ASS.	Other Configuration	VP001 WRITE VIN
SM7 - L47	VARIABLE P.A.S.	PAS PUMP ASS.	Erase	RZ001 FAULT MEMORY
SM7 - L47	UPC	UPC	Read Fault Code	
SM7 - L47	UPC	UPC	Erase Fault Code	
SM7 - L47	UPC	UPC	Read ECU Information	
SM7 - L47	UPC	UPC	Live Data	
SM7 - L47	UPC	UPC	Read Configuration	
SM7 - L47	UPC	UPC	Actuation Test	
SM7 - L47	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
SM7 - L47	UPC	UPC	Other Configuration	VP003 WRITE VIN
SM7 - L47	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
SM7 - L47	UPC	UPC	Erase	RZ001 FAULT MEMORY
SM7 - L47	UPC	UPC	Read Fault Code	
SM7 - L47	UPC	UPC	Erase Fault Code	
SM7 - L47	UPC	UPC	Read ECU Information	
SM7 - L47	UPC	UPC	Live Data	
SM7 - L47	UPC	UPC	Actuation Test	
SM7 - L47	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
SM7 - L47	UPC	UPC	Other Configuration	VP003 WRITE VIN
SM7 - L47	UPC	UPC	Erase	RZ004 DTC reset
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Read Fault Code	
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Erase Fault Code	
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Read ECU Information	
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Live Data	
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Read Configuration	
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Actuation Test	
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP002 SYSTEM INITIALISATION
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Other Configuration	VP001 WRITE VIN
SM7 - L47	LIGHTING	XEN BULB CORN. LIGHTS	Erase	RZ001 FAULT MEMORY
SM7 - L47	PARKING PROX CAN	PARKING AID	Read Fault Code	
SM7 - L47	PARKING PROX CAN	PARKING AID	Erase Fault Code	
SM7 - L47	PARKING PROX CAN	PARKING AID	Read ECU Information	
SM7 - L47	PARKING PROX CAN	PARKING AID	Live Data	
SM7 - L47	PARKING PROX CAN	PARKING AID	Read Configuration	
SM7 - L47	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
SM7 - L47	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
SM7 - L47	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
SM7 - L47	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
SM7 - L47	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
SM7 - L47	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
SM7 - L47	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Read Fault Code	
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Erase Fault Code	
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Read ECU Information	
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Live Data	
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Actuation Test	
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Other Configuration	VP001 WRITE VIN
SM7 - L47	DRIVER'S DOOR	DRIVER'S DOOR	Erase	RZ001 FAULT MEMORY
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Read Fault Code	
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase Fault Code	
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Read ECU Information	
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Live Data	
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Actuation Test	
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Other Configuration	VP001 WRITE VIN
SM7 - L47	PASSENGER'S DOOR	PASSENGER'S DOOR	Erase	RZ001 FAULT MEMORY
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Read Fault Code	
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Erase Fault Code	
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Live Data	
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP002 PROGRAMMING OF SEAT STOPS
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Other Configuration	VP003 WRITE VIN
SM7 - L47	DRIVER'S SEAT	SEAT MEMORY	Erase	RZ001 FAULT MEMORY
SM7 - L47	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Read ECU Information	
SM7 - L47	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Live Data	
SM7 - L47	LEFT-HAND DOOR or PASSENGER SEAT	LEFT HAND REAR DOOR	Other Configuration	VP001 COMPUTER REINITIALISATION
SM7 - L47	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Read ECU Information	
SM7 - L47	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Live Data	
SM7 - L47	RIGHT-HAND DOOR or COLLAPSIBLE SEAT	REAR RIGHT DOOR	Other Configuration	VP001 COMPUTER REINITIALISATION
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Write Configuration	CF018 DISTANCE UNITS
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
SM7 - L47	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ004 FAULT MEMORY
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF043 SYSTEM CONFIGURATION
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
SM7 - L47	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
SM7 - L47	RADIO	R208 RADIO	Read Fault Code	
SM7 - L47	RADIO	R208 RADIO	Erase Fault Code	
SM7 - L47	RADIO	R208 RADIO	Read ECU Information	
SM7 - L47	RADIO	R208 RADIO	Live Data	
SM7 - L47	RADIO	R208 RADIO	Read Configuration	
SM7 - L47	RADIO	R208 RADIO	Actuation Test	
SM7 - L47	RADIO	R208 RADIO	Write Configuration	CF024 EMERGENCY CALL NUMBER
SM7 - L47	RADIO	R208 RADIO	Write Configuration	CF027 LANGUAGE
SM7 - L47	RADIO	R208 RADIO	Write Configuration	CF009 EXTERNAL COMPONENTS
SM7 - L47	RADIO	R208 RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
SM7 - L47	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SM7 - L47	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
SM7 - L47	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
SM7 - L47	RADIO	RADIO	Read Fault Code	
SM7 - L47	RADIO	RADIO	Erase Fault Code	
SM7 - L47	RADIO	RADIO	Read ECU Information	
SM7 - L47	RADIO	RADIO	Live Data	
SM7 - L47	RADIO	RADIO	Read Configuration	
SM7 - L47	RADIO	RADIO	Actuation Test	
SM7 - L47	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
SM7 - L47	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
SM7 - L47	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SM7 - L47	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SM7 - L47	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
SM7 - L47	RADIO	RADIO	Read Fault Code	
SM7 - L47	RADIO	RADIO	Erase Fault Code	
SM7 - L47	RADIO	RADIO	Read ECU Information	
SM7 - L47	RADIO	RADIO	Live Data	
SM7 - L47	RADIO	RADIO	Read Configuration	
SM7 - L47	RADIO	RADIO	Actuation Test	
SM7 - L47	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
SM7 - L47	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SM7 - L47	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
SM7 - L47	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SM7 - L47	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
SM7 - L47	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
SM7 - L47	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
SM7 - L47	RADIO	RADIO	Erase	RZ004 RESET RADIO
SM7 - L47	RADIO	RADIO	Read Fault Code	
SM7 - L47	RADIO	RADIO	Erase Fault Code	
SM7 - L47	RADIO	RADIO	Read ECU Information	
SM7 - L47	RADIO	RADIO	Live Data	
SM7 - L47	RADIO	RADIO	Read Configuration	
SM7 - L47	RADIO	RADIO	Actuation Test	
SM7 - L47	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
SM7 - L47	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
SM7 - L47	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SM7 - L47	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
SM7 - L47	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
SM7 - L47	RADIO	RADIO	Erase	RZ004 RESET RADIO
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF002 TEMPERATURE DISPLAY
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF003 TIME FORMAT
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
SM7 - L47	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
SM7 - L47	AMPLIFIER	AMPLIFIER	Read Fault Code	
SM7 - L47	AMPLIFIER	AMPLIFIER	Erase Fault Code	
SM7 - L47	AMPLIFIER	AMPLIFIER	Read ECU Information	
SM7 - L47	AMPLIFIER	AMPLIFIER	Live Data	
SM7 - L47	AMPLIFIER	AMPLIFIER	Read Configuration	
SM7 - L47	AMPLIFIER	AMPLIFIER	Actuation Test	
SM7 - L47	AMPLIFIER	AMPLIFIER	Write Configuration	CF001 SUBWOOFER
SM7 - L47	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
SM7 - L47	AMPLIFIER	AMPLIFIER	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
SM7 - L47	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
SM7 - L47	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ002 ECU MEMORY
SM7 - L47	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Live Data	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Read Configuration	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTATIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Read ECU Information	
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Live Data	
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Read Configuration	
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ007 FAULT MEMORY
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTATIVES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ002 EGR ADAPTIVES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ093 INJECTION PUMP ADAPTATIVES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Erase	RZ120 INJECTION PUMP ADAPTATIVES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC062 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC040 SPEED LIMITER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	INJECTION	SID 310 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6	INJECTION	INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	INJECTION	Read ECU Information	
TALISMAN/SM6	INJECTION	INJECTION	Live Data	
TALISMAN/SM6	INJECTION	INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
TALISMAN/SM6	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Live Data	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Read Configuration	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TALISMAN/SM6	INJECTION	INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	INJECTION	Read ECU Information	
TALISMAN/SM6	INJECTION	INJECTION	Live Data	
TALISMAN/SM6	INJECTION	INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
TALISMAN/SM6	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TALISMAN/SM6	INJECTION	INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	INJECTION	Read ECU Information	
TALISMAN/SM6	INJECTION	INJECTION	Live Data	
TALISMAN/SM6	INJECTION	INJECTION	Read Configuration	
TALISMAN/SM6	INJECTION	INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6	INJECTION	INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ100 PROGRAMMING THROTTLE LIMITS
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ065 FLYWHEEL TARGET PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ089 INHIBIT EVAP STRATEGY
TALISMAN/SM6	INJECTION	INJECTION	Erase	RZ090 ACTIVATE EVAP PROGRAMMING
TALISMAN/SM6	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	A.B.S.	ABS	Read Fault Code	
TALISMAN/SM6	A.B.S.	ABS	Erase Fault Code	
TALISMAN/SM6	A.B.S.	ABS	Read ECU Information	
TALISMAN/SM6	A.B.S.	ABS	Live Data	
TALISMAN/SM6	A.B.S.	ABS	Read Configuration	
TALISMAN/SM6	A.B.S.	ABS	Actuation Test	
TALISMAN/SM6	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
TALISMAN/SM6	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
TALISMAN/SM6	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TALISMAN/SM6	A.B.S.	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
TALISMAN/SM6	A.B.S.	ABS	Other Configuration	VP225 TRANSVERSE ACCELERATION SENSOR
TALISMAN/SM6	A.B.S.	ABS	Other Configuration	VP245 HILL START
TALISMAN/SM6	A.B.S.	ABS	Other Configuration	VP001 WRITE V.I.N.
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ006 STEERING WHEEL ANGLE SENSOR PROGRAMMING
TALISMAN/SM6	A.B.S.	ABS	Erase	RZ012 RESET
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION

**Diagnosis list Renault\_ v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	UCH	UCH	Read Fault Code	
TALISMAN/SM6	UCH	UCH	Erase Fault Code	
TALISMAN/SM6	UCH	UCH	Read ECU Information	
TALISMAN/SM6	UCH	UCH	Live Data	
TALISMAN/SM6	UCH	UCH	Read Configuration	
TALISMAN/SM6	UCH	UCH	Actuation Test	
TALISMAN/SM6	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
TALISMAN/SM6	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TALISMAN/SM6	UCH	UCH	Write Configuration	CF229 ALARM
TALISMAN/SM6	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TALISMAN/SM6	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
TALISMAN/SM6	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
TALISMAN/SM6	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
TALISMAN/SM6	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
TALISMAN/SM6	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
TALISMAN/SM6	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
TALISMAN/SM6	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
TALISMAN/SM6	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
TALISMAN/SM6	UCH	UCH	Write Configuration	CF310 STEERING LOCK
TALISMAN/SM6	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
TALISMAN/SM6	UCH	UCH	Write Configuration	CF313 MAKE
TALISMAN/SM6	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
TALISMAN/SM6	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TALISMAN/SM6	UCH	UCH	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	UCH	UCH	Read Fault Code	
TALISMAN/SM6	UCH	UCH	Erase Fault Code	
TALISMAN/SM6	UCH	UCH	Read ECU Information	
TALISMAN/SM6	UCH	UCH	Live Data	
TALISMAN/SM6	UCH	UCH	Read Configuration	
TALISMAN/SM6	UCH	UCH	Actuation Test	
TALISMAN/SM6	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
TALISMAN/SM6	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TALISMAN/SM6	UCH	UCH	Write Configuration	CF295 HANDS-FREE DEADLOCKING
TALISMAN/SM6	UCH	UCH	Write Configuration	CF296 DEADLOCKING WITH REMOTE CONTROL ON KEY
TALISMAN/SM6	UCH	UCH	Write Configuration	CF227 REMOTE LOCKING BUZZER
TALISMAN/SM6	UCH	UCH	Write Configuration	CF229 ALARM
TALISMAN/SM6	UCH	UCH	Write Configuration	CF270 SCANDINAVIAN RUNNINGS LIGHTS
TALISMAN/SM6	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TALISMAN/SM6	UCH	UCH	Write Configuration	CF292 TRAILER PRESENT
TALISMAN/SM6	UCH	UCH	Write Configuration	CF297 WIPING LEARNING
TALISMAN/SM6	UCH	UCH	Write Configuration	CF307 COMPUTER CONFIGURATION
TALISMAN/SM6	UCH	UCH	Write Configuration	CF003 TESTING CARD PRESENTED
TALISMAN/SM6	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
TALISMAN/SM6	UCH	UCH	Write Configuration	CF310 STEERING LOCK
TALISMAN/SM6	UCH	UCH	Write Configuration	CF312 VEHICLE TYPE
TALISMAN/SM6	UCH	UCH	Write Configuration	CF311 REMOTE ENGINE STARTING
TALISMAN/SM6	UCH	UCH	Write Configuration	CF313 MAKE
TALISMAN/SM6	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TALISMAN/SM6	UCH	UCH	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Read Fault Code	
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Erase Fault Code	
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Read ECU Information	
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Live Data	
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	FRONT RADAR	FRONT RADAR	Configuration	SC004 FRONT RADAR ADJUSTMENT
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Live Data	
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP025 PROGRAM CLUTCH ADJUSTMENT
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTMENT
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTMENT
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ012 CLUTCH WEAR
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP032 AUTOMATIC GEARBOX CONTROL
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP024 PROGRAM CLUTCH ASSEMBLY
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ004 FAULT MEMORY
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Live Data	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Read Configuration	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
TALISMAN/SM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
TALISMAN/SM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
TALISMAN/SM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
TALISMAN/SM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
TALISMAN/SM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	UPC	UPC	Read Fault Code	
TALISMAN/SM6	UPC	UPC	Erase Fault Code	
TALISMAN/SM6	UPC	UPC	Read ECU Information	
TALISMAN/SM6	UPC	UPC	Live Data	
TALISMAN/SM6	UPC	UPC	Read Configuration	
TALISMAN/SM6	UPC	UPC	Actuation Test	
TALISMAN/SM6	UPC	UPC	Write Configuration	CF039 ESM CONFIGURATION
TALISMAN/SM6	UPC	UPC	Write Configuration	CF047 STOP AND START FUNCTION
TALISMAN/SM6	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
TALISMAN/SM6	UPC	UPC	Other Configuration	VP003 WRITE VIN
TALISMAN/SM6	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
TALISMAN/SM6	UPC	UPC	Erase	RZ004 DTC reset
TALISMAN/SM6	UPC	UPC	Erase	RZ012 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	UPC	UPC	Erase	RZ009 NUMBER OF STARTING CYCLES
TALISMAN/SM6	UPC	UPC	Erase	RZ013 STOP AND START FUNCTION
TALISMAN/SM6	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
TALISMAN/SM6	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
TALISMAN/SM6	POWER BACK DOOR	POWER BACK DOOR	Read Fault Code	
TALISMAN/SM6	POWER BACK DOOR	POWER BACK DOOR	Erase Fault Code	
TALISMAN/SM6	POWER BACK DOOR	POWER BACK DOOR	Read ECU Information	
TALISMAN/SM6	POWER BACK DOOR	POWER BACK DOOR	Live Data	
TALISMAN/SM6	POWER BACK DOOR	POWER BACK DOOR	Write Configuration	CF001 POWER BACK DOOR CYLINDER
TALISMAN/SM6	POWER BACK DOOR	POWER BACK DOOR	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Read Fault Code	
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Erase Fault Code	
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Read ECU Information	
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Live Data	
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Actuation Test	
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP004 INHIBITION OF 4-WHEEL DRIVE FUNCTION
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP005 REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	4 WHEELS STEERING	4 WHEELS STEERING	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Read Fault Code	
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Erase Fault Code	
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Read ECU Information	
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Live Data	
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Read Configuration	
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Actuation Test	
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	PILOTED SUSPENSION	Electronically-managed suspension	Read Fault Code	
TALISMAN/SM6	PILOTED SUSPENSION	Electronically-managed suspension	Erase Fault Code	
TALISMAN/SM6	PILOTED SUSPENSION	Electronically-managed suspension	Read ECU Information	
TALISMAN/SM6	PILOTED SUSPENSION	Electronically-managed suspension	Live Data	
TALISMAN/SM6	PILOTED SUSPENSION	Electronically-managed suspension	Other Configuration	VP004 WRITE VIN
TALISMAN/SM6	PILOTED SUSPENSION	Electronically-managed suspension	Erase	RZ002 FAULT MEMORY
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP009 REAR SLIDE LEARNING
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP008 FRONT SLIDE LEARNING
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP010 LUMBAR LEARNING
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
TALISMAN/SM6	DRIVER'S SEAT	DRIVER'S SEAT	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Live Data	
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Read Configuration	
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF001 COMPUTER CALIBRATION
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Write Configuration	CF011 GEOGRAPHICAL ZONE
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	RADIO	RADIO NAV.	Read Fault Code	
TALISMAN/SM6	RADIO	RADIO NAV.	Erase Fault Code	
TALISMAN/SM6	RADIO	RADIO NAV.	Read ECU Information	
TALISMAN/SM6	RADIO	RADIO NAV.	Live Data	
TALISMAN/SM6	RADIO	RADIO NAV.	Read Configuration	
TALISMAN/SM6	RADIO	RADIO NAV.	Actuation Test	
TALISMAN/SM6	RADIO	RADIO NAV.	Write Configuration	CF016 COUNTRY MODEL
TALISMAN/SM6	RADIO	RADIO NAV.	Write Configuration	CF027 LANGUAGE
TALISMAN/SM6	RADIO	RADIO NAV.	Write Configuration	CF018 DISTANCE UNITS
TALISMAN/SM6	RADIO	RADIO NAV.	Write Configuration	CF056 TYRE PRESSURE UNITS
TALISMAN/SM6	RADIO	RADIO NAV.	Write Configuration	CF050 TIME FORMAT
TALISMAN/SM6	RADIO	RADIO NAV.	Write Configuration	CF055 TEMPERATURE UNITS
TALISMAN/SM6	RADIO	RADIO NAV.	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	RADIO	RADIO NAV.	Other Configuration	VP039 COMPUTER INITIALISATION
TALISMAN/SM6	RADIO	RADIO NAV.	Erase	RZ005 FAULT MEMORY

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6	RADIO	RADIO NAV.	Erase	RZ004 RESET RADIO
TALISMAN/SM6	RADIO	RADIO NAV.	Erase	RZ007 TOUCH SCREEN
TALISMAN/SM6	RADIO	RADIO NAV.	Configuration	SC004 REVERSING CAMERA CALIBRATION
TALISMAN/SM6	RADIO	RADIO	Read Fault Code	
TALISMAN/SM6	RADIO	RADIO	Erase Fault Code	
TALISMAN/SM6	RADIO	RADIO	Read ECU Information	
TALISMAN/SM6	RADIO	RADIO	Live Data	
TALISMAN/SM6	RADIO	RADIO	Read Configuration	
TALISMAN/SM6	RADIO	RADIO	Actuation Test	
TALISMAN/SM6	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TALISMAN/SM6	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TALISMAN/SM6	RADIO	RADIO	Write Configuration	CF050 TIME FORMAT
TALISMAN/SM6	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	RADIO	RADIO	Other Configuration	VP039 COMPUTER INITIALISATION
TALISMAN/SM6	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
TALISMAN/SM6	RADIO	RADIO	Erase	RZ006 COMPUTER RESET
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
TALISMAN/SM6	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
TALISMAN/SM6	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
TALISMAN/SM6	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
TALISMAN/SM6	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
TALISMAN/SM6	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VP001 WRITE V.I.N.
TALISMAN/SM6	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ002 ECU MEMORY
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ005 FAULT MEMORY
TALISMAN/SM6	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Read Fault Code	
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Erase Fault Code	
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Read ECU Information	
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Live Data	
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Actuation Test	
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Write Configuration	CF009 NOISE-REDUCING MICROPHONE
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Erase	RZ001 FAULT MEMORY
TALISMAN/SM6	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TALISMAN/SM6	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Read Fault Code	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase Fault Code	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Read ECU Information	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Live Data	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Function Test	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Read Configuration	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Actuation Test	
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ090 STOP AND START FUNCTION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Live Data	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Function Test	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Read Configuration	
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
TALISMAN/SM6	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
THALIA/SYMB.2	INJECTION	V42 INJECTION	Read Fault Code	
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase Fault Code	
THALIA/SYMB.2	INJECTION	V42 INJECTION	Read ECU Information	
THALIA/SYMB.2	INJECTION	V42 INJECTION	Live Data	
THALIA/SYMB.2	INJECTION	V42 INJECTION	Actuation Test	
THALIA/SYMB.2	INJECTION	V42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
THALIA/SYMB.2	INJECTION	V42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
THALIA/SYMB.2	INJECTION	V42 INJECTION	Erase	RZ064 ALCOHOL LEVEL PROG.
THALIA/SYMB.2	INJECTION	V42 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
THALIA/SYMB.2	INJECTION	V42 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
THALIA/SYMB.2	INJECTION	V42 INJECTION	Configuration	SC001 WRITE SAVED DATA
THALIA/SYMB.2	INJECTION	V42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
THALIA/SYMB.2	INJECTION	V42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Read Fault Code	
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Erase Fault Code	
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Read ECU Information	
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Live Data	
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Actuation Test	
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Other Configuration	VP010 WRITE V.I.N.
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Erase	RZ002 EGR ADAPTIVES
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Erase	RZ007 FAULT MEMORY
THALIA/SYMB.2	INJECTION	INJECTION DGM 1.2	Configuration	SC002 ENTER INJECTOR CODES
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Read Fault Code	
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Read ECU Information	
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Live Data	
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Read Configuration	
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Actuation Test	
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP020 WRITE VIN
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Erase	RZ007 FAULT MEMORY
THALIA/SYMB.2	INJECTION	SIM 32 INJECTOR	Erase	RZ019 PROGRAMMING REINITIALISATION
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Read Fault Code	
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Erase Fault Code	
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Read ECU Information	
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Live Data	
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Read Configuration	
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Actuation Test	
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Other Configuration	VP020 WRITE VIN
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Erase	RZ007 FAULT MEMORY
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Erase	RZ094 IDLE SPEED LEARNING
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Erase	RZ095 INJECTION TIME PROGRAMMING
THALIA/SYMB.2	INJECTION	SIRIUS 32 INJECTION	Erase	RZ096 TORQUE LEARNING
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Read Fault Code	
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Erase Fault Code	
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Read ECU Information	
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Live Data	
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Read Configuration	
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Actuation Test	
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Other Configuration	VP020 WRITE VIN
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Erase	RZ007 FAULT MEMORY
THALIA/SYMB.2	INJECTION	SIRIUS 35 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Read Fault Code	
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Erase Fault Code	
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Read ECU Information	
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Live Data	
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Read Configuration	
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Actuation Test	
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Write Configuration	CF027 GEARBOX TYPE
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Write Configuration	CF029 POWER STEERING ELECTRIC PUMP UNIT
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Write Configuration	CF028 AIR CONDITIONING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Write Configuration	CF130 NUMBER OF HEATING ELEMENTS
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP012 PREVENTION OF ELECTRICAL CONSUMERS
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP022 INJECTION PROHIBITION
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP010 WRITE V.I.N.
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Erase	RZ007 FAULT MEMORY
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Erase	RZ002 EGR ADAPTIVES
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Erase	RZ008 ENGINE PARAMETER ADAPTIVES
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Erase	RZ009 VEHICLE FUNCTION PROGRAMMING
THALIA/SYMB.2	INJECTION	DDCR INJECTION	Configuration	SC002 ENTER INJECTOR CODES
THALIA/SYMB.2	A.B.S.	ABS	Read Fault Code	
THALIA/SYMB.2	A.B.S.	ABS	Erase Fault Code	
THALIA/SYMB.2	A.B.S.	ABS	Read ECU Information	
THALIA/SYMB.2	A.B.S.	ABS	Live Data	
THALIA/SYMB.2	A.B.S.	ABS	Actuation Test	
THALIA/SYMB.2	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
THALIA/SYMB.2	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
THALIA/SYMB.2	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
THALIA/SYMB.2	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
THALIA/SYMB.2	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
THALIA/SYMB.2	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
THALIA/SYMB.2	UCH	UCH	Read Fault Code	
THALIA/SYMB.2	UCH	UCH	Erase Fault Code	
THALIA/SYMB.2	UCH	UCH	Read ECU Information	
THALIA/SYMB.2	UCH	UCH	Live Data	
THALIA/SYMB.2	UCH	UCH	Read Configuration	
THALIA/SYMB.2	UCH	UCH	Actuation Test	
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
THALIA/SYMB.2	UCH	UCH	Other Configuration	VP004 WRITE VIN
THALIA/SYMB.2	UCH	UCH	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	UCH	UCH	Configuration	SC008 UCH TYPE
THALIA/SYMB.2	UCH	UCH	Read Fault Code	
THALIA/SYMB.2	UCH	UCH	Erase Fault Code	
THALIA/SYMB.2	UCH	UCH	Read ECU Information	
THALIA/SYMB.2	UCH	UCH	Live Data	
THALIA/SYMB.2	UCH	UCH	Read Configuration	
THALIA/SYMB.2	UCH	UCH	Actuation Test	
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
THALIA/SYMB.2	UCH	UCH	Other Configuration	VP004 WRITE VIN
THALIA/SYMB.2	UCH	UCH	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	UCH	UCH	Configuration	SC008 UCH TYPE
THALIA/SYMB.2	UCH	UCH	Read Fault Code	
THALIA/SYMB.2	UCH	UCH	Erase Fault Code	
THALIA/SYMB.2	UCH	UCH	Read ECU Information	
THALIA/SYMB.2	UCH	UCH	Live Data	
THALIA/SYMB.2	UCH	UCH	Read Configuration	
THALIA/SYMB.2	UCH	UCH	Actuation Test	
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF272 SDO
THALIA/SYMB.2	UCH	UCH	Other Configuration	VP004 WRITE VIN
THALIA/SYMB.2	UCH	UCH	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	UCH	UCH	Configuration	SC008 UCH TYPE
THALIA/SYMB.2	UCH	UCH	Read Fault Code	
THALIA/SYMB.2	UCH	UCH	Erase Fault Code	
THALIA/SYMB.2	UCH	UCH	Read ECU Information	
THALIA/SYMB.2	UCH	UCH	Live Data	
THALIA/SYMB.2	UCH	UCH	Read Configuration	
THALIA/SYMB.2	UCH	UCH	Actuation Test	
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF272 SDO
THALIA/SYMB.2	UCH	UCH	Other Configuration	VP004 WRITE VIN
THALIA/SYMB.2	UCH	UCH	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	UCH	UCH	Configuration	SC008 UCH TYPE
THALIA/SYMB.2	UCH	UCH	Read Fault Code	
THALIA/SYMB.2	UCH	UCH	Erase Fault Code	
THALIA/SYMB.2	UCH	UCH	Read ECU Information	
THALIA/SYMB.2	UCH	UCH	Live Data	
THALIA/SYMB.2	UCH	UCH	Read Configuration	
THALIA/SYMB.2	UCH	UCH	Actuation Test	
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF272 SDO
THALIA/SYMB.2	UCH	UCH	Other Configuration	VP004 WRITE VIN
THALIA/SYMB.2	UCH	UCH	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	UCH	UCH	Configuration	SC008 UCH TYPE
THALIA/SYMB.2	UCH	UCH	Read Fault Code	
THALIA/SYMB.2	UCH	UCH	Erase Fault Code	
THALIA/SYMB.2	UCH	UCH	Read ECU Information	
THALIA/SYMB.2	UCH	UCH	Live Data	
THALIA/SYMB.2	UCH	UCH	Read Configuration	
THALIA/SYMB.2	UCH	UCH	Actuation Test	
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
THALIA/SYMB.2	UCH	UCH	Write Configuration	CF272 SDO
THALIA/SYMB.2	UCH	UCH	Other Configuration	VP004 WRITE VIN
THALIA/SYMB.2	UCH	UCH	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	UCH	UCH	Configuration	SC008 UCH TYPE
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG DRIVER SIDE
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG PASSENGER SIDE
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF231 SIDE ON WHICH STEERING WHEEL FITTED
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF047 WITHOUT INHIBITION SWITCH
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF049 SEAT BELT LIGHT







**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
THALIA/SYMBL	INJECTION	DIESEL INJECTION	Parameters Configuration	VP001 WRITE VIN
THALIA/SYMBL	INJECTION	DIESEL INJECTION	Parameters Configuration	VP021 INJECTOR CYLINDER 1
THALIA/SYMBL	INJECTION	DIESEL INJECTION	Parameters Configuration	VP022 INJECTOR CYLINDER 2
THALIA/SYMBL	INJECTION	DIESEL INJECTION	Parameters Configuration	VP023 INJECTOR CYLINDER 3
THALIA/SYMBL	INJECTION	DIESEL INJECTION	Parameters Configuration	VP024 INJECTOR CYLINDER 4
THALIA/SYMBL	INJECTION		Read Fault Code	
THALIA/SYMBL	INJECTION		Erase Fault Code	
THALIA/SYMBL	INJECTION		Read ECU Information	
THALIA/SYMBL	INJECTION		Live Data	
THALIA/SYMBL	INJECTION		Actuation Test	
THALIA/SYMBL	INJECTION		Read Configuration	
THALIA/SYMBL	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
THALIA/SYMBL	A.B.S.		Read Fault Code	
THALIA/SYMBL	A.B.S.		Erase Fault Code	
THALIA/SYMBL	A.B.S.		Read ECU Information	
THALIA/SYMBL	A.B.S.		Live Data	
THALIA/SYMBL	A.B.S.		Actuation Test	
THALIA/SYMBL	A.B.S.		Read Configuration	
THALIA/SYMBL	A.B.S.		Specific Command	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
THALIA/SYMBL	A.B.S.		Parameters Configuration	VP004 VEHICLE PARAMETERS
THALIA/SYMBL	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Erase Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read ECU Information	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Live Data	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Erase Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read ECU Information	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Live Data	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Actuation Test	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Configuration	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Erase Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read ECU Information	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Live Data	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Actuation Test	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Configuration	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Erase Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read ECU Information	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Live Data	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Actuation Test	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Write Configuration	WITH PASSENGER'S AIRBAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Write Configuration	WITHOUT PASSENGER'S AIRBAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Erase Fault Code	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read ECU Information	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Live Data	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Actuation Test	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Read Configuration	
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Programming	LOCK PASSENGER'S FRONT AIR BAG
THALIA/SYMBL	AIRBAG / PRETENSIONERS		Programming	UNLOCK PASSENGER'S FRONT AIR BAG
THALIA/SYMBL	AIR CONDITIONING		Read Fault Code	
THALIA/SYMBL	AIR CONDITIONING		Erase Fault Code	
THALIA/SYMBL	AIR CONDITIONING		Read ECU Information	
THALIA/SYMBL	AIR CONDITIONING		Live Data	
THALIA/SYMBL	AIR CONDITIONING		Actuation Test	
THALIA/SYMBL	AIR CONDITIONING		Read Fault Code	
THALIA/SYMBL	AIR CONDITIONING		Erase Fault Code	
THALIA/SYMBL	AIR CONDITIONING		Read ECU Information	
THALIA/SYMBL	AIR CONDITIONING		Live Data	
THALIA/SYMBL	AIR CONDITIONING		Actuation Test	
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH HEATED REAR SCREEN
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT HEATED REAR SCREEN
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	SIEMENS PROBE CONFIGURATION
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	EEPROM PROBE CONFIGURATION
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
THALIA/SYMBL	AIR CONDITIONING		Read Fault Code	
THALIA/SYMBL	AIR CONDITIONING		Erase Fault Code	
THALIA/SYMBL	AIR CONDITIONING		Read ECU Information	
THALIA/SYMBL	AIR CONDITIONING		Live Data	
THALIA/SYMBL	AIR CONDITIONING		Actuation Test	
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH COOLANT SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT COOLANT SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH EVAPORATOR TEMPERATURE SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT EVAPORATOR TEMPERATURE SENSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH RECYCLING MOTOR TIMER
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITHOUT RECYCLING MOTOR TIMER
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH ONE-TOUCH TYPE CONTROL
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH PERMANENT TYPE CONTROL
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH HARRISON TYPE COMPRESSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	WITH SANDEN TYPE COMPRESSOR
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	HOKURIKU PROBE CONFIGURATION
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	BEHR PROBE CONFIGURATION
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING
THALIA/SYMBL	AIR CONDITIONING		Write Configuration	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
THALIA/SYMBL	AUTOMATIC GEARBOX		Read Fault Code	
THALIA/SYMBL	AUTOMATIC GEARBOX		Erase Fault Code	
THALIA/SYMBL	AUTOMATIC GEARBOX		Read ECU Information	
THALIA/SYMBL	AUTOMATIC GEARBOX		Live Data	
THALIA/SYMBL	AUTOMATIC GEARBOX		Actuation Test	
THALIA/SYMBL	AUTOMATIC GEARBOX		Read Fault Code	
THALIA/SYMBL	AUTOMATIC GEARBOX		Erase Fault Code	
THALIA/SYMBL	AUTOMATIC GEARBOX		Read ECU Information	
THALIA/SYMBL	AUTOMATIC GEARBOX		Live Data	
THALIA/SYMBL	AUTOMATIC GEARBOX		Actuation Test	
THALIA/SYMBL	AUTOMATIC GEARBOX		Write Configuration	WRITE TRANSMISSION OIL CHANGE DATE
THALIA/SYMBL	AUTOMATIC GEARBOX		Write Configuration	OIL CHANGE COUNTER OFFSET
THALIA/SYMBL	AUTOMATIC GEARBOX		Write Configuration	WITH AIR CONDITIONING









Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC II	INJECTION		Actuation Test	
TRAFIC II	INJECTION		Read Configuration	
TRAFIC II	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
TRAFIC II	A.B.S.		Read Fault Code	
TRAFIC II	A.B.S.		Erase Fault Code	
TRAFIC II	A.B.S.		Read ECU Information	
TRAFIC II	A.B.S.		Live Data	
TRAFIC II	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
TRAFIC II	A.B.S.		Read Fault Code	
TRAFIC II	A.B.S.		Erase Fault Code	
TRAFIC II	A.B.S.		Read ECU Information	
TRAFIC II	A.B.S.		Live Data	
TRAFIC II	A.B.S.		Actuation Test	
TRAFIC II	A.B.S.		Read Configuration	
TRAFIC II	A.B.S.		Parameters Configuration	VP007 SPEEDO INDEX
TRAFIC II	A.B.S.		Parameters Configuration	VP018 VEHICLE PARAMETERS
TRAFIC II	A.B.S.		Parameters Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TRAFIC II	AIRBAG / PRETENSIONERS		Read Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Erase Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Read ECU Information	
TRAFIC II	AIRBAG / PRETENSIONERS		Live Data	
TRAFIC II	AIRBAG / PRETENSIONERS		Read Configuration	
TRAFIC II	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
TRAFIC II	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
TRAFIC II	AIRBAG / PRETENSIONERS		Read Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Erase Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Read ECU Information	
TRAFIC II	AIRBAG / PRETENSIONERS		Live Data	
TRAFIC II	AIRBAG / PRETENSIONERS		Read Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Erase Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Read ECU Information	
TRAFIC II	AIRBAG / PRETENSIONERS		Live Data	
TRAFIC II	AIRBAG / PRETENSIONERS		Read Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Erase Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Read ECU Information	
TRAFIC II	AIRBAG / PRETENSIONERS		Live Data	
TRAFIC II	AIRBAG / PRETENSIONERS		Read Configuration	
TRAFIC II	AIRBAG / PRETENSIONERS		Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TRAFIC II	AIRBAG / PRETENSIONERS		Specific Command	SC005 CONFIGURATION OF SYSTEM COMPONENTS
TRAFIC II	AIRBAG / PRETENSIONERS		Specific Command	SC010 IGNITERS IN SERIES CONFIGURATION
TRAFIC II	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
TRAFIC II	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
TRAFIC II	AIRBAG / PRETENSIONERS		Read Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Erase Fault Code	
TRAFIC II	AIRBAG / PRETENSIONERS		Read ECU Information	
TRAFIC II	AIRBAG / PRETENSIONERS		Live Data	
TRAFIC II	AIRBAG / PRETENSIONERS		Read Configuration	
TRAFIC II	AIRBAG / PRETENSIONERS		Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TRAFIC II	AIRBAG / PRETENSIONERS		Parameters Configuration	VP006 LOCK COMPUTER
TRAFIC II	AIRBAG / PRETENSIONERS		Parameters Configuration	VP007 UNLOCK COMPUTER
TRAFIC II	AUTOMATIC GEARBOX		Read Fault Code	
TRAFIC II	AUTOMATIC GEARBOX		Erase Fault Code	
TRAFIC II	AUTOMATIC GEARBOX		Read ECU Information	
TRAFIC II	AUTOMATIC GEARBOX		Live Data	
TRAFIC II	AUTOMATIC GEARBOX		Actuation Test	
TRAFIC II	ADAPTATION UNIT		Read ECU Information	
TRAFIC II	ADAPTATION UNIT		Live Data	
TRAFIC II	HEATER		Read ECU Information	
TRAFIC II	HEATER		Live Data	
TRAFIC II	HEATER		Actuation Test	
TRAFIC II	CONNECTION UNIT		Read Fault Code	
TRAFIC II	CONNECTION UNIT		Erase Fault Code	
TRAFIC II	CONNECTION UNIT		Read ECU Information	
TRAFIC II	CONNECTION UNIT		Live Data	
TRAFIC II	CONNECTION UNIT		Actuation Test	
TRAFIC II	CONNECTION UNIT		Read Fault Code	
TRAFIC II	CONNECTION UNIT		Erase Fault Code	
TRAFIC II	CONNECTION UNIT		Read ECU Information	
TRAFIC II	CONNECTION UNIT		Live Data	
TRAFIC II	CONNECTION UNIT		Actuation Test	
TRAFIC II	CONNECTION UNIT		Read Fault Code	
TRAFIC II	CONNECTION UNIT		Erase Fault Code	
TRAFIC II	CONNECTION UNIT		Read ECU Information	
TRAFIC II	CONNECTION UNIT		Live Data	
TRAFIC II	CONNECTION UNIT		Actuation Test	
TRAFIC II	CONNECTION UNIT		Read Fault Code	
TRAFIC II	CONNECTION UNIT		Erase Fault Code	
TRAFIC II	CONNECTION UNIT		Read ECU Information	
TRAFIC II	CONNECTION UNIT		Live Data	
TRAFIC II	ENGINE IMMOBILISER		Actuation Test	
TRAFIC II	ENGINE IMMOBILISER		Read Fault Code	
TRAFIC II	ENGINE IMMOBILISER		Erase Fault Code	
TRAFIC II	ENGINE IMMOBILISER		Read ECU Information	
TRAFIC II	ENGINE IMMOBILISER		Live Data	
TRAFIC II	ENGINE IMMOBILISER		Actuation Test	
TRAFIC II	ENGINE IMMOBILISER		Read Fault Code	
TRAFIC II	ENGINE IMMOBILISER		Erase Fault Code	
TRAFIC II	ENGINE IMMOBILISER		Read ECU Information	
TRAFIC II	ENGINE IMMOBILISER		Live Data	
TRAFIC II	ENGINE IMMOBILISER		Actuation Test	
TRAFIC II	ENGINE IMMOBILISER		Read Fault Code	
TRAFIC II	ENGINE IMMOBILISER		Erase Fault Code	
TRAFIC II	ENGINE IMMOBILISER		Read ECU Information	
TRAFIC II	ENGINE IMMOBILISER		Live Data	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Read Fault Code	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase Fault Code	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Read ECU Information	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Live Data	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Read Configuration	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Actuation Test	
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ007 FAULT MEMORY
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ074 SWIRL FLAP
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ050 INJECTOR ADAPTIVES
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIC III	INJECTION	EDC17 C42 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Live Data	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Read Configuration	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Actuation Test	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ007 FAULT MEMORY
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIC III	A.B.S.	ABS	Read Fault Code	
TRAFIC III	A.B.S.	ABS	Erase Fault Code	
TRAFIC III	A.B.S.	ABS	Read ECU Information	
TRAFIC III	A.B.S.	ABS	Live Data	
TRAFIC III	A.B.S.	ABS	Read Configuration	
TRAFIC III	A.B.S.	ABS	Actuation Test	
TRAFIC III	A.B.S.	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
TRAFIC III	A.B.S.	ABS	Other Configuration	VP017 GEARBOX TYPE
TRAFIC III	A.B.S.	ABS	Other Configuration	VP043 IMPROVED GRIP FUNCTION
TRAFIC III	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
TRAFIC III	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TRAFIC III	A.B.S.	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
TRAFIC III	A.B.S.	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
TRAFIC III	A.B.S.	ABS	Other Configuration	VP045 HILL START
TRAFIC III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
TRAFIC III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
TRAFIC III	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
TRAFIC III	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
TRAFIC III	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
TRAFIC III	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
TRAFIC III	A.B.S.	ABS	Erase	RZ006 STEERING WHEEL ANGLE SENSOR PROGRAMMING
TRAFIC III	A.B.S.	ABS	Erase	RZ012 RESET
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
TRAFIC III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TRAFIC III	UCH	UCH	Read Fault Code	
TRAFIC III	UCH	UCH	Erase Fault Code	
TRAFIC III	UCH	UCH	Read ECU Information	
TRAFIC III	UCH	UCH	Live Data	
TRAFIC III	UCH	UCH	Read Configuration	
TRAFIC III	UCH	UCH	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC III	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TRAFIC III	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TRAFIC III	UCH	UCH	Write Configuration	CF009 DEADLOCKING
TRAFIC III	UCH	UCH	Write Configuration	CF289 LOAD AREA
TRAFIC III	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
TRAFIC III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TRAFIC III	UCH	UCH	Erase	RZ001 FAULT MEMORY
TRAFIC III	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVE 1
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Live Data	
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
TRAFIC III	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Configuration	
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Write Configuration	CF014 TUNING VERSION NUMBER
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
TRAFIC III	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
TRAFIC III	UPC	UPC COMP. TYPE	Read Fault Code	
TRAFIC III	UPC	UPC COMP. TYPE	Erase Fault Code	
TRAFIC III	UPC	UPC COMP. TYPE	Read ECU Information	
TRAFIC III	UPC	UPC COMP. TYPE	Live Data	
TRAFIC III	UPC	UPC COMP. TYPE	Actuation Test	
TRAFIC III	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
TRAFIC III	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
TRAFIC III	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
TRAFIC III	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC018 STARTER LEARNING
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC017 HIGH PRESSURE PUMP LEARNING
TRAFIC III	UPC	UPC COMP. TYPE	Read Fault Code	
TRAFIC III	UPC	UPC COMP. TYPE	Erase Fault Code	
TRAFIC III	UPC	UPC COMP. TYPE	Read ECU Information	
TRAFIC III	UPC	UPC COMP. TYPE	Live Data	
TRAFIC III	UPC	UPC COMP. TYPE	Read Configuration	
TRAFIC III	UPC	UPC COMP. TYPE	Actuation Test	
TRAFIC III	UPC	UPC COMP. TYPE	Write Configuration	CF046 MULTIPLE 12V BATTERIES
TRAFIC III	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
TRAFIC III	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
TRAFIC III	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
TRAFIC III	UPC	UPC COMP. TYPE	Configuration	SC015 COUNTRY MODEL
TRAFIC III	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
TRAFIC III	ADAPTATION UNIT	CAN INTERFACE UNIT	Read Fault Code	
TRAFIC III	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase Fault Code	
TRAFIC III	ADAPTATION UNIT	CAN INTERFACE UNIT	Read ECU Information	
TRAFIC III	ADAPTATION UNIT	CAN INTERFACE UNIT	Other Configuration	VP014 WRITE VIN
TRAFIC III	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase	RZ002 FAULT MEMORY
TRAFIC III	PARKING PROX CAN	PARKING AID	Read Fault Code	
TRAFIC III	PARKING PROX CAN	PARKING AID	Erase Fault Code	
TRAFIC III	PARKING PROX CAN	PARKING AID	Read ECU Information	
TRAFIC III	PARKING PROX CAN	PARKING AID	Live Data	
TRAFIC III	PARKING PROX CAN	PARKING AID	Read Configuration	
TRAFIC III	PARKING PROX CAN	PARKING AID	Actuation Test	
TRAFIC III	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
TRAFIC III	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
TRAFIC III	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
TRAFIC III	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
TRAFIC III	RADIO	RADIO	Read Fault Code	
TRAFIC III	RADIO	RADIO	Erase Fault Code	
TRAFIC III	RADIO	RADIO	Read ECU Information	
TRAFIC III	RADIO	RADIO	Live Data	
TRAFIC III	RADIO	RADIO	Read Configuration	
TRAFIC III	RADIO	RADIO	Actuation Test	
TRAFIC III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TRAFIC III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TRAFIC III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TRAFIC III	RADIO	RADIO	Configuration	SC002 COMP CONFIGURAION
TRAFIC III	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
TRAFIC III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP004 ADBLUE PRESSURE PREPARATION TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP002 ADBLUE SMALL QUANTITY TEST METERING
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP003 ADBLUE LARGE VOLUME TEST METERING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP005 ADBLUE SPRAY TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP009 ADBLUE BACKFLOW PUMP TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP008 ADBLUE INJECTOR RELEASE TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ004 FAULT MEMORY
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ001 ADBLUE TANK PROGRAMMING
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ003 ADBLUE INJECTOR PROGRAMMING
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ002 ADBLUE PUMP MODULE PROGRAMMING
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ005 ADBLUE DOSING MODULE CATALYST
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
TRAFIC III	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ001 FAULT MEMORY
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
TRAFIC III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
TRAFIC III	RADIO	RADIO	Read Fault Code	
TRAFIC III	RADIO	RADIO	Erase Fault Code	
TRAFIC III	RADIO	RADIO	Read ECU Information	
TRAFIC III	RADIO	RADIO	Live Data	
TRAFIC III	RADIO	RADIO	Read Configuration	
TRAFIC III	RADIO	RADIO	Actuation Test	
TRAFIC III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TRAFIC III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TRAFIC III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TRAFIC III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
TRAFIC III	RADIO	RADIO	Erase	RZ004 RESET RADIO
TRAFIC III	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
TRAFIC III	RADIO	RADIO	Read Fault Code	
TRAFIC III	RADIO	RADIO	Erase Fault Code	
TRAFIC III	RADIO	RADIO	Read ECU Information	
TRAFIC III	RADIO	RADIO	Live Data	
TRAFIC III	RADIO	RADIO	Read Configuration	
TRAFIC III	RADIO	RADIO	Actuation Test	
TRAFIC III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TRAFIC III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TRAFIC III	RADIO	RADIO	Write Configuration	CF066 GUIDELINES
TRAFIC III	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TRAFIC III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TRAFIC III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
TRAFIC III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
TRAFIC III	HEATER	BOLER	Read Fault Code	
TRAFIC III	HEATER	BOLER	Erase Fault Code	
TRAFIC III	HEATER	BOLER	Read ECU Information	
TRAFIC III	HEATER	BOLER	Live Data	
TRAFIC III	HEATER	BOLER	Erase	RZ004 FAULT MEMORY
TRAFIC III	HEATER	BOLER	Erase	RZ001 ERASE OVERHEATING COUNTER
TRAFIC III	HEATER	BOLER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Read Fault Code	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase Fault Code	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Read ECU Information	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Live Data	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Function Test	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Read Configuration	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Actuation Test	
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP010 WRITE V. I. N.
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP306 NUMBER OF STARTING 1
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP307 NUMBER OF STARTING 2
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP308 NUMBER OF STARTING 3
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Other Configuration	VP309 NUMBER OF STARTING 4
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ086 EXHAUST FLAP LOW SETTING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ068 SWIRL FLAP PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ069 FUEL PUMP PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ014 ADAPTIVES ON AIR INTAKE FLAP FAULT
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ037 PLYWHEEL TARGET PROGRAMMING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ074 SWIRL FLAP
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ078 STARTER ADAPTIVES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ087 CATALYTIC CONVERTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC060 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC072 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC032 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC033 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC055 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC068 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC077 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC079 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC080 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC081 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	EDC17 C84 INJECTION	Configuration	SC082 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	MDG1 INJECTION	Read Fault Code	
TRAFIC III	INJECTION	MDG1 INJECTION	Erase Fault Code	
TRAFIC III	INJECTION	MDG1 INJECTION	Read ECU Information	
TRAFIC III	INJECTION	MDG1 INJECTION	Live Data	
TRAFIC III	INJECTION	MDG1 INJECTION	Function Test	
TRAFIC III	INJECTION	MDG1 INJECTION	Read Configuration	
TRAFIC III	INJECTION	MDG1 INJECTION	Actuation Test	
TRAFIC III	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
TRAFIC III	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFIC III	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFIC III	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
TRAFIC III	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
TRAFIC III	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TRAFIC III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
TRAFIC III	RADIO	RADIO	Read Fault Code	
TRAFIC III	RADIO	RADIO	Erase Fault Code	
TRAFIC III	RADIO	RADIO	Read ECU Information	
TRAFIC III	RADIO	RADIO	Live Data	
TRAFIC III	RADIO	RADIO	Function Test	
TRAFIC III	RADIO	RADIO	Read Configuration	
TRAFIC III	RADIO	RADIO	Actuation Test	
TRAFIC III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TRAFIC III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TRAFIC III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TRAFIC III	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADLUE INJECTED
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
TRAFIC III	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Read Fault Code	
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Erase Fault Code	
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Read ECU Information	
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Live Data	
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Read Configuration	
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Actuation Test	
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
TRAFICIIp2/3	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Live Data	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Configuration	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Actuation Test	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Live Data	
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TRAFICIIp2/3	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Live Data	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Configuration	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Actuation Test	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Live Data	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Configuration	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Actuation Test	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP072 PUMP PRESSURE REGULATOR TYPE
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 CYLINDER FUNCTION FAULT FINDING
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Live Data	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Read Configuration	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Actuation Test	
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP072 PUMP PRESSURE REGULATOR TYPE
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
TRAFICIIp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Live Data	
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Read Configuration	
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Actuation Test	
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TRAFIClp2/3	INJECTION	EDC16 C36 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Read Fault Code	
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase Fault Code	
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Read ECU Information	
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Live Data	
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Read Configuration	
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Actuation Test	
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ035 AVERAGE AIR TEMPERATURE
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ063 PREHEATER UNIT
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Erase	RZ085 IDLE SPEED REFERENCE
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC001 WRITE SAVED DATA
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC040 SPEED LIMITER
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TRAFIClp2/3	INJECTION	EDC17 C11 INJECTION	Configuration	SC067 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TRAFIClp2/3	A.B.S.	ABS	Read Fault Code	
TRAFIClp2/3	A.B.S.	ABS	Erase Fault Code	
TRAFIClp2/3	A.B.S.	ABS	Read ECU Information	
TRAFIClp2/3	A.B.S.	ABS	Live Data	
TRAFIClp2/3	A.B.S.	ABS	Actuation Test	
TRAFIClp2/3	A.B.S.	ABS	Other Configuration	VP007 SPEED INDEX
TRAFIClp2/3	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIClp2/3	A.B.S.	ABS	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
TRAFIClp2/3	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
TRAFIClp2/3	A.B.S.	ABS	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
TRAFIClp2/3	A.B.S.	ESP	Read Fault Code	
TRAFIClp2/3	A.B.S.	ESP	Erase Fault Code	
TRAFIClp2/3	A.B.S.	ESP	Read ECU Information	
TRAFIClp2/3	A.B.S.	ESP	Live Data	
TRAFIClp2/3	A.B.S.	ESP	Actuation Test	
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP007 SPEED INDEX
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP023 ESP AUTOMATIC RECONNECTION THRESHOLD
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP032 VEH. SPEED AT INITIALISATION
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TRAFIClp2/3	A.B.S.	ESP	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
TRAFIClp2/3	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	A.B.S.	ESP	Erase	RZ003 ESP SENSOR PROGRAMMING
TRAFIClp2/3	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
TRAFIClp2/3	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF209 COMPUTER INITIALISATION
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF213 TACHOGRAPH
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF058 ADAC CONFIGURATION
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF037 CLOCK
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF214 ABS/ESP
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF215 TYRES
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF202 FREE SHIFT
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC011 BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
TRAFIClp2/3	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC012 WRITING OF INSTRUMENT PANEL DATA FOR INJECTION
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Live Data	
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF044 VEHICLE TYPE
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF125 COMPRESSOR FEEDBACK
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Read Fault Code	
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Erase Fault Code	
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Read ECU Information	
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Live Data	
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Actuation Test	
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP017 PROGRAM CLUTCH OPEN POSITION
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ004 FAULT MEMORY
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ002 PROGRAMMED VALUES
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
TRAFIClp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ003 PROGRAMME SLIP POINT
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP005 COMP CONFIGURATION
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF026 SYSTEM CONFIGURATION
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF043 SYSTEM CONFIGURATION
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF034 CONSTRUCTOR/MANUFACTURER
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF044 GSM ANTENNA
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
TRAFIClp2/3	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
TRAFIClp2/3	RADIO	R108 RADIO	Read Fault Code	
TRAFIClp2/3	RADIO	R108 RADIO	Erase Fault Code	
TRAFIClp2/3	RADIO	R108 RADIO	Read ECU Information	
TRAFIClp2/3	RADIO	R108 RADIO	Live Data	
TRAFIClp2/3	RADIO	R108 RADIO	Read Configuration	
TRAFIClp2/3	RADIO	R108 RADIO	Actuation Test	
TRAFIClp2/3	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TRAFIClp2/3	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
TRAFIClp2/3	RADIO	R108 RADIO	Configuration	SC002 COMP CONFIGURATION
TRAFIClp2/3	RADIO	R208 RADIO	Read Fault Code	
TRAFIClp2/3	RADIO	R208 RADIO	Erase Fault Code	
TRAFIClp2/3	RADIO	R208 RADIO	Read ECU Information	
TRAFIClp2/3	RADIO	R208 RADIO	Live Data	
TRAFIClp2/3	RADIO	R208 RADIO	Read Configuration	
TRAFIClp2/3	RADIO	R208 RADIO	Actuation Test	
TRAFIClp2/3	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TRAFIClp2/3	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	RADIO	R208 RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
TRAFIClp2/3	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
TRAFIClp2/3	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
TRAFIClp2/3	RADIO	RADIO	Read Fault Code	
TRAFIClp2/3	RADIO	RADIO	Erase Fault Code	
TRAFIClp2/3	RADIO	RADIO	Read ECU Information	
TRAFIClp2/3	RADIO	RADIO	Live Data	
TRAFIClp2/3	RADIO	RADIO	Read Configuration	
TRAFIClp2/3	RADIO	RADIO	Actuation Test	
TRAFIClp2/3	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TRAFIClp2/3	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
TRAFIClp2/3	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
TRAFIClp2/3	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF008 RADIO
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF009 NAVIGATION
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF012 LIGHTING
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Configuration	SC002 VEHICLE IDENTIFIER
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read Fault Code	
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase Fault Code	
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read ECU Information	
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Live Data	
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP003 WRITE VIN
TRAFIClp2/3	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ001 FAULT MEMORY
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Read Fault Code	
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Erase Fault Code	
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Read ECU Information	
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Live Data	
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Read Configuration	
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Actuation Test	
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Write Configuration	CF022 WITH SWIRL FLAP
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
TRAFIClp2/3	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TRAFIC1lp2/3	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TRAFIC1lp2/3	A.B.S.	ABS	Read Fault Code	
TRAFIC1lp2/3	A.B.S.	ABS	Erase Fault Code	
TRAFIC1lp2/3	A.B.S.	ABS	Read ECU Information	
TRAFIC1lp2/3	A.B.S.	ABS	Live Data	
TRAFIC1lp2/3	A.B.S.	ABS	Actuation Test	
TRAFIC1lp2/3	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIC1lp2/3	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
TRAFIC1lp2/3	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	A.B.S.	ABS	Configuration	SC007 BLEEDING THE BRAKING SYSTEM
TRAFIC1lp2/3	A.B.S.	ESP	Read Fault Code	
TRAFIC1lp2/3	A.B.S.	ESP	Erase Fault Code	
TRAFIC1lp2/3	A.B.S.	ESP	Read ECU Information	
TRAFIC1lp2/3	A.B.S.	ESP	Live Data	
TRAFIC1lp2/3	A.B.S.	ESP	Read Configuration	
TRAFIC1lp2/3	A.B.S.	ESP	Actuation Test	
TRAFIC1lp2/3	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TRAFIC1lp2/3	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIC1lp2/3	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
TRAFIC1lp2/3	A.B.S.	ESP	Other Configuration	VP018 VEHICLE PARAMETERS
TRAFIC1lp2/3	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	UCH	UCH	Read Fault Code	
TRAFIC1lp2/3	UCH	UCH	Erase Fault Code	
TRAFIC1lp2/3	UCH	UCH	Read ECU Information	
TRAFIC1lp2/3	UCH	UCH	Live Data	
TRAFIC1lp2/3	UCH	UCH	Read Configuration	
TRAFIC1lp2/3	UCH	UCH	Actuation Test	
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
TRAFIC1lp2/3	UCH	UCH	Other Configuration	VP004 WRITE VIN
TRAFIC1lp2/3	UCH	UCH	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
TRAFIC1lp2/3	UCH	UCH	Read Fault Code	
TRAFIC1lp2/3	UCH	UCH	Erase Fault Code	
TRAFIC1lp2/3	UCH	UCH	Read ECU Information	
TRAFIC1lp2/3	UCH	UCH	Live Data	
TRAFIC1lp2/3	UCH	UCH	Read Configuration	
TRAFIC1lp2/3	UCH	UCH	Actuation Test	
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF009 DEADLOCKING
TRAFIC1lp2/3	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TRAFIC1lp2/3	UCH	UCH	Other Configuration	VP032 MULTIPLEXED NETWORK CONFIGURATION
TRAFIC1lp2/3	UCH	UCH	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
TRAFIC1lp2/3	UCH	UCH	Read Fault Code	
TRAFIC1lp2/3	UCH	UCH	Erase Fault Code	
TRAFIC1lp2/3	UCH	UCH	Read ECU Information	
TRAFIC1lp2/3	UCH	UCH	Live Data	
TRAFIC1lp2/3	UCH	UCH	Read Configuration	
TRAFIC1lp2/3	UCH	UCH	Actuation Test	
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF276 REAR SCREEN DEMISTER
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF281 HEATED REAR SCREEN INDICATOR LIGHT CIRCUIT
TRAFIC1lp2/3	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
TRAFIC1lp2/3	UCH	UCH	Other Configuration	VP004 WRITE VIN
TRAFIC1lp2/3	UCH	UCH	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	UCH	UCH	Configuration	SC039 INSTRUMENT PANEL TYPE
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Read Fault Code	
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Erase Fault Code	
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Read ECU Information	
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Live Data	
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Actuation Test	
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP017 PROGRAM CLUTCH OPEN POSITION
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Other Configuration	VP001 WRITE VIN
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ003 PROGRAMME SLIP POINT
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ002 PROGRAMMED VALUES
TRAFIC1lp2/3	AUTOMATIC GEARBOX	BVR PA	Erase	RZ010 REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT
TRAFIC1lp2/3	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
TRAFIC1lp2/3	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
TRAFIC1lp2/3	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
TRAFIC1lp2/3	ADAPTATION UNIT	ADAPTATION UNIT	Live Data	
TRAFIC1lp2/3	ADAPTATION UNIT	ADAPTATION UNIT	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Live Data	
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Read Configuration	
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
TRAFIC1lp2/3	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
TRAFIC1lp2/3	HEATER	BOILER	Read Fault Code	
TRAFIC1lp2/3	HEATER	BOILER	Erase Fault Code	
TRAFIC1lp2/3	HEATER	BOILER	Read ECU Information	
TRAFIC1lp2/3	HEATER	BOILER	Live Data	
TRAFIC1lp2/3	HEATER	BOILER	Actuation Test	
TRAFIC1lp2/3	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
TRAFIC1lp2/3	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
TRAFIC1lp2/3	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
TWINGO II	INJECTION	SIM 32 INJECTOR	Read Fault Code	
TWINGO II	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
TWINGO II	INJECTION	SIM 32 INJECTOR	Read ECU Information	
TWINGO II	INJECTION	SIM 32 INJECTOR	Live Data	
TWINGO II	INJECTION	SIM 32 INJECTOR	Read Configuration	
TWINGO II	INJECTION	SIM 32 INJECTOR	Actuation Test	
TWINGO II	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
TWINGO II	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
TWINGO II	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V.I.N.
TWINGO II	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
TWINGO II	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
TWINGO II	INJECTION	SIM 32 INJECTOR	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
TWINGO II	INJECTION	SIM 32 INJECTOR	Configuration	SC007 START OBD TEST: O2 SENSORS
TWINGO II	INJECTION	SIM 32 INJECTOR	Configuration	SC001 WRITE SAVED DATA
TWINGO II	INJECTION	SIM 32 INJECTOR	Configuration	SC003 SAVE COMPUTER DATA
TWINGO II	INJECTION	SIM 32 INJECTOR	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TWINGO II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
TWINGO II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
TWINGO II	INJECTION	INJECTION DCM 1.2	Live Data	
TWINGO II	INJECTION	INJECTION DCM 1.2	Read Configuration	
TWINGO II	INJECTION	INJECTION DCM 1.2	Actuation Test	
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
TWINGO II	INJECTION	INJECTION DCM 1.2	Read Fault Code	
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase Fault Code	
TWINGO II	INJECTION	INJECTION DCM 1.2	Read ECU Information	
TWINGO II	INJECTION	INJECTION DCM 1.2	Live Data	
TWINGO II	INJECTION	INJECTION DCM 1.2	Read Configuration	
TWINGO II	INJECTION	INJECTION DCM 1.2	Actuation Test	
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP001 CYLINDER 1 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP002 CYLINDER 2 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP003 CYLINDER 3 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP004 CYLINDER 4 INJECTOR CODE
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP010 WRITE V.I.N.
TWINGO II	INJECTION	INJECTION DCM 1.2	Other Configuration	VP013 LOCK INJECTOR CONTROL
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase	RZ001 FAULT MEMORY
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase	RZ002 EGR ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 1.2	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC003 SAVE COMPUTER DATA
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC001 WRITE SAVED DATA
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC002 ENTER INJECTOR CODES
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC040 SPEED LIMITER
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TWINGO II	INJECTION	INJECTION DCM 1.2	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TWINGO II	INJECTION	INJECTION DCM 3.4	Read Fault Code	
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase Fault Code	
TWINGO II	INJECTION	INJECTION DCM 3.4	Read ECU Information	
TWINGO II	INJECTION	INJECTION DCM 3.4	Live Data	
TWINGO II	INJECTION	INJECTION DCM 3.4	Read Configuration	
TWINGO II	INJECTION	INJECTION DCM 3.4	Actuation Test	
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP010 WRITE V.I.N.
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP292 PARAMETRAGE PRIVE 237
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP293 PARAMETRAGE PRIVE 238
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP294 PARAMETRAGE PRIVE 239
TWINGO II	INJECTION	INJECTION DCM 3.4	Other Configuration	VP295 PARAMETRAGE PRIVE 240
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ001 FAULT MEMORY
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ045 RAIL PRESSURE SENSOR ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ004 PRESSURE REGULATION ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ012 EGR VALVE PROGRAMMING
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ032 AIR PATH PROGRAMMING
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ036 PARTICLE FILTER RELATIVE PRESSURE SENSOR
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ041 FUEL FLOW REGULATOR
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ043 EXHAUST INJECTOR CIRCUIT
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ003 ENGINE ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TWINGO II	INJECTION	INJECTION DCM 3.4	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC002 ENTER INJECTOR CODES
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC017 PARTICLE FILTER REGENERATION
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC040 SPEED LIMITER
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC052 ADAPTIVES AFTER REGENERATING PARTICLE FILTER
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC053 INJECTOR ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC054 INJECTOR ADAPTIVES
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC060 PARTICLE FILTER REGENERATION
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TWINGO II	INJECTION	INJECTION DCM 3.4	Configuration	SC044 ENTER INJECTOR CODES
TWINGO II	INJECTION	EMS 3110 INJECTION	Read Fault Code	
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase Fault Code	
TWINGO II	INJECTION	EMS 3110 INJECTION	Read ECU Information	
TWINGO II	INJECTION	EMS 3110 INJECTION	Live Data	
TWINGO II	INJECTION	EMS 3110 INJECTION	Read Configuration	
TWINGO II	INJECTION	EMS 3110 INJECTION	Actuation Test	
TWINGO II	INJECTION	EMS 3110 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TWINGO II	INJECTION	EMS 3110 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ001 FAULT MEMORY
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ038 PINKING SENSOR PROGRAMMING
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ003 ENGINE ADAPTIVES

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TWINGO II	INJECTION	EMS 3110 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC001 WRITE SAVED DATA
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC040 SPEED LIMITER
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC041 COMMERCIAL VEHICLE IDLE SPEED MODIFICATION
TWINGO II	INJECTION	EMS 3110 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TWINGO II	INJECTION	EMS 3120 INJECTION	Read Fault Code	
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase Fault Code	
TWINGO II	INJECTION	EMS 3120 INJECTION	Read ECU Information	
TWINGO II	INJECTION	EMS 3120 INJECTION	Live Data	
TWINGO II	INJECTION	EMS 3120 INJECTION	Read Configuration	
TWINGO II	INJECTION	EMS 3120 INJECTION	Actuation Test	
TWINGO II	INJECTION	EMS 3120 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TWINGO II	INJECTION	EMS 3120 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ001 FAULT MEMORY
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TWINGO II	INJECTION	EMS 3120 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TWINGO II	INJECTION	EMS 3120 INJECTION	Configuration	SC001 WRITE SAVED DATA
TWINGO II	INJECTION	EMS 3120 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TWINGO II	INJECTION	EMS 3120 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
TWINGO II	INJECTION	EMS 3120 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
TWINGO II	A.B.S.	ABS	Read Fault Code	
TWINGO II	A.B.S.	ABS	Erase Fault Code	
TWINGO II	A.B.S.	ABS	Read ECU Information	
TWINGO II	A.B.S.	ABS	Live Data	
TWINGO II	A.B.S.	ABS	Read Configuration	
TWINGO II	A.B.S.	ABS	Actuation Test	
TWINGO II	A.B.S.	ABS	Write Configuration	CF079 GEARBOX TYPE
TWINGO II	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
TWINGO II	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
TWINGO II	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
TWINGO II	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
TWINGO II	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
TWINGO II	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
TWINGO II	A.B.S.	ESP	Read Fault Code	
TWINGO II	A.B.S.	ESP	Erase Fault Code	
TWINGO II	A.B.S.	ESP	Read ECU Information	
TWINGO II	A.B.S.	ESP	Live Data	
TWINGO II	A.B.S.	ESP	Actuation Test	
TWINGO II	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
TWINGO II	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
TWINGO II	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
TWINGO II	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TWINGO II	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
TWINGO II	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
TWINGO II	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
TWINGO II	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
TWINGO II	A.B.S.	ESP	Erase	RZ011 SENSOR OFFSETS
TWINGO II	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
TWINGO II	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF038 RHEOSTAT PRESENCE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF181 ELECTRIC POWER ASSISTED STEERING
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP020 FUEL LEVEL DISPLAY UPDATE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF038 RHEOSTAT PRESENCE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF180 EXTERNAL TEMPERATURE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF181 ELECTRIC POWER ASSISTED STEERING
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF198 Personalised oil change frequency
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF058 ADAC CONFIGURATION
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF037 CLOCK
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP020 FUEL LEVEL DISPLAY UPDATE
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
TWINGO II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TWINGO II	UCH	UCH	Read Fault Code	
TWINGO II	UCH	UCH	Erase Fault Code	
TWINGO II	UCH	UCH	Read ECU Information	
TWINGO II	UCH	UCH	Live Data	
TWINGO II	UCH	UCH	Read Configuration	
TWINGO II	UCH	UCH	Actuation Test	
TWINGO II	UCH	UCH	Write Configuration	CF031 CALIBRATION
TWINGO II	UCH	UCH	Write Configuration	CF019 AIR CONDITIONING TYPE
TWINGO II	UCH	UCH	Write Configuration	CF028 ENGINE TYPE
TWINGO II	UCH	UCH	Write Configuration	CF171 TEMPERATURE DISPLAY
TWINGO II	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
TWINGO II	UCH	UCH	Write Configuration	CF173 ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF
TWINGO II	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
TWINGO II	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
TWINGO II	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
TWINGO II	UCH	UCH	Write Configuration	CF193 AUTOMATIC LIGHTING FUNCTION

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
TWINGO II	UCH	UCH	Write Configuration	CF194 AUTOMATIC WIPING FUNCTION
TWINGO II	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
TWINGO II	UCH	UCH	Write Configuration	CF191 WIPER INTERMITTENT SPEED RING
TWINGO II	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TWINGO II	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
TWINGO II	UCH	UCH	Write Configuration	CF009 DEADLOCKING
TWINGO II	UCH	UCH	Write Configuration	CF192 OPENING ELEMENTS CENTRAL LOCKING
TWINGO II	UCH	UCH	Write Configuration	CF195 KEY TYPE
TWINGO II	UCH	UCH	Write Configuration	CF229 ALARM
TWINGO II	UCH	UCH	Other Configuration	VP004 WRITE VIN
TWINGO II	UCH	UCH	Erase	RZ001 FAULT MEMORY
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF221 CURTAIN SIDE AIR BAG, DRIVER'S SIDE
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF222 CURTAIN SIDE AIR BAG, PASSENGER SIDE
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF265 DRIVER'S FRONT BUCKLE PRETENSIONER
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF266 PASSENGER'S FRONT BUCKLE PRETENSIONER
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF274 PASSENGER'S SEAT BUCKLE SENSOR
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF275 PASSENGER PRESENCE DETECTION SENSOR
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
TWINGO II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF044 VEHICLE TYPE
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF117 HEATING RESISTOR TYPE
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF024 GEOGRAPHICAL ZONE
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
TWINGO II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Read Fault Code	
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Erase Fault Code	
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Read ECU Information	
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Live Data	
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Actuation Test	
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Other Configuration	VP014 WRITE CLUTCH INITIAL CLOSED POSITION
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Other Configuration	VP013 WRITE DATE NEW CLUTCH FITTED
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Other Configuration	VP001 WRITE VIN
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Erase	RZ001 FAULT/S MEMORISED
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Erase	RZ002 PROGRAMMED VALUES
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Erase	RZ008 CLUTCH INITIAL CLOSED POSITION
TWINGO II	AUTOMATIC GEARBOX	JH BVR	Erase	RZ003 PROGRAMME SLIP POINT
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Read Fault Code	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Read ECU Information	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Live Data	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Read Configuration	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Actuation Test	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF003 RHEOSTAT LIGHTING
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF002 TRAJECTORY CONTROL
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF001 OVERSPEED LIGHT
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Other Configuration	VP001 WRITE VIN
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Read Fault Code	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Read ECU Information	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Live Data	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Read Configuration	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Actuation Test	
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF003 RHEOSTAT LIGHTING
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF002 TRAJECTORY CONTROL
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF001 OVERSPEED LIGHT
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF004 FREE SHIFT
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Write Configuration	CF005 FREE SHIFT DISPLAY
TWINGO II	REV COUNTER/SYMBOL	REV COUNTER	Other Configuration	VP001 WRITE VIN
TWINGO II	RADIO	R208 RADIO	Read Fault Code	
TWINGO II	RADIO	R208 RADIO	Erase Fault Code	
TWINGO II	RADIO	R208 RADIO	Read ECU Information	
TWINGO II	RADIO	R208 RADIO	Live Data	
TWINGO II	RADIO	R208 RADIO	Read Configuration	
TWINGO II	RADIO	R208 RADIO	Actuation Test	
TWINGO II	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TWINGO II	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
TWINGO II	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
TWINGO II	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
TWINGO II	RADIO	R108 RADIO	Read Fault Code	
TWINGO II	RADIO	R108 RADIO	Erase Fault Code	
TWINGO II	RADIO	R108 RADIO	Read ECU Information	
TWINGO II	RADIO	R108 RADIO	Live Data	
TWINGO II	RADIO	R108 RADIO	Read Configuration	
TWINGO II	RADIO	R108 RADIO	Actuation Test	
TWINGO II	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
TWINGO II	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TWINGO II	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
TWINGO II	RADIO	R108 RADIO	Configuration	SC002 COMP CONFIGURATION
TWINGO II	RADIO	RADIO	Read Fault Code	
TWINGO II	RADIO	RADIO	Erase Fault Code	
TWINGO II	RADIO	RADIO	Read ECU Information	
TWINGO II	RADIO	RADIO	Live Data	
TWINGO II	RADIO	RADIO	Read Configuration	
TWINGO II	RADIO	RADIO	Actuation Test	
TWINGO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TWINGO II	RADIO	RADIO	Other Configuration	VP016 CONFIGURING THE MULTIMEDIA COMPUTER
TWINGO II	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
TWINGO II	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
TWINGO II	RADIO	RADIO	Configuration	SC003 COMP CONFIGURATION
TWINGO II	RADIO	RADIO	Configuration	SC009 COMP CONFIGURATION
TWINGO II	RADIO	RADIO	Read Fault Code	
TWINGO II	RADIO	RADIO	Erase Fault Code	
TWINGO II	RADIO	RADIO	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TWINGO II	RADIO	RADIO	Live Data	
TWINGO II	RADIO	RADIO	Read Configuration	
TWINGO II	RADIO	RADIO	Actuation Test	
TWINGO II	RADIO	RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
TWINGO II	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
TWINGO II	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TWINGO II	RADIO	RADIO	Erase	RZ004 RESET RADIO
TWINGO II	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
TWINGO II	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
TWINGO II	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF008 RADIO
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF012 LIGHTING
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF001 VEHICLE TYPE
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Configuration	SC002 VEHICLE IDENTIFIER
TWINGO II	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Configuration	SC003 COMP CONFIGURATION
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read Fault Code	
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase Fault Code	
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Read ECU Information	
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Live Data	
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Other Configuration	VP003 WRITE VIN
TWINGO II	MULTIMED. CONNECTION	MULTIMED. CONNECTION	Erase	RZ001 FAULT MEMORY
TWINGO II	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Live Data	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Read Configuration	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Write Configuration	CF073 MODE NUMBER
TWINGO II	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
TWINGO II	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Live Data	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Read Configuration	
TWINGO II	VARIABLE P.A.S.	Electric PAS	Write Configuration	CF073 MODE NUMBER
TWINGO II	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
TWINGO II	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
TWINGO II	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
TWINGO II	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
TWINGO II	PARKING ASSISTANCE	PARKING AID	Live Data	
TWINGO II	PARKING ASSISTANCE	PARKING AID	Read Configuration	
TWINGO II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
TWINGO II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
TWINGO II	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
TWINGO II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
TWINGO II	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
TWINGO II	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
TWINGO III	INJECTION	INJECTION	Read Fault Code	
TWINGO III	INJECTION	INJECTION	Erase Fault Code	
TWINGO III	INJECTION	INJECTION	Read ECU Information	
TWINGO III	INJECTION	INJECTION	Live Data	
TWINGO III	INJECTION	INJECTION	Read Configuration	
TWINGO III	INJECTION	INJECTION	Actuation Test	
TWINGO III	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TWINGO III	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
TWINGO III	INJECTION	INJECTION	Other Configuration	VP342 VACUUM PUMP OPERATION REQUEST
TWINGO III	INJECTION	INJECTION	Other Configuration	VP386 VACUUM PUMP OPERATION REQUEST
TWINGO III	INJECTION	INJECTION	Other Configuration	VP387 VACUUM PUMP OPERATION REQUEST
TWINGO III	INJECTION	INJECTION	Erase	RZ001 FAULT MEMORY
TWINGO III	INJECTION	INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TWINGO III	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TWINGO III	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TWINGO III	INJECTION	INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TWINGO III	INJECTION	INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TWINGO III	INJECTION	INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TWINGO III	INJECTION	INJECTION	Erase	RZ101 UPSTREAM OXYGEN SENSOR
TWINGO III	INJECTION	INJECTION	Configuration	SC001 WRITE SAVED DATA
TWINGO III	INJECTION	INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TWINGO III	INJECTION	INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TWINGO III	A.B.S.	ABS	Read Fault Code	
TWINGO III	A.B.S.	ABS	Erase Fault Code	
TWINGO III	A.B.S.	ABS	Read ECU Information	
TWINGO III	A.B.S.	ABS	Live Data	
TWINGO III	A.B.S.	ABS	Read Configuration	
TWINGO III	A.B.S.	ABS	Actuation Test	
TWINGO III	A.B.S.	ABS	Other Configuration	VP046 FRONT WHEEL CIRCUMFERENCE
TWINGO III	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TWINGO III	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
TWINGO III	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
TWINGO III	A.B.S.	ABS	Other Configuration	VP045 HILL START
TWINGO III	A.B.S.	ABS	Other Configuration	VP047 REAR WHEEL CIRCUMFERENCE
TWINGO III	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
TWINGO III	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
TWINGO III	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
TWINGO III	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
TWINGO III	A.B.S.	ABS	Erase	RZ012 RESET
TWINGO III	A.B.S.	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
TWINGO III	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP051 ODOMETER IN KM
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP030 ODOMETER IN MILES
TWINGO III	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
TWINGO III	UCH	UCH	Read Fault Code	
TWINGO III	UCH	UCH	Erase Fault Code	
TWINGO III	UCH	UCH	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TWINGO III	UCH	UCH	Live Data	
TWINGO III	UCH	UCH	Read Configuration	
TWINGO III	UCH	UCH	Actuation Test	
TWINGO III	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TWINGO III	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TWINGO III	UCH	UCH	Write Configuration	CF229 ALARM
TWINGO III	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
TWINGO III	UCH	UCH	Write Configuration	CF009 DEADLOCKING
TWINGO III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TWINGO III	UCH	UCH	Erase	RZ001 FAULT MEMORY
TWINGO III	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF249 COMMANDE PRIVEE 7
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF250 COMMANDE PRIVEE 8
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF052 SENSOR CONFIGURATION
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP015 PARAMETRAGE PRIVE 1
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
TWINGO III	FRONT RADAR	FRONT RADAR	Read Fault Code	
TWINGO III	FRONT RADAR	FRONT RADAR	Erase Fault Code	
TWINGO III	FRONT RADAR	FRONT RADAR	Read ECU Information	
TWINGO III	FRONT RADAR	FRONT RADAR	Live Data	
TWINGO III	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
TWINGO III	FRONT RADAR	FRONT RADAR	Erase	RZ001 FAULT MEMORY
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Live Data	
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL ZONE
TWINGO III	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Fault Code	
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase Fault Code	
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Read ECU Information	
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Live Data	
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Read Configuration	
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Actuation Test	
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Write Configuration	CF011 GEAR CHANGE PADDLES
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP008 PROGRAMMING SELECTION/ENGAGING ZONES
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP023 SHIFT DRUM REFERENCE POSITION
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP024 PROGRAM CLUTCH ASSEMBLY
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP026 PROGRAMME CLUTCH POSITION
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP027 PROGRAM CLUTCH 1 ADJUSTEMENT
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Other Configuration	VP028 PROGRAM CLUTCH 2 ADJUSTEMENT
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ004 FAULT MEMORY
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ003 PROGRAMME SLIP POINT
TWINGO III	AUTOMATIC GEARBOX	AUTO GEARBOX	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Read Fault Code	
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Erase Fault Code	
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Read ECU Information	
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Live Data	
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Actuation Test	
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Other Configuration	VP001 WRITE VIN
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Erase	RZ001 FAULT MEMORY
TWINGO III	VARIABLE P.A.S.	ELECTRIC POWER ASSISTED STEERING	Configuration	SC005 TORQUE SENSOR
TWINGO III	UPC	UPC COMP. TYPE	Read Fault Code	
TWINGO III	UPC	UPC COMP. TYPE	Erase Fault Code	
TWINGO III	UPC	UPC COMP. TYPE	Read ECU Information	
TWINGO III	UPC	UPC COMP. TYPE	Live Data	
TWINGO III	UPC	UPC COMP. TYPE	Read Configuration	
TWINGO III	UPC	UPC COMP. TYPE	Actuation Test	
TWINGO III	UPC	UPC COMP. TYPE	Write Configuration	CF046 MULTIPLE 12V BATTERIES
TWINGO III	UPC	UPC COMP. TYPE	Other Configuration	VP003 WRITE VIN
TWINGO III	UPC	UPC COMP. TYPE	Other Configuration	VP007 COMPUTER INITIALISATION
TWINGO III	UPC	UPC COMP. TYPE	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
TWINGO III	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
TWINGO III	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
TWINGO III	UPC	UPC COMP. TYPE	Configuration	SC015 COUNTRY MODEL
TWINGO III	UPC	UPC COMP. TYPE	Erase	RZ004 DTC reset
TWINGO III	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read Fault Code	
TWINGO III	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Erase Fault Code	
TWINGO III	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read ECU Information	
TWINGO III	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Other Configuration	VP001 WRITE VIN
TWINGO III	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Erase	RZ001 FAULT MEMORY
TWINGO III	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
TWINGO III	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
TWINGO III	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
TWINGO III	FRONT CAMERA	FRONT CAMERA	Live Data	
TWINGO III	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
TWINGO III	FRONT CAMERA	FRONT CAMERA	Erase	RZ001 FAULT MEMORY
TWINGO III	FRONT CAMERA	FRONT CAMERA	Erase	RZ002 ECU MEMORY
TWINGO III	RADIO	RADIO	Read Fault Code	
TWINGO III	RADIO	RADIO	Erase Fault Code	
TWINGO III	RADIO	RADIO	Read ECU Information	
TWINGO III	RADIO	RADIO	Live Data	
TWINGO III	RADIO	RADIO	Read Configuration	
TWINGO III	RADIO	RADIO	Actuation Test	
TWINGO III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TWINGO III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TWINGO III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TWINGO III	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
TWINGO III	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
TWINGO III	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
TWINGO III	RADIO	RADIO	Read Fault Code	
TWINGO III	RADIO	RADIO	Erase Fault Code	
TWINGO III	RADIO	RADIO	Read ECU Information	
TWINGO III	RADIO	RADIO	Live Data	
TWINGO III	RADIO	RADIO	Read Configuration	
TWINGO III	RADIO	RADIO	Actuation Test	
TWINGO III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TWINGO III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TWINGO III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TWINGO III	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
TWINGO III	RADIO	RADIO	Erase	RZ004 RESET RADIO
TWINGO III	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
TWINGO III	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
TWINGO III	INJECTION	EMS 3140 INJECTION	Read Fault Code	
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
TWINGO III	INJECTION	EMS 3140 INJECTION	Read ECU Information	
TWINGO III	INJECTION	EMS 3140 INJECTION	Live Data	
TWINGO III	INJECTION	EMS 3140 INJECTION	Function Test	
TWINGO III	INJECTION	EMS 3140 INJECTION	Read Configuration	
TWINGO III	INJECTION	EMS 3140 INJECTION	Actuation Test	
TWINGO III	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
TWINGO III	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TWINGO III	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
TWINGO III	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TWINGO III	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
TWINGO III	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TWINGO III	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TWINGO III	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
TWINGO III	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TWINGO III	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TWINGO III	ABS	ABS	Read Fault Code	
TWINGO III	ABS	ABS	Erase Fault Code	
TWINGO III	ABS	ABS	Read ECU Information	
TWINGO III	ABS	ABS	Live Data	
TWINGO III	ABS	ABS	Function Test	
TWINGO III	ABS	ABS	Read Configuration	
TWINGO III	ABS	ABS	Actuation Test	
TWINGO III	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
TWINGO III	ABS	ABS	Other Configuration	VP046 FRONT WHEEL CIRCUMFERENCE
TWINGO III	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TWINGO III	ABS	ABS	Other Configuration	VP045 HILL START
TWINGO III	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
TWINGO III	ABS	ABS	Other Configuration	VP047 REAR WHEEL CIRCUMFERENCE
TWINGO III	ABS	ABS	Other Configuration	VP001 WRITE VIN
TWINGO III	ABS	ABS	Erase	RZ012 RESET
TWINGO III	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
TWINGO III	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
TWINGO III	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
TWINGO III	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
TWINGO III	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
TWINGO III	UCH	UCH	Read Fault Code	
TWINGO III	UCH	UCH	Erase Fault Code	
TWINGO III	UCH	UCH	Read ECU Information	
TWINGO III	UCH	UCH	Live Data	
TWINGO III	UCH	UCH	Function Test	
TWINGO III	UCH	UCH	Read Configuration	
TWINGO III	UCH	UCH	Actuation Test	
TWINGO III	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TWINGO III	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TWINGO III	UCH	UCH	Write Configuration	CF229 ALARM
TWINGO III	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
TWINGO III	UCH	UCH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
TWINGO III	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
TWINGO III	UCH	UCH	Write Configuration	CF009 DEADLOCKING
TWINGO III	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
TWINGO III	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
TWINGO III	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TWINGO III	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
TWINGO III	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	SC004 READING IMPACT CONTEXTS
TWINGO III	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
TWINGO III	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
TWINGO III	UPC	UPC	Read Fault Code	
TWINGO III	UPC	UPC	Erase Fault Code	
TWINGO III	UPC	UPC	Read ECU Information	
TWINGO III	UPC	UPC	Live Data	
TWINGO III	UPC	UPC	Function Test	
TWINGO III	UPC	UPC	Actuation Test	
TWINGO III	UPC	UPC	Other Configuration	VP007 COMPUTER INITIALISATION
TWINGO III	UPC	UPC	Other Configuration	VP003 WRITE VIN
TWINGO III	UPC	UPC	Other Configuration	VP006 RESETTNG INTERNAL PROTECTION
TWINGO III	UPC	UPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF093 VEHICLE LAYOUT
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF094 MODE
TWINGO III	ADAPTATION UNIT	ADAPTATION UNIT	Other Configuration	VP014 WRITE VIN
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
TWINGO III	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VP002 WRITE VIN
TWINGO III	RADIO	RADIO	Read Fault Code	
TWINGO III	RADIO	RADIO	Erase Fault Code	
TWINGO III	RADIO	RADIO	Read ECU Information	
TWINGO III	RADIO	RADIO	Live Data	
TWINGO III	RADIO	RADIO	Function Test	
TWINGO III	RADIO	RADIO	Read Configuration	
TWINGO III	RADIO	RADIO	Actuation Test	
TWINGO III	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
TWINGO III	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
TWINGO III	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
TWINGO III	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
TWINGO III	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
TWINGO III	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
TWINGO III	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
TWINGO III	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
TWINGO III	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
TWINGO III	EVC	EVC	Read Fault Code	
TWINGO III	EVC	EVC	Erase Fault Code	
TWINGO III	EVC	EVC	Read ECU Information	
TWINGO III	EVC	EVC	Live Data	
TWINGO III	EVC	EVC	Read Configuration	
TWINGO III	EVC	EVC	Actuation Test	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Read Fault Code	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Read ECU Information	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Live Data	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Read Configuration	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Actuation Test	
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V.I.N
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
TWINGO phase 2	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
TWINGO phase 2	INJECTION		Read Fault Code	
TWINGO phase 2	INJECTION		Erase Fault Code	
TWINGO phase 2	INJECTION		Read ECU Information	
TWINGO phase 2	INJECTION		Live Data	
TWINGO phase 2	INJECTION		Actuation Test	
TWINGO phase 2	INJECTION		Read Configuration	
TWINGO phase 2	INJECTION		Erase	RZ005 PROGRAMMING REINITIALISATION
TWINGO phase 2	INJECTION		Read Fault Code	
TWINGO phase 2	INJECTION		Erase Fault Code	
TWINGO phase 2	INJECTION		Read ECU Information	
TWINGO phase 2	INJECTION		Live Data	
TWINGO phase 2	INJECTION		Actuation Test	
TWINGO phase 2	INJECTION		Read Configuration	
TWINGO phase 2	INJECTION		Erase	PROGRAMMING REINITIALISATION
TWINGO phase 2	INJECTION		Parameters Configuration	WRITE VIN
TWINGO phase 2	INJECTION		Read Fault Code	
TWINGO phase 2	INJECTION		Erase Fault Code	
TWINGO phase 2	INJECTION		Read ECU Information	
TWINGO phase 2	INJECTION		Live Data	
TWINGO phase 2	INJECTION		Actuation Test	
TWINGO phase 2	INJECTION		Read Configuration	
TWINGO phase 2	INJECTION		Erase	PROGRAMMING REINITIALISATION
TWINGO phase 2	INJECTION		Read Fault Code	
TWINGO phase 2	INJECTION		Erase Fault Code	
TWINGO phase 2	INJECTION		Read ECU Information	
TWINGO phase 2	INJECTION		Live Data	
TWINGO phase 2	INJECTION		Actuation Test	
TWINGO phase 2	INJECTION		Read Configuration	
TWINGO phase 2	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
TWINGO phase 2	INJECTION		Read Fault Code	
TWINGO phase 2	INJECTION		Erase Fault Code	
TWINGO phase 2	INJECTION		Read ECU Information	
TWINGO phase 2	INJECTION		Live Data	
TWINGO phase 2	INJECTION		Actuation Test	
TWINGO phase 2	INJECTION		Read Configuration	
TWINGO phase 2	INJECTION		Erase	RZ008 PROGRAMMING REINITIALISATION
TWINGO phase 2	INJECTION		Read Fault Code	
TWINGO phase 2	INJECTION		Erase Fault Code	





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TWIZY	UCH	UCH	Actuation Test	
TWIZY	UCH	UCH	Write Configuration	CF167 FLASHING BUZZER
TWIZY	UCH	UCH	Other Configuration	VP004 WRITE VIN
TWIZY	UCH	UCH	Erase	RZ001 FAULT MEMORY
TWIZY	UCH	UCH	Configuration	SC008 UCH TYPE
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF036 PASS AIRBAG DEACTIVATION WARNING LIGHT
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF211 IMPACT INFORMATION CONNECTION
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF020 FRONT LEFT-HAND INERTIA WHEEL
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF021 FRONT RIGHT-HAND INERTIA WHEEL
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
TWIZY	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
VEL SATIS	INJECTION	S3000 INJECTION	Read Fault Code	
VEL SATIS	INJECTION	S3000 INJECTION	Erase Fault Code	
VEL SATIS	INJECTION	S3000 INJECTION	Read ECU Information	
VEL SATIS	INJECTION	S3000 INJECTION	Live Data	
VEL SATIS	INJECTION	S3000 INJECTION	Read Configuration	
VEL SATIS	INJECTION	S3000 INJECTION	Actuation Test	
VEL SATIS	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
VEL SATIS	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
VEL SATIS	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
VEL SATIS	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
VEL SATIS	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VEL SATIS	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
VEL SATIS	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF039 UCH
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF149 GEARBOX TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF138 FUEL TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF145 TYRE PRESSURE MONITORING
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF146 AUTOMATIC HANDBRAKE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF196 CRUISE CONTR./SP. LIMIT. SPEED DIFF.
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF049 OIL PRESSURE WARNING THRESHOLD
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF050 OIL TEMPERATURE MEASUREMENT THRESHOLD
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF053 OIL MEASUREMENT TIMER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF054 PARKING PROXIMITY SENSOR FUNCTION
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF139 VOICE SYNTHESISER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF040 PARTICLE FILTER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF035 TANK CAPACITY
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF018 RESERVE CAPACITY
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP010 UPDATE ODOMETER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Fault Code	
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase Fault Code	
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read ECU Information	
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Live Data	
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Configuration	
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Actuation Test	
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Write Configuration	CF009 LANGUAGE
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP002 WRITE VIN
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP005 SERIAL LINK TEST
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP004 MICROPHONE TEST
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP006 AUDIO LINKS TEST
VEL SATIS	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase	RZ001 FAULT MEMORY
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Live Data	
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Read Configuration	
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Actuation Test	
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
VEL SATIS	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VEL SATIS	INJECTION	INJ. S2000 TURBO	Read Fault Code	
VEL SATIS	INJECTION	INJ. S2000 TURBO	Erase Fault Code	
VEL SATIS	INJECTION	INJ. S2000 TURBO	Read ECU Information	
VEL SATIS	INJECTION	INJ. S2000 TURBO	Live Data	
VEL SATIS	INJECTION	INJ. S2000 TURBO	Read Configuration	
VEL SATIS	INJECTION	INJ. S2000 TURBO	Actuation Test	
VEL SATIS	INJECTION	INJ. S2000 TURBO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VEL SATIS	INJECTION	INJ. S2000 TURBO	Other Configuration	VP007 DECREMENT IDLE SPEED
VEL SATIS	INJECTION	INJ. S2000 TURBO	Other Configuration	VP020 WRITE VIN
VEL SATIS	INJECTION	INJ. S2000 TURBO	Erase	RZ007 FAULT MEMORY
VEL SATIS	INJECTION	INJ. S2000 TURBO	Erase	RZ019 PROGRAMMING REINITIALISATION
VEL SATIS	INJECTION	EDC15 INJECTION	Read Fault Code	
VEL SATIS	INJECTION	EDC15 INJECTION	Erase Fault Code	
VEL SATIS	INJECTION	EDC15 INJECTION	Read ECU Information	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VEL SATIS	INJECTION	EDC15 INJECTION	Live Data	
VEL SATIS	INJECTION	EDC15 INJECTION	Read Configuration	
VEL SATIS	INJECTION	EDC15 INJECTION	Actuation Test	
VEL SATIS	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
VEL SATIS	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
VEL SATIS	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VEL SATIS	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VEL SATIS	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
VEL SATIS	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
VEL SATIS	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
VEL SATIS	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
VEL SATIS	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VEL SATIS	A.B.S.	ESP	Read Fault Code	
VEL SATIS	A.B.S.	ESP	Erase Fault Code	
VEL SATIS	A.B.S.	ESP	Read ECU Information	
VEL SATIS	A.B.S.	ESP	Live Data	
VEL SATIS	A.B.S.	ESP	Read Configuration	
VEL SATIS	A.B.S.	ESP	Actuation Test	
VEL SATIS	A.B.S.	ESP	Write Configuration	CF080 VEHICLE PARAMETERS
VEL SATIS	A.B.S.	ESP	Write Configuration	CF077 ABS/ESP CALIBRATION
VEL SATIS	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
VEL SATIS	A.B.S.	ESP	Write Configuration	CF078 REMOTE CONTROL CRUISE CONTROL
VEL SATIS	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
VEL SATIS	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
VEL SATIS	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
VEL SATIS	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
VEL SATIS	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF047 ADAPTIVE CRUISE CONTROL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF152 P9X AT
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF153 P9X MANUAL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF154 V4Y AUTOMATIC GEARBOX
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF155 V4Y MANUAL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF156 OTHER AT
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF157 OTHER MANUAL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 DISTANCE BEFORE NEXT OIL CHANGE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF047 ADAPTIVE CRUISE CONTROL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF152 P9X AT
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF153 P9X MANUAL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF154 V4Y AUTOMATIC GEARBOX
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF155 V4Y MANUAL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF156 OTHER AT
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF157 OTHER MANUAL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP004 DISTANCE BEFORE NEXT OIL CHANGE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF132 ENGINE/GEARBOX TYPE
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF047 ADAPTIVE CRUISE CONTROL
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
VEL SATIS	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
VEL SATIS	UCH	UCH	Read Fault Code	
VEL SATIS	UCH	UCH	Erase Fault Code	
VEL SATIS	UCH	UCH	Read ECU Information	
VEL SATIS	UCH	UCH	Live Data	
VEL SATIS	UCH	UCH	Read Configuration	
VEL SATIS	UCH	UCH	Actuation Test	
VEL SATIS	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
VEL SATIS	UCH	UCH	Write Configuration	CF098 CARD LOCKING
VEL SATIS	UCH	UCH	Write Configuration	CF099 CARD REMINDER WARNING
VEL SATIS	UCH	UCH	Write Configuration	CF130 OVERSPEED ALARM FOR ARABIA
VEL SATIS	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
VEL SATIS	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
VEL SATIS	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESIZER
VEL SATIS	UCH	UCH	Write Configuration	CF012 RAIN SENSOR
VEL SATIS	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
VEL SATIS	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
VEL SATIS	UCH	UCH	Write Configuration	CF034 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
VEL SATIS	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
VEL SATIS	UCH	UCH	Write Configuration	CF133 POWER-ASSISTED STEERING PROGRAM
VEL SATIS	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
VEL SATIS	UCH	UCH	Write Configuration	CF116 HANDS-FREE LOCKING
VEL SATIS	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
VEL SATIS	UCH	UCH	Write Configuration	CF090 DEADLOCKING
VEL SATIS	UCH	UCH	Write Configuration	CF033 ELECTRIC CHLD SAFETY
VEL SATIS	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOW(S) (BY CARD)
VEL SATIS	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
VEL SATIS	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
VEL SATIS	UCH	UCH	Write Configuration	CF107 TIMER COURTESY LIGHT
VEL SATIS	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
VEL SATIS	UCH	UCH	Write Configuration	CF094 AUTOMATIC SEAT RECALL
VEL SATIS	UCH	UCH	Write Configuration	CF119 UNLOCKING MODE DOORS HANDS FREE
VEL SATIS	UCH	UCH	Write Configuration	CF115 DOOR UNLOCKING MODE
VEL SATIS	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
VEL SATIS	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
VEL SATIS	UCH	UCH	Other Configuration	VP004 WRITE VIN
VEL SATIS	UCH	UCH	Erase	RZ001 FAULT MEMORY
VEL SATIS	UCH	UCH	Configuration	SC011 CHECK CARDS



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VEL SATIS	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
VEL SATIS	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
VEL SATIS	UCH	UCH	Configuration	SC019 CARD ACCUMULATOR CHARGE TESTER
VEL SATIS	UCH	UCH	Read Fault Code	
VEL SATIS	UCH	UCH	Erase Fault Code	
VEL SATIS	UCH	UCH	Read ECU Information	
VEL SATIS	UCH	UCH	Live Data	
VEL SATIS	UCH	UCH	Read Configuration	
VEL SATIS	UCH	UCH	Actuation Test	
VEL SATIS	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
VEL SATIS	UCH	UCH	Write Configuration	CF098 CARD LOCKING
VEL SATIS	UCH	UCH	Write Configuration	CF099 CARD REMINDER WARNING
VEL SATIS	UCH	UCH	Write Configuration	CF170 OVERSPEED FUNCTION - ARABIA
VEL SATIS	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
VEL SATIS	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESIZER
VEL SATIS	UCH	UCH	Write Configuration	CF012 RAIN SENSOR
VEL SATIS	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
VEL SATIS	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
VEL SATIS	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
VEL SATIS	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
VEL SATIS	UCH	UCH	Write Configuration	CF133 POWER-ASSISTED STEERING PROGRAM
VEL SATIS	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
VEL SATIS	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
VEL SATIS	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
VEL SATIS	UCH	UCH	Write Configuration	CF090 DEADLOCKING
VEL SATIS	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
VEL SATIS	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
VEL SATIS	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
VEL SATIS	UCH	UCH	Write Configuration	CF106 INTERIOR LIGHTING
VEL SATIS	UCH	UCH	Write Configuration	CF107 TIMER COURTESY LIGHT
VEL SATIS	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
VEL SATIS	UCH	UCH	Write Configuration	CF094 AUTOMATIC SEAT RECALL
VEL SATIS	UCH	UCH	Write Configuration	CF119 UNLOCKING MODE. DOORS HANDS FREE
VEL SATIS	UCH	UCH	Write Configuration	CF115 DOOR UNLOCKING MODE
VEL SATIS	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
VEL SATIS	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
VEL SATIS	UCH	UCH	Other Configuration	VP004 WRITE VIN
VEL SATIS	UCH	UCH	Erase	RZ001 FAULT MEMORY
VEL SATIS	UCH	UCH	Configuration	SC011 CHECK CARDS
VEL SATIS	UCH	UCH	Configuration	SC020 CARD BATTERY CHARGE TESTER
VEL SATIS	UCH	UCH	Configuration	SC019 CARD ACCUMULATOR CHARGE TESTER
VEL SATIS	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
VEL SATIS	UCH	UCH	Configuration	SC024 LOCK LATCH LOCKING
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
VEL SATIS	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Read Fault Code	
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Erase Fault Code	
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Read ECU Information	
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Live Data	
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Read Configuration	
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Write Configuration	CF005 KM
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Write Configuration	CF006 MILES
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Other Configuration	VP002 WRITE VIN
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Erase	RZ001 FAULT MEMORY
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Erase	RZ004 ERASE STORED MISALIGNMENT
VEL SATIS	FRONT RADAR	ADAPTIVE CRUISE CONTROL	Erase	RZ005 STEERING ANGLE OFFSET
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Live Data	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF111 TYPE OF POWER STEERING
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF052 HEATED WINDSCREEN
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Live Data	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF111 TYPE OF POWER STEERING
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF050 HEATED WINDSCREEN
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VEL SATIS	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT/S MEMORISED
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
VEL SATIS	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Configuration	SC001 ACTUATORS SEQUENTIAL CONTROL
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Read Fault Code	
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Erase Fault Code	
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Read ECU Information	
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Live Data	
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Read Configuration	
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Actuation Test	
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Other Configuration	VP004 WRITE VIN
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Erase	RZ001 FAULT MEMORY
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
VEL SATIS	PARKING BRAKE	X73 PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
VEL SATIS	TYRES	TYRES	Read Fault Code	
VEL SATIS	TYRES	TYRES	Erase Fault Code	
VEL SATIS	TYRES	TYRES	Read ECU Information	
VEL SATIS	TYRES	TYRES	Live Data	
VEL SATIS	TYRES	TYRES	Read Configuration	
VEL SATIS	TYRES	TYRES	Actuation Test	
VEL SATIS	TYRES	TYRES	Write Configuration	CF005 VEHICLE TYPE
VEL SATIS	TYRES	TYRES	Other Configuration	VP021 SELECTION OF VALVE SET
VEL SATIS	TYRES	TYRES	Other Configuration	VP017 CHANGE IN TRIGGERING LIMIT
VEL SATIS	TYRES	TYRES	Erase	RZ002 FAULT MEMORY
VEL SATIS	TYRES	TYRES	Configuration	SC001 PROGRAMMING A VALVE CODE
VEL SATIS	TYRES	TYRES	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
VEL SATIS	DISCHARGE LAMP	LAD	Read Fault Code	
VEL SATIS	DISCHARGE LAMP	LAD	Erase Fault Code	
VEL SATIS	DISCHARGE LAMP	LAD	Read ECU Information	
VEL SATIS	DISCHARGE LAMP	LAD	Live Data	
VEL SATIS	DISCHARGE LAMP	LAD	Read Configuration	
VEL SATIS	DISCHARGE LAMP	LAD	Actuation Test	
VEL SATIS	DISCHARGE LAMP	LAD	Write Configuration	CF003 VEHICLE TYPE
VEL SATIS	DISCHARGE LAMP	LAD	Write Configuration	CF001 COMPUTER CALIBRATION
VEL SATIS	DISCHARGE LAMP	LAD	Other Configuration	VP001 WRITE VIN
VEL SATIS	DISCHARGE LAMP	LAD	Erase	RZ001 FAULT MEMORY
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Read Fault Code	
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Erase Fault Code	
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Read ECU Information	
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Live Data	
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Read Configuration	
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Actuation Test	
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Write Configuration	CF003 VEHICLE TYPE
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Write Configuration	CF001 COMPUTER CALIBRATION
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Other Configuration	VP001 WRITE VIN
VEL SATIS	DISCHARGE LAMP	DISCHARGE LAMP	Erase	RZ001 FAULT MEMORY
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Live Data	
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Read Configuration	
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
VEL SATIS	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
VEL SATIS	HEATER	BOILER	Read Fault Code	
VEL SATIS	HEATER	BOILER	Erase Fault Code	
VEL SATIS	HEATER	BOILER	Read ECU Information	
VEL SATIS	HEATER	BOILER	Live Data	
VEL SATIS	HEATER	BOILER	Actuation Test	
VEL SATIS	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
VEL SATIS	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
VEL SATIS	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
VELSATIS_ph2	INJECTION	S3000 INJECTION	Read Fault Code	
VELSATIS_ph2	INJECTION	S3000 INJECTION	Erase Fault Code	
VELSATIS_ph2	INJECTION	S3000 INJECTION	Read ECU Information	
VELSATIS_ph2	INJECTION	S3000 INJECTION	Live Data	
VELSATIS_ph2	INJECTION	S3000 INJECTION	Read Configuration	
VELSATIS_ph2	INJECTION	S3000 INJECTION	Actuation Test	
VELSATIS_ph2	INJECTION	S3000 INJECTION	Other Configuration	VP020 WRITE VIN
VELSATIS_ph2	INJECTION	S3000 INJECTION	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
VELSATIS_ph2	INJECTION	S3000 INJECTION	Other Configuration	VP013 LOCK INJECTOR CONTROL
VELSATIS_ph2	INJECTION	S3000 INJECTION	Erase	RZ007 FAULT MEMORY
VELSATIS_ph2	INJECTION	S3000 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS_ph2	INJECTION	S3000 INJECTION	Configuration	SC007 START OBD TEST: O2 SENSORS
VELSATIS_ph2	INJECTION	S3000 INJECTION	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Live Data	
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
VELSATIS_ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Read Fault Code	
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Erase Fault Code	
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Read ECU Information	
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Live Data	
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Read Configuration	
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Actuation Test	
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Erase	RZ001 FAULT MEMORY
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Erase	RZ034 ECU MEMORY
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS_ph2	INJECTION	EDC16 C36 INJECTION	Configuration	SC003 SAVE COMPUTER DATA

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VELSATIS ph2	INJECTION	EDC16 C36 INJECTION	Configuration	SC001 WRITE SAVED DATA
VELSATIS ph2	INJECTION	EDC16 C36 INJECTION	Configuration	SC036 PROGRAMMING RENINITIALISATION
VELSATIS ph2	INJECTION	EDC16 C36 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING RENINITIALISATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING RENINITIALISATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ034 ECU MEMORY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC001 WRITE SAVED DATA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC036 PROGRAMMING RENINITIALISATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF125 LANGUAGE VERSION.
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF137 VEHICLE TYPE
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF039 UCH
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF149 GEARBOX TYPE
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF138 FUEL TYPE
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF019 ADAC DISPLAY TYPE
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF142 TRAJECTORY CONTROL
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF145 TYRE PRESSURE MONITORING
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF140 DISTANCE UNITS
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF158 SEAT BELT REMINDER BUZZER
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF146 AUTOMATIC HANDBRAKE
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF136 TYRE PRESSURE UNITS
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF196 CRUISE CONTR./SP. LIMIT. SPEED DIFF.
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF049 OIL PRESSURE WARNING THRESHOLD
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF050 OIL TEMPERATURE MEASUREMENT THRESHOLD
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF053 OIL MEASUREMENT TIMER
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF054 PARKING PROXIMITY SENSOR FUNCTION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF139 VOICE SYNTHESISER
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF040 PARTICLE FILTER
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF035 TANK CAPACITY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Write Configuration	CF018 RESERVE CAPACITY
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP010 UPDATE ODOMETER
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP006 OIL CHANGE INTERVAL IN KM
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP007 OIL CHANGE INTERVAL IN MONTHS
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP008 OIL CHANGE RANGE:CURRENT VALUE IN KM
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP009 OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP002 WRITE VIN
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Other Configuration	VP011 FUEL GAUGE CALIBRATION
VELSATIS ph2	INJECTION	EDC16 CP33 INJECTION	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Read Fault Code	
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Erase Fault Code	
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Read ECU Information	
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Live Data	
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Actuation Test	
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Other Configuration	VP018 NEUTRAL POSITION PROGRAMMING
VELSATIS ph2	AUTOMATIC GEARBOX	SU4 AUTO GEARBOX	Erase	RZ001 FAULTS MEMORISED
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Read Fault Code	
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Erase Fault Code	
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Read ECU Information	
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Live Data	
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Actuation Test	
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Other Configuration	VP009 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Erase	RZ001 FAULTS MEMORISED
VELSATIS ph2	AUTOMATIC GEARBOX	AJD AUTO	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Live Data	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read Configuration	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Actuation Test	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Live Data	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read Configuration	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Actuation Test	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Read Fault Code	
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Erase Fault Code	
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Read ECU Information	
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Live Data	
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Read Configuration	
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Actuation Test	
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF001 VEHICLE TYPE
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF002 DYNAMIC CORRECTION
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF003 AUTOMATIC FOLD-DOWN HEADLIGHTS
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF004 DIPPED HEADLIGHTS RAISE
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Write Configuration	CF005 SIGNATURE
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Other Configuration	VP002 SYSTEM INITIALISATION
VELSATIS ph2	LIGHTING	LAMPE A DECHARGE CAN	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Read Fault Code	
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Erase Fault Code	
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Read ECU Information	
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Live Data	
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Read Configuration	
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF007 FRONT BUZZER VOLUME
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF009 FRONT TONE SETTING
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF001 VEHICLE TYPE
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP004 NETHERLANDS LEGISLATION
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
VELSATIS ph2	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ003 CUSTOMER SETTINGS AND DETAILS
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Fault Code	
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase Fault Code	
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read ECU Information	
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Live Data	
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Read Configuration	
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Actuation Test	
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Write Configuration	CF009 LANGUAGE
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP002 WRITE VIN
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP005 SERIAL LINK TEST
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP004 MICROPHONE TEST
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Other Configuration	VP006 AUDIO LINKS TEST
VELSATIS ph2	HANDS-FREE KIT	HANDS-FREE TELEPHONE	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC001 WRITE SAVED DATA
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Read Fault Code	
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Erase Fault Code	
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Read ECU Information	
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Live Data	
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Read Configuration	
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Actuation Test	
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Other Configuration	VP020 WRITE VIN
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJ. S2000 TURBO	Erase	RZ019 PROGRAMMING REINITIALISATION
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read Fault Code	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase Fault Code	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read ECU Information	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Live Data	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Actuation Test	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read Fault Code	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase Fault Code	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read ECU Information	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Live Data	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read Configuration	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Actuation Test	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION
VELSATIS ph2	INJECTION	INJECTION S2000	Read Fault Code	
VELSATIS ph2	INJECTION	INJECTION S2000	Erase Fault Code	
VELSATIS ph2	INJECTION	INJECTION S2000	Read ECU Information	
VELSATIS ph2	INJECTION	INJECTION S2000	Live Data	
VELSATIS ph2	INJECTION	INJECTION S2000	Read Configuration	
VELSATIS ph2	INJECTION	INJECTION S2000	Actuation Test	
VELSATIS ph2	INJECTION	INJECTION S2000	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION S2000	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION S2000	Other Configuration	VP020 WRITE VIN
VELSATIS ph2	INJECTION	INJECTION S2000	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJECTION S2000	Erase	RZ019 PROGRAMMING REINITIALISATION
VELSATIS ph2	INJECTION	INJECTION DENSO	Read Fault Code	
VELSATIS ph2	INJECTION	INJECTION DENSO	Erase Fault Code	
VELSATIS ph2	INJECTION	INJECTION DENSO	Read ECU Information	
VELSATIS ph2	INJECTION	INJECTION DENSO	Live Data	
VELSATIS ph2	INJECTION	INJECTION DENSO	Read Configuration	
VELSATIS ph2	INJECTION	INJECTION DENSO	Actuation Test	
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	INJECTION DENSO	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJECTION DENSO	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	EDC15 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
VELSATIS ph2	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
VELSATIS ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
VELSATIS ph2	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read Fault Code	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase Fault Code	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Read ECU Information	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Live Data	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Actuation Test	
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP020 WRITE VIN
VELSATIS ph2	INJECTION	INJECTION EWR 20	Other Configuration	VP070 AIR PATH PROGRAMMING
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJECTION EWR 20	Erase	RZ019 PROGRAMMING REINITIALISATION
VELSATIS ph2	INJECTION	INJECTION DENSO	Read Fault Code	
VELSATIS ph2	INJECTION	INJECTION DENSO	Erase Fault Code	
VELSATIS ph2	INJECTION	INJECTION DENSO	Read ECU Information	
VELSATIS ph2	INJECTION	INJECTION DENSO	Live Data	
VELSATIS ph2	INJECTION	INJECTION DENSO	Read Configuration	
VELSATIS ph2	INJECTION	INJECTION DENSO	Actuation Test	
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP035 STOP ELECTRICAL CONSUMER PREVENTION
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP012 PREVENTION OF ELECTRICAL CONSUMERS
VELSATIS ph2	INJECTION	INJECTION DENSO	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	INJECTION DENSO	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	INJECTION DENSO	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	INJECTION DENSO	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC15 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC15 INJECTION	Write Configuration	CF030 THERMOPLUNGERS
VELSATIS ph2	INJECTION	EDC15 INJECTION	Write Configuration	CF028 AIR CONDITIONING
VELSATIS ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP007 DECREMENT IDLE SPEED
VELSATIS ph2	INJECTION	EDC15 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase	RZ002 EGR ADAPTIVES
VELSATIS ph2	INJECTION	EDC15 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
VELSATIS ph2	INJECTION	EDC15 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Read Fault Code	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Erase Fault Code	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Read ECU Information	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Live Data	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Read Configuration	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Actuation Test	
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP037 STOP FUEL SUPPLY PREVENTION
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP010 WRITE V.I.N.
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Other Configuration	VP011 INCREMENT OF IDLE SPEED
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Erase	RZ007 FAULT MEMORY
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Erase	RZ005 PROGRAMMED VALUES
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC036 PROGRAMMING REINITIALISATION
VELSATIS ph2	INJECTION	EDC16 C3 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
VELSATIS ph2	A.B.S.	ESP	Read Fault Code	
VELSATIS ph2	A.B.S.	ESP	Erase Fault Code	
VELSATIS ph2	A.B.S.	ESP	Read ECU Information	
VELSATIS ph2	A.B.S.	ESP	Live Data	
VELSATIS ph2	A.B.S.	ESP	Read Configuration	
VELSATIS ph2	A.B.S.	ESP	Actuation Test	
VELSATIS ph2	A.B.S.	ESP	Write Configuration	CF080 VEHICLE PARAMETERS
VELSATIS ph2	A.B.S.	ESP	Write Configuration	CF077 ABS/ESP CALIBRATION
VELSATIS ph2	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
VELSATIS ph2	A.B.S.	ESP	Write Configuration	CF078 REMOTE CONTROL CRUISE CONTROL
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
VELSATIS ph2	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
VELSATIS ph2	A.B.S.	ESP	Read Fault Code	
VELSATIS ph2	A.B.S.	ESP	Erase Fault Code	
VELSATIS ph2	A.B.S.	ESP	Read ECU Information	
VELSATIS ph2	A.B.S.	ESP	Live Data	
VELSATIS ph2	A.B.S.	ESP	Read Configuration	
VELSATIS ph2	A.B.S.	ESP	Actuation Test	
VELSATIS ph2	A.B.S.	ESP	Write Configuration	CF079 GEARBOX TYPE
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP030 CHASSIS WEAR PROGRAMMING
VELSATIS ph2	A.B.S.	ESP	Other Configuration	VP031 HYDRAULIC BRAKE COMPENSATION
VELSATIS ph2	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	A.B.S.	ESP	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
VELSATIS ph2	A.B.S.	ESP	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
VELSATIS ph2	A.B.S.	ESP	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
VELSATIS ph2	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
VELSATIS ph2	UCH	UCH	Read Fault Code	
VELSATIS ph2	UCH	UCH	Erase Fault Code	
VELSATIS ph2	UCH	UCH	Read ECU Information	
VELSATIS ph2	UCH	UCH	Live Data	
VELSATIS ph2	UCH	UCH	Read Configuration	
VELSATIS ph2	UCH	UCH	Actuation Test	
VELSATIS ph2	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
VELSATIS ph2	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
VELSATIS ph2	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESISER
VELSATIS ph2	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
VELSATIS ph2	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
VELSATIS ph2	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
VELSATIS ph2	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
VELSATIS ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
VELSATIS ph2	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
VELSATIS ph2	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
VELSATIS ph2	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
VELSATIS ph2	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
VELSATIS ph2	UCH	UCH	Write Configuration	CF009 DEADLOCKING
VELSATIS ph2	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
VELSATIS ph2	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
VELSATIS ph2	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
VELSATIS ph2	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
VELSATIS ph2	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
VELSATIS ph2	UCH	UCH	Write Configuration	CF091 SUNROOF
VELSATIS ph2	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
VELSATIS ph2	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
VELSATIS ph2	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
VELSATIS ph2	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
VELSATIS ph2	UCH	UCH	Other Configuration	VP004 WRITE VIN
VELSATIS ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
VELSATIS ph2	UCH	UCH	Configuration	SC011 CHECK CARDS
VELSATIS ph2	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
VELSATIS ph2	UCH	UCH	Configuration	SC026 AERIAL TEST
VELSATIS ph2	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
VELSATIS ph2	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
VELSATIS ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
VELSATIS ph2	UCH	UCH	Read Fault Code	
VELSATIS ph2	UCH	UCH	Erase Fault Code	
VELSATIS ph2	UCH	UCH	Read ECU Information	
VELSATIS ph2	UCH	UCH	Live Data	
VELSATIS ph2	UCH	UCH	Read Configuration	
VELSATIS ph2	UCH	UCH	Actuation Test	
VELSATIS ph2	UCH	UCH	Write Configuration	CF097 VEHICLE TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF011 GEARBOX TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF020 DRIVING TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF023 TYRE PRESSURE MONITOR FUNCTION
VELSATIS ph2	UCH	UCH	Write Configuration	CF134 TYPE OF POWER STEERING
VELSATIS ph2	UCH	UCH	Write Configuration	CF131 VOICE SYNTHESISER
VELSATIS ph2	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
VELSATIS ph2	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
VELSATIS ph2	UCH	UCH	Write Configuration	CF199 RAIN/LUMINOSITY SENSOR TYPE
VELSATIS ph2	UCH	UCH	Write Configuration	CF101 LIGHT SENSOR SENSITIVITY
VELSATIS ph2	UCH	UCH	Write Configuration	CF169 LIGHTS AUTOMATIC ILLUMINATION
VELSATIS ph2	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
VELSATIS ph2	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
VELSATIS ph2	UCH	UCH	Write Configuration	CF010 HANDS-FREE FUNCTION
VELSATIS ph2	UCH	UCH	Write Configuration	CF116 HANDS FREE LOCKING
VELSATIS ph2	UCH	UCH	Write Configuration	CF100 HANDS-FREE START-UP
VELSATIS ph2	UCH	UCH	Write Configuration	CF009 DEADLOCKING
VELSATIS ph2	UCH	UCH	Write Configuration	CF120 AUTOMATIC CLOSING OF WINDOWS (BY CARD)
VELSATIS ph2	UCH	UCH	Write Configuration	CF088 AUTO LOCKING WARNING SOUND
VELSATIS ph2	UCH	UCH	Write Configuration	CF033 ELECTRIC CHILD SAFETY
VELSATIS ph2	UCH	UCH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
VELSATIS ph2	UCH	UCH	Write Configuration	CF174 INHIBITION OF SELECTIVE DOOR OPENING
VELSATIS ph2	UCH	UCH	Write Configuration	CF091 SUNROOF
VELSATIS ph2	UCH	UCH	Write Configuration	CF030 DISCHARGE LAMP
VELSATIS ph2	UCH	UCH	Write Configuration	CF112 HEADLIGHT WASHERS
VELSATIS ph2	UCH	UCH	Write Configuration	CF089 MEMORISING DRIVER'S SEAT POSITION
VELSATIS ph2	UCH	UCH	Write Configuration	CF186 AUTOMATIC FOLDING OF DOOR MIRRORS
VELSATIS ph2	UCH	UCH	Other Configuration	VP007 VALVE SET SELECTION
VELSATIS ph2	UCH	UCH	Other Configuration	VP004 WRITE VIN
VELSATIS ph2	UCH	UCH	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	UCH	UCH	Erase	RZ002 FOLLOWING TYRE CHANGE
VELSATIS ph2	UCH	UCH	Configuration	SC011 CHECK CARDS
VELSATIS ph2	UCH	UCH	Configuration	SC023 UCH CONNECTIONS TEST -> CARD READER
VELSATIS ph2	UCH	UCH	Configuration	SC012 HANDS-FREE SYSTEM TEST
VELSATIS ph2	UCH	UCH	Configuration	SC026 AERIAL TEST
VELSATIS ph2	UCH	UCH	Configuration	SC009 PROGRAMMING A VALVE CODE
VELSATIS ph2	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP008 WRITE DATE OF LAST AFTER SALES OPERATION
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Read Configuration	
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF044 VEHICLE TYPE
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF076 COMPRESSOR TYPE
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF110 DRIVE RATIO
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF111 TYPE OF POWER STEERING
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF112 EVAPORATOR TEMPERATURE SENSOR
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Write Configuration	CF050 HEATED WINDSCREEN
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	AIR CONDITIONING	CONTROLLED AC	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read Fault Code	
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase Fault Code	
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Read ECU Information	
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Live Data	
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Actuation Test	
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ001 FAULT/S MEMORISED
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Erase	RZ005 AUTO-ADAPTIVES
VELSATIS ph2	AUTOMATIC GEARBOX	AUTO GEARBOX SU1	Configuration	SC001 ACTUATORS SEQUENTIAL CONTROL
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Live Data	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Read Configuration	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Actuation Test	
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP011 COMPUTER CALIBRATION AND OPERATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC008 SLOPE INITIALISATION
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC005 SAVE CLUTCH PEDAL PROGRAMMING
VELSATIS ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC006 WRITE CLUTCH PEDAL PROGRAMMING
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Live Data	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Read Configuration	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Read Fault Code	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Erase Fault Code	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Read ECU Information	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Live Data	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Read Configuration	
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF005 VEHICLE IDENTIFICATION
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP001 WRITE VIN
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
VELSATIS ph2	PARKING ASSISTANCE	PARKING AID	Erase	RZ001 FAULT MEMORY
VELSATIS ph2	HEATER	BOILER	Read Fault Code	
VELSATIS ph2	HEATER	BOILER	Erase Fault Code	
VELSATIS ph2	HEATER	BOILER	Read ECU Information	
VELSATIS ph2	HEATER	BOILER	Live Data	
VELSATIS ph2	HEATER	BOILER	Actuation Test	
VELSATIS ph2	HEATER	BOILER	Erase	RZ004 FAULT MEMORY
VELSATIS ph2	HEATER	BOILER	Erase	RZ001 ERASE OVERHEATING COUNTER
VELSATIS ph2	HEATER	BOILER	Erase	RZ002 ERASE INCORRECT CRANKING COUNTER
VELSATIS ph2	RADIO	RADIO	Read ECU Information	
VELSATIS ph2	RADIO	RADIO	Live Data	
WIND	INJECTION	SIM 32 INJECTOR	Read Fault Code	
WIND	INJECTION	SIM 32 INJECTOR	Erase Fault Code	
WIND	INJECTION	SIM 32 INJECTOR	Read ECU Information	
WIND	INJECTION	SIM 32 INJECTOR	Live Data	
WIND	INJECTION	SIM 32 INJECTOR	Read Configuration	
WIND	INJECTION	SIM 32 INJECTOR	Actuation Test	
WIND	INJECTION	SIM 32 INJECTOR	Other Configuration	VP013 LOCK INJECTOR CONTROL
WIND	INJECTION	SIM 32 INJECTOR	Other Configuration	VP008 UNLOCK INJECTOR CONTROL
WIND	INJECTION	SIM 32 INJECTOR	Other Configuration	VP010 WRITE V.I.N.
WIND	INJECTION	SIM 32 INJECTOR	Erase	RZ001 FAULT MEMORY
WIND	INJECTION	SIM 32 INJECTOR	Erase	RZ005 PROGRAMMED VALUES
WIND	INJECTION	SIM 32 INJECTOR	Configuration	SC006 START OBD TEST: CATALYTIC CONVERTER
WIND	INJECTION	SIM 32 INJECTOR	Configuration	SC007 START OBD TEST: O2 SENSORS
WIND	INJECTION	SIM 32 INJECTOR	Configuration	SC001 WRITE SAVED DATA
WIND	INJECTION	SIM 32 INJECTOR	Configuration	SC003 SAVE COMPUTER DATA
WIND	INJECTION	SIM 32 INJECTOR	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
WIND	A.B.S.	ABS	Read Fault Code	
WIND	A.B.S.	ABS	Erase Fault Code	
WIND	A.B.S.	ABS	Read ECU Information	
WIND	A.B.S.	ABS	Live Data	
WIND	A.B.S.	ABS	Read Configuration	
WIND	A.B.S.	ABS	Actuation Test	
WIND	A.B.S.	ABS	Write Configuration	CF079 GEARBOX TYPE
WIND	A.B.S.	ABS	Other Configuration	VP004 VEHICLE PARAMETERS
WIND	A.B.S.	ABS	Other Configuration	VP007 SPEEDO INDEX
WIND	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
WIND	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
WIND	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
WIND	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
WIND	A.B.S.	ESP	Read Fault Code	
WIND	A.B.S.	ESP	Erase Fault Code	
WIND	A.B.S.	ESP	Read ECU Information	
WIND	A.B.S.	ESP	Live Data	
WIND	A.B.S.	ESP	Actuation Test	
WIND	A.B.S.	ESP	Other Configuration	VP001 WRITE VIN
WIND	A.B.S.	ESP	Other Configuration	VP004 VEHICLE PARAMETERS
WIND	A.B.S.	ESP	Other Configuration	VP007 SPEEDO INDEX
WIND	A.B.S.	ESP	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
WIND	A.B.S.	ESP	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
WIND	A.B.S.	ESP	Other Configuration	VP021 PREVENTION OF STOP LIGHT AUTO ILLUMINATION
WIND	A.B.S.	ESP	Other Configuration	VP022 AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
WIND	A.B.S.	ESP	Erase	RZ001 FAULT MEMORY
WIND	A.B.S.	ESP	Erase	RZ011 SENSOR OFFSETS

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
WIND	A.B.S.	ESP	Configuration	SC006 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
WIND	A.B.S.	ESP	Configuration	SC001 CHECK TARGET TEETH
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF208 SEAT BELT WARNING MODULE
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF042 DRIVE TYPE CONFIGURATION
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF142 TRAJECTORY CONTROL
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF148 LIGHTS AUTOMATIC ILLUMINATION
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF209 COMPUTER INITIALISATION
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP011 FUEL GAUGE CALIBRATION
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP016 OIL SERVICE AND ODOMETRY MILES - KM
WIND	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
WIND	UCH	UCH	Read Fault Code	
WIND	UCH	UCH	Erase Fault Code	
WIND	UCH	UCH	Read ECU Information	
WIND	UCH	UCH	Live Data	
WIND	UCH	UCH	Read Configuration	
WIND	UCH	UCH	Actuation Test	
WIND	UCH	UCH	Write Configuration	CF031 CALIBRATION
WIND	UCH	UCH	Write Configuration	CF019 AIR CONDITIONING TYPE
WIND	UCH	UCH	Write Configuration	CF028 ENGINE TYPE
WIND	UCH	UCH	Write Configuration	CF171 TEMPERATURE DISPLAY
WIND	UCH	UCH	Write Configuration	CF029 EXTERNAL TEMPERATURE SENSOR
WIND	UCH	UCH	Write Configuration	CF032 SEE-ME-HOME LIGHTING
WIND	UCH	UCH	Write Configuration	CF021 FRONT FOG LIGHTS
WIND	UCH	UCH	Write Configuration	CF014 DAYTIME RUNNING LIGHTS
WIND	UCH	UCH	Write Configuration	CF193 AUTOMATIC LIGHTING FUNCTION
WIND	UCH	UCH	Write Configuration	CF194 AUTOMATIC WIPING FUNCTION
WIND	UCH	UCH	Write Configuration	CF035 RAIN/LIGHT SENSOR
WIND	UCH	UCH	Write Configuration	CF191 WIPER INTERMITTENT SPEED RING
WIND	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
WIND	UCH	UCH	Write Configuration	CF108 AUTOMATIC LOCKING WHEN DRIVING
WIND	UCH	UCH	Write Configuration	CF009 DEADLOCKING
WIND	UCH	UCH	Write Configuration	CF192 OPENING ELEMENTS CENTRAL LOCKING
WIND	UCH	UCH	Write Configuration	CF195 KEY TYPE
WIND	UCH	UCH	Write Configuration	CF213 GRADUAL SWITCHING ON AND OFF OF COURTESY LIGHT
WIND	UCH	UCH	Write Configuration	CF229 ALARM
WIND	UCH	UCH	Other Configuration	VP004 WRITE VIN
WIND	UCH	UCH	Erase	RZ001 FAULT MEMORY
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF209 DRIVER'S FRONT AIRBAG
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF210 PASSENGER'S FRONT AIRBAG
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF223 FRONT THORAX SIDE AIR BAG, DRIVER SIDE
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF224 FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF050 DRIVER'S FRONT INERTIA REEL
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF051 PASSENGER'S FRONT INERTIA REEL
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF285 DRIVER'S FRONT SIDE IMPACT SENSOR
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF286 PASSENGER'S FRONT SIDE IMPACT SENSOR
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF273 DRIVER'S SEAT BUCKLE SENSOR
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF248 PASSENGER AIR BAG LOCKING MODE
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
WIND	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
WIND	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
WIND	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
WIND	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
WIND	AIR CONDITIONING	AIR CONDITIONING	Live Data	
WIND	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
WIND	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
WIND	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF044 VEHICLE TYPE
WIND	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF117 HEATING RESISTOR TYPE
WIND	AIR CONDITIONING	AIR CONDITIONING	Write Configuration	CF024 GEOGRAPHICAL ZONE
WIND	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
WIND	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
WIND	SUNROOF CONTROL UNIT	WIND	Read Fault Code	
WIND	SUNROOF CONTROL UNIT	WIND	Erase Fault Code	
WIND	SUNROOF CONTROL UNIT	WIND	Read ECU Information	
WIND	SUNROOF CONTROL UNIT	WIND	Live Data	
WIND	SUNROOF CONTROL UNIT	WIND	Other Configuration	VP002 WRITE V.I.N.
WIND	SUNROOF CONTROL UNIT	WIND	Erase	RZ001 FAULT MEMORY
WIND	RADIO	R108 RADIO	Read Fault Code	
WIND	RADIO	R108 RADIO	Erase Fault Code	
WIND	RADIO	R108 RADIO	Read ECU Information	
WIND	RADIO	R108 RADIO	Live Data	
WIND	RADIO	R108 RADIO	Read Configuration	
WIND	RADIO	R108 RADIO	Actuation Test	
WIND	RADIO	R108 RADIO	Other Configuration	VP001 WRITE VIN
WIND	RADIO	R108 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
WIND	RADIO	R108 RADIO	Erase	RZ003 FAULT MEMORY
WIND	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
WIND	RADIO	R208 RADIO	Read Fault Code	
WIND	RADIO	R208 RADIO	Erase Fault Code	
WIND	RADIO	R208 RADIO	Read ECU Information	
WIND	RADIO	R208 RADIO	Live Data	
WIND	RADIO	R208 RADIO	Read Configuration	
WIND	RADIO	R208 RADIO	Actuation Test	
WIND	RADIO	R208 RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
WIND	RADIO	R208 RADIO	Other Configuration	VP001 WRITE VIN
WIND	RADIO	R208 RADIO	Erase	RZ003 FAULT MEMORY
WIND	RADIO	R208 RADIO	Configuration	SC002 COMP CONFIGURATION
WIND	RADIO	RADIO	Read Fault Code	
WIND	RADIO	RADIO	Erase Fault Code	
WIND	RADIO	RADIO	Read ECU Information	
WIND	RADIO	RADIO	Live Data	
WIND	RADIO	RADIO	Read Configuration	
WIND	RADIO	RADIO	Actuation Test	
WIND	RADIO	RADIO	Write Configuration	CF004 SYSTEM CONFIGURATION
WIND	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
WIND	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
WIND	RADIO	RADIO	Erase	RZ004 RESET RADIO



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
WIND	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
WIND	RADIO	RADIO	Erase	RZ002 CUSTOMER SETTINGS AND DETAILS
WIND	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Fault Code	
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase Fault Code	
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read ECU Information	
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Live Data	
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Read Configuration	
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Actuation Test	
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF007 VEHICLE CONFIGURATION
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF008 RADIO
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Write Configuration	CF012 LIGHTING
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Other Configuration	VP001 WRITE VIN
WIND	MULTIMEDIA INTERFACE	CAN INTERFACE UNIT	Erase	RZ001 FAULT MEMORY
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read Fault Code	
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase Fault Code	
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Read ECU Information	
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Live Data	
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Write Configuration	CF001 SYSTEM CONFIGURATION
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP001 WRITE DATE OF LAST AFTER SALES OPERATION
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Other Configuration	VP003 WRITE VIN
WIND	MULTIMEDIA CONNECTION	MULTIMEDIA CONNECTION	Erase	RZ001 FAULT MEMORY
WIND	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
WIND	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
WIND	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
WIND	VARIABLE P.A.S.	Electric PAS	Live Data	
WIND	VARIABLE P.A.S.	Electric PAS	Read Configuration	
WIND	VARIABLE P.A.S.	Electric PAS	Write Configuration	CF073 MODE NUMBER
WIND	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
WIND	VARIABLE P.A.S.	Electric PAS	Read Fault Code	
WIND	VARIABLE P.A.S.	Electric PAS	Erase Fault Code	
WIND	VARIABLE P.A.S.	Electric PAS	Read ECU Information	
WIND	VARIABLE P.A.S.	Electric PAS	Live Data	
WIND	VARIABLE P.A.S.	Electric PAS	Read Configuration	
WIND	VARIABLE P.A.S.	Electric PAS	Write Configuration	CF073 MODE NUMBER
WIND	VARIABLE P.A.S.	Electric PAS	Erase	RZ001 FAULT MEMORY
ZOE	A.B.S.	ABS	Read Fault Code	
ZOE	A.B.S.	ABS	Erase Fault Code	
ZOE	A.B.S.	ABS	Read ECU Information	
ZOE	A.B.S.	ABS	Live Data	
ZOE	A.B.S.	ABS	Read Configuration	
ZOE	A.B.S.	ABS	Actuation Test	
ZOE	A.B.S.	ABS	Other Configuration	VP007 SPEED INDEX
ZOE	A.B.S.	ABS	Other Configuration	VP006 WRITE DATE OF LAST AFTER SALES OPERATION
ZOE	A.B.S.	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
ZOE	A.B.S.	ABS	Other Configuration	VP001 WRITE VIN
ZOE	A.B.S.	ABS	Other Configuration	VP044 ACCELERATION SENSOR
ZOE	A.B.S.	ABS	Other Configuration	VP045 HILL START
ZOE	A.B.S.	ABS	Erase	RZ001 FAULT MEMORY
ZOE	A.B.S.	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ZOE	A.B.S.	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ZOE	A.B.S.	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ZOE	A.B.S.	ABS	Erase	RZ012 RESET
ZOE	A.B.S.	ABS	Configuration	SC001 CHECK TARGET TEETH
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF150 CRUISE CTRL/SPD LIMITER
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase	RZ001 FAULT MEMORY
ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Configuration	SC016 DISTANCE BEFORE NEXT MAINTENANCE
ZOE	UCH	UCH	Read Fault Code	
ZOE	UCH	UCH	Erase Fault Code	
ZOE	UCH	UCH	Read ECU Information	
ZOE	UCH	UCH	Live Data	
ZOE	UCH	UCH	Read Configuration	
ZOE	UCH	UCH	Actuation Test	
ZOE	UCH	UCH	Write Configuration	CF290 STEERING LOCK
ZOE	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
ZOE	UCH	UCH	Erase	RZ001 FAULT MEMORY
ZOE	UCH	UCH	Configuration	SC005 CARD TESTING
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Erase	RZ001 FAULT MEMORY
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC005 CONFIGURATION OF SYSTEM COMPONENTS
ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
ZOE	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
ZOE	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
ZOE	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
ZOE	AIR CONDITIONING	AIR CONDITIONING	Live Data	
ZOE	AIR CONDITIONING	AIR CONDITIONING	Read Configuration	
ZOE	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
ZOE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
ZOE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP004 COMPUTER REINITIALISATION
ZOE	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ001 FAULT MEMORY
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Actuation Test	
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP004 STEERING WHEEL ANGLE SENSOR PROGRAMMING
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
ZOE	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase	RZ001 FAULT MEMORY
ZOE	UPC	UPC	Read Fault Code	
ZOE	UPC	UPC	Erase Fault Code	
ZOE	UPC	UPC	Read ECU Information	
ZOE	UPC	UPC	Live Data	
ZOE	UPC	UPC	Actuation Test	
ZOE	UPC	UPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
ZOE	UPC	UPC	Other Configuration	VP003 WRITE VIN
ZOE	UPC	UPC	Erase	RZ004 DTC reset

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ZOE	UPC	UPC	Erase	RZ011 CALCULATE BATTERY WEAR COUNTERS
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Read Fault Code	
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase Fault Code	
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Read ECU Information	
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Live Data	
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Other Configuration	VP014 WRITE VIN
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Other Configuration	VP016 WRITE DATE OF AFTER SALES OPERATION
ZOE	ADAPTATION UNIT	CAN INTERFACE UNIT	Erase	RZ002 FAULT MEMORY
ZOE	PARKING PROX CAN	PARKING AID	Read Fault Code	
ZOE	PARKING PROX CAN	PARKING AID	Erase Fault Code	
ZOE	PARKING PROX CAN	PARKING AID	Read ECU Information	
ZOE	PARKING PROX CAN	PARKING AID	Live Data	
ZOE	PARKING PROX CAN	PARKING AID	Read Configuration	
ZOE	PARKING PROX CAN	PARKING AID	Actuation Test	
ZOE	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ZOE	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
ZOE	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
ZOE	PARKING PROX CAN	PARKING AID	Erase	RZ001 FAULT MEMORY
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ004 EMERGENCY CALL SERVICE
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ003 FAULT MEMORY
ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Read Fault Code	
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase Fault Code	
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Read ECU Information	
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Live Data	
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Actuation Test	
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Other Configuration	VP001 WRITE DATE OF AFTER SALES OPERATION
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Other Configuration	VP005 WHEEL CIRCUMFERENCE
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Other Configuration	VP002 WRITE VIN
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ006 FAULT MEMORY
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ005 PISTON PRESSURE SENSOR OFFSET
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ004 MASTER CYLINDER PRESSURE SENSOR OFFSET
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ001 BRAKE PEDAL POSITION 1 AND 2 SENSOR STATUS OFFSET
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ003 PISTON PRESSURE SENSOR STATUS OFFSET
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ007 RESET
ZOE	UNCOUPLED PEDAL	UNCOUPLED PEDAL	Erase	RZ008 UBP SOLENOID VALVE
ZOE	BCB	BCB	Read Fault Code	
ZOE	BCB	BCB	Erase Fault Code	
ZOE	BCB	BCB	Read ECU Information	
ZOE	BCB	BCB	Live Data	
ZOE	BCB	BCB	Write Configuration	CF003 CHARGE PLUG
ZOE	BCB	BCB	Write Configuration	CF002 INSTRUMENT PANEL
ZOE	BCB	BCB	Write Configuration	CF001 BMS
ZOE	BCB	BCB	Other Configuration	VP002 WRITE V.I.N.
ZOE	BCB	BCB	Erase	RZ001 FAULT MEMORY
ZOE	BMS	BMS	Read Fault Code	
ZOE	BMS	BMS	Erase Fault Code	
ZOE	BMS	BMS	Read ECU Information	
ZOE	BMS	BMS	Live Data	
ZOE	BMS	BMS	Other Configuration	VP003 START AUTHORISATION FROM BMS
ZOE	BMS	BMS	Other Configuration	VP015 MODULE CHANGE
ZOE	BMS	BMS	Erase	RZ001 FAULT MEMORY
ZOE	BMS	BMS	Erase	RZ002 TRACTION BATTERY LOCK
ZOE	BMS	BMS	Erase	RZ003 TRACTION BATTERY INTERLOCK
ZOE	EVC	EVC	Read Fault Code	
ZOE	EVC	EVC	Erase Fault Code	
ZOE	EVC	EVC	Read ECU Information	
ZOE	EVC	EVC	Live Data	
ZOE	EVC	EVC	Read Configuration	
ZOE	EVC	EVC	Actuation Test	
ZOE	EVC	EVC	Write Configuration	CF003 HEATING
ZOE	EVC	EVC	Other Configuration	VP003 WRITE V.I.N.
ZOE	EVC	EVC	Other Configuration	VP001 VACUUM PUMP AGEING COUNTER
ZOE	EVC	EVC	Erase	RZ003 FAULT MEMORY
ZOE	EVC	EVC	Erase	RZ002 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ZOE	EVC	EVC	Erase	RZ001 VACUUM PUMP AGEING COUNTER
ZOE	EVC	EVC	Erase	RZ005 TRACTION BATTERY LOCK
ZOE	EVC	EVC	Erase	RZ004 FAN ASSEMBLY
ZOE	EVC	EVC	Erase	RZ007 CHARGE WATER PUMP
ZOE	EVC	EVC	Erase	RZ006 DRIVING WATER PUMP
ZOE	EVC	EVC	Read Fault Code	
ZOE	EVC	EVC	Erase Fault Code	
ZOE	EVC	EVC	Read ECU Information	
ZOE	EVC	EVC	Live Data	
ZOE	EVC	EVC	Read Configuration	
ZOE	EVC	EVC	Actuation Test	
ZOE	EVC	EVC	Other Configuration	VP003 WRITE V.I.N.
ZOE	EVC	EVC	Other Configuration	VP001 VACUUM PUMP AGEING COUNTER
ZOE	EVC	EVC	Erase	RZ003 FAULT MEMORY
ZOE	EVC	EVC	Erase	RZ002 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ZOE	EVC	EVC	Erase	RZ001 VACUUM PUMP AGEING COUNTER
ZOE	EVC	EVC	Erase	RZ005 TRACTION BATTERY LOCK
ZOE	EVC	EVC	Erase	RZ004 FAN ASSEMBLY
ZOE	EVC	EVC	Erase	RZ006 DRIVING WATER PUMP
ZOE	PEB	PEB	Read Fault Code	
ZOE	PEB	PEB	Erase Fault Code	
ZOE	PEB	PEB	Read ECU Information	
ZOE	PEB	PEB	Live Data	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
ZOE	PEB	PEB	Other Configuration	VP003 WRITE V.I.N.
ZOE	PEB	PEB	Erase	RZ001 FAULT MEMORY
ZOE	PEB	PEB	Read Fault Code	
ZOE	PEB	PEB	Erase Fault Code	
ZOE	PEB	PEB	Read ECU Information	
ZOE	PEB	PEB	Live Data	
ZOE	PEB	PEB	Other Configuration	VP003 WRITE V.I.N.
ZOE	PEB	PEB	Erase	RZ001 FAULT MEMORY
ZOE	PEB	PEB	Erase	RZ002 INVERTER FAN ASSEMBLY
ZOE	BMS SAFETY	BMS SAFETY	Read ECU Information	
ZOE	BMS SAFETY	BMS SAFETY	Erase	RZ001 FAULT MEMORY
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Read Fault Code	
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Erase Fault Code	
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Read ECU Information	
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Live Data	
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Read Configuration	
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Actuation Test	
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF002 COUNTRY MODEL
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF046 LANGUAGE
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF045 TYRE PRESSURE UNITS
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Write Configuration	CF033 DISTANCE UNITS
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Other Configuration	VP002 WRITE VIN
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ004 FAULT MEMORY
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Erase	RZ002 ECU MEMORY
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC002 REVERSING CAMERA CALIBRATION
ZOE	COMMUNICATIONS UNIT	NAVIGATION	Configuration	SC005 REAR CAMERA CONFIGURATION
ZOE	RADIO	RADIO	Read Fault Code	
ZOE	RADIO	RADIO	Erase Fault Code	
ZOE	RADIO	RADIO	Read ECU Information	
ZOE	RADIO	RADIO	Live Data	
ZOE	RADIO	RADIO	Read Configuration	
ZOE	RADIO	RADIO	Actuation Test	
ZOE	RADIO	RADIO	Write Configuration	CF053 REAR LOUD SPEAKER
ZOE	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
ZOE	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
ZOE	RADIO	RADIO	Other Configuration	VP003 WRITE DATE OF AFTER SALES OPERATION
ZOE	RADIO	RADIO	Erase	RZ003 FAULT MEMORY
ZOE	RADIO	RADIO	Read Fault Code	
ZOE	RADIO	RADIO	Erase Fault Code	
ZOE	RADIO	RADIO	Read ECU Information	
ZOE	RADIO	RADIO	Live Data	
ZOE	RADIO	RADIO	Read Configuration	
ZOE	RADIO	RADIO	Actuation Test	
ZOE	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
ZOE	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
ZOE	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
ZOE	RADIO	RADIO	Erase	RZ005 FAULT MEMORY
ZOE	RADIO	RADIO	Erase	RZ004 RESET RADIO
ZOE	RADIO	RADIO	Configuration	SC005 SYSTEM CONFIGURATION
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	MDG1 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	MDG1 INJECTION	Live Data	
DUSTER ph3	INJECTION	MDG1 INJECTION	Function Test	
DUSTER ph3	INJECTION	MDG1 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	MDG1 INJECTION	Actuation Test	
DUSTER ph3	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) - DILUTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Live Data	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Function Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Actuation Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Live Data	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Function Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Actuation Test	
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ122 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	MDG1 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	MDG1 INJECTION	Live Data	
DUSTER ph3	INJECTION	MDG1 INJECTION	Function Test	
DUSTER ph3	INJECTION	MDG1 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	MDG1 INJECTION	Actuation Test	
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
DUSTER ph3	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Read Fault Code	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase Fault Code	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Read ECU Information	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Live Data	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Function Test	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Read Configuration	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Actuation Test	
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Other Configuration	VP010 WRITE V.I.N.
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ091 WASTE GATE REGULATION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
DUSTER ph3	INJECTION	EMS 3180 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	

**Diagnosis list Renault\_ v9.20**

Vehicles	System	System info	Function menu	Subfunction menu
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF080 ENGINE TYPE
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF234 BLIND SPOT DETECTION
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
DUSTER ph3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
DUSTER ph3	ICHI	ICHI	Read Fault Code	
DUSTER ph3	ICHI	ICHI	Erase Fault Code	
DUSTER ph3	ICHI	ICHI	Read ECU Information	
DUSTER ph3	ICHI	ICHI	Live Data	
DUSTER ph3	ICHI	ICHI	Function Test	
DUSTER ph3	ICHI	ICHI	Read Configuration	
DUSTER ph3	ICHI	ICHI	Actuation Test	
DUSTER ph3	ICHI	ICHI	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
DUSTER ph3	ICHI	ICHI	Write Configuration	CF275 SECOND FITTING ALARM
DUSTER ph3	ICHI	ICHI	Write Configuration	CF229 ALARM
DUSTER ph3	ICHI	ICHI	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
DUSTER ph3	ICHI	ICHI	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
DUSTER ph3	ICHI	ICHI	Write Configuration	CF314 STOP AND START FUNCTION
DUSTER ph3	ICHI	ICHI	Write Configuration	CF009 DEADLOCKING
DUSTER ph3	ICHI	ICHI	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
DUSTER ph3	ICHI	ICHI	Write Configuration	CF289 ACCESS/STARTER TYPE
DUSTER ph3	ICHI	ICHI	Other Configuration	VP001 WRITE V.I.N.
DUSTER ph3	ICHI	ICHI	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
DUSTER ph3	ICHI	ICHI	Erase	RZ014 NUMBER OF STARTING CYCLES
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
DUSTER ph3	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Function Test	
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP011 STEERING WHEEL ANGLE CALIB.
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP013 HAND OFF DETECTION LEARNING
DUSTER ph3	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP012 COMPUTER RESET
DUSTER ph3	IPC	IPC	Read Fault Code	
DUSTER ph3	IPC	IPC	Erase Fault Code	
DUSTER ph3	IPC	IPC	Read ECU Information	
DUSTER ph3	IPC	IPC	Live Data	
DUSTER ph3	IPC	IPC	Function Test	
DUSTER ph3	IPC	IPC	Actuation Test	
DUSTER ph3	IPC	IPC	Other Configuration	VP007 COMPUTER INITIALISATION
DUSTER ph3	IPC	IPC	Other Configuration	VP003 WRITE VIN
DUSTER ph3	IPC	IPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
DUSTER ph3	IPC	IPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Read Fault Code	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Erase Fault Code	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Read ECU Information	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Actuation Test	
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Other Configuration	VP002 WRITE VIN
DUSTER ph3	SCENE RECORDER	SCENE RECORDER	Erase	RZ002 COMPUTER RESET
DUSTER ph3	RADIO	RADIO	Read Fault Code	
DUSTER ph3	RADIO	RADIO	Erase Fault Code	
DUSTER ph3	RADIO	RADIO	Read ECU Information	
DUSTER ph3	RADIO	RADIO	Live Data	
DUSTER ph3	RADIO	RADIO	Function Test	
DUSTER ph3	RADIO	RADIO	Read Configuration	
DUSTER ph3	RADIO	RADIO	Actuation Test	
DUSTER ph3	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
DUSTER ph3	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
DUSTER ph3	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
DUSTER ph3	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
DUSTER ph3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PBEASURE LINE ADBLUE HEATER
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
DUSTER ph3	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF028 TESTING CARD PRESENTED
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP001 WRITE VIN
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ002 AFTER SALES CODE
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Other Configuration	VP001 WRITE VIN
DUSTER ph3	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
DUSTER ph3	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VP002 WRITE VIN
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
DUSTER ph3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	
DUSTER ph3	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	
ALPINE A110	INJECTION	INJECTION	Read Fault Code	
ALPINE A110	INJECTION	INJECTION	Erase Fault Code	
ALPINE A110	INJECTION	INJECTION	Read ECU Information	
ALPINE A110	INJECTION	INJECTION	Live Data	
ALPINE A110	INJECTION	INJECTION	Function Test	
ALPINE A110	INJECTION	INJECTION	Actuation Test	
ALPINE A110	INJECTION	INJECTION	Write Configuration	CF197 NEW VEHICLE STORAGE MODE DEACTIVATION
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
ALPINE A110	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
ALPINE A110	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
ALPINE A110	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ALPINE A110	INJECTION	INJECTION	Erase	RZ099 STOP AND START FUNCTION
ALPINE A110	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
ALPINE A110	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
ALPINE A110	INJECTION	INJECTION	Read Fault Code	
ALPINE A110	INJECTION	INJECTION	Erase Fault Code	
ALPINE A110	INJECTION	INJECTION	Read ECU Information	
ALPINE A110	INJECTION	INJECTION	Live Data	
ALPINE A110	INJECTION	INJECTION	Function Test	
ALPINE A110	INJECTION	INJECTION	Actuation Test	
ALPINE A110	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ALPINE A110	INJECTION	INJECTION	Write Configuration	CF197 NEW VEHICLE STORAGE MODE DEACTIVATION
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
ALPINE A110	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ALPINE A110	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ALPINE A110	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
ALPINE A110	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
ALPINE A110	INJECTION	INJECTION	Erase	RZ091 WASTE GATE REGULATION
ALPINE A110	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
ALPINE A110	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
ALPINE A110	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
ALPINE A110	ABS	ABS	Read Fault Code	
ALPINE A110	ABS	ABS	Erase Fault Code	
ALPINE A110	ABS	ABS	Read ECU Information	
ALPINE A110	ABS	ABS	Live Data	
ALPINE A110	ABS	ABS	Function Test	
ALPINE A110	ABS	ABS	Actuation Test	
ALPINE A110	ABS	ABS	Other Configuration	VP061 FRONT WHEEL SPEEDO INDEX

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ALPINE A110	ABS	ABS	Other Configuration	VPO06 WRITE DATE OF LAST AFTER SALES OPERATION
ALPINE A110	ABS	ABS	Other Configuration	VPO01 WRITE VIN
ALPINE A110	ABS	ABS	Other Configuration	VPO57 COMMISSION AUTOMATIC APPLICATION
ALPINE A110	ABS	ABS	Other Configuration	VPO54 DEACTIVATE MAINTENANCE MODE
ALPINE A110	ABS	ABS	Other Configuration	VPO55 DEACTIVATE MAINTENANCE MODE
ALPINE A110	ABS	ABS	Other Configuration	VPO03 STEERING WHEEL ANGLE SENSOR
ALPINE A110	ABS	ABS	Other Configuration	VPO44 ACCELERATION SENSOR
ALPINE A110	ABS	ABS	Other Configuration	VPO62 REAR WHEEL SPEEDO INDEX
ALPINE A110	ABS	ABS	Erase	RZ014 MEASURED APPLICATION OF REAR LH CALLIPER
ALPINE A110	ABS	ABS	Erase	RZ013 MEASURED APPLICATION OF REAR RH CALLIPER
ALPINE A110	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ALPINE A110	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ALPINE A110	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ALPINE A110	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
ALPINE A110	ABS	ABS	Erase	RZ015 COMPUTER RESET
ALPINE A110	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF160 OVERSPEED ALARM
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF002 LANGUAGE CONFIGURATION
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO52 ODOMETER IN KM
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO53 ODOMETER IN MILES
ALPINE A110	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO02 WRITE VIN
ALPINE A110	UCH	UCH	Read Fault Code	
ALPINE A110	UCH	UCH	Erase Fault Code	
ALPINE A110	UCH	UCH	Read ECU Information	
ALPINE A110	UCH	UCH	Live Data	
ALPINE A110	UCH	UCH	Function Test	
ALPINE A110	UCH	UCH	Read Configuration	
ALPINE A110	UCH	UCH	Actuation Test	
ALPINE A110	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ALPINE A110	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
ALPINE A110	UCH	UCH	Write Configuration	CF229 ALARM
ALPINE A110	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
ALPINE A110	UCH	UCH	Other Configuration	VPO01 WRITE V.I.N.
ALPINE A110	UCH	UCH	Configuration	SC002 PROGRAMMING THE CODES OF THE FOUR VALVES
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Write Configuration	CF291 SIDE ON WHICH STEERING WHEEL FITTED
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO06 LOCK COMPUTER
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO10 WRITE VIN
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO07 UNLOCK COMPUTER
ALPINE A110	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC004 READING IMPACT CONTEXTS
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Live Data	
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Function Test	
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO04 COMPUTER REINITIALISATION
ALPINE A110	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Function Test	
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VPO23 SHIFT DRUM REFERENCE POSITION
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VPO08 PROGRAMMING SELECTION/ENGAGING ZONES
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VPO01 WRITE VIN
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ016 LAUNCH CONTROL COUNTER
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Configuration	SC005 WRITE SAVED DATA
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Configuration	SC006 SAVE COMPUTER DATA
ALPINE A110	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Configuration	SC008 COMPUTER PROGRAMMING
ALPINE A110	VARIABLE P. A. S.	ELECTRIC POWER ASSISTED STEERING	Read Fault Code	
ALPINE A110	VARIABLE P. A. S.	ELECTRIC POWER ASSISTED STEERING	Erase Fault Code	
ALPINE A110	VARIABLE P. A. S.	ELECTRIC POWER ASSISTED STEERING	Read ECU Information	
ALPINE A110	VARIABLE P. A. S.	ELECTRIC POWER ASSISTED STEERING	Live Data	
ALPINE A110	VARIABLE P. A. S.	ELECTRIC POWER ASSISTED STEERING	Function Test	
ALPINE A110	VARIABLE P. A. S.	ELECTRIC POWER ASSISTED STEERING	Actuation Test	
ALPINE A110	UPC	UPC COMP. TYPE	Read Fault Code	
ALPINE A110	UPC	UPC COMP. TYPE	Erase Fault Code	
ALPINE A110	UPC	UPC COMP. TYPE	Read ECU Information	
ALPINE A110	UPC	UPC COMP. TYPE	Live Data	
ALPINE A110	UPC	UPC COMP. TYPE	Function Test	
ALPINE A110	UPC	UPC COMP. TYPE	Read Configuration	
ALPINE A110	UPC	UPC COMP. TYPE	Actuation Test	
ALPINE A110	UPC	UPC COMP. TYPE	Other Configuration	VPO03 WRITE VIN
ALPINE A110	UPC	UPC COMP. TYPE	Other Configuration	VPO07 COMPUTER INITIALISATION
ALPINE A110	UPC	UPC COMP. TYPE	Other Configuration	VPO06 RESETTING INTERNAL PROTECTION
ALPINE A110	UPC	UPC COMP. TYPE	Configuration	SC007 SAVE COMPUTER DATA
ALPINE A110	UPC	UPC COMP. TYPE	Configuration	SC008 WRITE SAVED DATA
ALPINE A110	UPC	UPC COMP. TYPE	Configuration	SC017 HIGH PRESSURE PUMP LEARNING
ALPINE A110	UPC	UPC COMP. TYPE	Configuration	SC018 STARTER LEARNING
ALPINE A110	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
ALPINE A110	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
ALPINE A110	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
ALPINE A110	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
ALPINE A110	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF093 VEHICLE LAYOUT
ALPINE A110	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF094 MODE
ALPINE A110	PARKING PROX CAN	PARKING AID	Read Fault Code	
ALPINE A110	PARKING PROX CAN	PARKING AID	Erase Fault Code	
ALPINE A110	PARKING PROX CAN	PARKING AID	Read ECU Information	
ALPINE A110	PARKING PROX CAN	PARKING AID	Live Data	
ALPINE A110	PARKING PROX CAN	PARKING AID	Function Test	
ALPINE A110	PARKING PROX CAN	PARKING AID	Read Configuration	
ALPINE A110	PARKING PROX CAN	PARKING AID	Actuation Test	
ALPINE A110	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ALPINE A110	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
ALPINE A110	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
ALPINE A110	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ALPINE A110	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Actuation Test	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF033 COLUMN STEERING LOCK
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V.I.N.
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
ALPINE A110	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC007 REMOTE LOCKING BUZZER
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ005 COMPUTER RESET
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
ALPINE A110	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
ALPINE A110	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
ALPINE A110	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
ALPINE A110	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
ALPINE A110	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
ALPINE A110	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ALPINE A110	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Configuration	
ALPINE A110	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
ALPINE A110	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
ALPINE A110	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
ALPINE A110	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
ALPINE A110	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
ALPINE A110	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
CLIO V	INJECTION	MDG1 INJECTION	Read Fault Code	
CLIO V	INJECTION	MDG1 INJECTION	Erase Fault Code	
CLIO V	INJECTION	MDG1 INJECTION	Read ECU Information	
CLIO V	INJECTION	MDG1 INJECTION	Live Data	
CLIO V	INJECTION	MDG1 INJECTION	Function Test	
CLIO V	INJECTION	MDG1 INJECTION	Read Configuration	
CLIO V	INJECTION	MDG1 INJECTION	Actuation Test	
CLIO V	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CLIO V	INJECTION	MDG1 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
CLIO V	INJECTION	MDG1 INJECTION	Other Configuration	VPO10 WRITE V.I.N.
CLIO V	INJECTION	MDG1 INJECTION	Other Configuration	VPO52 BOOST PRESSURE WASTEGATE PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
CLIO V	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
CLIO V	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CLIO V	INJECTION	EMS 3140 INJECTION	Read Fault Code	
CLIO V	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
CLIO V	INJECTION	EMS 3140 INJECTION	Read ECU Information	
CLIO V	INJECTION	EMS 3140 INJECTION	Live Data	
CLIO V	INJECTION	EMS 3140 INJECTION	Function Test	
CLIO V	INJECTION	EMS 3140 INJECTION	Read Configuration	
CLIO V	INJECTION	EMS 3140 INJECTION	Actuation Test	
CLIO V	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CLIO V	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
CLIO V	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO10 WRITE V.I.N.
CLIO V	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO09 WRITE V.I.N.
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO V	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO V	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
CLIO V	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CLIO V	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO V	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CLIO V	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO V	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO V	INJECTION	INJECTION	Read Fault Code	
CLIO V	INJECTION	INJECTION	Erase Fault Code	
CLIO V	INJECTION	INJECTION	Read ECU Information	
CLIO V	INJECTION	INJECTION	Live Data	
CLIO V	INJECTION	INJECTION	Function Test	
CLIO V	INJECTION	INJECTION	Actuation Test	
CLIO V	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO V	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO V	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CLIO V	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CLIO V	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
CLIO V	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
CLIO V	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
CLIO V	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO V	INJECTION	EMS 3160 INJECTION	Read Fault Code	
CLIO V	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
CLIO V	INJECTION	EMS 3160 INJECTION	Read ECU Information	
CLIO V	INJECTION	EMS 3160 INJECTION	Live Data	
CLIO V	INJECTION	EMS 3160 INJECTION	Function Test	
CLIO V	INJECTION	EMS 3160 INJECTION	Read Configuration	
CLIO V	INJECTION	EMS 3160 INJECTION	Actuation Test	
CLIO V	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CLIO V	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CLIO V	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CLIO V	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V. I. N.
CLIO V	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CLIO V	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CLIO V	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CLIO V	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CLIO V	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
CLIO V	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CLIO V	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CLIO V	ABS	ABS	Read Fault Code	
CLIO V	ABS	ABS	Erase Fault Code	
CLIO V	ABS	ABS	Read ECU Information	
CLIO V	ABS	ABS	Live Data	
CLIO V	ABS	ABS	Function Test	
CLIO V	ABS	ABS	Read Configuration	
CLIO V	ABS	ABS	Actuation Test	
CLIO V	ABS	ABS	Write Configuration	CF012 HILL START
CLIO V	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
CLIO V	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CLIO V	ABS	ABS	Other Configuration	VP001 WRITE VIN
CLIO V	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
CLIO V	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
CLIO V	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
CLIO V	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
CLIO V	ABS	ABS	Other Configuration	VP060 ACCELEROMETER
CLIO V	ABS	ABS	Erase	RZ012 RESET
CLIO V	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CLIO V	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CLIO V	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CLIO V	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CLIO V	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
CLIO V	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
CLIO V	UCH	UCH	Read Fault Code	
CLIO V	UCH	UCH	Erase Fault Code	
CLIO V	UCH	UCH	Read ECU Information	
CLIO V	UCH	UCH	Live Data	
CLIO V	UCH	UCH	Function Test	
CLIO V	UCH	UCH	Read Configuration	
CLIO V	UCH	UCH	Actuation Test	
CLIO V	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CLIO V	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
CLIO V	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
CLIO V	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CLIO V	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
CLIO V	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
CLIO V	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
CLIO V	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CLIO V	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CLIO V	FRONT RADAR	FRONT RADAR	Read Fault Code	
CLIO V	FRONT RADAR	FRONT RADAR	Erase Fault Code	
CLIO V	FRONT RADAR	FRONT RADAR	Read ECU Information	
CLIO V	FRONT RADAR	FRONT RADAR	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO V	FRONT RADAR	FRONT RADAR	Function Test	
CLIO V	FRONT RADAR	FRONT RADAR	Other Configuration	VPO02 WRITE VIN
CLIO V	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Function Test	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO06 AIR RECIRCULATION FLAP MOTOR
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO05
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Function Test	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO05 GEOGRAPHICAL ZONE
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO06 AIR RECIRCULATION FLAP MOTOR
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CLIO V	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Function Test	
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VPO30 GEARBOX VEHICLE ACCELERATION SENSOR INT.
CLIO V	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SCO02 REVERSING CAMERA CALIBRATION
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SCO07 SYSTEM CONFIGURATION
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SCO08 WRITE SAVED DATA
CLIO V	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SCO09 SAVE COMPUTER DATA
CLIO V	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
CLIO V	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
CLIO V	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
CLIO V	PARKING BRAKE	PARKING BRAKE	Live Data	
CLIO V	PARKING BRAKE	PARKING BRAKE	Function Test	
CLIO V	PARKING BRAKE	PARKING BRAKE	Read Configuration	
CLIO V	PARKING BRAKE	PARKING BRAKE	Actuation Test	
CLIO V	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
CLIO V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO18 DEACTIVATE MAINTENANCE MODE
CLIO V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO04 WRITE VIN
CLIO V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO20 ACCELEROMETER
CLIO V	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO17 ACTIVATE MAINTENANCE MODE
CLIO V	PARKING BRAKE	PARKING BRAKE	Configuration	SCO12 VEHICLE CONFIGURATION
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO01 WRITE VIN
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
CLIO V	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO12 COMPUTER RESET
CLIO V	UPC	UPC	Read Fault Code	
CLIO V	UPC	UPC	Erase Fault Code	
CLIO V	UPC	UPC	Read ECU Information	
CLIO V	UPC	UPC	Live Data	
CLIO V	UPC	UPC	Function Test	
CLIO V	UPC	UPC	Actuation Test	
CLIO V	UPC	UPC	Other Configuration	VPO03 WRITE VIN
CLIO V	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
CLIO V	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
CLIO V	UPC	UPC	Configuration	SCO07 SAVE COMPUTER DATA
CLIO V	UPC	UPC	Configuration	SCO08 WRITE SAVED DATA
CLIO V	UPC	UPC	Read Fault Code	
CLIO V	UPC	UPC	Erase Fault Code	
CLIO V	UPC	UPC	Read ECU Information	
CLIO V	UPC	UPC	Live Data	
CLIO V	UPC	UPC	Function Test	
CLIO V	UPC	UPC	Actuation Test	
CLIO V	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
CLIO V	UPC	UPC	Other Configuration	VPO03 WRITE VIN
CLIO V	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
CLIO V	UPC	UPC	Other Configuration	VPO32 LITHIUM BATTERY
CLIO V	UPC	UPC	Configuration	SCO07 SAVE COMPUTER DATA
CLIO V	UPC	UPC	Configuration	SCO08 WRITE SAVED DATA
CLIO V	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
CLIO V	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
CLIO V	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
CLIO V	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
CLIO V	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
CLIO V	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
CLIO V	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
CLIO V	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
CLIO V	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
CLIO V	CHECK CHASSIS	CHECK CHASSIS	Live Data	
CLIO V	CHECK CHASSIS	CHECK CHASSIS	Function Test	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
CLIO V	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
CLIO V	PARKING PROX CAN	PARKING AID	Read Fault Code	
CLIO V	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CLIO V	PARKING PROX CAN	PARKING AID	Read ECU Information	
CLIO V	PARKING PROX CAN	PARKING AID	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System info	Function menu	Subfunction menu
CLIO V	PARKING PROX CAN	PARKING AID	Function Test	
CLIO V	PARKING PROX CAN	PARKING AID	Read Configuration	
CLIO V	PARKING PROX CAN	PARKING AID	Actuation Test	
CLIO V	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CLIO V	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
CLIO V	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
CLIO V	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
CLIO V	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CLIO V	PARKING PROX CAN	PARKING AID	Other Configuration	VP003 CARAVAN TOWING DISTANCE
CLIO V	PARKING PROX CAN	PARKING AID	Other Configuration	VP001 WRITE VIN
CLIO V	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
CLIO V	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
CLIO V	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
CLIO V	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
CLIO V	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
CLIO V	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
CLIO V	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
CLIO V	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
CLIO V	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
CLIO V	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
CLIO V	BRAKE BOOSTER	BRAKE BOOSTER	Read Fault Code	
CLIO V	BRAKE BOOSTER	BRAKE BOOSTER	Erase Fault Code	
CLIO V	BRAKE BOOSTER	BRAKE BOOSTER	Read ECU Information	
CLIO V	BRAKE BOOSTER	BRAKE BOOSTER	Live Data	
CLIO V	BRAKE BOOSTER	BRAKE BOOSTER	Function Test	
CLIO V	BRAKE BOOSTER	BRAKE BOOSTER	Erase	RZ002 COMPUTER RESET
CLIO V	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read Fault Code	
CLIO V	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Erase Fault Code	
CLIO V	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read ECU Information	
CLIO V	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Live Data	
CLIO V	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Function Test	
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read Fault Code	
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Erase Fault Code	
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read ECU Information	
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Live Data	
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Function Test	
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Other Configuration	VP002 ROTOR POSITION SENSOR LEARNING
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Other Configuration	VP004 ROTOR WINDING RESISTANCE LEARNING
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Configuration	SC001 SAVE COMPUTER DATA
CLIO V	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Configuration	SC002 WRITE SAVED DATA
CLIO V	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
CLIO V	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
CLIO V	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
CLIO V	FRONT CAMERA	FRONT CAMERA	Live Data	
CLIO V	FRONT CAMERA	FRONT CAMERA	Function Test	
CLIO V	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Other Configuration	VP002 WRITE VIN
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
CLIO V	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read Fault Code	
CLIO V	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Erase Fault Code	
CLIO V	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read ECU Information	
CLIO V	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Actuation Test	
CLIO V	RADIO	RADIO	Read Fault Code	
CLIO V	RADIO	RADIO	Erase Fault Code	
CLIO V	RADIO	RADIO	Read ECU Information	
CLIO V	RADIO	RADIO	Live Data	
CLIO V	RADIO	RADIO	Function Test	
CLIO V	RADIO	RADIO	Read Configuration	
CLIO V	RADIO	RADIO	Actuation Test	
CLIO V	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CLIO V	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CLIO V	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CLIO V	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CLIO V	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Other Configuration	VP002 WRITE VIN
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
CLIO V	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VPO01 WRITE VIN
CLIO V	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
CLIO V	AMPLIFIER	AMPLIFIER	Read Fault Code	
CLIO V	AMPLIFIER	AMPLIFIER	Erase Fault Code	
CLIO V	AMPLIFIER	AMPLIFIER	Read ECU Information	
CLIO V	AMPLIFIER	AMPLIFIER	Live Data	
CLIO V	AMPLIFIER	AMPLIFIER	Function Test	
CLIO V	AMPLIFIER	AMPLIFIER	Actuation Test	
CLIO V	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
CLIO V	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
CLIO V	BMS	BMS	Read Fault Code	
CLIO V	BMS	BMS	Erase Fault Code	
CLIO V	BMS	BMS	Read ECU Information	
CLIO V	BMS	BMS	Live Data	
CLIO V	BMS	BMS	Function Test	
CLIO V	BMS	BMS	Configuration	SC002 SAVE COMPUTER DATA
CLIO V	BMS	BMS	Configuration	SC003 WRITE SAVED DATA
CLIO V	EVC	EVC	Read Fault Code	
CLIO V	EVC	EVC	Erase Fault Code	
CLIO V	EVC	EVC	Read ECU Information	
CLIO V	EVC	EVC	Live Data	
CLIO V	EVC	EVC	Function Test	
CLIO V	EVC	EVC	Read Configuration	
CLIO V	EVC	EVC	Actuation Test	
CLIO V	EVC	EVC	Write Configuration	CF005 MAINTENANCE MODE
CLIO V	EVC	EVC	Other Configuration	VPO68 GEAR LEVER
CLIO V	EVC	EVC	Other Configuration	VPO81 LOCOBOX LEARNING
CLIO V	EVC	EVC	Other Configuration	VPO70 ELEC TRACTION COOLING CIRCUIT DEGASSING
CLIO V	EVC	EVC	Other Configuration	VPO80 FUEL SUPPLY PREVENTION
CLIO V	BMS SAFETY	BMS SAFETY	Read Fault Code	
CLIO V	BMS SAFETY	BMS SAFETY	Erase Fault Code	
CLIO V	BMS SAFETY	BMS SAFETY	Read ECU Information	
CLIO V	BMS SAFETY	BMS SAFETY	Live Data	
CLIO V	BMS SAFETY	BMS SAFETY	Function Test	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V.I.N.
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CLIO V	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CLIO V	UCH	UCH	Read Fault Code	
CLIO V	UCH	UCH	Erase Fault Code	
CLIO V	UCH	UCH	Read ECU Information	
CLIO V	UCH	UCH	Live Data	
CLIO V	UCH	UCH	Read Configuration	
CLIO V	UCH	UCH	Actuation Test	
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
CLIO V	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Configuration	
CLIO V	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
CLIO V	VIRTUAL KEY MODULE	VIRTUAL KEY MODULE	Read Fault Code	
CLIO V	VIRTUAL KEY MODULE	VIRTUAL KEY MODULE	Read ECU Information	
CLIO V	VIRTUAL KEY MODULE	VIRTUAL KEY MODULE	Live Data	
CLIO V	RADIO	RADIO	Read Fault Code	
CLIO V	RADIO	RADIO	Erase Fault Code	
CLIO V	RADIO	RADIO	Read ECU Information	
CLIO V	RADIO	RADIO	Live Data	
CLIO V	RADIO	RADIO	Read Configuration	
CLIO V	RADIO	RADIO	Actuation Test	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Configuration	
CLIO V	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
CLIO V	BMS 12V	BMS 12V	Read Fault Code	
CLIO V	BMS 12V	BMS 12V	Erase Fault Code	
CLIO V	BMS 12V	BMS 12V	Read ECU Information	
CLIO V	BMS 12V	BMS 12V	Live Data	
CLIO V	BSG	BSG	Read Fault Code	
CLIO V	BSG	BSG	Erase Fault Code	
CLIO V	BSG	BSG	Read ECU Information	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CLIO V	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
ARKANA	INJECTION	EMS 3140 INJECTION	Read Fault Code	
ARKANA	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
ARKANA	INJECTION	EMS 3140 INJECTION	Read ECU Information	
ARKANA	INJECTION	EMS 3140 INJECTION	Live Data	
ARKANA	INJECTION	EMS 3140 INJECTION	Function Test	
ARKANA	INJECTION	EMS 3140 INJECTION	Read Configuration	
ARKANA	INJECTION	EMS 3140 INJECTION	Actuation Test	
ARKANA	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ARKANA	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
ARKANA	INJECTION	EMS 3140 INJECTION	Other Configuration	VPO10 WRITE V.I.N.
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System info	Function menu	Subfunction menu
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ091 WASTE GATE REGULATION
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ122 FLYWHEEL TARGET PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ102 FLYWHEEL TARGET PROGRAMMING
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
ARKANA	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ARKANA	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ARKANA	ABS	ABS	Read Fault Code	
ARKANA	ABS	ABS	Erase Fault Code	
ARKANA	ABS	ABS	Read ECU Information	
ARKANA	ABS	ABS	Live Data	
ARKANA	ABS	ABS	Function Test	
ARKANA	ABS	ABS	Read Configuration	
ARKANA	ABS	ABS	Actuation Test	
ARKANA	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
ARKANA	ABS	ABS	Other Configuration	VP045 HILL START
ARKANA	ABS	ABS	Other Configuration	VP001 WRITE VIN
ARKANA	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
ARKANA	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
ARKANA	ABS	ABS	Erase	RZ012 RESET
ARKANA	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ARKANA	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ARKANA	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
ARKANA	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
ARKANA	ICH	ICH	Read Fault Code	
ARKANA	ICH	ICH	Erase Fault Code	
ARKANA	ICH	ICH	Read ECU Information	
ARKANA	ICH	ICH	Live Data	
ARKANA	ICH	ICH	Function Test	
ARKANA	ICH	ICH	Read Configuration	
ARKANA	ICH	ICH	Actuation Test	
ARKANA	ICH	ICH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ARKANA	ICH	ICH	Write Configuration	CF275 SECOND FITTING ALARM
ARKANA	ICH	ICH	Write Configuration	CF229 ALARM
ARKANA	ICH	ICH	Write Configuration	CF036 SELECTIVE OPENING OF DOORS
ARKANA	ICH	ICH	Write Configuration	CF015 ILLUMINATE HAZARD LAMPS UPON IMPACT
ARKANA	ICH	ICH	Write Configuration	CF314 STOP AND START FUNCTION
ARKANA	ICH	ICH	Write Configuration	CF909 DEADLOCKING
ARKANA	ICH	ICH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
ARKANA	ICH	ICH	Write Configuration	CF299 ACCESS/STARTER TYPE
ARKANA	ICH	ICH	Other Configuration	VP001 WRITE V.I.N.
ARKANA	ICH	ICH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
ARKANA	ICH	ICH	Erase	RZ014 NUMBER OF STARTING CYCLES
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Live Data	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Function Test	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL ZONE
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP006 AIR RECIRCULATION FLAP MOTOR
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
ARKANA	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
ARKANA	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read Fault Code	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Erase Fault Code	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Read ECU Information	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Live Data	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Function Test	
ARKANA	BLIND SPOT DETECTION	BLIND SPOT DETECTION	Actuation Test	
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Function Test	
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP001 WRITE VIN
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP011 STEERING WHEEL ANGLE CALIB.
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP013 HAND OFF DETECTION LEARNING
ARKANA	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VP012 COMPUTER RESET
ARKANA	IPC	IPC	Read Fault Code	
ARKANA	IPC	IPC	Erase Fault Code	
ARKANA	IPC	IPC	Read ECU Information	
ARKANA	IPC	IPC	Live Data	
ARKANA	IPC	IPC	Function Test	
ARKANA	IPC	IPC	Actuation Test	
ARKANA	IPC	IPC	Other Configuration	VP007 COMPUTER INITIALISATION
ARKANA	IPC	IPC	Other Configuration	VP003 WRITE VIN
ARKANA	IPC	IPC	Other Configuration	VP006 RESETTING INTERNAL PROTECTION
ARKANA	IPC	IPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Other Configuration	VPO01 WRITE VIN
ARKANA	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
ARKANA	SCENE RECORDER	SCENE RECORDER	Read Fault Code	
ARKANA	SCENE RECORDER	SCENE RECORDER	Erase Fault Code	
ARKANA	SCENE RECORDER	SCENE RECORDER	Read ECU Information	
ARKANA	SCENE RECORDER	SCENE RECORDER	Actuation Test	
ARKANA	SCENE RECORDER	SCENE RECORDER	Other Configuration	VPO02 WRITE VIN
ARKANA	SCENE RECORDER	SCENE RECORDER	Erase	RZ002 COMPUTER RESET
ARKANA	RADIO	RADIO	Read Fault Code	
ARKANA	RADIO	RADIO	Erase Fault Code	
ARKANA	RADIO	RADIO	Read ECU Information	
ARKANA	RADIO	RADIO	Live Data	
ARKANA	RADIO	RADIO	Function Test	
ARKANA	RADIO	RADIO	Read Configuration	
ARKANA	RADIO	RADIO	Actuation Test	
ARKANA	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
ARKANA	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
ARKANA	RADIO	RADIO	Other Configuration	VPO01 WRITE VIN
ARKANA	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
ARKANA	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ARKANA	AMPLIFIER	AMPLIFIER	Read Fault Code	
ARKANA	AMPLIFIER	AMPLIFIER	Erase Fault Code	
ARKANA	AMPLIFIER	AMPLIFIER	Read ECU Information	
ARKANA	AMPLIFIER	AMPLIFIER	Live Data	
ARKANA	AMPLIFIER	AMPLIFIER	Function Test	
ARKANA	AMPLIFIER	AMPLIFIER	Actuation Test	
ARKANA	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
ARKANA	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF028 TESTING CARD PRESENTED
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO01 WRITE VIN
ARKANA	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase	RZ002 AFTER SALES CODE
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
ARKANA	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
ARKANA	UCH	UCH	Read Fault Code	
ARKANA	UCH	UCH	Erase Fault Code	
ARKANA	UCH	UCH	Read ECU Information	
ARKANA	UCH	UCH	Live Data	
ARKANA	UCH	UCH	Function Test	
ARKANA	UCH	UCH	Read Configuration	
ARKANA	UCH	UCH	Actuation Test	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF255 LANGUAGE VERSION
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO02 WRITE VIN
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO52 ODOMETER IN KM
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO53 ODOMETER IN MILES
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO02 WRITE VIN
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO52 ODOMETER IN KM
TRIBER	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO53 ODOMETER IN MILES
TRIBER	UCH	UCH	Read Fault Code	
TRIBER	UCH	UCH	Erase Fault Code	
TRIBER	UCH	UCH	Read ECU Information	
TRIBER	UCH	UCH	Live Data	
TRIBER	UCH	UCH	Function Test	
TRIBER	UCH	UCH	Read Configuration	
TRIBER	UCH	UCH	Actuation Test	
TRIBER	UCH	UCH	Write Configuration	CF024 HAZARD WARNING LIGHTS ILLUMINATION BY ABS
TRIBER	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TRIBER	UCH	UCH	Write Configuration	CF229 ALARM
TRIBER	UCH	UCH	Write Configuration	CF294 REMOTE ENGINE STARTING
TRIBER	UCH	UCH	Write Configuration	CF299 ACCESS/STARTER TYPE
TRIBER	UCH	UCH	Write Configuration	CF314 STOP AND START FUNCTION
TRIBER	UCH	UCH	Write Configuration	CF316 AUTOMATIC REAR WIPER FUNCTION
TRIBER	UCH	UCH	Other Configuration	VPO01 WRITE V. I. N.
TRIBER	UCH	UCH	Erase	RZ013 HIGH PRESSURE PUMP COUNTER
TRIBER	UCH	UCH	Erase	RZ014 NUMBER OF STARTING CYCLES
TRIBER	UCH	UCH	Erase	RZ018 HIGH PRESSURE PUMP COUNTER
TRIBER	UCH	UCH	Erase	RZ017 NUMBER OF STARTING CYCLES
TRIBER	UCH	UCH	Erase	RZ016 STOP AND START FUNCTION
TRIBER	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TRIBER	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TRIBER	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TRIBER	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TRIBER	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
TRIBER	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
CAPTUR II	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
CAPTUR II	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
CAPTUR II	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
CAPTUR II	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
CAPTUR II	INJECTION	EMS 3140 INJECTION	Read Fault Code	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Read ECU Information	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Live Data	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Function Test	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Read Configuration	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Actuation Test	
CAPTUR II	INJECTION	EMS 3140 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CAPTUR II	INJECTION	EMS 3140 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR II	INJECTION	EMS 3140 INJECTION	Other Configuration	VP010 WRITE V.I.N.
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ039 CAMSHAFT SENSOR PROGRAMMING
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ062 PROPORTIONAL RICHNESS SENSOR PROGRAMMING
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ061 FLYWHEEL TARGET PROGRAMMING
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ042 IGNITION COIL ADAPTIVE
CAPTUR II	INJECTION	EMS 3140 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR II	INJECTION	EMS 3140 INJECTION	Configuration	SC001 WRITE SAVED DATA
CAPTUR II	INJECTION	EMS 3140 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
CAPTUR II	INJECTION	EMS 3140 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR II	INJECTION	EMS 3140 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR II	INJECTION	EMS 3140 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR II	INJECTION	EMS 3140 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR II	INJECTION	INJECTION	Read Fault Code	
CAPTUR II	INJECTION	INJECTION	Erase Fault Code	
CAPTUR II	INJECTION	INJECTION	Read ECU Information	
CAPTUR II	INJECTION	INJECTION	Live Data	
CAPTUR II	INJECTION	INJECTION	Function Test	
CAPTUR II	INJECTION	INJECTION	Actuation Test	
CAPTUR II	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR II	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR II	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR II	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR II	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
CAPTUR II	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
CAPTUR II	INJECTION	INJECTION	Read Fault Code	
CAPTUR II	INJECTION	INJECTION	Erase Fault Code	
CAPTUR II	INJECTION	INJECTION	Read ECU Information	
CAPTUR II	INJECTION	INJECTION	Live Data	
CAPTUR II	INJECTION	INJECTION	Function Test	
CAPTUR II	INJECTION	INJECTION	Actuation Test	
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
CAPTUR II	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR II	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
CAPTUR II	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
CAPTUR II	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
CAPTUR II	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
CAPTUR II	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
CAPTUR II	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Read Fault Code	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Read ECU Information	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Live Data	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Function Test	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Read Configuration	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Actuation Test	
CAPTUR II	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
CAPTUR II	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
CAPTUR II	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
CAPTUR II	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
CAPTUR II	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
CAPTUR II	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
CAPTUR II	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
CAPTUR II	ABS	ABS	Read Fault Code	
CAPTUR II	ABS	ABS	Erase Fault Code	
CAPTUR II	ABS	ABS	Read ECU Information	
CAPTUR II	ABS	ABS	Live Data	
CAPTUR II	ABS	ABS	Function Test	
CAPTUR II	ABS	ABS	Read Configuration	
CAPTUR II	ABS	ABS	Actuation Test	
CAPTUR II	ABS	ABS	Write Configuration	CF012 HILL START
CAPTUR II	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
CAPTUR II	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
CAPTUR II	ABS	ABS	Other Configuration	VP001 WRITE VIN
CAPTUR II	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
CAPTUR II	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
CAPTUR II	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
CAPTUR II	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
CAPTUR II	ABS	ABS	Other Configuration	VP060 ACCELEROMETER
CAPTUR II	ABS	ABS	Erase	RZ012 RESET
CAPTUR II	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR



### Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR II	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR II	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR II	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR II	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
CAPTUR II	UCH	UCH	Read Fault Code	
CAPTUR II	UCH	UCH	Erase Fault Code	
CAPTUR II	UCH	UCH	Read ECU Information	
CAPTUR II	UCH	UCH	Live Data	
CAPTUR II	UCH	UCH	Function Test	
CAPTUR II	UCH	UCH	Read Configuration	
CAPTUR II	UCH	UCH	Actuation Test	
CAPTUR II	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR II	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
CAPTUR II	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
CAPTUR II	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
CAPTUR II	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
CAPTUR II	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
CAPTUR II	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
CAPTUR II	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
CAPTUR II	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR II	FRONT RADAR	FRONT RADAR	Read Fault Code	
CAPTUR II	FRONT RADAR	FRONT RADAR	Erase Fault Code	
CAPTUR II	FRONT RADAR	FRONT RADAR	Read ECU Information	
CAPTUR II	FRONT RADAR	FRONT RADAR	Live Data	
CAPTUR II	FRONT RADAR	FRONT RADAR	Function Test	
CAPTUR II	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
CAPTUR II	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Function Test	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP006 AIR RECIRCULATION FLAP MOTOR
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL ZONE
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Function Test	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL ZONE
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP006 AIR RECIRCULATION FLAP MOTOR
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR II	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Function Test	
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
CAPTUR II	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
CAPTUR II	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Live Data	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Function Test	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Read Configuration	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Actuation Test	
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
CAPTUR II	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
CAPTUR II	SUPERVISOR or CDC	SUPERVISOR or CDC	Read Fault Code	
CAPTUR II	SUPERVISOR or CDC	SUPERVISOR or CDC	Erase Fault Code	
CAPTUR II	SUPERVISOR or CDC	SUPERVISOR or CDC	Read ECU Information	
CAPTUR II	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
CAPTUR II	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Function Test	
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VPO01 WRITE VIN
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
CAPTUR II	VARIABLE P.A.S.	VARIABLE P.A.S.	Other Configuration	VPO12 COMPUTER RESET
CAPTUR II	UPC	UPC	Read Fault Code	
CAPTUR II	UPC	UPC	Erase Fault Code	
CAPTUR II	UPC	UPC	Read ECU Information	
CAPTUR II	UPC	UPC	Live Data	
CAPTUR II	UPC	UPC	Function Test	
CAPTUR II	UPC	UPC	Actuation Test	
CAPTUR II	UPC	UPC	Other Configuration	VPO03 WRITE VIN
CAPTUR II	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
CAPTUR II	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
CAPTUR II	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR II	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
CAPTUR II	UPC	UPC	Read Fault Code	
CAPTUR II	UPC	UPC	Erase Fault Code	
CAPTUR II	UPC	UPC	Read ECU Information	
CAPTUR II	UPC	UPC	Live Data	
CAPTUR II	UPC	UPC	Function Test	
CAPTUR II	UPC	UPC	Actuation Test	
CAPTUR II	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
CAPTUR II	UPC	UPC	Other Configuration	VPO03 WRITE VIN
CAPTUR II	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
CAPTUR II	UPC	UPC	Other Configuration	VPO32 LITHIUM BATTERY
CAPTUR II	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR II	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
CAPTUR II	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
CAPTUR II	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
CAPTUR II	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
CAPTUR II	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
CAPTUR II	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Function Test	
CAPTUR II	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase	RZ002 COMPUTER RESET
CAPTUR II	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
CAPTUR II	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
CAPTUR II	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
CAPTUR II	CHECK CHASSIS	CHECK CHASSIS	Live Data	
CAPTUR II	CHECK CHASSIS	CHECK CHASSIS	Function Test	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
CAPTUR II	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
CAPTUR II	PARKING PROX CAN	PARKING AID	Read Fault Code	
CAPTUR II	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CAPTUR II	PARKING PROX CAN	PARKING AID	Read ECU Information	
CAPTUR II	PARKING PROX CAN	PARKING AID	Live Data	
CAPTUR II	PARKING PROX CAN	PARKING AID	Function Test	
CAPTUR II	PARKING PROX CAN	PARKING AID	Read Configuration	
CAPTUR II	PARKING PROX CAN	PARKING AID	Actuation Test	
CAPTUR II	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CAPTUR II	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
CAPTUR II	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
CAPTUR II	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
CAPTUR II	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CAPTUR II	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
CAPTUR II	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
CAPTUR II	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
CAPTUR II	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
CAPTUR II	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
CAPTUR II	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
CAPTUR II	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
CAPTUR II	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read Fault Code	
CAPTUR II	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Erase Fault Code	
CAPTUR II	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read ECU Information	
CAPTUR II	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Live Data	
CAPTUR II	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Function Test	
CAPTUR II	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
CAPTUR II	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
CAPTUR II	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
CAPTUR II	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
CAPTUR II	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
CAPTUR II	SEALED FUEL TANK	SEALED FUEL TANK	Read Fault Code	
CAPTUR II	SEALED FUEL TANK	SEALED FUEL TANK	Erase Fault Code	
CAPTUR II	SEALED FUEL TANK	SEALED FUEL TANK	Read ECU Information	
CAPTUR II	SEALED FUEL TANK	SEALED FUEL TANK	Live Data	
CAPTUR II	SEALED FUEL TANK	SEALED FUEL TANK	Function Test	
CAPTUR II	BRAKE BOOSTER	BRAKE BOOSTER	Read Fault Code	
CAPTUR II	BRAKE BOOSTER	BRAKE BOOSTER	Erase Fault Code	
CAPTUR II	BRAKE BOOSTER	BRAKE BOOSTER	Read ECU Information	
CAPTUR II	BRAKE BOOSTER	BRAKE BOOSTER	Live Data	
CAPTUR II	BRAKE BOOSTER	BRAKE BOOSTER	Function Test	
CAPTUR II	BRAKE BOOSTER	BRAKE BOOSTER	Erase	RZ002 COMPUTER RESET
CAPTUR II	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read Fault Code	
CAPTUR II	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Erase Fault Code	
CAPTUR II	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read ECU Information	
CAPTUR II	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Live Data	
CAPTUR II	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Function Test	
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read Fault Code	
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Erase Fault Code	
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read ECU Information	
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Live Data	
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Function Test	
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Other Configuration	VPO02 ROTOR POSITION SENSOR LEARNING
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Other Configuration	VPO04 ROTOR WINDING RESISTANCE LEARNING
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Configuration	SC001 SAVE COMPUTER DATA
CAPTUR II	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Configuration	SC002 WRITE SAVED DATA
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Live Data	
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Function Test	
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Other Configuration	VPO01 WRITE VIN
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Other Configuration	VPO02 WRITE VIN
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
CAPTUR II	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read Fault Code	
CAPTUR II	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Erase Fault Code	
CAPTUR II	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read ECU Information	
CAPTUR II	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Actuation Test	
CAPTUR II	RADIO	RADIO	Read Fault Code	
CAPTUR II	RADIO	RADIO	Erase Fault Code	
CAPTUR II	RADIO	RADIO	Read ECU Information	
CAPTUR II	RADIO	RADIO	Live Data	
CAPTUR II	RADIO	RADIO	Function Test	
CAPTUR II	RADIO	RADIO	Read Configuration	
CAPTUR II	RADIO	RADIO	Actuation Test	
CAPTUR II	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR II	RADIO	RADIO	Other Configuration	CF016 COUNTRY MODEL
CAPTUR II	RADIO	RADIO	Configuration	VPO01 WRITE VIN
CAPTUR II	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
CAPTUR II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Other Configuration	VPO02 WRITE VIN
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO57 ADBLUE MODULE ELECTRICAL CHECK
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO50 ADBLUE FIRST FILLING TEST
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO51 ADBLUE EMPTYING TEST
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO56 ADBLUE INJECTOR SOUND TEST
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO55 ADBLUE INJECTOR RELEASE TEST
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO12 WRITE VIN
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO52 FLOW RATE FUNCTION
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VPO58 OVERALL RESULT
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
CAPTUR II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VPO01 WRITE VIN
CAPTUR II	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
CAPTUR II	AMPLIFIER	AMPLIFIER	Read Fault Code	
CAPTUR II	AMPLIFIER	AMPLIFIER	Erase Fault Code	
CAPTUR II	AMPLIFIER	AMPLIFIER	Read ECU Information	
CAPTUR II	AMPLIFIER	AMPLIFIER	Live Data	
CAPTUR II	AMPLIFIER	AMPLIFIER	Function Test	
CAPTUR II	AMPLIFIER	AMPLIFIER	Actuation Test	
CAPTUR II	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
CAPTUR II	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
CAPTUR II	BCB	BCB	Read Fault Code	
CAPTUR II	BCB	BCB	Erase Fault Code	
CAPTUR II	BCB	BCB	Read ECU Information	
CAPTUR II	BCB	BCB	Live Data	
CAPTUR II	BCB	BCB	Function Test	
CAPTUR II	BMS	BMS	Read Fault Code	
CAPTUR II	BMS	BMS	Erase Fault Code	
CAPTUR II	BMS	BMS	Read ECU Information	
CAPTUR II	BMS	BMS	Live Data	
CAPTUR II	BMS	BMS	Function Test	
CAPTUR II	BMS	BMS	Configuration	SC002 SAVE COMPUTER DATA
CAPTUR II	BMS	BMS	Configuration	SC003 WRITE SAVED DATA
CAPTUR II	EVC	EVC	Read Fault Code	
CAPTUR II	EVC	EVC	Erase Fault Code	
CAPTUR II	EVC	EVC	Read ECU Information	
CAPTUR II	EVC	EVC	Live Data	
CAPTUR II	EVC	EVC	Function Test	
CAPTUR II	EVC	EVC	Read Configuration	
CAPTUR II	EVC	EVC	Actuation Test	
CAPTUR II	EVC	EVC	Write Configuration	CF005 MAINTENANCE MODE
CAPTUR II	EVC	EVC	Other Configuration	VPO68 GEAR LEVER
CAPTUR II	EVC	EVC	Other Configuration	VPO81 LOCBOXX LEARNING
CAPTUR II	EVC	EVC	Other Configuration	VPO70 ELEC TRACTION COOLING CIRCUIT DEGASSING
CAPTUR II	EVC	EVC	Other Configuration	VPO03 WRITE V.I.N.
CAPTUR II	EVC	EVC	Other Configuration	VPO80 FUEL SUPPLY PREVENTION
CAPTUR II	BMS SAFETY	BMS SAFETY	Read Fault Code	
CAPTUR II	BMS SAFETY	BMS SAFETY	Erase Fault Code	
CAPTUR II	BMS SAFETY	BMS SAFETY	Read ECU Information	
CAPTUR II	BMS SAFETY	BMS SAFETY	Live Data	
CAPTUR II	BMS SAFETY	BMS SAFETY	Function Test	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V.I.N.
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR II	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR II	UCH	UCH	Read Fault Code	
CAPTUR II	UCH	UCH	Erase Fault Code	
CAPTUR II	UCH	UCH	Read ECU Information	
CAPTUR II	UCH	UCH	Live Data	
CAPTUR II	UCH	UCH	Function Test	
CAPTUR II	UCH	UCH	Read Configuration	
CAPTUR II	UCH	UCH	Actuation Test	
CAPTUR II	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
CAPTUR II	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
CAPTUR II	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
CAPTUR II	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
CAPTUR II	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Function Test	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Configuration	
CAPTUR II	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Configuration	
CAPTUR II	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
CAPTUR II	BMS 12V	BMS 12V	Read Fault Code	
CAPTUR II	BMS 12V	BMS 12V	Erase Fault Code	
CAPTUR II	BMS 12V	BMS 12V	Read ECU Information	
CAPTUR II	BMS 12V	BMS 12V	Live Data	
CAPTUR II	BMS 12V	BMS 12V	Function Test	
CAPTUR II	BSG	BSG	Read Fault Code	
CAPTUR II	BSG	BSG	Erase Fault Code	
CAPTUR II	BSG	BSG	Read ECU Information	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR II	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR II CN	ABS	ABS	Read Fault Code	
CAPTUR II CN	ABS	ABS	Erase Fault Code	
CAPTUR II CN	ABS	ABS	Read ECU Information	
CAPTUR II CN	ABS	ABS	Live Data	
CAPTUR II CN	ABS	ABS	Function Test	
CAPTUR II CN	ABS	ABS	Read Configuration	
CAPTUR II CN	ABS	ABS	Actuation Test	
CAPTUR II CN	ABS	ABS	Write Configuration	CF012 HILL START
CAPTUR II CN	ABS	ABS	Other Configuration	VPO07 SPEEDO INDEX
CAPTUR II CN	ABS	ABS	Other Configuration	VPO03 STEERING WHEEL ANGLE SENSOR
CAPTUR II CN	ABS	ABS	Other Configuration	VPO01 WRITE VIN
CAPTUR II CN	ABS	ABS	Other Configuration	VPO38 LONGITUDINAL ACCELERATION SENSOR
CAPTUR II CN	ABS	ABS	Other Configuration	VPO25 TRANSVERSE ACCELERATION SENSOR
CAPTUR II CN	ABS	ABS	Other Configuration	VPO55 DEACTIVATE MAINTENANCE MODE
CAPTUR II CN	ABS	ABS	Other Configuration	VPO54 ACTIVATE MAINTENANCE MODE
CAPTUR II CN	ABS	ABS	Other Configuration	VPO60 ACCELEROMETER
CAPTUR II CN	ABS	ABS	Erase	RZ012 RESET
CAPTUR II CN	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
CAPTUR II CN	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
CAPTUR II CN	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
CAPTUR II CN	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
CAPTUR II CN	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
CAPTUR II CN	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	CF137 WRITE VIN
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO52 ODOMETER IN KM
CAPTUR II CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO53 ODOMETER IN MILES
CAPTUR II CN	UCH	UCH	Read Fault Code	
CAPTUR II CN	UCH	UCH	Erase Fault Code	
CAPTUR II CN	UCH	UCH	Read ECU Information	
CAPTUR II CN	UCH	UCH	Live Data	
CAPTUR II CN	UCH	UCH	Function Test	
CAPTUR II CN	UCH	UCH	Read Configuration	
CAPTUR II CN	UCH	UCH	Actuation Test	
CAPTUR II CN	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
CAPTUR II CN	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
CAPTUR II CN	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
CAPTUR II CN	UCH	UCH	Other Configuration	VPO01 WRITE V.I.N.
CAPTUR II CN	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
CAPTUR II CN	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
CAPTUR II CN	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
CAPTUR II CN	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO06 LOCK COMPUTER
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO10 WRITE VIN
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO07 UNLOCK COMPUTER
CAPTUR II CN	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Read Fault Code	
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Erase Fault Code	
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Read ECU Information	
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Function Test	
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Other Configuration	VPO02 WRITE VIN
CAPTUR II CN	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Function Test	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO06 AIR RECIRCULATION FLAP MOTOR
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO05 GEOGRAPHICAL ZONE
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Live Data	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Function Test	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO05 GEOGRAPHICAL ZONE
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO06 AIR RECIRCULATION FLAP MOTOR
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
CAPTUR II CN	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
CAPTUR II CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Live Data	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Function Test	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Read Configuration	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Actuation Test	
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO18 DEACTIVATE MAINTENANCE MODE
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO04 WRITE VIN
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO20 ACCELEROMETER
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO17 ACTIVATE MAINTENANCE MODE
CAPTUR II CN	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO01 WRITE VIN
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
CAPTUR II CN	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO12 COMPUTER RESET
CAPTUR II CN	UPC	UPC	Read Fault Code	
CAPTUR II CN	UPC	UPC	Erase Fault Code	
CAPTUR II CN	UPC	UPC	Read ECU Information	
CAPTUR II CN	UPC	UPC	Live Data	
CAPTUR II CN	UPC	UPC	Function Test	
CAPTUR II CN	UPC	UPC	Actuation Test	
CAPTUR II CN	UPC	UPC	Other Configuration	VPO03 WRITE VIN
CAPTUR II CN	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
CAPTUR II CN	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
CAPTUR II CN	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
CAPTUR II CN	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
CAPTUR II CN	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
CAPTUR II CN	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
CAPTUR II CN	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
CAPTUR II CN	CHECK CHASSIS	CHECK CHASSIS	Live Data	
CAPTUR II CN	CHECK CHASSIS	CHECK CHASSIS	Function Test	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
CAPTUR II CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Read Fault Code	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Read ECU Information	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Live Data	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Function Test	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Read Configuration	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Actuation Test	
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
CAPTUR II CN	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
CAPTUR II CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
CAPTUR II CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
CAPTUR II CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
CAPTUR II CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
CAPTUR II CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
CAPTUR II CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
CAPTUR II CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
CAPTUR II CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
CAPTUR II CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
CAPTUR II CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Live Data	
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Function Test	
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Other Configuration	VPO01 WRITE VIN
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTMENT

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
CAPTUR II CN	RADIO	RADIO	Read Fault Code	
CAPTUR II CN	RADIO	RADIO	Erase Fault Code	
CAPTUR II CN	RADIO	RADIO	Read ECU Information	
CAPTUR II CN	RADIO	RADIO	Live Data	
CAPTUR II CN	RADIO	RADIO	Function Test	
CAPTUR II CN	RADIO	RADIO	Read Configuration	
CAPTUR II CN	RADIO	RADIO	Actuation Test	
CAPTUR II CN	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
CAPTUR II CN	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
CAPTUR II CN	RADIO	RADIO	Other Configuration	VP001 WRITE VIN
CAPTUR II CN	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
CAPTUR II CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
CAPTUR II CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V.I.N.
CAPTUR II CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
CAPTUR II CN	UCH	UCH	Read Fault Code	
CAPTUR II CN	UCH	UCH	Erase Fault Code	
CAPTUR II CN	UCH	UCH	Read ECU Information	
CAPTUR II CN	UCH	UCH	Live Data	
CAPTUR II CN	UCH	UCH	Function Test	
CAPTUR II CN	UCH	UCH	Read Configuration	
CAPTUR II CN	UCH	UCH	Actuation Test	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Live Data	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Function Test	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Read Configuration	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Actuation Test	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV ph2	INJECTION	INJECTION	Read Fault Code	
MEGANE IV ph2	INJECTION	INJECTION	Erase Fault Code	
MEGANE IV ph2	INJECTION	INJECTION	Read ECU Information	
MEGANE IV ph2	INJECTION	INJECTION	Live Data	
MEGANE IV ph2	INJECTION	INJECTION	Function Test	
MEGANE IV ph2	INJECTION	INJECTION	Actuation Test	
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
MEGANE IV ph2	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV ph2	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
MEGANE IV ph2	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Live Data	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Function Test	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Read Configuration	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Actuation Test	
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 Adblue SYSTEM PERFORMANCE
MEGANE IV ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
MEGANE IV ph2	INJECTION	INJECTION	Read Fault Code	
MEGANE IV ph2	INJECTION	INJECTION	Erase Fault Code	
MEGANE IV ph2	INJECTION	INJECTION	Read ECU Information	
MEGANE IV ph2	INJECTION	INJECTION	Live Data	
MEGANE IV ph2	INJECTION	INJECTION	Function Test	
MEGANE IV ph2	INJECTION	INJECTION	Actuation Test	
MEGANE IV ph2	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV ph2	INJECTION	INJECTION	Other Configuration	VP040 PARTICLE FILTER REGENERATION
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ091 WASTE GATE REGULATION
MEGANE IV ph2	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
MEGANE IV ph2	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
MEGANE IV ph2	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
MEGANE IV ph2	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Read Fault Code	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Read ECU Information	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Live Data	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Function Test	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Read Configuration	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Actuation Test	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALIZATION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
MEGANE IV ph2	ABS	ABS	Read Fault Code	
MEGANE IV ph2	ABS	ABS	Erase Fault Code	
MEGANE IV ph2	ABS	ABS	Read ECU Information	
MEGANE IV ph2	ABS	ABS	Live Data	
MEGANE IV ph2	ABS	ABS	Function Test	
MEGANE IV ph2	ABS	ABS	Read Configuration	
MEGANE IV ph2	ABS	ABS	Actuation Test	
MEGANE IV ph2	ABS	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
MEGANE IV ph2	ABS	ABS	Write Configuration	CF012 HILL START
MEGANE IV ph2	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
MEGANE IV ph2	ABS	ABS	Other Configuration	VP001 WRITE VIN
MEGANE IV ph2	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
MEGANE IV ph2	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
MEGANE IV ph2	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
MEGANE IV ph2	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
MEGANE IV ph2	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
MEGANE IV ph2	ABS	ABS	Other Configuration	VP080 ACCELEROMETER
MEGANE IV ph2	ABS	ABS	Erase	RZ012 RESET
MEGANE IV ph2	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
MEGANE IV ph2	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
MEGANE IV ph2	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
MEGANE IV ph2	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
MEGANE IV ph2	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
MEGANE IV ph2	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
MEGANE IV ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
MEGANE IV ph2	UCH	UCH	Read Fault Code	
MEGANE IV ph2	UCH	UCH	Erase Fault Code	
MEGANE IV ph2	UCH	UCH	Read ECU Information	
MEGANE IV ph2	UCH	UCH	Live Data	
MEGANE IV ph2	UCH	UCH	Function Test	
MEGANE IV ph2	UCH	UCH	Read Configuration	
MEGANE IV ph2	UCH	UCH	Actuation Test	
MEGANE IV ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
MEGANE IV ph2	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
MEGANE IV ph2	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
MEGANE IV ph2	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
MEGANE IV ph2	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
MEGANE IV ph2	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
MEGANE IV ph2	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
MEGANE IV ph2	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
MEGANE IV ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Read Fault Code	
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Erase Fault Code	
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Read ECU Information	
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Live Data	
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Function Test	
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
MEGANE IV ph2	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Function Test	
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP001 WRITE VIN
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VP005 GEOGRAPHICAL ZONE
MEGANE IV ph2	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Function Test	
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VP030 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
MEGANE IV ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VP002 WRITE VIN
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
MEGANE IV ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Live Data	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Function Test	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Read Configuration	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Actuation Test	
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP018 DEACTIVATE MAINTENANCE MODE
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP004 WRITE VIN
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP020 ACCELEROMETER
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Other Configuration	VP017 ACTIVATE MAINTENANCE MODE
MEGANE IV ph2	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
MEGANE IV ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
MEGANE IV ph2	IPC	IPC	Read Fault Code	
MEGANE IV ph2	IPC	IPC	Erase Fault Code	
MEGANE IV ph2	IPC	IPC	Read ECU Information	
MEGANE IV ph2	IPC	IPC	Live Data	
MEGANE IV ph2	IPC	IPC	Function Test	
MEGANE IV ph2	IPC	IPC	Actuation Test	
MEGANE IV ph2	IPC	IPC	Other Configuration	VP003 WRITE VIN
MEGANE IV ph2	IPC	IPC	Other Configuration	VP007 COMPUTER INITIALISATION
MEGANE IV ph2	IPC	IPC	Other Configuration	VP026 CONTROL HEADLIGHT MOTORS
MEGANE IV ph2	IPC	IPC	Configuration	SC007 SAVE COMPUTER DATA



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV ph2	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANE IV ph2	UPC	UPC	Read Fault Code	
MEGANE IV ph2	UPC	UPC	Erase Fault Code	
MEGANE IV ph2	UPC	UPC	Read ECU Information	
MEGANE IV ph2	UPC	UPC	Live Data	
MEGANE IV ph2	UPC	UPC	Function Test	
MEGANE IV ph2	UPC	UPC	Actuation Test	
MEGANE IV ph2	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
MEGANE IV ph2	UPC	UPC	Other Configuration	VPO03 WRITE VIN
MEGANE IV ph2	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
MEGANE IV ph2	UPC	UPC	Other Configuration	VPO32 LITHIUM BATTERY
MEGANE IV ph2	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
MEGANE IV ph2	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
MEGANE IV ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
MEGANE IV ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
MEGANE IV ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
MEGANE IV ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
MEGANE IV ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VPO01 WRITE V. I. N.
MEGANE IV ph2	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
MEGANE IV ph2	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
MEGANE IV ph2	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
MEGANE IV ph2	CHECK CHASSIS	CHECK CHASSIS	Live Data	
MEGANE IV ph2	CHECK CHASSIS	CHECK CHASSIS	Function Test	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
MEGANE IV ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Read Fault Code	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Erase Fault Code	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Read ECU Information	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Live Data	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Function Test	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Read Configuration	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Actuation Test	
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
MEGANE IV ph2	PARKING PROX CAN	PARKING AID	Configuration	SC002 SENSOR CONFIGURATION
MEGANE IV ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
MEGANE IV ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
MEGANE IV ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
MEGANE IV ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
MEGANE IV ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
MEGANE IV ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
MEGANE IV ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
MEGANE IV ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
MEGANE IV ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
MEGANE IV ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
MEGANE IV ph2	BRAKE BOOSTER	BRAKE BOOSTER	Read Fault Code	
MEGANE IV ph2	BRAKE BOOSTER	BRAKE BOOSTER	Erase Fault Code	
MEGANE IV ph2	BRAKE BOOSTER	BRAKE BOOSTER	Read ECU Information	
MEGANE IV ph2	BRAKE BOOSTER	BRAKE BOOSTER	Live Data	
MEGANE IV ph2	BRAKE BOOSTER	BRAKE BOOSTER	Function Test	
MEGANE IV ph2	BRAKE BOOSTER	BRAKE BOOSTER	Erase	RZ002 COMPUTER RESET
MEGANE IV ph2	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read Fault Code	
MEGANE IV ph2	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Erase Fault Code	
MEGANE IV ph2	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read ECU Information	
MEGANE IV ph2	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Live Data	
MEGANE IV ph2	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Function Test	
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read Fault Code	
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Erase Fault Code	
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read ECU Information	
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Live Data	
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Function Test	
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Other Configuration	VPO02 ROTOR POSITION SENSOR LEARNING
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Other Configuration	VPO04 ROTOR WINDING RESISTANCE LEARNING
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Configuration	SC001 SAVE COMPUTER DATA
MEGANE IV ph2	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Configuration	SC002 WRITE SAVED DATA
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Function Test	
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO09 REAR SLIDE LEARNING
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO08 FRONT SLIDE LEARNING
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO10 LUMBAR LEARNING
MEGANE IV ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO03 WRITE VIN
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Read Fault Code	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Erase Fault Code	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Read ECU Information	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Live Data	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Function Test	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Actuation Test	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Read Fault Code	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Erase Fault Code	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Read ECU Information	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Live Data	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Function Test	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Actuation Test	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Read Fault Code	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Erase Fault Code	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Read ECU Information	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Live Data	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Function Test	
MEGANE IV ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Actuation Test	
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Live Data	
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Function Test	
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Other Configuration	VPO01 WRITE VIN
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Other Configuration	VP002 WRITE VIN
MEGANE IV ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
MEGANE IV ph2	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read Fault Code	
MEGANE IV ph2	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Erase Fault Code	
MEGANE IV ph2	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read ECU Information	
MEGANE IV ph2	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Actuation Test	
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
MEGANE IV ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Other Configuration	VP002 WRITE VIN
MEGANE IV ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	SC001 RESET OF THE HEATING COUNTER ACTIVE TIME
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PRESSURE LINE ADBLUE HEATER
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
MEGANE IV ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Function Test	
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
MEGANE IV ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
MEGANE IV ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Read Fault Code	
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Erase Fault Code	
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Read ECU Information	
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Live Data	
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Function Test	
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Actuation Test	
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
MEGANE IV ph2	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
MEGANE IV ph2	BCB	BCB	Read Fault Code	
MEGANE IV ph2	BCB	BCB	Erase Fault Code	
MEGANE IV ph2	BCB	BCB	Read ECU Information	
MEGANE IV ph2	BCB	BCB	Live Data	
MEGANE IV ph2	BCB	BCB	Function Test	
MEGANE IV ph2	BMS	BMS	Read Fault Code	
MEGANE IV ph2	BMS	BMS	Erase Fault Code	
MEGANE IV ph2	BMS	BMS	Read ECU Information	
MEGANE IV ph2	BMS	BMS	Live Data	
MEGANE IV ph2	BMS	BMS	Function Test	
MEGANE IV ph2	BMS	BMS	Configuration	SC002 SAVE COMPUTER DATA
MEGANE IV ph2	BMS	BMS	Configuration	SC003 WRITE SAVED DATA
MEGANE IV ph2	EVC	EVC	Read Fault Code	
MEGANE IV ph2	EVC	EVC	Erase Fault Code	
MEGANE IV ph2	EVC	EVC	Read ECU Information	
MEGANE IV ph2	EVC	EVC	Live Data	
MEGANE IV ph2	EVC	EVC	Function Test	
MEGANE IV ph2	EVC	EVC	Read Configuration	
MEGANE IV ph2	EVC	EVC	Actuation Test	
MEGANE IV ph2	EVC	EVC	Write Configuration	CF005 MAINTENANCE MODE
MEGANE IV ph2	EVC	EVC	Other Configuration	VP068 GEAR LEVER
MEGANE IV ph2	EVC	EVC	Other Configuration	VP081 LOCOBOB LEARNING
MEGANE IV ph2	EVC	EVC	Other Configuration	VP070 ELEC TRACTION COOLING CIRCUIT DEGASSING
MEGANE IV ph2	EVC	EVC	Other Configuration	VP080 FUEL SUPPLY PREVENTION
MEGANE IV ph2	BMS SAFETY	BMS SAFETY	Read Fault Code	
MEGANE IV ph2	BMS SAFETY	BMS SAFETY	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV ph2	BMS SAFETY	BMS SAFETY	Read ECU Information	
MEGANE IV ph2	BMS SAFETY	BMS SAFETY	Live Data	
MEGANE IV ph2	BMS SAFETY	BMS SAFETY	Function Test	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V.I.N.
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Read Fault Code	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Read ECU Information	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Live Data	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Function Test	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Read Configuration	
MEGANE IV ph2	INJECTION	EMS 3160 INJECTION	Actuation Test	
MEGANE IV ph2	UCH	UCH	Read Fault Code	
MEGANE IV ph2	UCH	UCH	Erase Fault Code	
MEGANE IV ph2	UCH	UCH	Read ECU Information	
MEGANE IV ph2	UCH	UCH	Live Data	
MEGANE IV ph2	UCH	UCH	Function Test	
MEGANE IV ph2	UCH	UCH	Read Configuration	
MEGANE IV ph2	UCH	UCH	Actuation Test	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
MEGANE IV ph2	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Function Test	
MEGANE IV ph2	EMS 12V	EMS 12V	Read Fault Code	
MEGANE IV ph2	EMS 12V	EMS 12V	Erase Fault Code	
MEGANE IV ph2	EMS 12V	EMS 12V	Read ECU Information	
MEGANE IV ph2	EMS 12V	EMS 12V	Live Data	
MEGANE IV ph2	EMS 12V	EMS 12V	Function Test	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
MEGANE IV ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Live Data	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Function Test	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Read Configuration	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Actuation Test	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VPO10 WRITE V.I.N.
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VPO52 BOOST PRESSURE WASTEGATE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS) : DILUTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Live Data	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Function Test	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Read Configuration	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Actuation Test	
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VPO36 FUEL SUPPLY PREVENTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	VPO10 WRITE V.I.N.
ESPACE V ph2	INJECTION	MDG1 INJECTION	Other Configuration	RZ003 ENGINE ADAPTIVES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
ESPACE V ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Read Fault Code	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Read ECU Information	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Live Data	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Function Test	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Read Configuration	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Actuation Test	
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V. I. N.
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
ESPACE V ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
ESPACE V ph2	ABS	ABS	Read Fault Code	
ESPACE V ph2	ABS	ABS	Erase Fault Code	
ESPACE V ph2	ABS	ABS	Read ECU Information	
ESPACE V ph2	ABS	ABS	Live Data	
ESPACE V ph2	ABS	ABS	Function Test	
ESPACE V ph2	ABS	ABS	Read Configuration	
ESPACE V ph2	ABS	ABS	Actuation Test	
ESPACE V ph2	ABS	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
ESPACE V ph2	ABS	ABS	Write Configuration	CF012 HILL START
ESPACE V ph2	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
ESPACE V ph2	ABS	ABS	Other Configuration	VP001 WRITE VIN
ESPACE V ph2	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
ESPACE V ph2	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
ESPACE V ph2	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
ESPACE V ph2	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
ESPACE V ph2	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
ESPACE V ph2	ABS	ABS	Other Configuration	VP060 ACCELEROMETER
ESPACE V ph2	ABS	ABS	Erase	RZ012 RESET
ESPACE V ph2	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
ESPACE V ph2	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
ESPACE V ph2	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
ESPACE V ph2	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
ESPACE V ph2	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
ESPACE V ph2	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
ESPACE V ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
ESPACE V ph2	UCH	UCH	Read Fault Code	
ESPACE V ph2	UCH	UCH	Erase Fault Code	
ESPACE V ph2	UCH	UCH	Read ECU Information	
ESPACE V ph2	UCH	UCH	Live Data	
ESPACE V ph2	UCH	UCH	Function Test	
ESPACE V ph2	UCH	UCH	Read Configuration	
ESPACE V ph2	UCH	UCH	Actuation Test	
ESPACE V ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
ESPACE V ph2	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
ESPACE V ph2	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
ESPACE V ph2	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
ESPACE V ph2	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
ESPACE V ph2	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
ESPACE V ph2	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
ESPACE V ph2	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO07 UNLOCK COMPUTER
ESPACE V ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Read Fault Code	
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Erase Fault Code	
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Read ECU Information	
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Live Data	
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Function Test	
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Other Configuration	VPO02 WRITE VIN
ESPACE V ph2	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Function Test	
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VPO01 WRITE VIN
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Other Configuration	VPO05 GEOGRAPHICAL ZONE
ESPACE V ph2	AIR CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
ESPACE V ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
ESPACE V ph2	VARIABLE P.A.S.	VARIABLE P.A.S.	Read Fault Code	
ESPACE V ph2	VARIABLE P.A.S.	VARIABLE P.A.S.	Erase Fault Code	
ESPACE V ph2	VARIABLE P.A.S.	VARIABLE P.A.S.	Read ECU Information	
ESPACE V ph2	VARIABLE P.A.S.	VARIABLE P.A.S.	Live Data	
ESPACE V ph2	VARIABLE P.A.S.	VARIABLE P.A.S.	Function Test	
ESPACE V ph2	UPC	UPC	Read Fault Code	
ESPACE V ph2	UPC	UPC	Erase Fault Code	
ESPACE V ph2	UPC	UPC	Read ECU Information	
ESPACE V ph2	UPC	UPC	Live Data	
ESPACE V ph2	UPC	UPC	Function Test	
ESPACE V ph2	UPC	UPC	Actuation Test	
ESPACE V ph2	UPC	UPC	Other Configuration	VPO03 WRITE VIN
ESPACE V ph2	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
ESPACE V ph2	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
ESPACE V ph2	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
ESPACE V ph2	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
ESPACE V ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
ESPACE V ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
ESPACE V ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
ESPACE V ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
ESPACE V ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VPO01 WRITE V. I. N.
ESPACE V ph2	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
ESPACE V ph2	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
ESPACE V ph2	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
ESPACE V ph2	CHECK CHASSIS	CHECK CHASSIS	Live Data	
ESPACE V ph2	CHECK CHASSIS	CHECK CHASSIS	Function Test	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
ESPACE V ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Read Fault Code	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Erase Fault Code	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Read ECU Information	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Live Data	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Function Test	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Read Configuration	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Actuation Test	
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
ESPACE V ph2	PARKING PROX CAN	PARKING AID	Configuration	SC002 SENSOR CONFIGURATION
ESPACE V ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
ESPACE V ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
ESPACE V ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
ESPACE V ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
ESPACE V ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
ESPACE V ph2	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read Fault Code	
ESPACE V ph2	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Erase Fault Code	
ESPACE V ph2	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Read ECU Information	
ESPACE V ph2	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Live Data	
ESPACE V ph2	GEARBOX ELEC CONTROL	GEARBOX ELEC CONTROL	Function Test	
ESPACE V ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
ESPACE V ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
ESPACE V ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
ESPACE V ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
ESPACE V ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
ESPACE V ph2	PILOTED SUSPENSION	Electronically-managed suspension	Read Fault Code	
ESPACE V ph2	PILOTED SUSPENSION	Electronically-managed suspension	Erase Fault Code	
ESPACE V ph2	PILOTED SUSPENSION	Electronically-managed suspension	Read ECU Information	
ESPACE V ph2	PILOTED SUSPENSION	Electronically-managed suspension	Live Data	
ESPACE V ph2	PILOTED SUSPENSION	Electronically-managed suspension	Function Test	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Function Test	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO09 REAR SLIDE LEARNING
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO08 FRONT SLIDE LEARNING
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO10 LUMBAR LEARNING
ESPACE V ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO03 WRITE VIN
ESPACE V ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Read Fault Code	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Erase Fault Code	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Read ECU Information	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Live Data	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Function Test	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Actuation Test	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Read Fault Code	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Erase Fault Code	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Read ECU Information	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Live Data	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Function Test	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Actuation Test	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Read Fault Code	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Erase Fault Code	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Read ECU Information	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Live Data	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Function Test	
ESPACE V ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Actuation Test	
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Live Data	
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Function Test	
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Other Configuration	VPO01 WRITE VIN
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Other Configuration	VPO02 WRITE VIN
ESPACE V ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
ESPACE V ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Other Configuration	VPO02 WRITE VIN
ESPACE V ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ012 OVERALL QUANTITY OF ADBLUE INJECTED
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PRESSURE LINE ADBLUE HEATER
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
ESPACE V ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Function Test	
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO05 FRONT SLIDE LEARNING
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO06 REAR SLIDE LEARNING
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO07 LUMBAR LEARNING
ESPACE V ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO02 WRITE VIN
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Read Fault Code	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Erase Fault Code	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Read ECU Information	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Live Data	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Function Test	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Actuation Test	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Read Fault Code	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Erase Fault Code	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Read ECU Information	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Live Data	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Function Test	
ESPACE V ph2	RIGHT-HAND DOOR or COLLAPSTIBLE SEAT	COLLAPSTIBLE SEAT	Actuation Test	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VPO01 WRITE VIN
ESPACE V ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Read Fault Code	
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Erase Fault Code	
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Read ECU Information	
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Live Data	
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Function Test	
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Actuation Test	
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
ESPACE V ph2	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
ESPACE V ph2	UCH	UCH	Read Fault Code	
ESPACE V ph2	UCH	UCH	Erase Fault Code	
ESPACE V ph2	UCH	UCH	Read ECU Information	
ESPACE V ph2	UCH	UCH	Live Data	
ESPACE V ph2	UCH	UCH	Function Test	
ESPACE V ph2	UCH	UCH	Read Configuration	
ESPACE V ph2	UCH	UCH	Actuation Test	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
ESPACE V ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Live Data	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Function Test	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Read Configuration	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Actuation Test	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V. I. N.
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP052 BOOST PRESSURE WASTEGATE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP403 STATIC REGENERATION (IN WORKSHOP)
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ135 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ168 SCR OUTLET AMMONIA LEAK METER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ099 STOP AND START FUNCTION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ088 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ152 TURBOCHARGER FUNCTION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC071 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TALISMAN/SM6 ph2	INJECTION	INJECTION	Read Fault Code	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase Fault Code	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Read ECU Information	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Live Data	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Function Test	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Actuation Test	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
TALISMAN/SM6 ph2	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
TALISMAN/SM6 ph2	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
TALISMAN/SM6 ph2	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6 ph2	INJECTION	INJECTION	Read Fault Code	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase Fault Code	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Read ECU Information	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Live Data	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Function Test	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Actuation Test	
TALISMAN/SM6 ph2	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
TALISMAN/SM6 ph2	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
TALISMAN/SM6 ph2	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
TALISMAN/SM6 ph2	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Read Fault Code	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase Fault Code	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Read ECU Information	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Live Data	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Function Test	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Read Configuration	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Actuation Test	
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP344 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ077 INJECTION PUMP ADAPTIVES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ125 COMPUTER RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ012 EGR VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ067 LOW PRESSURE EGR VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ133 RAIL PRESSURE LIMITER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ126 CYLINDER PRESSURE SENSOR
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ044 AIR DAMPER VALVE PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ118 STARTING AUTHORIZATION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ066 EXHAUST FLAP LOW SETTING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ072 AIR FLOWMETER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ132 FUEL PUMP PRIMING COMPLETE
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ136 UPSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ137 DOWNSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ073 PARTICLE FILTER PRESSURE DIFF. SENSOR
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ148 DOWNSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ147 UPSTREAM OXYGEN SENSOR RESET
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ070 TURBOCHARGER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Erase	RZ084 EGR BYPASS PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC002 ENTER INJECTOR CODES
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC031 CYLINDER FUNCTION FAULT FINDING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC003 SAVE COMPUTER DATA
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC040 SPEED LIMITER
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC083 ADBLUE SYSTEM PERFORMANCE
TALISMAN/SM6 ph2	INJECTION	MDG1 INJECTION	Configuration	SC042 FAST IDLE SPEED MODIFICATION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Read Fault Code	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Read ECU Information	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Live Data	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Function Test	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Read Configuration	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Actuation Test	
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V.I.N.
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
TALISMAN/SM6 ph2	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
TALISMAN/SM6 ph2	ABS	ABS	Read Fault Code	
TALISMAN/SM6 ph2	ABS	ABS	Erase Fault Code	
TALISMAN/SM6 ph2	ABS	ABS	Read ECU Information	
TALISMAN/SM6 ph2	ABS	ABS	Live Data	
TALISMAN/SM6 ph2	ABS	ABS	Function Test	
TALISMAN/SM6 ph2	ABS	ABS	Read Configuration	
TALISMAN/SM6 ph2	ABS	ABS	Actuation Test	
TALISMAN/SM6 ph2	ABS	ABS	Write Configuration	CF013 TRAILER STABILITY FUNCTION
TALISMAN/SM6 ph2	ABS	ABS	Write Configuration	CF012 HILL START
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP007 SPEEDO INDEX
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
TALISMAN/SM6 ph2	ABS	ABS	Other Configuration	VP060 ACCELEROMETER
TALISMAN/SM6 ph2	ABS	ABS	Erase	RZ012 RESET
TALISMAN/SM6 ph2	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
TALISMAN/SM6 ph2	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
TALISMAN/SM6 ph2	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
TALISMAN/SM6 ph2	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
TALISMAN/SM6 ph2	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
TALISMAN/SM6 ph2	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
TALISMAN/SM6 ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
TALISMAN/SM6 ph2	UCH	UCH	Read Fault Code	
TALISMAN/SM6 ph2	UCH	UCH	Erase Fault Code	
TALISMAN/SM6 ph2	UCH	UCH	Read ECU Information	
TALISMAN/SM6 ph2	UCH	UCH	Live Data	
TALISMAN/SM6 ph2	UCH	UCH	Function Test	
TALISMAN/SM6 ph2	UCH	UCH	Read Configuration	
TALISMAN/SM6 ph2	UCH	UCH	Actuation Test	
TALISMAN/SM6 ph2	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
TALISMAN/SM6 ph2	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
TALISMAN/SM6 ph2	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
TALISMAN/SM6 ph2	UCH	UCH	Other Configuration	VP001 WRITE V.I.N.
TALISMAN/SM6 ph2	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
TALISMAN/SM6 ph2	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA



**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TAL ISMAN/SM6 ph2	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
TAL ISMAN/SM6 ph2	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO06 LOCK COMPUTER
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO10 WRITE VIN
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO07 UNLOCK COMPUTER
TAL ISMAN/SM6 ph2	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Read Fault Code	
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Erase Fault Code	
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Read ECU Information	
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Live Data	
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Function Test	
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Other Configuration	VPO02 WRITE VIN
TAL ISMAN/SM6 ph2	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Read Fault Code	
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Erase Fault Code	
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Read ECU Information	
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Live Data	
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Function Test	
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Actuation Test	
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Other Configuration	VPO01 WRITE VIN
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Other Configuration	VPO05 GEOGRAPHICAL ZONE
TAL ISMAN/SM6 ph2	AIK CONDITIONING	CONTROLLED AC	Erase	RZ002 COMPUTER REINITIALISATION
TAL ISMAN/SM6 ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
TAL ISMAN/SM6 ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
TAL ISMAN/SM6 ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
TAL ISMAN/SM6 ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
TAL ISMAN/SM6 ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Function Test	
TAL ISMAN/SM6 ph2	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Actuation Test	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
TAL ISMAN/SM6 ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
TAL ISMAN/SM6 ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
TAL ISMAN/SM6 ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
TAL ISMAN/SM6 ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
TAL ISMAN/SM6 ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
TAL ISMAN/SM6 ph2	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
TAL ISMAN/SM6 ph2	UPC	UPC	Read Fault Code	
TAL ISMAN/SM6 ph2	UPC	UPC	Erase Fault Code	
TAL ISMAN/SM6 ph2	UPC	UPC	Read ECU Information	
TAL ISMAN/SM6 ph2	UPC	UPC	Live Data	
TAL ISMAN/SM6 ph2	UPC	UPC	Function Test	
TAL ISMAN/SM6 ph2	UPC	UPC	Actuation Test	
TAL ISMAN/SM6 ph2	UPC	UPC	Other Configuration	VPO03 WRITE VIN
TAL ISMAN/SM6 ph2	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
TAL ISMAN/SM6 ph2	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
TAL ISMAN/SM6 ph2	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
TAL ISMAN/SM6 ph2	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
TAL ISMAN/SM6 ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
TAL ISMAN/SM6 ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
TAL ISMAN/SM6 ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
TAL ISMAN/SM6 ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
TAL ISMAN/SM6 ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Other Configuration	VPO01 WRITE V. I. N.
TAL ISMAN/SM6 ph2	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
TAL ISMAN/SM6 ph2	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
TAL ISMAN/SM6 ph2	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
TAL ISMAN/SM6 ph2	CHECK CHASSIS	CHECK CHASSIS	Live Data	
TAL ISMAN/SM6 ph2	CHECK CHASSIS	CHECK CHASSIS	Function Test	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
TAL ISMAN/SM6 ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Read Fault Code	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Erase Fault Code	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Read ECU Information	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Live Data	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Function Test	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Read Configuration	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Actuation Test	
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
TAL ISMAN/SM6 ph2	PARKING PROX CAN	PARKING AID	Configuration	SC002 SENSOR CONFIGURATION
TAL ISMAN/SM6 ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
TAL ISMAN/SM6 ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
TAL ISMAN/SM6 ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
TAL ISMAN/SM6 ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
TAL ISMAN/SM6 ph2	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
TAL ISMAN/SM6 ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
TAL ISMAN/SM6 ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
TAL ISMAN/SM6 ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
TAL ISMAN/SM6 ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
TAL ISMAN/SM6 ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
TAL ISMAN/SM6 ph2	PILOTED SUSPENSION	Electronically-managed suspension	Read Fault Code	
TAL ISMAN/SM6 ph2	PILOTED SUSPENSION	Electronically-managed suspension	Erase Fault Code	
TAL ISMAN/SM6 ph2	PILOTED SUSPENSION	Electronically-managed suspension	Read ECU Information	
TAL ISMAN/SM6 ph2	PILOTED SUSPENSION	Electronically-managed suspension	Live Data	
TAL ISMAN/SM6 ph2	PILOTED SUSPENSION	Electronically-managed suspension	Function Test	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Function Test	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO09 REAR SLIDE LEARNING
TAL ISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO08 FRONT SLIDE LEARNING

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP010 LUMBAR LEARNING
TALISMAN/SM6 ph2	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VP003 WRITE VIN
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Read Fault Code	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Erase Fault Code	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Read ECU Information	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Live Data	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Function Test	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM LEFT	ADAPTATIVE DRIVING BEAM LEFT	Actuation Test	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Read Fault Code	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Erase Fault Code	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Read ECU Information	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Live Data	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Function Test	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM RIGHT	ADAPTATIVE DRIVING BEAM RIGHT	Actuation Test	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Read Fault Code	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Erase Fault Code	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Read ECU Information	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Live Data	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Function Test	
TALISMAN/SM6 ph2	ADAPTATIVE DRIVING BEAM UNIT	ADAPTATIVE DRIVING BEAM UNIT	Actuation Test	
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Live Data	
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Function Test	
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6 ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Read Fault Code	
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase Fault Code	
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Read ECU Information	
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Live Data	
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Function Test	
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6 ph2	TELEMATIC CTRL. UNIT	TELEMATIC CTRL. UNIT	Erase	RZ001 COMPUTER RESET
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6 ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP057 ADBLUE MODULE ELECTRICAL CHECK
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP050 ADBLUE FIRST FILLING TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP051 ADBLUE EMPTYING TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP056 ADBLUE INJECTOR SOUND TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP055 ADBLUE INJECTOR RELEASE TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP052 FLOW RATE FUNCTION
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP058 OVERALL RESULT
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ008 INJECTOR HEATING
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ062 OPERAL QUANTITY OF ADBLUE INJECTED
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase	RZ011 RESET OF THE HEATING COUNTER ACTIVE TIME
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Function Test	
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP012 WRITE VIN
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP006 ADBLUE EMPTYING TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP081 ADBLUE PURGE TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP063 ADBLUE TANK HEATER
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP062 PRESSURE LINE ADBLUE HEATER
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP074 ADDITIONAL TANK HEATER
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP077 ADBLUE UPSTREAM INJECTOR PERFORMANCE TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP007 ADBLUE LEAK TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP069 HIGH PRESSURE CIRCUIT LEAK TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP078 ADBLUE DOWNSTREAM INJECTOR PERFORMANCE TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP079 ADBLUE UPSTREAM INJECTOR PROGRAMMING
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP080 ADBLUE DOWNSTREAM INJECTOR PROGRAMMING
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP070 ADBLUE PUMP SETPOINT
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP071 ADBLUE TANK PROGRAMMING
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Other Configuration	VP010 ADBLUE FIRST FILLING TEST
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC002 SAVE COMPUTER DATA
TALISMAN/SM6 ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Configuration	SC001 WRITE SAVED DATA
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Function Test	
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP005 FRONT SLIDE LEARNING
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP006 REAR SLIDE LEARNING
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP007 LUMBAR LEARNING
TALISMAN/SM6 ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VP002 WRITE VIN
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
TALISMAN/SM6 ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Read Fault Code	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Read ECU Information	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Live Data	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Function Test	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Actuation Test	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Read Fault Code	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Erase Fault Code	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Read ECU Information	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Live Data	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Function Test	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Actuation Test	
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
TALISMAN/SM6 ph2	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V.I.N.
TALISMAN/SM6 ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
TALISMAN/SM6 ph2	UCH	UCH	Read Fault Code	
TALISMAN/SM6 ph2	UCH	UCH	Erase Fault Code	
TALISMAN/SM6 ph2	UCH	UCH	Read ECU Information	
TALISMAN/SM6 ph2	UCH	UCH	Live Data	
TALISMAN/SM6 ph2	UCH	UCH	Function Test	
TALISMAN/SM6 ph2	UCH	UCH	Read Configuration	
TALISMAN/SM6 ph2	UCH	UCH	Actuation Test	
NEW ZOE	ABS	ABS	Read Fault Code	
NEW ZOE	ABS	ABS	Erase Fault Code	
NEW ZOE	ABS	ABS	Read ECU Information	
NEW ZOE	ABS	ABS	Live Data	
NEW ZOE	ABS	ABS	Function Test	
NEW ZOE	ABS	ABS	Read Configuration	
NEW ZOE	ABS	ABS	Actuation Test	
NEW ZOE	ABS	ABS	Write Configuration	CF012 HILL START
NEW ZOE	ABS	ABS	Other Configuration	VPO07 SPEEDO INDEX
NEW ZOE	ABS	ABS	Other Configuration	VPO03 STEERING WHEEL ANGLE SENSOR
NEW ZOE	ABS	ABS	Other Configuration	VPO01 WRITE VIN
NEW ZOE	ABS	ABS	Other Configuration	VPO38 LONGITUDINAL ACCELERATION SENSOR
NEW ZOE	ABS	ABS	Other Configuration	VPO25 TRANSVERSE ACCELERATION SENSOR
NEW ZOE	ABS	ABS	Other Configuration	VPO55 DEACTIVATE MAINTENANCE MODE
NEW ZOE	ABS	ABS	Other Configuration	VPO54 ACTIVATE MAINTENANCE MODE
NEW ZOE	ABS	ABS	Other Configuration	VPO60 ACCELEROMETER
NEW ZOE	ABS	ABS	Erase	RZ012 RESET
NEW ZOE	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
NEW ZOE	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
NEW ZOE	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
NEW ZOE	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
NEW ZOE	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
NEW ZOE	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO02 WRITE VIN
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO37 MAINTENANCE AUTONOMY INTERVAL IN KM
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO40 MAINTENANCE AUTONOMY:CURRENT VALUE IN KM
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO43 MAINTENANCE AUTONOMY INTERVAL IN DAYS
NEW ZOE	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VPO44 MAINTENANCE AUTONOMY:CURRENT VALUE DAYS
NEW ZOE	UCH	UCH	Read Fault Code	
NEW ZOE	UCH	UCH	Erase Fault Code	
NEW ZOE	UCH	UCH	Read ECU Information	
NEW ZOE	UCH	UCH	Live Data	
NEW ZOE	UCH	UCH	Function Test	
NEW ZOE	UCH	UCH	Read Configuration	
NEW ZOE	UCH	UCH	Actuation Test	
NEW ZOE	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
NEW ZOE	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
NEW ZOE	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
NEW ZOE	UCH	UCH	Other Configuration	VPO01 WRITE V.I.N.
NEW ZOE	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
NEW ZOE	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
NEW ZOE	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
NEW ZOE	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO06 LOCK COMPUTER
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO10 WRITE VIN
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VPO07 UNLOCK COMPUTER
NEW ZOE	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
NEW ZOE	FRONT RADAR	FRONT RADAR	Read Fault Code	
NEW ZOE	FRONT RADAR	FRONT RADAR	Erase Fault Code	
NEW ZOE	FRONT RADAR	FRONT RADAR	Read ECU Information	
NEW ZOE	FRONT RADAR	FRONT RADAR	Live Data	
NEW ZOE	FRONT RADAR	FRONT RADAR	Function Test	
NEW ZOE	FRONT RADAR	FRONT RADAR	Other Configuration	VPO02 WRITE VIN
NEW ZOE	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Live Data	
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Function Test	
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO05 GEOGRAPHICAL ZONE
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO06 AIR RECIRCULATION FLAP MOTOR
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
NEW ZOE	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
NEW ZOE	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Live Data	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Function Test	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Read Configuration	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Actuation Test	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO18 DEACTIVATE MAINTENANCE MODE
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO04 WRITE VIN
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO20 ACCELEROMETER
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO17 ACTIVATE MAINTENANCE MODE
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO01 WRITE VIN
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
NEW ZOE	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO12 COMPUTER RESET
NEW ZOE	IUC	IUC	Read Fault Code	
NEW ZOE	IUC	IUC	Erase Fault Code	
NEW ZOE	IUC	IUC	Read ECU Information	
NEW ZOE	IUC	IUC	Live Data	
NEW ZOE	IUC	IUC	Function Test	
NEW ZOE	IUC	IUC	Actuation Test	
NEW ZOE	IUC	IUC	Other Configuration	VPO03 WRITE VIN
NEW ZOE	IUC	IUC	Other Configuration	VPO07 COMPUTER INITIALISATION
NEW ZOE	IUC	IUC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
NEW ZOE	IUC	IUC	Configuration	SC007 SAVE COMPUTER DATA
NEW ZOE	IUC	IUC	Configuration	SC008 WRITE SAVED DATA
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Read Fault Code	
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Erase Fault Code	
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Read ECU Information	
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Read Configuration	
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF093 VEHICLE LAYOUT
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Write Configuration	CF094 MODE
NEW ZOE	ADAPTATION UNIT	ADAPTATION UNIT	Other Configuration	VPO14 WRITE VIN
NEW ZOE	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
NEW ZOE	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
NEW ZOE	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
NEW ZOE	CHECK CHASSIS	CHECK CHASSIS	Live Data	
NEW ZOE	CHECK CHASSIS	CHECK CHASSIS	Function Test	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
NEW ZOE	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
NEW ZOE	PARKING PROX CAN	PARKING AID	Read Fault Code	
NEW ZOE	PARKING PROX CAN	PARKING AID	Erase Fault Code	
NEW ZOE	PARKING PROX CAN	PARKING AID	Read ECU Information	
NEW ZOE	PARKING PROX CAN	PARKING AID	Live Data	
NEW ZOE	PARKING PROX CAN	PARKING AID	Function Test	
NEW ZOE	PARKING PROX CAN	PARKING AID	Read Configuration	
NEW ZOE	PARKING PROX CAN	PARKING AID	Actuation Test	
NEW ZOE	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
NEW ZOE	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
NEW ZOE	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
NEW ZOE	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
NEW ZOE	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
NEW ZOE	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
NEW ZOE	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
NEW ZOE	POWER LINE CONTROLLER	POWER LINE CONTROLLER	Read Fault Code	
NEW ZOE	POWER LINE CONTROLLER	POWER LINE CONTROLLER	Erase Fault Code	
NEW ZOE	POWER LINE CONTROLLER	POWER LINE CONTROLLER	Read ECU Information	
NEW ZOE	POWER LINE CONTROLLER	POWER LINE CONTROLLER	Other Configuration	VPO02 WRITE VIN
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
NEW ZOE	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase	RZ002 COMPUTER RESET
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Live Data	
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Function Test	
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Other Configuration	VPO01 WRITE VIN
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
NEW ZOE	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read Fault Code	
NEW ZOE	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Erase Fault Code	
NEW ZOE	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read ECU Information	
NEW ZOE	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Actuation Test	
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VP001 WRITE VIN
NEW ZOE	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VP001 WRITE VIN
NEW ZOE	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
NEW ZOE	AMPLIFIER	AMPLIFIER	Read Fault Code	
NEW ZOE	AMPLIFIER	AMPLIFIER	Erase Fault Code	
NEW ZOE	AMPLIFIER	AMPLIFIER	Read ECU Information	
NEW ZOE	AMPLIFIER	AMPLIFIER	Live Data	
NEW ZOE	AMPLIFIER	AMPLIFIER	Function Test	
NEW ZOE	AMPLIFIER	AMPLIFIER	Actuation Test	
NEW ZOE	AMPLIFIER	AMPLIFIER	Other Configuration	VP001 WRITE VIN
NEW ZOE	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
NEW ZOE	BCB	BCB	Read Fault Code	
NEW ZOE	BCB	BCB	Erase Fault Code	
NEW ZOE	BCB	BCB	Read ECU Information	
NEW ZOE	BCB	BCB	Live Data	
NEW ZOE	BCB	BCB	Function Test	
NEW ZOE	BCB	BCB	Read Configuration	
NEW ZOE	BCB	BCB	Other Configuration	VP002 WRITE V. I. N.
NEW ZOE	BCB	BCB	Configuration	SC001 SAVE COMPUTER DATA
NEW ZOE	BCB	BCB	Configuration	SC002 WRITE SAVED DATA
NEW ZOE	BMS	BMS	Read Fault Code	
NEW ZOE	BMS	BMS	Erase Fault Code	
NEW ZOE	BMS	BMS	Read ECU Information	
NEW ZOE	BMS	BMS	Live Data	
NEW ZOE	BMS	BMS	Function Test	
NEW ZOE	BMS	BMS	Configuration	SC002 SAVE COMPUTER DATA
NEW ZOE	BMS	BMS	Configuration	SC003 WRITE SAVED DATA
NEW ZOE	EVC	EVC	Read Fault Code	
NEW ZOE	EVC	EVC	Erase Fault Code	
NEW ZOE	EVC	EVC	Read ECU Information	
NEW ZOE	EVC	EVC	Live Data	
NEW ZOE	EVC	EVC	Function Test	
NEW ZOE	EVC	EVC	Read Configuration	
NEW ZOE	EVC	EVC	Actuation Test	
NEW ZOE	EVC	EVC	Other Configuration	VP003 WRITE V. I. N.
NEW ZOE	EVC	EVC	Other Configuration	VP067 GEAR LEVER
NEW ZOE	EVC	EVC	Erase	RZ006 DRIVING WATER PUMP
NEW ZOE	EVC	EVC	Erase	RZ002 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
NEW ZOE	EVC	EVC	Configuration	SC001 SAVE COMPUTER DATA
NEW ZOE	EVC	EVC	Configuration	SC002 WRITE SAVED DATA
NEW ZOE	PEB	PEB	Read Fault Code	
NEW ZOE	PEB	PEB	Erase Fault Code	
NEW ZOE	PEB	PEB	Read ECU Information	
NEW ZOE	PEB	PEB	Live Data	
NEW ZOE	PEB	PEB	Function Test	
NEW ZOE	PEB	PEB	Configuration	SC001 SAVE COMPUTER DATA
NEW ZOE	PEB	PEB	Configuration	SC002 WRITE SAVED DATA
NEW ZOE	BMS SAFETY	BMS SAFETY	Read Fault Code	
NEW ZOE	BMS SAFETY	BMS SAFETY	Erase Fault Code	
NEW ZOE	BMS SAFETY	BMS SAFETY	Read ECU Information	
NEW ZOE	BMS SAFETY	BMS SAFETY	Live Data	
NEW ZOE	BMS SAFETY	BMS SAFETY	Function Test	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VP002 WRITE V. I. N.
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
NEW ZOE	UCH	UCH	Read Fault Code	
NEW ZOE	UCH	UCH	Erase Fault Code	
NEW ZOE	UCH	UCH	Read ECU Information	
NEW ZOE	UCH	UCH	Live Data	
NEW ZOE	UCH	UCH	Read Configuration	
NEW ZOE	UCH	UCH	Actuation Test	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Live Data	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Read Configuration	
NEW ZOE	PARKING BRAKE	PARKING BRAKE	Actuation Test	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
NEW ZOE	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
3M3	INJECTION	INJECTION	Read Fault Code	
3M3	INJECTION	INJECTION	Erase Fault Code	
3M3	INJECTION	INJECTION	Read ECU Information	
3M3	INJECTION	INJECTION	Live Data	
3M3	INJECTION	INJECTION	Function Test	
3M3	INJECTION	INJECTION	Actuation Test	
3M3	INJECTION	INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
3M3	INJECTION	INJECTION	Other Configuration	VP385 IDLE STOP AND START COUNTER
3M3	INJECTION	INJECTION	Other Configuration	VP384 DRIVER START COUNTER
3M3	INJECTION	INJECTION	Other Configuration	VP310 ALTERNATOR SETPOINT VOLTAGE
3M3	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.
3M3	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
3M3	INJECTION	INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
3M3	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
3M3	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
3M3	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
3M3	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
3M3	INJECTION	INJECTION	Read Fault Code	
3M3	INJECTION	INJECTION	Erase Fault Code	
3M3	INJECTION	INJECTION	Read ECU Information	
3M3	INJECTION	INJECTION	Live Data	
3M3	INJECTION	INJECTION	Function Test	
3M3	INJECTION	INJECTION	Actuation Test	
3M3	INJECTION	INJECTION	Other Configuration	VP010 WRITE V. I. N.

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
XM3	INJECTION	INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
XM3	INJECTION	INJECTION	Erase	RZ031 PROGRAMMING THROTTLE LIMITS
XM3	INJECTION	INJECTION	Erase	RZ033 RICHNESS REGULATION PROGRAMMING
XM3	INJECTION	INJECTION	Erase	RZ030 PARTICLE FILTER ADAPTIVES
XM3	INJECTION	INJECTION	Configuration	SC049 IDLE AIR VOLUME LEARNING - SERVICE MODE
XM3	INJECTION	INJECTION	Configuration	SC050 IDLE AIR VOLUME LEARNING - FACTORY MODE
XM3	INJECTION	INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
XM3	INJECTION	EMS 3160 INJECTION	Read Fault Code	
XM3	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
XM3	INJECTION	EMS 3160 INJECTION	Read ECU Information	
XM3	INJECTION	EMS 3160 INJECTION	Live Data	
XM3	INJECTION	EMS 3160 INJECTION	Function Test	
XM3	INJECTION	EMS 3160 INJECTION	Read Configuration	
XM3	INJECTION	EMS 3160 INJECTION	Actuation Test	
XM3	INJECTION	EMS 3160 INJECTION	Write Configuration	CF196 STOP AND START FUNCTION
XM3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP343 NUMBER OF STARTING CYCLES
XM3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP036 FUEL SUPPLY PREVENTION
XM3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP010 WRITE V. I. N.
XM3	INJECTION	EMS 3160 INJECTION	Other Configuration	VP073 FUEL PUMP FORCED CONVERSION
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ003 ENGINE ADAPTIVES
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ091 WASTE GATE REGULATION
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ037 FLYWHEEL TARGET PROGRAMMING
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ019 PROGRAMMING REINITIALISATION
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ079 NUMBER OF STARTING CYCLES
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ047 CRUISE CONTROL/SPEED LIMITER PROGRAMMING
XM3	INJECTION	EMS 3160 INJECTION	Erase	RZ097 HIGH PRESSURE PUMP COUNTER
XM3	INJECTION	EMS 3160 INJECTION	Configuration	SC035 HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
XM3	INJECTION	EMS 3160 INJECTION	Configuration	SC061 INTERVAL OF OIL CHANGE (OCS) OXIDATION
XM3	INJECTION	EMS 3160 INJECTION	Configuration	SC062 OIL CHANGE INTERVAL (OCS): DILUTION
XM3	INJECTION	EMS 3160 INJECTION	Configuration	SC017 PARTICLE FILTER REGENERATION
XM3	INJECTION	EMS 3160 INJECTION	Configuration	SC051 ADAPTIVES AFTER REPLACING PARTICLE FILTER
XM3	ABS	ABS	Read Fault Code	
XM3	ABS	ABS	Erase Fault Code	
XM3	ABS	ABS	Read ECU Information	
XM3	ABS	ABS	Live Data	
XM3	ABS	ABS	Function Test	
XM3	ABS	ABS	Read Configuration	
XM3	ABS	ABS	Actuation Test	
XM3	ABS	ABS	Write Configuration	CF012 HILL START
XM3	ABS	ABS	Other Configuration	VP007 SPEED INDEX
XM3	ABS	ABS	Other Configuration	VP003 STEERING WHEEL ANGLE SENSOR
XM3	ABS	ABS	Other Configuration	VP001 WRITE VIN
XM3	ABS	ABS	Other Configuration	VP038 LONGITUDINAL ACCELERATION SENSOR
XM3	ABS	ABS	Other Configuration	VP025 TRANSVERSE ACCELERATION SENSOR
XM3	ABS	ABS	Other Configuration	VP055 DEACTIVATE MAINTENANCE MODE
XM3	ABS	ABS	Other Configuration	VP054 ACTIVATE MAINTENANCE MODE
XM3	ABS	ABS	Other Configuration	VP060 ACCELEROMETER
XM3	ABS	ABS	Erase	RZ012 RESET
XM3	ABS	ABS	Erase	RZ007 STEERING WHEEL ANGLE OFFSET SENSOR
XM3	ABS	ABS	Erase	RZ008 TRANSVERSE ACCELERATION OFFSET SENSOR
XM3	ABS	ABS	Erase	RZ009 BRAKE PRESSURE OFFSET SENSOR
XM3	ABS	ABS	Erase	RZ010 LONGITUDINAL ACCELERATION SENSOR OFFSET
XM3	ABS	ABS	Configuration	SC001 CHECK TARGET TEETH
XM3	ABS	ABS	Configuration	SC010 PARKING BRAKE TYPE CONFIGURATION
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Function Test	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF019 ADAC DISPLAY TYPE
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF125 LANGUAGE VERSION.
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF136 TYRE PRESSURE UNITS
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF140 DISTANCE UNITS
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF143 CONSUMPTION MEASUREMENT UNITS
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF199 COMPUTER INITIALISATION
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF141 OVERSPEED FUNCTION - ARABIA
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Write Configuration	CF137 VEHICLE TYPE
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP002 WRITE VIN
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP052 ODOMETER IN KM
XM3	INSTRUMENT PANEL	INSTRUMENT PANEL	Other Configuration	VP053 ODOMETER IN MILES
XM3	UCH	UCH	Read Fault Code	
XM3	UCH	UCH	Erase Fault Code	
XM3	UCH	UCH	Read ECU Information	
XM3	UCH	UCH	Live Data	
XM3	UCH	UCH	Function Test	
XM3	UCH	UCH	Read Configuration	
XM3	UCH	UCH	Actuation Test	
XM3	UCH	UCH	Write Configuration	CF275 SECOND FITTING ALARM
XM3	UCH	UCH	Write Configuration	CF315 POWER BACK DOOR
XM3	UCH	UCH	Write Configuration	CF317 AUTOMATIC HIGH/LOW BEAM
XM3	UCH	UCH	Other Configuration	VP001 WRITE V. I. N.
XM3	UCH	UCH	Configuration	SC056 WRITE SAVED DATA
XM3	UCH	UCH	Configuration	SC057 SAVE COMPUTER DATA
XM3	UCH	UCH	Configuration	SC044 SAVE COMPUTER DATA
XM3	UCH	UCH	Configuration	SC043 WRITE SAVED DATA
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Function Test	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP006 LOCK COMPUTER
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP010 WRITE VIN
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Other Configuration	VP007 UNLOCK COMPUTER
XM3	AIRBAG / PRETENSIONERS	AIRBAG	Configuration	SC013 SENSOR CONFIGURATION
XM3	FRONT RADAR	FRONT RADAR	Read Fault Code	
XM3	FRONT RADAR	FRONT RADAR	Erase Fault Code	
XM3	FRONT RADAR	FRONT RADAR	Read ECU Information	
XM3	FRONT RADAR	FRONT RADAR	Live Data	
XM3	FRONT RADAR	FRONT RADAR	Function Test	
XM3	FRONT RADAR	FRONT RADAR	Other Configuration	VP002 WRITE VIN
XM3	FRONT RADAR	FRONT RADAR	Erase	RZ006 COMPUTER RESET
XM3	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
XM3	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
XM3	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
XM3	AIR CONDITIONING	AIR CONDITIONING	Live Data	
XM3	AIR CONDITIONING	AIR CONDITIONING	Function Test	
XM3	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
XM3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP006 AIR RECIRCULATION FLAP MOTOR
XM3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP001 WRITE VIN
XM3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VP005 GEOGRAPHICAL ZONE
XM3	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
XM3	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
XM3	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
XM3	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
XM3	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
XM3	AIR CONDITIONING	AIR CONDITIONING	Live Data	
XM3	AIR CONDITIONING	AIR CONDITIONING	Function Test	
XM3	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
XM3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO01 WRITE VIN
XM3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO05 GEOGRAPHICAL ZONE
XM3	AIR CONDITIONING	AIR CONDITIONING	Other Configuration	VPO06 AIR RECIRCULATION FLAP MOTOR
XM3	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ002 COMPUTER REINITIALISATION
XM3	AIR CONDITIONING	AIR CONDITIONING	Erase	RZ003 ACTUATOR RELAY CONTROL
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read Fault Code	
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase Fault Code	
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Read ECU Information	
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Live Data	
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Function Test	
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Other Configuration	VPO30 GEARBOX VEHICLE ACCELERATION SENSOR INIT.
XM3	AUTOMATIC GEARBOX	AUTOMATIC TRANSMISSION	Erase	RZ009 ERASE AUTO-ADAPTIVE VALUES
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Function Test	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Other Configuration	VPO02 WRITE VIN
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase	RZ002 ECU MEMORY
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC002 REVERSING CAMERA CALIBRATION
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC007 SYSTEM CONFIGURATION
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC008 WRITE SAVED DATA
XM3	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Configuration	SC009 SAVE COMPUTER DATA
XM3	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
XM3	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
XM3	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
XM3	PARKING BRAKE	PARKING BRAKE	Live Data	
XM3	PARKING BRAKE	PARKING BRAKE	Function Test	
XM3	PARKING BRAKE	PARKING BRAKE	Read Configuration	
XM3	PARKING BRAKE	PARKING BRAKE	Actuation Test	
XM3	PARKING BRAKE	PARKING BRAKE	Write Configuration	CF007 VEHICLE CONFIGURATION
XM3	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO18 DEACTIVATE MAINTENANCE MODE
XM3	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO04 WRITE VIN
XM3	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO20 ACCELEROMETER
XM3	PARKING BRAKE	PARKING BRAKE	Other Configuration	VPO17 ACTIVATE MAINTENANCE MODE
XM3	PARKING BRAKE	PARKING BRAKE	Configuration	SC012 VEHICLE CONFIGURATION
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Read Fault Code	
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Erase Fault Code	
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Read ECU Information	
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Live Data	
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Function Test	
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO01 WRITE VIN
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO11 STEERING WHEEL ANGLE CALIB.
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO12 COMPUTER RESET
XM3	VARIABLE P. A. S.	VARIABLE P. A. S.	Other Configuration	VPO13 HAND OFF DETECTION LEARNING
XM3	UPC	UPC	Read Fault Code	
XM3	UPC	UPC	Erase Fault Code	
XM3	UPC	UPC	Read ECU Information	
XM3	UPC	UPC	Live Data	
XM3	UPC	UPC	Function Test	
XM3	UPC	UPC	Actuation Test	
XM3	UPC	UPC	Other Configuration	VPO03 WRITE VIN
XM3	UPC	UPC	Other Configuration	VPO07 COMPUTER INITIALISATION
XM3	UPC	UPC	Other Configuration	VPO26 CONTROL HEADLIGHT MOTORS
XM3	UPC	UPC	Configuration	SC007 SAVE COMPUTER DATA
XM3	UPC	UPC	Configuration	SC008 WRITE SAVED DATA
XM3	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
XM3	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
XM3	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
XM3	CHECK CHASSIS	CHECK CHASSIS	Live Data	
XM3	CHECK CHASSIS	CHECK CHASSIS	Function Test	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CF001 CENTRAL GATEWAY
XM3	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
XM3	PARKING PROX CAN	PARKING AID	Read Fault Code	
XM3	PARKING PROX CAN	PARKING AID	Erase Fault Code	
XM3	PARKING PROX CAN	PARKING AID	Read ECU Information	
XM3	PARKING PROX CAN	PARKING AID	Live Data	
XM3	PARKING PROX CAN	PARKING AID	Function Test	
XM3	PARKING PROX CAN	PARKING AID	Read Configuration	
XM3	PARKING PROX CAN	PARKING AID	Actuation Test	
XM3	PARKING PROX CAN	PARKING AID	Write Configuration	CF001 BUZZER VOLUME
XM3	PARKING PROX CAN	PARKING AID	Write Configuration	CF013 REAR DETECTION
XM3	PARKING PROX CAN	PARKING AID	Write Configuration	CF012 FRONT DETECTION
XM3	PARKING PROX CAN	PARKING AID	Write Configuration	CF014 SIDE DETECTION
XM3	PARKING PROX CAN	PARKING AID	Write Configuration	CF006 TONE ADJUSTMENT
XM3	PARKING PROX CAN	PARKING AID	Other Configuration	VPO03 CARAVAN TOWING DISTANCE
XM3	PARKING PROX CAN	PARKING AID	Other Configuration	VPO01 WRITE VIN
XM3	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
XM3	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
XM3	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
XM3	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
XM3	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Function Test	
XM3	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
XM3	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
XM3	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
XM3	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
XM3	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Function Test	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Function Test	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO09 REAR SLIDE LEARNING
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO08 FRONT SLIDE LEARNING
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO10 LUMBAR LEARNING
XM3	DRIVER'S SEAT	DRIVER'S SEAT	Other Configuration	VPO03 WRITE VIN
XM3	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
XM3	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
XM3	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
XM3	FRONT CAMERA	FRONT CAMERA	Live Data	
XM3	FRONT CAMERA	FRONT CAMERA	Function Test	

**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
XM3	FRONT CAMERA	FRONT CAMERA	Other Configuration	VPO01 WRITE VIN
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC007 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC008 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC009 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC010 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC011 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC012 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC013 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC014 CAMERA ALIGNMENT ADJUSTEMENT
XM3	FRONT CAMERA	FRONT CAMERA	Configuration	SC015 CAMERA ALIGNMENT ADJUSTEMENT
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Function Test	
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Other Configuration	VPO02 WRITE VIN
XM3	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
XM3	RADIO	RADIO	Read Fault Code	
XM3	RADIO	RADIO	Erase Fault Code	
XM3	RADIO	RADIO	Read ECU Information	
XM3	RADIO	RADIO	Live Data	
XM3	RADIO	RADIO	Function Test	
XM3	RADIO	RADIO	Read Configuration	
XM3	RADIO	RADIO	Actuation Test	
XM3	RADIO	RADIO	Write Configuration	CF027 LANGUAGE
XM3	RADIO	RADIO	Write Configuration	CF016 COUNTRY MODEL
XM3	RADIO	RADIO	Other Configuration	VPO01 WRITE VIN
XM3	RADIO	RADIO	Configuration	SC002 COMP CONFIGURATION
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Function Test	
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Write Configuration	CF003 COMPUTER CONFIGURATION
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Other Configuration	VPO01 WRITE VIN
XM3	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase	RZ001 COMPUTER RESET
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Function Test	
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Other Configuration	VPO02 WRITE VIN
XM3	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase	RZ002 COMPUTER RESET
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Function Test	
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO05 FRONT SLIDE LEARNING
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO06 REAR SLIDE LEARNING
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO07 LUMBAR LEARNING
XM3	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Other Configuration	VPO02 WRITE VIN
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Function Test	
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Other Configuration	VPO01 WRITE VIN
XM3	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase	RZ003 COMPUTER RESET
XM3	AMPLIFIER	AMPLIFIER	Read Fault Code	
XM3	AMPLIFIER	AMPLIFIER	Erase Fault Code	
XM3	AMPLIFIER	AMPLIFIER	Read ECU Information	
XM3	AMPLIFIER	AMPLIFIER	Live Data	
XM3	AMPLIFIER	AMPLIFIER	Function Test	
XM3	AMPLIFIER	AMPLIFIER	Actuation Test	
XM3	AMPLIFIER	AMPLIFIER	Other Configuration	VPO01 WRITE VIN
XM3	AMPLIFIER	AMPLIFIER	Erase	RZ004 AMPLIFIER RESET
XM3	EVC	EVC	Read Fault Code	
XM3	EVC	EVC	Erase Fault Code	
XM3	EVC	EVC	Read ECU Information	
XM3	EVC	EVC	Live Data	
XM3	EVC	EVC	Function Test	
XM3	EVC	EVC	Read Configuration	
XM3	EVC	EVC	Actuation Test	
XM3	EVC	EVC	Write Configuration	CF005 MAINTENANCE MODE
XM3	EVC	EVC	Other Configuration	VPO68 GEAR LEVER
XM3	EVC	EVC	Other Configuration	VPO81 LOCBOOX LEARNING
XM3	EVC	EVC	Other Configuration	VPO70 ELEC TRACTION COOLING CIRCUIT DEGASSING
XM3	EVC	EVC	Other Configuration	VPO80 FUEL SUPPLY PREVENTION
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Function Test	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF035 TELEPHONE INDUCTION CHARGER
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Write Configuration	CF031 REMOTE LOCKING BUZZER
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Other Configuration	VPO02 WRITE V. I. N.
XM3	HANDS-FREE MODULE	HANDS-FREE MODULE	Configuration	SC003 CARD TESTING
XM3/NEW ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
XM3/NEW ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
XM3/NEW ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
XM3/NEW ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
XM3/NEW ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
XM3/NEW ARKANA	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
XM3/NEW ARKANA	UCH	UCH	Read Fault Code	
XM3/NEW ARKANA	UCH	UCH	Erase Fault Code	
XM3/NEW ARKANA	UCH	UCH	Read ECU Information	
XM3/NEW ARKANA	UCH	UCH	Live Data	
XM3/NEW ARKANA	UCH	UCH	Read Configuration	
XM3/NEW ARKANA	UCH	UCH	Actuation Test	
XM3/NEW ARKANA	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
XM3/NEW ARKANA	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
XM3/NEW ARKANA	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
XM3/NEW ARKANA	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
XM3/NEW ARKANA	BRAKE BOOSTER	BRAKE BOOSTER	Read Fault Code	
XM3/NEW ARKANA	BRAKE BOOSTER	BRAKE BOOSTER	Erase Fault Code	
XM3/NEW ARKANA	BRAKE BOOSTER	BRAKE BOOSTER	Read ECU Information	
XM3/NEW ARKANA	BRAKE BOOSTER	BRAKE BOOSTER	Live Data	
XM3/NEW ARKANA	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
XM3/NEW ARKANA	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	





**Diagnosis list Renault\_v9.20**

Vehicles	System	System Info	Function menu	Subfunction menu
CITY K-ZE/SPRING	BMS	BMS	Read ECU Information	
CITY K-ZE/SPRING	BMS	BMS	Live Data	
CITY K-ZE/SPRING	BMS	BMS	Function Test	
CITY K-ZE/SPRING	EVC	EVC	Read Fault Code	
CITY K-ZE/SPRING	EVC	EVC	Erase Fault Code	
CITY K-ZE/SPRING	EVC	EVC	Read ECU Information	
CITY K-ZE/SPRING	EVC	EVC	Live Data	
CITY K-ZE/SPRING	EVC	EVC	Function Test	
CITY K-ZE/SPRING	EVC	EVC	Actuation Test	
CITY K-ZE/SPRING	PEB	PEB	Read Fault Code	
CITY K-ZE/SPRING	PEB	PEB	Erase Fault Code	
CITY K-ZE/SPRING	PEB	PEB	Read ECU Information	
CITY K-ZE/SPRING	PEB	PEB	Live Data	
CITY K-ZE/SPRING	PEB	PEB	Function Test	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Function Test	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Write Configuration	CFO01 CENTRAL GATEWAY
CITY K-ZE/SPRING	CENTRAL GATEWAY	CENTRAL GATEWAY	Other Configuration	VPO02 WRITE VIN
CITY K-ZE/SPRING	ABS	ABS	Read Fault Code	
CITY K-ZE/SPRING	ABS	ABS	Erase Fault Code	
CITY K-ZE/SPRING	ABS	ABS	Read ECU Information	
CITY K-ZE/SPRING	ABS	ABS	Live Data	
CITY K-ZE/SPRING	ABS	ABS	Read Configuration	
CITY K-ZE/SPRING	ABS	ABS	Actuation Test	
CITY K-ZE/SPRING	UCH	UCH	Read Fault Code	
CITY K-ZE/SPRING	UCH	UCH	Erase Fault Code	
CITY K-ZE/SPRING	UCH	UCH	Read ECU Information	
CITY K-ZE/SPRING	UCH	UCH	Live Data	
CITY K-ZE/SPRING	UCH	UCH	Read Configuration	
CITY K-ZE/SPRING	UCH	UCH	Actuation Test	
CITY K-ZE/SPRING	FRONT RADAR	FRONT RADAR	Read Fault Code	
CITY K-ZE/SPRING	FRONT RADAR	FRONT RADAR	Erase Fault Code	
CITY K-ZE/SPRING	FRONT RADAR	FRONT RADAR	Read ECU Information	
CITY K-ZE/SPRING	FRONT RADAR	FRONT RADAR	Live Data	
CITY K-ZE/SPRING	FRONT RADAR	FRONT RADAR	Read Configuration	
CITY K-ZE/SPRING	UPC	UPC	Read Fault Code	
CITY K-ZE/SPRING	UPC	UPC	Erase Fault Code	
CITY K-ZE/SPRING	UPC	UPC	Read ECU Information	
CITY K-ZE/SPRING	UPC	UPC	Live Data	
CITY K-ZE/SPRING	UPC	UPC	Actuation Test	
CITY K-ZE/SPRING	RADIO	RADIO	Read Fault Code	
CITY K-ZE/SPRING	RADIO	RADIO	Erase Fault Code	
CITY K-ZE/SPRING	RADIO	RADIO	Read ECU Information	
CITY K-ZE/SPRING	RADIO	RADIO	Live Data	
CITY K-ZE/SPRING	RADIO	RADIO	Read Configuration	
CITY K-ZE/SPRING	RADIO	RADIO	Actuation Test	
CITY K-ZE/SPRING	TELEPMATIC CTRL UNIT	TELEPMATIC CTRL UNIT	Read Fault Code	
CITY K-ZE/SPRING	TELEPMATIC CTRL UNIT	TELEPMATIC CTRL UNIT	Erase Fault Code	
CITY K-ZE/SPRING	TELEPMATIC CTRL UNIT	TELEPMATIC CTRL UNIT	Read ECU Information	
CITY K-ZE/SPRING	TELEPMATIC CTRL UNIT	TELEPMATIC CTRL UNIT	Live Data	
CITY K-ZE/SPRING	TELEPMATIC CTRL UNIT	TELEPMATIC CTRL UNIT	Read Configuration	
CITY K-ZE/SPRING	BMS	BMS	Read Fault Code	
CITY K-ZE/SPRING	BMS	BMS	Erase Fault Code	
CITY K-ZE/SPRING	BMS	BMS	Read ECU Information	
CITY K-ZE/SPRING	BMS	BMS	Live Data	
CITY K-ZE/SPRING	BMS	BMS	Read Configuration	
CITY K-ZE/SPRING	BMS SAFETY	BMS SAFETY	Read Fault Code	
CITY K-ZE/SPRING	BMS SAFETY	BMS SAFETY	Erase Fault Code	
CITY K-ZE/SPRING	BMS SAFETY	BMS SAFETY	Read ECU Information	
CITY K-ZE/SPRING	BMS SAFETY	BMS SAFETY	Live Data	
ARKANA_CN	INJECTION	EMS 3160 INJECTION	Read Fault Code	
ARKANA_CN	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
ARKANA_CN	INJECTION	EMS 3160 INJECTION	Read ECU Information	
ARKANA_CN	INJECTION	EMS 3160 INJECTION	Live Data	
ARKANA_CN	INJECTION	EMS 3160 INJECTION	Read Configuration	
ARKANA_CN	INJECTION	EMS 3160 INJECTION	Actuation Test	
ARKANA_CN	ABS	ABS	Read Fault Code	
ARKANA_CN	ABS	ABS	Erase Fault Code	
ARKANA_CN	ABS	ABS	Read ECU Information	
ARKANA_CN	ABS	ABS	Live Data	
ARKANA_CN	ABS	ABS	Read Configuration	
ARKANA_CN	ABS	ABS	Actuation Test	
ARKANA_CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
ARKANA_CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
ARKANA_CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
ARKANA_CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
ARKANA_CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
ARKANA_CN	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
ARKANA_CN	UCH	UCH	Read Fault Code	
ARKANA_CN	UCH	UCH	Erase Fault Code	
ARKANA_CN	UCH	UCH	Read ECU Information	
ARKANA_CN	UCH	UCH	Live Data	
ARKANA_CN	UCH	UCH	Read Configuration	
ARKANA_CN	UCH	UCH	Actuation Test	
ARKANA_CN	AIRBAG / PRE-TENSIONERS	AIRBAG	Read Fault Code	
ARKANA_CN	AIRBAG / PRE-TENSIONERS	AIRBAG	Erase Fault Code	
ARKANA_CN	AIRBAG / PRE-TENSIONERS	AIRBAG	Read ECU Information	
ARKANA_CN	AIRBAG / PRE-TENSIONERS	AIRBAG	Live Data	
ARKANA_CN	AIRBAG / PRE-TENSIONERS	AIRBAG	Read Configuration	
ARKANA_CN	AIRBAG / PRE-TENSIONERS	AIRBAG	Actuation Test	
ARKANA_CN	FRONT RADAR	FRONT RADAR	Read Fault Code	
ARKANA_CN	FRONT RADAR	FRONT RADAR	Erase Fault Code	
ARKANA_CN	FRONT RADAR	FRONT RADAR	Read ECU Information	
ARKANA_CN	FRONT RADAR	FRONT RADAR	Live Data	
ARKANA_CN	FRONT RADAR	FRONT RADAR	Read Configuration	
ARKANA_CN	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
ARKANA_CN	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
ARKANA_CN	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
ARKANA_CN	AIR CONDITIONING	AIR CONDITIONING	Live Data	
ARKANA_CN	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
ARKANA_CN	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read Fault Code	
ARKANA_CN	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Erase Fault Code	
ARKANA_CN	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read ECU Information	
ARKANA_CN	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Live Data	
ARKANA_CN	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Actuation Test	
ARKANA_CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
ARKANA_CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
ARKANA_CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
ARKANA_CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
ARKANA_CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
ARKANA_CN	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
ARKANA_CN	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
ARKANA_CN	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
ARKANA_CN	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
ARKANA_CN	PARKING BRAKE	PARKING BRAKE	Live Data	
ARKANA_CN	PARKING BRAKE	PARKING BRAKE	Read Configuration	
ARKANA_CN	PARKING BRAKE	PARKING BRAKE	Actuation Test	
ARKANA_CN	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read Fault Code	
ARKANA_CN	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Erase Fault Code	
ARKANA_CN	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read ECU Information	
ARKANA_CN	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Live Data	
ARKANA_CN	UPC	UPC	Read Fault Code	
ARKANA_CN	UPC	UPC	Erase Fault Code	
ARKANA_CN	UPC	UPC	Read ECU Information	
ARKANA_CN	UPC	UPC	Live Data	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
ARKANA_CN	IJC	IJC	Actuation Test	
ARKANA_CN	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
ARKANA_CN	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
ARKANA_CN	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
ARKANA_CN	CHECK CHASSIS	CHECK CHASSIS	Live Data	
ARKANA_CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
ARKANA_CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
ARKANA_CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
ARKANA_CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
ARKANA_CN	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
ARKANA_CN	PARKING PROX CAN	PARKING AID	Read Fault Code	
ARKANA_CN	PARKING PROX CAN	PARKING AID	Erase Fault Code	
ARKANA_CN	PARKING PROX CAN	PARKING AID	Read ECU Information	
ARKANA_CN	PARKING PROX CAN	PARKING AID	Live Data	
ARKANA_CN	PARKING PROX CAN	PARKING AID	Read Configuration	
ARKANA_CN	PARKING PROX CAN	PARKING AID	Actuation Test	
ARKANA_CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
ARKANA_CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
ARKANA_CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
ARKANA_CN	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
ARKANA_CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
ARKANA_CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
ARKANA_CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
ARKANA_CN	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
ARKANA_CN	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
ARKANA_CN	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
ARKANA_CN	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
ARKANA_CN	FRONT CAMERA	FRONT CAMERA	Live Data	
ARKANA_CN	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
ARKANA_CN	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
ARKANA_CN	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
ARKANA_CN	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
ARKANA_CN	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
ARKANA_CN	RADIO	RADIO	Read Fault Code	
ARKANA_CN	RADIO	RADIO	Erase Fault Code	
ARKANA_CN	RADIO	RADIO	Read ECU Information	
ARKANA_CN	RADIO	RADIO	Live Data	
ARKANA_CN	RADIO	RADIO	Read Configuration	
ARKANA_CN	RADIO	RADIO	Actuation Test	
ARKANA_CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
ARKANA_CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
ARKANA_CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
ARKANA_CN	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
ARKANA_CN	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
ARKANA_CN	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
ARKANA_CN	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
ARKANA_CN	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
ARKANA_CN	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
ARKANA_CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
ARKANA_CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
ARKANA_CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
ARKANA_CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
ARKANA_CN	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
ARKANA_CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
ARKANA_CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
ARKANA_CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
ARKANA_CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
ARKANA_CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
ARKANA_CN	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
EXPRESS_I1	INJECTION	EMS 3125 INJECTION	Read Fault Code	
EXPRESS_I1	INJECTION	EMS 3125 INJECTION	Erase Fault Code	
EXPRESS_I1	INJECTION	EMS 3125 INJECTION	Read ECU Information	
EXPRESS_I1	INJECTION	EMS 3125 INJECTION	Live Data	
EXPRESS_I1	INJECTION	EMS 3125 INJECTION	Read Configuration	
EXPRESS_I1	INJECTION	EMS 3125 INJECTION	Actuation Test	
EXPRESS_I1	INJECTION	MDGI INJECTION	Read Fault Code	
EXPRESS_I1	INJECTION	MDGI INJECTION	Erase Fault Code	
EXPRESS_I1	INJECTION	MDGI INJECTION	Read ECU Information	
EXPRESS_I1	INJECTION	MDGI INJECTION	Live Data	
EXPRESS_I1	INJECTION	MDGI INJECTION	Read Configuration	
EXPRESS_I1	INJECTION	MDGI INJECTION	Actuation Test	
EXPRESS_I1	INJECTION	EMS 3160 INJECTION	Read Fault Code	
EXPRESS_I1	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
EXPRESS_I1	INJECTION	EMS 3160 INJECTION	Read ECU Information	
EXPRESS_I1	INJECTION	EMS 3160 INJECTION	Live Data	
EXPRESS_I1	INJECTION	EMS 3160 INJECTION	Read Configuration	
EXPRESS_I1	INJECTION	EMS 3160 INJECTION	Actuation Test	
EXPRESS_I1	INJECTION	STD 310 INJECTION	Read Fault Code	
EXPRESS_I1	INJECTION	STD 310 INJECTION	Erase Fault Code	
EXPRESS_I1	INJECTION	STD 310 INJECTION	Read ECU Information	
EXPRESS_I1	INJECTION	STD 310 INJECTION	Live Data	
EXPRESS_I1	INJECTION	STD 310 INJECTION	Read Configuration	
EXPRESS_I1	INJECTION	STD 310 INJECTION	Actuation Test	
EXPRESS_I1	ABS	ABS	Read Fault Code	
EXPRESS_I1	ABS	ABS	Erase Fault Code	
EXPRESS_I1	ABS	ABS	Read ECU Information	
EXPRESS_I1	ABS	ABS	Live Data	
EXPRESS_I1	ABS	ABS	Actuation Test	
EXPRESS_I1	ABS	ABS	Read Configuration	
EXPRESS_I1	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
EXPRESS_I1	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
EXPRESS_I1	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
EXPRESS_I1	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
EXPRESS_I1	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
EXPRESS_I1	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
EXPRESS_I1	UCH	UCH	Read Fault Code	
EXPRESS_I1	UCH	UCH	Erase Fault Code	
EXPRESS_I1	UCH	UCH	Read ECU Information	
EXPRESS_I1	UCH	UCH	Live Data	
EXPRESS_I1	UCH	UCH	Read Configuration	
EXPRESS_I1	UCH	UCH	Actuation Test	
EXPRESS_I1	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
EXPRESS_I1	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
EXPRESS_I1	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
EXPRESS_I1	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
EXPRESS_I1	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
EXPRESS_I1	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
EXPRESS_I1	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
EXPRESS_I1	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
EXPRESS_I1	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
EXPRESS_I1	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
EXPRESS_I1	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
EXPRESS_I1	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
EXPRESS_I1	POWER ASSISTED STEERING	PAS PUMP ASS.	Read Fault Code	
EXPRESS_I1	POWER ASSISTED STEERING	PAS PUMP ASS.	Erase Fault Code	
EXPRESS_I1	POWER ASSISTED STEERING	PAS PUMP ASS.	Read ECU Information	
EXPRESS_I1	POWER ASSISTED STEERING	PAS PUMP ASS.	Live Data	
EXPRESS_I1	IJC	IJC	Read Fault Code	
EXPRESS_I1	IJC	IJC	Erase Fault Code	
EXPRESS_I1	IJC	IJC	Read ECU Information	
EXPRESS_I1	IJC	IJC	Live Data	
EXPRESS_I1	IJC	IJC	Actuation Test	
EXPRESS_I1	PARKING PROX CAN	PARKING AID	Read Fault Code	
EXPRESS_I1	PARKING PROX CAN	PARKING AID	Erase Fault Code	
EXPRESS_I1	PARKING PROX CAN	PARKING AID	Read ECU Information	
EXPRESS_I1	PARKING PROX CAN	PARKING AID	Live Data	
EXPRESS_I1	PARKING PROX CAN	PARKING AID	Read Configuration	
EXPRESS_I1	PARKING PROX CAN	PARKING AID	Actuation Test	
EXPRESS_I1	RADIO	RADIO	Read Fault Code	
EXPRESS_I1	RADIO	RADIO	Erase Fault Code	
EXPRESS_I1	RADIO	RADIO	Read ECU Information	
EXPRESS_I1	RADIO	RADIO	Live Data	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
EXPRESS II	RADIO	RADIO	Read Configuration	
EXPRESS II	RADIO	RADIO	Actuation Test	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
EXPRESS II	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
EXPRESS II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
EXPRESS II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
EXPRESS II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
EXPRESS II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
EXPRESS II	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
EXPRESS II	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
EXPRESS II	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	MDGI INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	MDGI INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	MDGI INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	MDGI INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	MDGI INJECTION	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	MDGI INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3140 INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Read Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Read ECU Information	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Live Data	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Read Configuration	
SANDERO/LOGAN III FAMILY	INJECTION	EMS 3160 INJECTION	Actuation Test	
SANDERO/LOGAN III FAMILY	ABS	ABS	Read Fault Code	
SANDERO/LOGAN III FAMILY	ABS	ABS	Erase Fault Code	
SANDERO/LOGAN III FAMILY	ABS	ABS	Read ECU Information	
SANDERO/LOGAN III FAMILY	ABS	ABS	Live Data	
SANDERO/LOGAN III FAMILY	ABS	ABS	Read Configuration	
SANDERO/LOGAN III FAMILY	ABS	ABS	Actuation Test	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
SANDERO/LOGAN III FAMILY	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
SANDERO/LOGAN III FAMILY	UCH	UCH	Read Fault Code	
SANDERO/LOGAN III FAMILY	UCH	UCH	Erase Fault Code	
SANDERO/LOGAN III FAMILY	UCH	UCH	Read ECU Information	
SANDERO/LOGAN III FAMILY	UCH	UCH	Live Data	
SANDERO/LOGAN III FAMILY	UCH	UCH	Read Configuration	
SANDERO/LOGAN III FAMILY	UCH	UCH	Actuation Test	
SANDERO/LOGAN III FAMILY	AIRBAG / PRE-TENSIONERS	AIRBAG	Read Fault Code	
SANDERO/LOGAN III FAMILY	AIRBAG / PRE-TENSIONERS	AIRBAG	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AIRBAG / PRE-TENSIONERS	AIRBAG	Read ECU Information	
SANDERO/LOGAN III FAMILY	AIRBAG / PRE-TENSIONERS	AIRBAG	Live Data	
SANDERO/LOGAN III FAMILY	AIRBAG / PRE-TENSIONERS	AIRBAG	Read Configuration	
SANDERO/LOGAN III FAMILY	AIRBAG / PRE-TENSIONERS	AIRBAG	Actuation Test	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Read Fault Code	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Read ECU Information	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Live Data	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Read Configuration	
SANDERO/LOGAN III FAMILY	FRONT RADAR	FRONT RADAR	Actuation Test	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Read Fault Code	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Read ECU Information	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Live Data	
SANDERO/LOGAN III FAMILY	AIR CONDITIONING	AIR CONDITIONING	Actuation Test	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read Fault Code	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read ECU Information	
SANDERO/LOGAN III FAMILY	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Live Data	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
SANDERO/LOGAN III FAMILY	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Read Fault Code	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Read ECU Information	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Live Data	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Read Configuration	
SANDERO/LOGAN III FAMILY	PARKING BRAKE	PARKING BRAKE	Actuation Test	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read Fault Code	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Erase Fault Code	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Read ECU Information	
SANDERO/LOGAN III FAMILY	SUPERVISOR or DCDC	SUPERVISOR or DCDC	Live Data	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read Fault Code	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Erase Fault Code	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read ECU Information	
SANDERO/LOGAN III FAMILY	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Live Data	
SANDERO/LOGAN III FAMILY	UPC	UPC	Read Fault Code	
SANDERO/LOGAN III FAMILY	UPC	UPC	Erase Fault Code	
SANDERO/LOGAN III FAMILY	UPC	UPC	Read ECU Information	
SANDERO/LOGAN III FAMILY	UPC	UPC	Live Data	
SANDERO/LOGAN III FAMILY	UPC	UPC	Actuation Test	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read Fault Code	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Erase Fault Code	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Read ECU Information	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Live Data	
SANDERO/LOGAN III FAMILY	AROUND VIEW MONITORING	AROUND VIEW MONITORING	Actuation Test	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
SANDERO/LOGAN III FAMILY	CHECK CHASSIS	CHECK CHASSIS	Live Data	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Read Fault Code	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Read ECU Information	
SANDERO/LOGAN III FAMILY	4 WHEELS DRIVE	4 WHEELS DRIVE	Live Data	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
SANDERO/LOGAN III FAMILY	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Read Fault Code	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Erase Fault Code	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Read ECU Information	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Live Data	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Read Configuration	
SANDERO/LOGAN III FAMILY	PARKING PROX CAN	PARKING AID	Actuation Test	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read Fault Code	
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Erase Fault Code	
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Read ECU Information	
SANDERO/LOGAN III FAMILY	TELEPHONE INDUCTION CHARGER	TELEPHONE INDUCTION CHARGER	Live Data	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
SANDERO/LOGAN III FAMILY	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Read Fault Code	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Read ECU Information	
SANDERO/LOGAN III FAMILY	BRAKE BOOSTER	BRAKE BOOSTER	Live Data	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read Fault Code	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Read ECU Information	
SANDERO/LOGAN III FAMILY	HIGH VOLTAGE STARTING GENERATOR	HIGH VOLTAGE STARTING GENERATOR	Live Data	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read Fault Code	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Erase Fault Code	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Read ECU Information	
SANDERO/LOGAN III FAMILY	ELECTRIC TRACTION MOTOR	ELECTRIC TRACTION MOTOR	Live Data	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read Fault Code	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Erase Fault Code	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Read ECU Information	
SANDERO/LOGAN III FAMILY	VEHICLE SOUND FOR PEDESTRIAN	VEHICLE SOUND FOR PEDESTRIAN	Actuation Test	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Read Fault Code	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Erase Fault Code	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Read ECU Information	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Live Data	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Read Configuration	
SANDERO/LOGAN III FAMILY	RADIO	RADIO	Actuation Test	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
SANDERO/LOGAN III FAMILY	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
SANDERO/LOGAN III FAMILY	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Read Fault Code	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Read ECU Information	
SANDERO/LOGAN III FAMILY	BMS 12V	BMS 12V	Live Data	
SANDERO/LOGAN III FAMILY	BMS	BMS	Read Fault Code	
SANDERO/LOGAN III FAMILY	BMS	BMS	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BMS	BMS	Read ECU Information	
SANDERO/LOGAN III FAMILY	BMS	BMS	Live Data	
SANDERO/LOGAN III FAMILY	BMS	BMS	Read Configuration	
SANDERO/LOGAN III FAMILY	EVC	EVC	Read Fault Code	
SANDERO/LOGAN III FAMILY	EVC	EVC	Erase Fault Code	
SANDERO/LOGAN III FAMILY	EVC	EVC	Read ECU Information	
SANDERO/LOGAN III FAMILY	EVC	EVC	Live Data	
SANDERO/LOGAN III FAMILY	EVC	EVC	Read Configuration	
SANDERO/LOGAN III FAMILY	EVC	EVC	Actuation Test	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Read Fault Code	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Erase Fault Code	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Read ECU Information	
SANDERO/LOGAN III FAMILY	BMS SAFETY	BMS SAFETY	Live Data	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
SANDERO/LOGAN III FAMILY	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	
MEGANE IV SEDAN ph2	INJECTION	MDGI INJECTION	Read Fault Code	
MEGANE IV SEDAN ph2	INJECTION	MDGI INJECTION	Erase Fault Code	
MEGANE IV SEDAN ph2	INJECTION	MDGI INJECTION	Read ECU Information	
MEGANE IV SEDAN ph2	INJECTION	MDGI INJECTION	Live Data	
MEGANE IV SEDAN ph2	INJECTION	MDGI INJECTION	Read Configuration	
MEGANE IV SEDAN ph2	INJECTION	MDGI INJECTION	Actuation Test	
MEGANE IV SEDAN ph2	INJECTION	EMS 3160 INJECTION	Read Fault Code	
MEGANE IV SEDAN ph2	INJECTION	EMS 3160 INJECTION	Erase Fault Code	
MEGANE IV SEDAN ph2	INJECTION	EMS 3160 INJECTION	Read ECU Information	
MEGANE IV SEDAN ph2	INJECTION	EMS 3160 INJECTION	Live Data	
MEGANE IV SEDAN ph2	INJECTION	EMS 3160 INJECTION	Read Configuration	
MEGANE IV SEDAN ph2	INJECTION	EMS 3160 INJECTION	Actuation Test	
MEGANE IV SEDAN ph2	INJECTION	EMS 3140 INJECTION	Read Fault Code	
MEGANE IV SEDAN ph2	INJECTION	EMS 3140 INJECTION	Erase Fault Code	
MEGANE IV SEDAN ph2	INJECTION	EMS 3140 INJECTION	Read ECU Information	
MEGANE IV SEDAN ph2	INJECTION	EMS 3140 INJECTION	Live Data	
MEGANE IV SEDAN ph2	INJECTION	EMS 3140 INJECTION	Read Configuration	
MEGANE IV SEDAN ph2	INJECTION	EMS 3140 INJECTION	Actuation Test	
MEGANE IV SEDAN ph2	ABS	ABS	Read Fault Code	
MEGANE IV SEDAN ph2	ABS	ABS	Erase Fault Code	
MEGANE IV SEDAN ph2	ABS	ABS	Read ECU Information	
MEGANE IV SEDAN ph2	ABS	ABS	Live Data	
MEGANE IV SEDAN ph2	ABS	ABS	Read Configuration	
MEGANE IV SEDAN ph2	ABS	ABS	Actuation Test	
MEGANE IV SEDAN ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Fault Code	
MEGANE IV SEDAN ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Erase Fault Code	
MEGANE IV SEDAN ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read ECU Information	
MEGANE IV SEDAN ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Live Data	
MEGANE IV SEDAN ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Read Configuration	
MEGANE IV SEDAN ph2	INSTRUMENT PANEL	INSTRUMENT PANEL	Actuation Test	
MEGANE IV SEDAN ph2	UCH	UCH	Read Fault Code	
MEGANE IV SEDAN ph2	UCH	UCH	Erase Fault Code	
MEGANE IV SEDAN ph2	UCH	UCH	Read ECU Information	
MEGANE IV SEDAN ph2	UCH	UCH	Live Data	
MEGANE IV SEDAN ph2	UCH	UCH	Read Configuration	
MEGANE IV SEDAN ph2	UCH	UCH	Actuation Test	
MEGANE IV SEDAN ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Fault Code	
MEGANE IV SEDAN ph2	AIRBAG / PRETENSIONERS	AIRBAG	Erase Fault Code	
MEGANE IV SEDAN ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read ECU Information	
MEGANE IV SEDAN ph2	AIRBAG / PRETENSIONERS	AIRBAG	Live Data	
MEGANE IV SEDAN ph2	AIRBAG / PRETENSIONERS	AIRBAG	Read Configuration	
MEGANE IV SEDAN ph2	AIRBAG / PRETENSIONERS	AIRBAG	Actuation Test	
MEGANE IV SEDAN ph2	FRONT RADAR	FRONT RADAR	Read Fault Code	
MEGANE IV SEDAN ph2	FRONT RADAR	FRONT RADAR	Erase Fault Code	
MEGANE IV SEDAN ph2	FRONT RADAR	FRONT RADAR	Read ECU Information	
MEGANE IV SEDAN ph2	FRONT RADAR	FRONT RADAR	Live Data	
MEGANE IV SEDAN ph2	FRONT RADAR	FRONT RADAR	Read Configuration	
MEGANE IV SEDAN ph2	AIR CONDITIONING	CONTROLLED AC	Read Fault Code	
MEGANE IV SEDAN ph2	AIR CONDITIONING	CONTROLLED AC	Erase Fault Code	
MEGANE IV SEDAN ph2	AIR CONDITIONING	CONTROLLED AC	Read ECU Information	
MEGANE IV SEDAN ph2	AIR CONDITIONING	CONTROLLED AC	Live Data	
MEGANE IV SEDAN ph2	AIR CONDITIONING	CONTROLLED AC	Actuation Test	
MEGANE IV SEDAN ph2	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read Fault Code	
MEGANE IV SEDAN ph2	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Erase Fault Code	
MEGANE IV SEDAN ph2	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Read ECU Information	
MEGANE IV SEDAN ph2	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Live Data	
MEGANE IV SEDAN ph2	AUTOMATIC TRANSMISSION	AUTOMATIC TRANSMISSION	Actuation Test	
MEGANE IV SEDAN ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Fault Code	
MEGANE IV SEDAN ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Erase Fault Code	
MEGANE IV SEDAN ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read ECU Information	
MEGANE IV SEDAN ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Live Data	
MEGANE IV SEDAN ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Read Configuration	
MEGANE IV SEDAN ph2	COMMUNICATIONS UNIT	COMMUNICATIONS UNIT	Actuation Test	
MEGANE IV SEDAN ph2	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read Fault Code	
MEGANE IV SEDAN ph2	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Erase Fault Code	
MEGANE IV SEDAN ph2	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Read ECU Information	
MEGANE IV SEDAN ph2	POWER ASSISTED STEERING	POWER ASSISTED STEERING	Live Data	
MEGANE IV SEDAN ph2	UPC	UPC	Read Fault Code	

Diagnosis list Renault\_v9.20

Vehicles	System	System Info	Function menu	Subfunction menu
MEGANE IV SEDAN ph2	IPC	IPC	Erase Fault Code	
MEGANE IV SEDAN ph2	IPC	IPC	Read ECU Information	
MEGANE IV SEDAN ph2	IPC	IPC	Live Data	
MEGANE IV SEDAN ph2	IPC	IPC	Actuation Test	
MEGANE IV SEDAN ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read Fault Code	
MEGANE IV SEDAN ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Erase Fault Code	
MEGANE IV SEDAN ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Read ECU Information	
MEGANE IV SEDAN ph2	HEAD UP DISPLAY	HEAD UP DISPLAY	Actuation Test	
MEGANE IV SEDAN ph2	CHECK CHASSIS	CHECK CHASSIS	Read Fault Code	
MEGANE IV SEDAN ph2	CHECK CHASSIS	CHECK CHASSIS	Erase Fault Code	
MEGANE IV SEDAN ph2	CHECK CHASSIS	CHECK CHASSIS	Read ECU Information	
MEGANE IV SEDAN ph2	CHECK CHASSIS	CHECK CHASSIS	Live Data	
MEGANE IV SEDAN ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Fault Code	
MEGANE IV SEDAN ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Erase Fault Code	
MEGANE IV SEDAN ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read ECU Information	
MEGANE IV SEDAN ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Live Data	
MEGANE IV SEDAN ph2	CENTRAL GATEWAY	CENTRAL GATEWAY	Read Configuration	
MEGANE IV SEDAN ph2	PARKING PROX CAN	PARKING AID	Read Fault Code	
MEGANE IV SEDAN ph2	PARKING PROX CAN	PARKING AID	Erase Fault Code	
MEGANE IV SEDAN ph2	PARKING PROX CAN	PARKING AID	Read ECU Information	
MEGANE IV SEDAN ph2	PARKING PROX CAN	PARKING AID	Live Data	
MEGANE IV SEDAN ph2	PARKING PROX CAN	PARKING AID	Read Configuration	
MEGANE IV SEDAN ph2	PARKING PROX CAN	PARKING AID	Actuation Test	
MEGANE IV SEDAN ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read Fault Code	
MEGANE IV SEDAN ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Erase Fault Code	
MEGANE IV SEDAN ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Read ECU Information	
MEGANE IV SEDAN ph2	DRIVING ASSISTANCE SUPERVISOR	DRIVING ASSISTANCE SUPERVISOR	Live Data	
MEGANE IV SEDAN ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read Fault Code	
MEGANE IV SEDAN ph2	DRIVER'S SEAT	DRIVER'S SEAT	Erase Fault Code	
MEGANE IV SEDAN ph2	DRIVER'S SEAT	DRIVER'S SEAT	Read ECU Information	
MEGANE IV SEDAN ph2	DRIVER'S SEAT	DRIVER'S SEAT	Live Data	
MEGANE IV SEDAN ph2	DRIVER'S SEAT	DRIVER'S SEAT	Actuation Test	
MEGANE IV SEDAN ph2	FRONT CAMERA	FRONT CAMERA	Read Fault Code	
MEGANE IV SEDAN ph2	FRONT CAMERA	FRONT CAMERA	Erase Fault Code	
MEGANE IV SEDAN ph2	FRONT CAMERA	FRONT CAMERA	Read ECU Information	
MEGANE IV SEDAN ph2	FRONT CAMERA	FRONT CAMERA	Live Data	
MEGANE IV SEDAN ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read Fault Code	
MEGANE IV SEDAN ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Erase Fault Code	
MEGANE IV SEDAN ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Read ECU Information	
MEGANE IV SEDAN ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Live Data	
MEGANE IV SEDAN ph2	LEFT REAR SIDE RADAR	LEFT REAR SIDE RADAR	Actuation Test	
MEGANE IV SEDAN ph2	RADIO	RADIO	Read Fault Code	
MEGANE IV SEDAN ph2	RADIO	RADIO	Erase Fault Code	
MEGANE IV SEDAN ph2	RADIO	RADIO	Read ECU Information	
MEGANE IV SEDAN ph2	RADIO	RADIO	Live Data	
MEGANE IV SEDAN ph2	RADIO	RADIO	Read Configuration	
MEGANE IV SEDAN ph2	RADIO	RADIO	Actuation Test	
MEGANE IV SEDAN ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read Fault Code	
MEGANE IV SEDAN ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Erase Fault Code	
MEGANE IV SEDAN ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Read ECU Information	
MEGANE IV SEDAN ph2	TELEMATIC CTRL UNIT	TELEMATIC CTRL UNIT	Live Data	
MEGANE IV SEDAN ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read Fault Code	
MEGANE IV SEDAN ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Erase Fault Code	
MEGANE IV SEDAN ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Read ECU Information	
MEGANE IV SEDAN ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Live Data	
MEGANE IV SEDAN ph2	RIGHT REAR SIDE RADAR	RIGHT REAR SIDE RADAR	Actuation Test	
MEGANE IV SEDAN ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read Fault Code	
MEGANE IV SEDAN ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Erase Fault Code	
MEGANE IV SEDAN ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Read ECU Information	
MEGANE IV SEDAN ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Live Data	
MEGANE IV SEDAN ph2	UREA DOSING CONTROL MODULE	UREA DOSING CONTROL MODULE	Actuation Test	
MEGANE IV SEDAN ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read Fault Code	
MEGANE IV SEDAN ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Erase Fault Code	
MEGANE IV SEDAN ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Read ECU Information	
MEGANE IV SEDAN ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Live Data	
MEGANE IV SEDAN ph2	LEFT-HAND DOOR or PASSENGER SEAT	PASSENGER'S SEAT	Actuation Test	
MEGANE IV SEDAN ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read Fault Code	
MEGANE IV SEDAN ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Erase Fault Code	
MEGANE IV SEDAN ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Read ECU Information	
MEGANE IV SEDAN ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Live Data	
MEGANE IV SEDAN ph2	MULTIMEDIA INTERFACE	MULTIMEDIA INTERFACE	Actuation Test	
MEGANE IV SEDAN ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Fault Code	
MEGANE IV SEDAN ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Erase Fault Code	
MEGANE IV SEDAN ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read ECU Information	
MEGANE IV SEDAN ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Live Data	
MEGANE IV SEDAN ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Read Configuration	
MEGANE IV SEDAN ph2	HANDS-FREE MODULE	HANDS-FREE MODULE	Actuation Test	